

# User manual

TAB-740/TAB-840/TAB-1040



# DIGIX

## SAFETY PRECAUTIONS

**WARNING!** Modifying the Tablet will void the Warranty. Disassemble at your own risk!

1. Do Not place items on the screen which will scratch.
2. Do Not expose the Tablet to dirty, dusty, or moist environments.
3. Caution: There is a risk of explosion if battery is replaced with an incorrect battery type.
4. Before cleaning, disconnect the Tablet from the electrical outlet and remove any installed batteries.
5. Batteries should not be exposed to excessive heat such as fire, sunlight, or the like.
6. Do Not disassemble the Tablet. Only a certified service technician should perform repairs on your Tablet. Otherwise, problem may result and the manufacturer will not be responsible for any damage.
7. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
8. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
9. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment has been SAR-evaluated for use in hand. SAR evaluated are based on a 0cm spacing from the body and that compliance is achieved at that distance.

# Table of Contents

<b>1. Appearance</b>	2	<b>8. Customized settings</b>	13
<b>2. Getting started</b>	2	8.1 Wireless and networks	13
2.1 Charging the battery	2	8.2 Sound	13
2.2 Using a Micro SD card	3	8.3 Display	14
2.3 Hot plug of Micro SD card and external flash disk	3	8.4 HDMI	14
2.4 Power-on/off	4	8.5 ScreenshotSetting	14
2.5 USB Connected	4	8.6 Storage	14
2.6 Wi-Fi Settings	5	8.7 Battery	15
2.7 Bluetooth Settings	5	8.8 Apps	15
<b>3. Inputting</b>	5	8.9 Location services	15
3.1 Keyboard	5	8.10 Security	16
3.2 Touch screen	6	8.11 Language & Input	16
3.3 Mouse	6	8.12 Backup & reset	17
<b>4. Desktop</b>	6	8.13 Accounts	18
4.1 Status bar	6	8.14 Data & time	18
4.2 Home page	6	8.15 Accessibility	18
4.3 Shortcut mode	7	8.16 Developer options	19
4.4 Shortcut way to add gadgets	8	8.17 About tablet	19
4.5 Using gadgets	8	<b>9. Using HDMI</b>	19
<b>5. Browsing web pages</b>	8	<b>10. Locking the device</b>	20
<b>6. Typical applications</b>	9	<b>11. Troubleshooting</b>	20
6.1 Email	9	11.1 Turning off applications	20
6.2 Explorer	9	11.2 Compulsory power-off	21
6.3 Gallery	10	11.3 Restore defaults	21
6.4 Music	11		
6.5 Camera	11		
<b>7. Tips and other information</b>	11		
7.1 Some fast operations	11		
7.2 Setting for shortcut operations	12		
7.2.1 Access to Internet Wirelessly	12		
7.2.2 Access to Internet	12		
7.3 About the battery	12		

## 1. Appearance

Production structure:



## 2. Getting started

### Note:

Our company spares no effort in product quality. If the tablet firmware is different, it is because there are new or improved features

### 2.1 Charging the battery

A battery is embedded in your Digix tablet, which should be charged whenever the power is low.

#### Power adapter:

To charge the battery, insert one end of the adapter into the outlet and the other end into the power jack on the device.

1. After the adapter is inserted, the battery indicator will turn red, which means that charging is in process. When the battery is fully charged, the indicator will turn green. At that time, you should unplug the adapter, while the indicator still remains green.

2. You can also use the handheld tablet when the battery in it is being charged.

**Note:**

It takes longer to charge the battery fully when the tablet is powered on.

## 2.2 Using a Micro SD card

### Inserting Micro SD card:

Place the Micro SD card into the groove and press it with a finger till you hear the sound of a "click". At that time, the information on the left corner of the screen says: "Preparing memory device."

### Viewing the files in the Micro SD card:

When you run the File Browser, all files under the root directory of the card will be displayed. At that time, you can choose "SD" to open the contents in the card.

### Removing the Micro SD card:

First close all files already opened from the card. Then click the menu, and select Setting → SD card & device storage → SD → Uninstall SD. At that time, the system indicates that "memory device safe to remove. After that, press the card gently to allow it to project one part of it, and hold that part to pull out the whole card. Then the screen will indicate that "Memory device was removed."

**Note:**

1. Insert the Micro SD card properly. Otherwise, it may damage the card.
2. Do not pull out the card before the screen indicates "uninstall SD". Otherwise, it may damage the card.
3. It is suggested using the name brand memory card to ensure compatibility.

## 2.3 Hot plug of Micro SD card and external flash disk

Do not unplug the Micro SD card and external flash disk when they are being used or their contents are browsed. If, in such software as My Video, My Music and My Photo, the files in the Micro SD card and external flash disk are being used or browsed, and the card or the disk is pulled out directly, it may damage them, and the program may exit for self protection. For details of plugging and unplugging the card, please refer to part \*2.2--"Using the SD card". Before you remove the external flash disk, you must close all its files being used.

## 2.4 Power-on/off

1. Power-on: When the battery is fully charged, press the power switch for two seconds to power on the device. At that time, the device will vibrate once. After powered on, the system will enter the screen-locking interface, where you can move up the unlocking icon to enter the main interface and down to the icon of electronic photo frame to enter the interface where you can play the pictures.

2. Power-off: Press the power switch for four seconds, and the system will pop up an interface for confirmation. Select "OK" and the device will be turned off. At that time, it will vibrate once. Click "Cancel" if you want to return back.


3. Sleep mode: Press the power switch for one second, and the system will enter the sleep mode, in which the LCD screen will turn black. In this mode, you can press power key to wake up the system. Once waken up, the system enters the screen-locking interface. To save energy, if electricity is insufficient in sleep mode, the system can power off itself after it is automatically powered on.

## 2.5 USB Connected

 

Use the USB cable that we attached to connect your Digix tablet Micro USB port.



## 2.6 Wi-Fi Settings

1. Select settings on home screen shortcut.
2. Select "wireless & network" in the settings menu.
3. Select "WI-FI" and glide the "OFF" bar to the right to turn on the "WI-FI" .
4. All APs found by the device will be listed. You can click the AP name to be connected.
5. If the connection is successful before the AP, the information of AP will be saved. To start connecting, select "connect" in the pop-up window. To eliminate the AP information, select "forget".
6. If AP is not encrypted, you can select "connect" in the pop-up window to start connecting.
7. If AP is encrypted, you should enter the password in the pop-up window and then click "connect" to start connecting.
8. If the connection is successful, an icon indicating the successful connection will appear on the transfer bar at the top of the desktop.
9. With the information of AP saved after Wi-Fi setup, you can touch the icon on home screen to bright it to start connecting directly.

## 2.7 Bluetooth Settings

1. Click  and select "Bluetooth" in the settings menu.
2. Glide the "OFF" bar to the right to turn on the "Bluetooth" .
3. All nearby Bluetooth devices found by the tablet will be listed.  
You can click the device name to be paired.
4. If the pairing is successful, the informatin of the paired device will be saved. You can play games against the paired device and transfer files with each other.

# 3. Inputting

## 3.1 Keyboard

When you need to enter a letter, number, or symbols, the touch keyboard will appear on the screen.

### Note:

The device is compatible with USB keyboard. However, when a USB keyboard is connected to the device, some keys may become ineffective.

## 3.2 Touch screen

The touch screen can sense the movement of the finger, through which you can perform the operations below:

**Note:**

Never attempt to place objects on the touch screen, with which the screen can be scratched or damaged.

**Click:** Click the icon or option you select.

**Long press:** You can long press the icon to select your desired option, or drag the icon to the shortcut bar at the bottom of the desktop.

**Drag:** You can drag the icons to change their positions on the desktop or between pages, or move the application icons to the shortcut bar.

You can also use a pen rather than your finger to operate the touch screen.

## 3.3 Mouse

The device is compatible with an external mouse. After a mouse is connected, you can use the mouse for such operations as clicking, selecting, dragging, sliding or for clicking to display pop up menu's.

# 4. Desktop

 
## 4.1 Status bar


At the bottom part of the screen is the status bar, at the left of there are six software buttons including Back, Home, programs in running, Vol- and Vol +, and Menu and to the right other information is indicated, such as the strength of 3G and of Wi-Fi signals, the time and date, the state of Ethernet, the shortcut to Airplane mode/Wi-Fi/Auto-rotate screen/ Brightness/Notification/ Settings and how much of the battery is left.


## 4.2 Home page

The home page of your Digix tablet consists of two modes: Gadget Mode and Icon Mode. The two modes can be toggled through the button at the top-right corner of the screen. The interface of Gadget Mode is shown in the picture below:



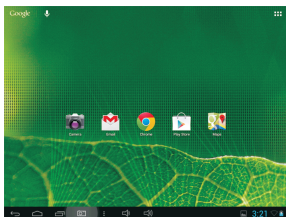

 To enter the interface of application icons, click the button  at the top-right corner of the screen, as shown below:

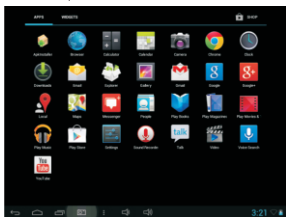

To enter the interface of Gadget Mode, click  .

## 4.3 Shortcut mode

In the main interface of the Gadget Mode, you can click the icon Menu at the status bar. Then the shortcut menu icons will appear, which are Wallpaper, Manage apps, System settings as shown below:

