 



4.4 Shortcut way to add gadgets

To add the widgets to the main screen, long press the icon at the interface of application icons and it will automatically move to the desktop. Once added, you can click the shortcut icon to perform the related operations.

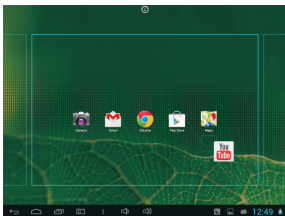


4.5 Using gadgets

The user can add, delete and install the gadgets, add and delete application icons, and move the icons. You can also drag the icons between the operation areas or between operation area and shortcut bar.

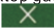In the desktop gadget interface, long press the gadget icon, and an “X Remove”  will pop up. Drag the recycling bin icon to any place on the desktop, or drag it to “X Remove” to delete it.

5. Browsing web pages


The user can access the Internet through the browser.

Click the browser icon  on the desktop, and you can access web pages. The pop-up interface is shown below:




6. Typical applications

6.1 Email

Click the email icon , you can enter the email interface, where you can perform the operations below:

 
1. Set the account for the email.
2. Write new emails.
3. Send and receive the emails.
4. Download or print the attachments.

6.2 Explorer

To enter the Explorer interface, click the icon , as shown below:



Long press the files or folder and your file or folder is selected, then you can use Delete, Rename, Copy, Move(Cut), Paste, Zip, Extract as shown below:

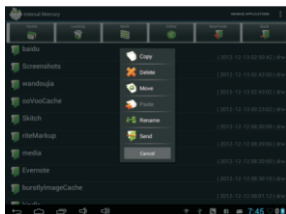

Installing files

If you want to install files in explorer, you only need to click the installation files with an extension name "APK". At that time, a prompt window will pop up, and then you can select Install to install the file into the device.

6.3 Gallery

Click the icon and  then click  , and the interface will be shown as below:





Then you can click an image and video to view.


Tap the menu key to access more functions(see first page of device information).



6.4 Music

Click the icon , and then click  to enter the music mode, and then click one song to enjoy and the interface will be shown as below.

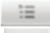 1. Click  to enter party shuffle mode.
2. Click  to switch over between Play All mode and Play Single mode.
3. Click  to return back to Album catalogue.
4. Click  to show the lyrics.

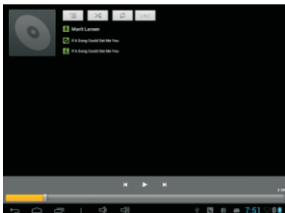

6.5 Camera

Click  to enter the mode for shooting pictures.



To operate the device in this application:

1. Click the icon at the middle right to shoot the picture. You can save the picture to DCIM/CAMERA. under the SD root directory.
2. Click the three icons at the lower right angle, and you can change from shoot mode to video mode or capturing panorama mode.
3. Click the icon on the upper right corner to view the previous picture, and where you can perform such operations as deletion, edit, sharing and setting as wallpaper or as a contact person icon. Click Finish to return to the shooting interface.
4. Move the left icon rightward, and you can set such items as storage place, picture size and picture quality for the camera.

7. Tips and other information


7.1 Some fast operations

To return to the home page, click .

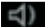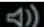To adjust the volume, click  / .

7.2 Setting for shortcut operations

7.2.1 Access to Internet Wirelessly

Click  and select Wi-Fi to enter the interface for wireless access to the internet, as shown below:



7.2.2 Access to Internet


Click the internet access icon to access the internet. You can set the IP address manually, with the interface shown below:



7.3 About the battery

The large-size LCD screen of the device will consume quite a lot electric power. To extend the working time of the battery, you may reduce the use of some functions.

1. Watch movies, listen to music or shoot pictures.
2. Brightness: Press → Settings → Display → Brightness (lower the brightness).

3. In terms of WIFI use, please set the WIFI switch on home screen to OFF state by pressing the icon  once.

8. Customized settings

To customize the settings, click  on the shortcut menu.

8.1 Wireless and networks

To turn your WI-FI on or off, you can set the WIFI switch as ON or OFF when the WIFI items are properly configured.

Access to the Internet Wirelessly.

If you want to set and manage connection point designed for the wireless access to the Internet, please press Settings→Wireless & Network. For details, please refer to the section "see 2.6".

8.2 Sound

Set the Volume, Default notification, Touch sounds and Screen lock sound.

1. Volumes.

To adjust the volume for medium, Ringtone & notification and alarm clock, you can press Settings → Sound → Volumes.

2. Default notification.

 
To set the default notification ringtone, you can press Settings→Sound → Notification ringtone.

3. Touch sounds.

To make sound when you touch screen , you can select Touch sounds.

4. Screen Lock sound.

To make sound when screen get locked , you can select Screen Lock sound.

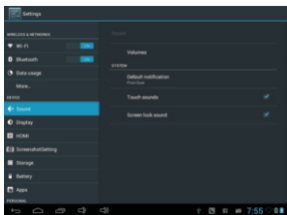

8.3 Display

1. Brightness.

To adjust the brightness of the screen, press Menu → Settings → Display → Brightness.

2. Wallpaper.

To set your wallpaper, press Settings → Display → Wallpaper.

3. Sleep.

To set your screen time to sleep mode, press Settings → Display → Sleep.

4. Font size.

To set the Font size, press Settings → Display → Font size.



8.4 HDMI

1. To turn on HDMI, press Settings → HDMI → Turn on HDMI.
2. You can choose to set the default mode of HDMI Resolution, Screen Zoom and Screen Timeout.

8.5 ScreenshotSetting

To set delay time to capture the screen and the location of screenshot storage and choose to show the screenshot button in the statusbar, press Settings → ScreenshotSetting.

8.6 Storage

To know the storage status of your device(used space, available space and total space), press Settings → Storage.

8.7 Battery

To know how much of the battery is left, press Settings → Battery.

8.8 Apps

To manage or delete the installed application and view or control the running service, press Settings → Apps.



8.9 Location services

Press Settings → Location services → Choose to agree or disagree Google's Location service or Location & Google search.

1. Google's Location service is to let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location.
2. Location & Google search is to let Google use your location to improve search results and other services.



8.10 Security

1. Screen Security.

To set screen lock, press Screen lock → choose from None, Slide, Pattern, PIN and Password.

2. Passwords.

To show password as you type, press Make passwords visible.

If the password is forgotten or lost, it is retrievable through the Google Account synced to the tablet.

Note: Irretrievable passwords are not covered under the warranty.

3. Device administration.

To view or deactivate device administrators, press Device administrators.

4. Credential Storage.

5. Unknown sources.

To allow installation of application provided by the unauthorized electronic market, press Unknown sources.

6. Trusted credentials.

To view trusted CA certificates, press Trusted credentials.

7. Install from SD card.

To install certificates from SD card, press Install from SD card.



8.11 Language & Input

In this item, you can set the language, Spell checker, Personal dictionary, Default, Android keyboard, Google voice typing, Voice search, Text-to-speech output and Pointer speed.

1. Select Language.

To select the Language, press Settings → Language & input → Select Language.

2. Spell checker.

To set automatic correction, press Settings → Language & input → Spell checker.

3. Personal dictionary.

To add words into or delete words from the user-defined dictionary.

4. Default.

To configure input methods, press Settings → Language & input → Default.

5. Android keyboard.

To set Android keyboard, press Settings → Language & input → Android keyboard.

6. Google voice typing.

To choose Google voice typing, press Settings → Language & input → Google voice typing.

7. Voice Search.

To set Voice Search, press Settings → Language & input → Voice Search.

8. Text-to-speech output.

To set the Speech rate and play demonstration of speech synthesis, press Settings → Language & input → Text-to-speech output.

 
9. Pointer speed.

To set your Pointer speed, press Settings → Language & input → Pointer speed.



8.12 Backup & reset

To back up your data, reset your Digix Tablet, press Settings → Backup & reset.

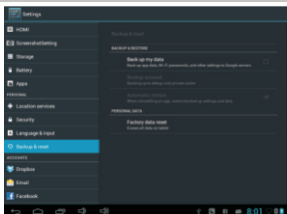

8.13 Accounts

1. You can choose to sync your data for all accounts like Dropbox, Email, Facebook, Google etc.
2. To add account, please press Settings → Accounts → Add account.

8.14 Data & time

To set the date, time, time zone, time system and format, you can press Settings → Data & time.



8.15 Accessibility

To set Large text, Auto-rotate screen, Speak passwords, Touch & hold delay and Install web scripts, you can press Settings → Accessibility.



8.16 Developer options

To set the option for development of application, press Settings → Developer options.



8.17 About tablet

In this item, you can view the information on law, device status and software version.



9. Using HDMI

With HDMI, video contents being played by your Digix tablet can be transferred to other displays using the HDMI cable. Such as an LCD TV that has an HDMI port. The outputs the tablet supports can offer a maximum resolution of 1080P. The related operations are as follows:

1. Power on your Digix tablet.
2. Connect Digix to HDMI monitor with HDMI cable and power on the monitor. At that time, on the status bar messages about HDMI connection will be pop up.
3. Play the video files on your Digix tablet.
4. Press MENU, and your tablet screen will turn black, a process lasting about 5 seconds during which the contents are being switched to HDMI monitor. Please be patient.
5. You can transfer the contents to the tablet again by any of the four ways below:
 - 1) System transfers to tablet automatically after the playing is completed.
 - 2) Press Menu during playing to switch the video contents to the tablet.
 - 3) Pull out the HDMI cable during playing, after which the video contents will be transferred to the tablet.
 - 4) Press Back to exit the playing mode, after which the video contents will be transferred to the tablet.

10. Locking the device


Unlocking screen/device:

When the system is the sleep mode, you can short press the power switch to enter the interface for screen locking. To unlock the screen, move the corresponding icon upward, and the system will enter the state prior to sleep mode.

11. Troubleshooting


11.1 Turning off applications

Once an application is turned on, it will occupy some space, and if there are too many applications that have been turned on, it will slow down the running speed of the device. Therefore you should close applications not being used in a timely manner, so that more space can be saved and the device run faster.

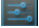To turn off the application, click  at the desktop screen, and the system will enter the interface of system settings, where you can select Apps → Running, as shown below:



 Click the application to be closed, and the system will pop up a window which asks you if you need to stop the service window, as shown below:

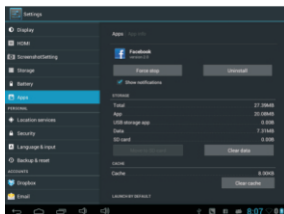

Click Stop, and the application will be closed and disappear within the window being used.

11.2 Compulsory power-off

1. Press the power switch and hold down for 7 seconds, the device will be powered off in a compulsory way.
2. Press Rest at the right lower part of the device, the device will be powered off in a compulsory way.

11.3 Restore defaults

If you want to restore the factory defaults and delete all other data, please press Settings → Backup & reset.

Warning:

Once you select Reset, the Google account, data and settings of the system and application and the downloaded applications will be deleted. Thus, be careful when using this function.



User Manual

TAB-740/TAB-840/TAB-1040

For Digix Technical Support contact us via e-mail at
support@digixmedia.com or via phone at 1-866-770-3688
www.digixmedia.com