

User manual

TAB-840



DiGiX



SAFETY PRECAUTIONS

WARNING! Modifying the Tablet will void the Warranty. Disassemble at your own risk!

1. Do Not place items on the screen which will scratch.
2. Do Not expose the Tablet to dirty, dusty, or moist environments.
3. Caution: There is a risk of explosion if battery is replaced with an incorrect battery type.
4. Before cleaning, disconnect the Tablet from the electrical outlet and remove any installed batteries.
5. Batteries should not be exposed to excessive heat such as fire, sunlight, or the like.
6. Do Not disassemble the Tablet. Only a certified service technician should perform repairs on your Tablet. Otherwise, problem may result and the manufacturer will not be responsible for any damage.
7. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
8. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
9. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment has been SAR-evaluated for use in hand. SAR evaluations are based on a 0cm spacing from the body and that compliance is achieved at that distance.



IC WARNING

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment has been SAR-evaluated for use in hand. SAR measurements are based on a 0cm spacing from the body and that compliance is achieved at that distance.

Table of Contents

1. Appearance	2	8. Customized settings	13
2. Getting started	2	8.1 Wireless and networks	13
2.1 Charging the battery	2	8.2 Sound	13
2.2 Using a Micro SD card	3	8.3 Display	14
2.3 Hot plug of Micro SD card and external flash disk	3	8.4 HDMI	14
2.4 Power-on/off	4	8.5 ScreenshotSetting	14
2.5 USB Connected	4	8.6 Storage	14
2.6 Wi-Fi Settings	5	8.7 Battery	15
2.7 Bluetooth Settings	5	8.8 Apps	15
3. Inputting	5	8.9 Location services	15
3.1 Keyboard	5	8.10 Security	16
3.2 Touch screen	6	8.11 Language & Input	16
3.3 Mouse	6	8.12 Backup & reset	17
4. Desktop	6	8.13 Accounts	18
4.1 Status bar	6	8.14 Data & time	18
4.2 Home page	6	8.15 Accessibility	18
4.3 Shortcut mode	7	8.16 Developer options	19
4.4 Shortcut way to add gadgets	8	8.17 About tablet	19
4.5 Using gadgets	8	9. Using HDMI	19
5. Browsing web pages	8	10. Locking the device	20
6. Typical applications	9	11. Troubleshooting	20
6.1 Email	9	11.1 Turning off applications	20
6.2 Explorer	9	11.2 Compulsory power-off	21
6.3 Gallery	10	11.3 Restore defaults	21
6.4 Music	11		
6.5 Camera	11		
7. Tips and other information ..	11		
7.1 Some fast operations	11		
7.2 Setting for shortcut operations ..	12		
7.2.1 Access to Internet Wirelessly	12		
7.2.2 Access to Internet	12		
7.3 About the battery	12		

1. Appearance

Production structure:



2. Getting started

Note:

Our company spares no effort in product quality. If the tablet firmware is different, it is because there are new or improved features

2.1 Charging the battery

A battery is embedded in your Digix tablet, which should be charged whenever the power is low.

Power adapter:

To charge the battery, insert one end of the adapter into the outlet and the other end into the power jack on the device.

1. After the adapter is inserted, the battery indicator will turn red, which means that charging is in process. When the battery is fully charged, the indicator will turn green. At that time, you should unplug the adapter, while the indicator still remains green.

2. You can also use the handheld tablet when the battery in it is being charged.

Note:

It takes longer to charge the battery fully when the tablet is powered on.

2.2 Using a Micro SD card

Inserting Micro SD card:

Place the Micro SD card into the groove and press it with a finger till you hear the sound of a "click". At that time, the information on the left corner of the screen says: "Preparing memory device."

Viewing the files in the Micro SD card:

When you run the File Browser, all files under the root directory of the card will be displayed. At that time, you can choose "SD" to open the contents in the card.

Removing the Micro SD card:

First close all files already opened from the card. Then click the menu, and select Setting → SD card & device storage → SD → Uninstall SD. At that time, the system indicates that "memory device safe to remove. After that, press the card gently to allow it to project one part of it, and hold that part to pull out the whole card. Then the screen will indicate that "Memory device was removed."

Note:

1. Insert the Micro SD card properly. Otherwise, it may damage the card.
2. Do not pull out the card before the screen indicates "uninstall SD". Otherwise, it may damage the card.
3. It is suggested using the name brand memory card to ensure compatibility.

2.3 Hot plug of Micro SD card and external flash disk


Do not unplug the Micro SD card and external flash disk when they are being used or their contents are browsed. If, in such software as My Video, My Music and My Photo, the files in the Micro SD card and external flash disk are being used or browsed, and the card or the disk is pulled out directly, it may damage them, and the program may exit for self protection. For details of plugging and unplugging the card, please refer to part "2.2--"Using the SD card". Before you remove the external flash disk, you must close all its files being used.

 
DIGIX


2.4 Power-on/off

1. Power-on: When the battery is fully charged, press the power switch for two seconds to power on the device. At that time, the device will vibrate once. After powered on, the system will enter the screen-locking interface, where you can move up the unlocking icon to enter the main interface and down to the icon of electronic photo frame to enter the interface where you can play the pictures.
2. Power-off: Press the power switch for four seconds, and the system will pop up an interface for confirmation. Select "OK" and the device will be turned off. At that time, it will vibrate once. Click "Cancel" if you want to return back.
3. Sleep mode: Press the power switch for one second, and the system will enter the sleep mode, in which the LCD screen will turn black. In this mode, you can press power key to wake up the system. Once waken up, the system enters the screen-locking interface. To save energy, if electricity is insufficient in sleep mode, the system can power off itself after it is automatically powered on.


2.5 USB Connected

1. Use the USB cable that we attached to connect your Digix tablet mini USB port.
2. Glide 

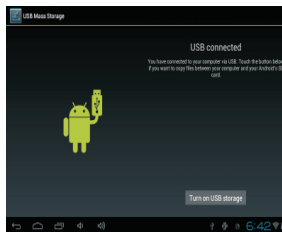



3. Tap USB connected.
4. Then tap "turn on USB storage" on the lower part of your tablet.
5. Tap OK on the "turn on USB storage" button that is displayed.
6. If you want to turn off USB storage, then also glide  and tap turn off USB storage.

2.6 Wi-Fi Settings

1. Select settings on home screen shortcut.
2. Select "wireless & network" in the settings menu.
3. Select "Wi-Fi" and glide the "OFF" bar to the right to turn on the "Wi-Fi" 
4. All APs found by the device will be listed. You can click the AP name to be connected.
5. If the connection is successful before the AP, the information of AP will be saved. To start connecting, select "connect" in the pop-up window. To eliminate the AP information, select "forget".
6. If AP is not encrypted, you can select "connect" in the pop-up window to start connecting.
7. If AP is encrypted, you should enter the password in the pop-up window and then click "connect" to start connecting.
8. If the connection is successful, an icon indicating the successful connection will appear on the transfer bar at the top of the desktop.
9. With the information of AP saved after Wi-Fi setup, you can touch the icon on home screen to bright it to start connecting directly.

2.7 Bluetooth Settings

1. Click  and select "Bluetooth" in the settings menu.
2. Glide the "OFF" bar to the right to turn on the "Bluetooth" 
3. All nearby Bluetooth devices found by the tablet will be listed. You can click the device name to be paired.
4. If the pairing is successful, the informatin of the paired device will be saved. You can play games against the paired device and transfer files with each other.

3. Inputting

3.1 Keyboard

When you need to enter a letter, number, or symbols, the touch keyboard will appear on the screen.

Note:

The device is compatible with USB keyboard. However, when a USB keyboard is connected to the device, some keys may become ineffective.

DIGIX

3.2 Touch screen

The touch screen can sense the movement of the finger, through which you can perform the operations below:

Note:

Never attempt to place objects on the touch screen, with which the screen can be scratched or damaged.

Click: Click the icon or option you select.

Long press: You can long press the icon to select your desired option, or drag the icon to the shortcut bar at the bottom of the desktop.

Drag: You can drag the icons to change their positions on the desktop or between pages, or move the application icons to the shortcut bar.

You can also use a pen rather than your finger to operate the touch screen.

3.3 Mouse

The device is compatible with an external mouse. After a mouse is connected, you can use the mouse for such operations as clicking, selecting, dragging, sliding or for clicking to display pop up menu's.

4. Desktop


4.1 Status bar

At the bottom part of the screen is the status bar, at the left of there are six software buttons including Back, Home, programs in running, Vol- and Vol +, and Menu and to the right other information is indicated, such as the strength of 3G and of Wi-Fi signals, the time and date, the state of Ethernet, the shortcut to Airplane mode/Wi-Fi/Auto-rotate screen/ Brightness/Notification/ Settings and how much of the battery is left.

4.2 Home page

The home page of your Digix tablet consists of two modes: Gadget Mode and Icon Mode. The two modes can be toggled through the button at the top-right corner of the screen. The interface of Gadget Mode is shown in the picture below:



To enter the interface of application icons, click the button  at the top-right corner of the screen, as shown below:



To enter the interface of Gadget Mode, click  .

4.3 Shortcut mode

In the main interface of the Gadget Mode, you can press the menu button or click the icon Menu at the status bar. Then the shortcut menu icons will appeared, which are Wallpaper, Manage apps, System settings as shown below:



DIGIX


4.4 Shortcut way to add gadgets

To add the widgets to the main screen, long press the icon at the interface of application icons and it will automatically move to the desktop. Once added, you can click the shortcut icon to perform the related operations.




4.5 Using gadgets

The user can add, delete and install the gadgets, add and delete application icons, and move the icons. You can also drag the icons between the operation areas or between operation area and shortcut bar.

In the desktop gadget interface, long press the gadget icon, and an "X Remove"  will pop up. Drag the recycling bin icon to any place on the desktop, or drag it to "X Remove" to delete it.

5. Browsing web pages


The user can access the Internet through the browser.

Click the browser icon  on the desktop, and you can access web pages. The pop-up interface is shown below:



6. Typical applications

 
6.1 Email

Click the email icon , you can enter the email interface, where you can perform the operations below:

1. Set the account for the email.
2. Write new emails.
3. Send and receive the emails.
4. Download or print the attachments.

6.2 Explorer

To enter the Explorer interface, click the icon , as shown below:

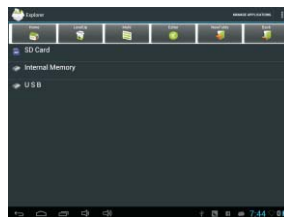

DIGIX



Long press the files or folder and your file or folder is selected, then you can use Delete, Rename, Copy, Move(Cut), Paste, Zip, Extract as shown below:



Installing files

If you want to install files in explorer, you only need to click the installation files with an extension name "APK". At that time, a prompt window will pop up, and then you can select install to install the file into the device.

6.3 Gallery

Click the icon and  then click , and the interface will be shown as below:





Then you can click an image and video to view.

 
Tap the menu key to access more functions(see first page of device information).




6.4 Music

Click the icon , and then click  to enter the music mode, and then click one song to enjoy and the interface will be shown as below.

1. Click  to enter party shuffle mode.
2. Click  to switch over between Play All mode and Play Single mode.
3. Click  to return back to Album catalogue.
4. Click  to show the lyrics.

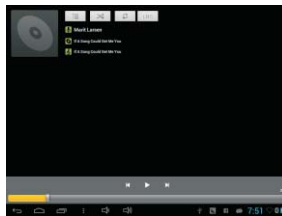

6.5 Camera


Click  to enter the mode for shooting pictures.



To operate the device in this application:

1. Click the icon at the middle right to shoot the picture. You can save the picture to DCIM/CAMERA. under the SD root directory.
2. Click the three icons at the lower right angle, and you can change from shoot mode to video mode or capturing panorama mode.
3. Click the icon on the upper right corner to view the previous picture, and where you can perform such operations as deletion, edit, sharing and setting as wallpaper or as a contact person icon. Click Finish to return to the shooting interface.
4. Move the left icon rightward, and you can set such items as storage place, picture size and picture quality for the camera.

7. Tips and other information


7.1 Some fast operations

To return to the home page, click .

To adjust the volume, click  / .

7.2 Setting for shortcut operations

7.2.1 Access to Internet Wirelessly

Click  and select Wi-Fi to enter the interface for wireless access to the internet, as shown below:



7.2.2 Access to Internet


Click the internet access icon to access the internet. You can set the IP address manually, with the interface shown below:



7.3 About the battery

The large-size LCD screen of the device will consume quite a lot of electric power. To extend the working time of the battery, you may reduce the use of some functions.

1. Watch movies, listen to music or shoot pictures.
2. Brightness: Press → Settings → Display → Brightness (lower the brightness).

3. In terms of WIFI use, please set the WIFI switch on home screen to OFF state by pressing the icon  once.

8. Customized settings

To customize the settings, click  on the shortcut menu.

8.1 Wireless and networks

To turn your WI-FI on or off, you can set the WIFI switch as ON or OFF when the WIFI items are properly configured.

Access to the Internet Wirelessly.

If you want to set and manage connection point designed for the wireless access to the Internet, please press Settings--Wireless & Network. For details, please refer to the section "see 2.6".

8.2 Sound

Set the Volume, Default notification, Touch sounds and Screen lock sound.

1. Volumes.

To adjust the volume for medium, Ringtone & notification and alarm clock, you can press Settings → Sound → Volumes.

2. Default notification.

To set the default notification ringtone, you can press Settings--Sound - Notification ringtone.

3. Touch sounds.

To make sound when you touch screen , you can select Touch sounds.

4. Screen Lock sound.

To make sound when screen get locked , you can select Screen Lock sound.



DIGIX

8.3 Display

1. Brightness.

To adjust the brightness of the screen, press Menu → Settings → Display → Brightness.

2. Wallpaper.

To set your wallpaper, press Settings → Display → Wallpaper.

3. Auto-rotate screen.

To auto-rotate screen, press Settings → Display → Auto-rotate screen.

4. Sleep.

To set your screen time to sleep mode, press Settings → Display → Sleep.

5. Font size.

To set the Font size, press Settings → Display → Font size.



8.4 HDMI

1. To turn on HDMI, press Settings → HDMI → Turn on HDMI.

2. You can choose to set the default mode of HDMI Resolution, Screen Zoom and Screen Timeout.

8.5 ScreenshotSetting

To set delay time to capture the screen and the location of screenshot storage and choose to show the screenshot button in the statusbar, press Settings → ScreenshotSetting.

8.6 Storage

To know the storage status of your device (used space, available space and total space), press Settings → Storage.

8.10 Security

1. Screen Security.

To set screen lock, press Screen lock → choose from None, Slide, Pattern, PIN and Password.

2. Passwords.

To show password as you type, press Make passwords visible.

If the password is forgotten or lost, it is retrievable through the Google Account synced to the tablet.

Note: Irretrievable passwords are not covered under the warranty.

3. Device administration.

To view or deactivate device administrators, press Device administrators.

4. Credential Storage.

5. Unknown sources.

To allow installation of application provided by the unauthorized electronic market, press Unknown sources.

6. Trusted credentials.

To view trusted CA certificates, press Trusted credentials.

7. Install from SD card.

To install certificates from SD card, press Install from SD card.



8.11 Language & Input

In this item, you can set the language, Spell checker, Personal dictionary, Default, Android keyboard, Google voice typing, Voice search, Text-to-speech output and Pointer speed.

- 1. Select Language.**
To select the Language, press Settings → Language & input → Select Language.
- 2. Spell checker.**
To set automatic correction, press Settings → Language & input → Spell checker.
- 3. Personal dictionary.**
To add words into or delete words from the user-defined dictionary.
- 4. Default.**
To configure input methods, press Settings → Language & input → Default.
- 5. Android keyboard.**
To set Android keyboard, press Settings → Language & input → Android keyboard.
- 6. Google voice typing.**
To choose Google voice typing, press Settings → Language & input → Google voice typing.
- 7. Voice Search.**
To set Voice Search, press Settings → Language & input → Voice Search.
- 8. Text-to-speech output.**
To set the Speech rate and play demonstration of speech synthesis, press Settings → Language & input → Text-to-speech output.
- 9. Pointer speed.**
To set your Pointer speed, press Settings → Language & input → Pointer speed.



8.12 Backup & reset

To back up your data, reset your Digix Tablet or reboot into the system in the Recovery Mode, press Settings → Backup & reset.



8.13 Accounts

1. You can choose to sync your data for all accounts like Dropbox, Email, Facebook, Google etc.
2. To add account, please press Settings → Accounts → Add account.

8.14 Data & time

To set the date, time, time zone, time system and format, you can press Settings→Data & time.



8.15 Accessibility

To set Large text, Auto-rotate screen, Speak passwords, Touch & hold delay and Install web scripts, you can press Settings→Accessibility.



8.16 Developer options

To set the option for development of application, press Settings→ Developer options.



8.17 About tablet

In this item, you can view the information on law, device status and software version.



9. Using HDMI

With HDMI, video contents being played by your Digix tablet can be transferred to other displays using the HDMI cable. Such as an LCD TV that has an HDMI port. The outputs the tablet supports can offer a maximum resolution of 1080P. The related operations are as follows:

DIGIX

1. Power on your Digix tablet.
2. Connect Digix to HDMI monitor with HDMI cable and power on the monitor. At that time, on the status bar messages about HDMI connection will be pop up.
3. Play the video files on your Digix tablet.
4. Press MENU, and your tablet screen will turn black, a process lasting about 5 seconds during which the contents are being switched to HDMI monitor. Please be patient.
5. You can transfer the contents to the tablet again by any of the four ways below:
 - 1) System transfers to tablet automatically after the playing is completed.
 - 2) Press Menu during playing to switch the video contents to the tablet.
 - 3) Pull out the HDMI cable during playing, after which the video contents will be transferred to the tablet.
 - 4) Press Back to exit the playing mode, after which the video contents will be transferred to the tablet.

10. Locking the device

 
Unlocking screen/device:

When the system is the sleep mode, you can short press the power switch to enter the interface for screen locking. To unlock the screen, move the corresponding icon upward, and the system will enter the state prior to sleep mode.

11. Troubleshooting


11.1 Turning off applications

Once an application is turned on, it will occupy some space, and if there are too many applications that have been turned on, it will slow down the running speed of the device. Therefore you should close applications not being used in a timely manner, so that more space can be saved and the device run faster.

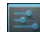To turn off the application, click  at the desktop screen, and the system will enter the interface of system settings, where you can select Apps → Running, as shown below:



 Click the application to be closed, and the system will pop up a window which asks you if you need to stop the service window, as shown below:

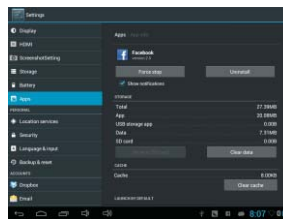

Click Stop, and the application will be closed and disappear within the window being used.

11.2 Compulsory power-off

1. Press the power switch and hold down for 7 seconds, the device will be powered off in a compulsory way.
2. Press Rest at the right lower part of the device, the device will be powered off in a compulsory way.

11.3 Restore defaults

If you want to restore the factory defaults and delete all other data, please press Settings → Backup & reset.

Warning:

Once you select Reset, the Google account, data and settings of the system and application and the downloaded applications will be deleted. Thus, be careful when using this function.



DIGIX

User Manual
TAB-840

For Digix Technical Support contact us via e-mail at
support@digixmedia.com or via phone at 1-866-770-3688
www.digixmedia.com