


Programming Key Chain Remote

Model EL03-53







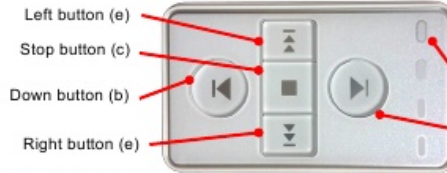








with mini receiver OR Silent Series motor

IMPORTANT: Read through all instructions BEFORE beginning programming

Multi channel Programming select channel on remote to be programmed by pressing channel buttons (e) right or left until desired channel is displayed in LED channel indicator (f)














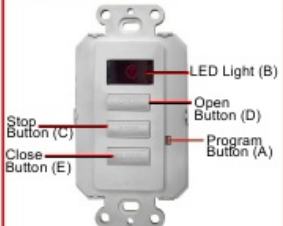




IMPORTANT: DO NOT connect receiver to power source prior to programming instruction #1

1. Programming Key Chain remote to operate with mini receiver or Silent Series motor built-in receiver.	1. Programming Key Chain remote (cont.)	3. Delete Key Chain Remote from operating with mini receiver or Silent Series Motor	4. Change between Continuous Mode & Step Mode
<p>A. To Place Receiver in Programming Mode: Press and hold Up button (a).</p>  <p>Continuing to hold Up button (a), connect receiver to power supply.</p>  <p>B. Within 3-5 seconds, receiver will start beeping. When beeping begins, release Up button (a).</p> 	<p>C. While receiver is still beeping, press Up Button (a) again; you will hear 3 consecutive beeps confirming programming.</p>  <p>Remote is now programmed Check if motor direction is operating correctly. If not, proceed to step 2</p> <p>2. Change Motor Direction (open and close function in reverse)</p> <p>A. While receiver power is connected, press and hold Stop button (c) until beeping sounds;</p>  <p>B. While receiver is beeping (approx. 5 seconds), press Down button (b).</p>  <p>Operating direction is now changed B. To change motor direction back, repeat steps 2A and 2B Proceed to step 3, 4, and 5 as needed</p>	<p>A. With receiver power connected, press and hold Stop button (c) until beeping sounds.</p>  <p>B. While receiver is beeping (approx. 5 seconds), press program button (d); hold until you hear 3 beeps</p>  <p>Single channel remote or selected channel is now deleted</p>	<p>A. With receiver power connected, press and hold Stop button (c) until beeping begins</p>  <p>B. While receiver is beeping, release Stop button (c) and Re-Press stop button</p>  <p>Operation Mode is now changed</p> <p>C. To change back to original mode, repeat steps 4A and 4B</p> 
<p>5. ADDING ADDITIONAL REMOTE CONTROLS</p>			
<p>1. Push & hold the stop button on the remote that is programmed to mini receiver. Within 3-5 second the mini receiver will start beeping. At that time release the stop button.</p> 	<p>2. Using remote control to be added, select channel to be programmed. Using left or right (e)</p> 	<p>3. On new remote push the up button until the mini receiver beeps, confirming successful programming.</p> 	

Programming Key Chain Remote

with Wall Mount receiver

IMPORTANT: Read through all instructions BEFORE beginning programming

1. Programming Key Chain remote to operate with wall mount receiver	2. Change Motor Direction (open and close function in reverse)	4. Change between Continuous Mode & Step Mode	5. Operating Key Chain Remote (cont.)
<p>Place receiver into programming mode:</p>  <p>A. Using a small screwdriver, push program button (A) on receiver. LED light (B) will blink;</p>  <p>B. Push Stop button (C) on receiver;</p>  <p>Receiver is now in Programming Mode. LED light will remain lit while in programming mode (approx. 5 seconds)</p>	<p>Check if motor direction is operating correctly. If not, continue with step 2</p> <p>A. While receiver power is connected, press and hold Stop button (c) until LED light on receiver stays on.</p>  <p>B. While receiver light is lit (approx. 5 seconds), press Down button (b) on remote.</p>  <p>Operating direction is now changed</p> <p>C. To change motor direction back, repeat steps 2A and 2B</p> <p>Proceed to step 3 and 4 as needed</p>	<p>A. With receiver power connected, press and hold Stop button (c) until receiver LED light is lit</p>  <p>B. While receiver light is on, release Stop button (c) and Re-Press stop button</p>  <p>Operation Mode is now changed</p> <p>C. To change back to original mode, repeat steps 4A and 4B</p>	<p>D. Press stop button (c) any time while curtain is closing to stop curtain from closing further</p>  <p>When in Step Mode</p> <p>A. Press and release Up button (a) to open curtain to next preset step</p> 
<p>C. While receiver is in programming mode, press Up button (a) on remote.</p>  <p>Remote is now programmed</p>	<h3>3. Delete Programming of Key Chain remote that operates with Wall Mount receiver</h3> <p>A. Place receiver in Programming Mode, see steps 1A and 1B</p> <p>B. While receiver is in programming mode, press Down button (b) on remote.</p>  <p>Remote is now deleted</p>	<h3>5. Operating Key Chain Remote</h3> <p>When in Continuous Run Mode</p> <p>A. Press and release Up button (a) to fully open curtain</p>  <p>B. Press Stop button (c) any time while curtain is opening to stop curtain from opening further</p>  <p>C. Press and release Down button (b) to fully close curtain</p> 	<p>B. Press and release Down button (b) to close curtain to next preset step</p>  <p>C. Press and hold Up button (a) or Down button (b) to override step mode</p> <p>Hold "UP" OR "Down"</p> 

***IMPORTANT:** Warranties do not cover any damage to MaestroShield® products that result from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, lightning or any unauthorized disassembly, repair or modification. Warranties do not apply to any product on which the original identification information has been altered, obliterated or removed, has not been handled or packaged correctly, has been sold second hand or has been sold contrary to the United States export regulations without consent from MaestroShield®.

FCC Statement

Model: EL03-53

FCC ID:YAVEL03-53

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

15.105 Information to the user.

(b) For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**