

User Manual of CD Player

CP2-001




Dear Users:

Thank you for choosing and using our portable CD player. Please read this manual carefully and keep it safe for your better experience. We wish you a happy use.

Safety Precautions

Please read carefully and follow the notes for optimal use of the CD Player.

- ※ Do not put heavy objects on top of the CD Player and protect it from impact.
- ※ Do not place CD Player close to strong magnetic fields or electric fields.
- ※ Do not expose battery to flame or extreme heat.
- ※ Do not play at high volumes to protect hearing.
- ※ Do not expose the CD Player to excessive dust or sand, moisture, rain, or mechanical shock.
- ※ Do not use ethyl alcohol or benzene solvent to clean, instead, use slightly damp fabric.
- ※ Do not use headphones or car player when driving, cycling, or using any motorized vehicle.
- ※ Do not take apart, attempt repair or modify the equipment yourself. HOTT will not be responsible for damages resulting from these behaviors.
- ※ Do not improperly discard the package, battery and the electronic equipment.

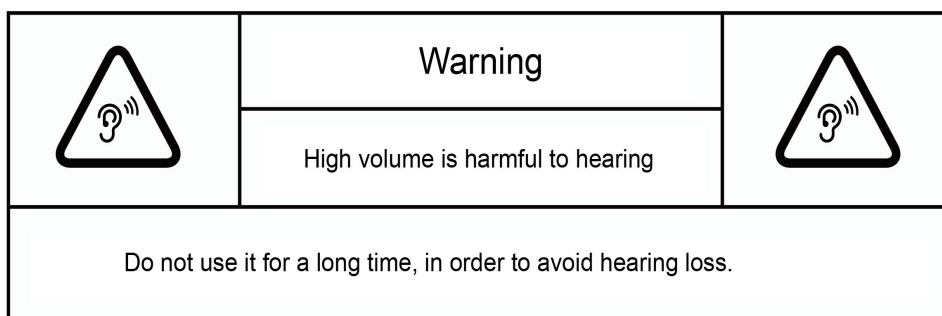




Startup Procedures

※ Tips:


※ Functional buttons will be unavailable when the HOLD button is set to the HOLD position, and available when the HOLD button is set to the UNHOLD position.

※ The CD player will turn off automatically if there is no disk after powering on or after stopping for 3 minutes without any operation.

※ Do not apply any disc with serious scratches, fingerprints and dirt on surfaces; otherwise, discs cannot be played, the CD player may fail, or the service life of the laser head may be affected.

- 1: Open the upper cover.
- 2: Put in a disc
- 3: HOLD to unlock: the HOLD key is placed at UNHOLD.
- 4: Press  briefly to turn on the machine.
- 5: Press   to adjust the volume.

Name of each part

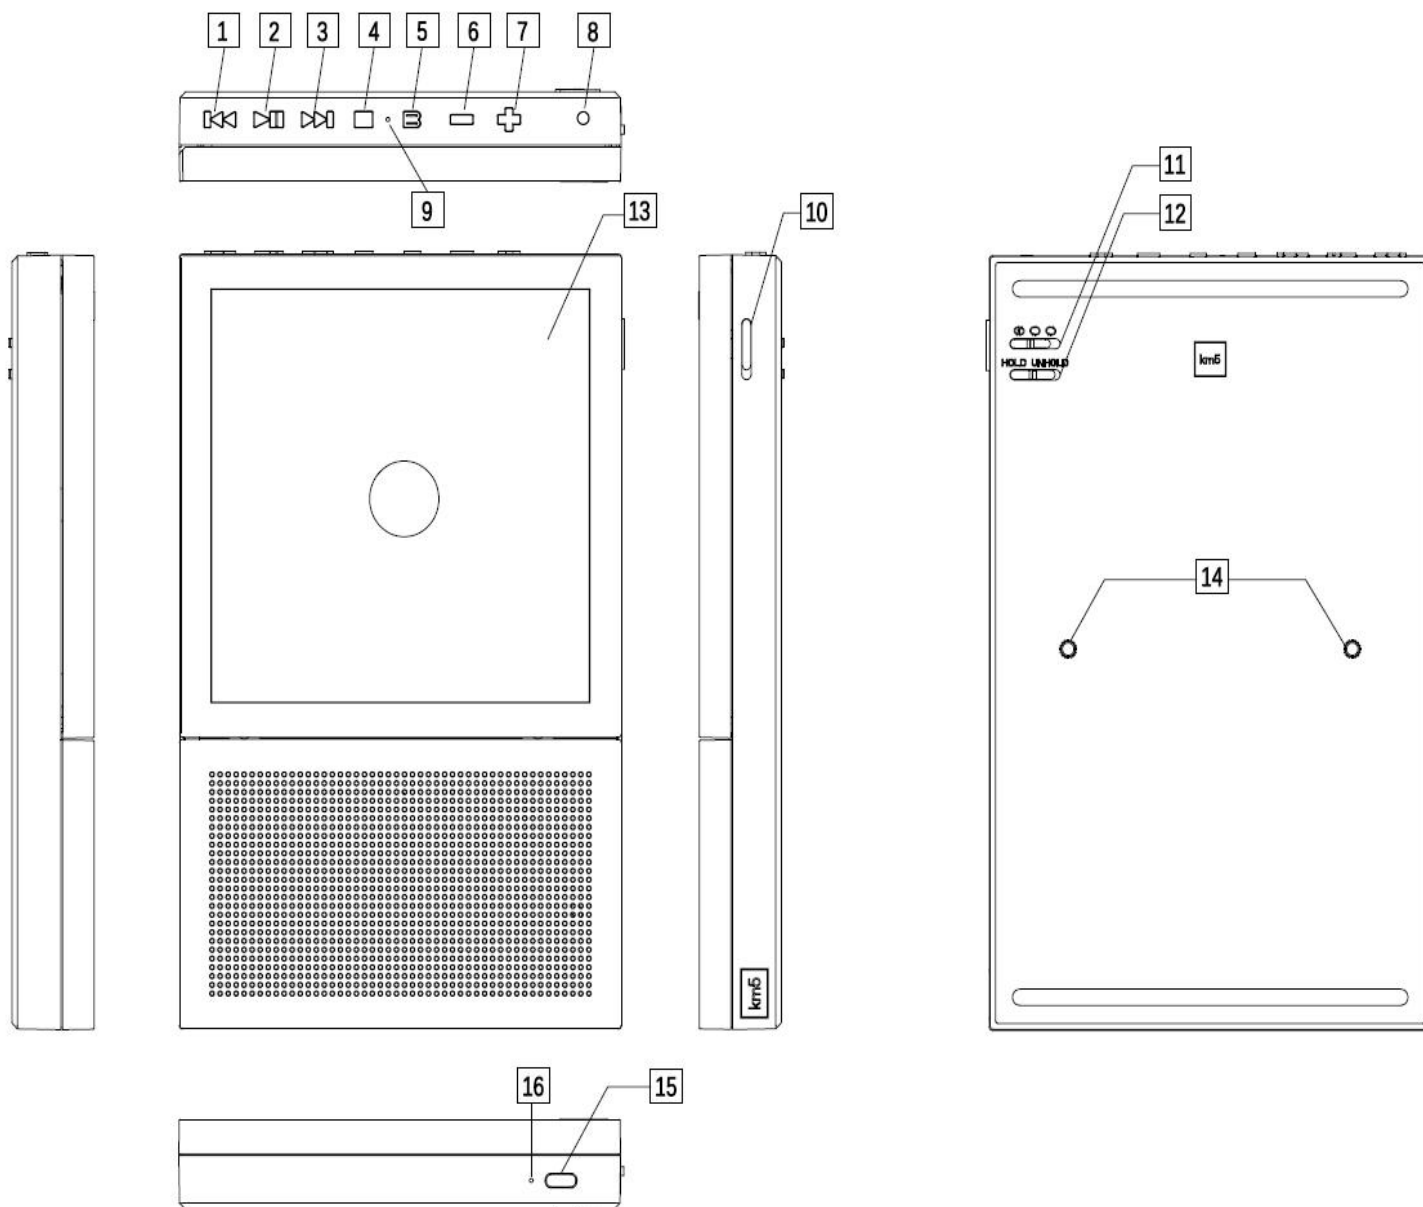

- | | |
|------------------------|--------------------------------|
| 1: Previous/FR | 9: Bluetooth indicator lamp |
| 2: Power on/Play/Pause | 10: OPEN |
| 3: Next/FF | 11: Cyclic function |
| 4: Stop/Power off | 12: Key HOLD |
| 5: Bluetooth on/off | 13: Lyrics frame (120*120*2mm) |
| 6: Volume- | 14: Support screw hole |
| 7: Volume+ | 15: USB-C Port |
| 8: 3.5mm PHONES | 16: Charging indicator lamp |

Parameters

Name:	CD Player
Model:	CP2
Supported CD type:	CD /CD-R/CD-RW/MP3
Disc size:	12CM or 8CM
ASP cache:	2M SDRAM
Connection mode:	Bluetooth/3.5mm phones
Bluetooth version:	5.1
Distance of Bluetooth:	About 10~20M
Lithium battery:	1800mAh
Charge Port:	USB Type-C
Charging time:	About 3 hours
Playback duration:	About 6 hours
Operating temperature:	0° ~40°
Storage temperature:	- 5° ~60°
Dimensions:	144mm*225*27mm
Weight:	443g

Common trouble shooting solutions

Trouble	Possible reason	Solution
Failure in startup	Check whether the HOLD button is in the HOLD position.	Turn the HOLD button to the HOLD position.
	The product cannot be started due to low power.	Charge it with the supplied USB cable (adapter output: 5V1A).
Failure to read disc	Check the disc for serious scratches, cracks, fingerprints, dirt, etc.	Use a new or clean disc.
	Check whether the disc format is supported by the CD player.	Use a disc supported by the CD player.
No sound	The headphone is not properly plugged into	Re-plug or replace the headphone.
	Check whether the volume of the CD	Increase the volume by pressing
Failure to charge	The USB port or USB cable port is faulty.	Replace the USB cable.
Failure to connect Bluetooth device	The device to be connected is in the Bluetooth pairing mode.	Enable the Bluetooth modes of the CD player and device to be
	The device to be connected is beyond the	Reduce the distance and reconnect
Button failure	Check whether the HOLD button is in the HOLD position.	Turn the HOLD button to the HOLD position.
Playback stop or automatic	Check whether the ALL mode is enabled.	If this mode is not enabled, the CD player will stop working or
Song skipping	Check whether the disc is clean without scratches.	Replace the disc.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2, Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction.

Warranty Card

Product Name:	_____	Product Type:	_____	Date:	_____
Seller:	_____				
Name:	_____	Phone:	_____		
Address:	_____				

(Above information is filled in by the user)

Trouble description 1: _____

Solution1: _____

Trouble description2: _____

Solution2: _____

(Above information is filled in by the maintenance personnel)