

Working theory of transmitter

First you shall put the battery on the correct place. Now you can press the On/Off button on AC114-06, the switch will transmit a high voltage to the encoder IC of remote control, the encoder IC of remote control will trigger 433.92 MHz high frequency transmitter unit to transmit the address code and key value. At the same time, LED will flash; and transmitter will be stop if loosing the button, then LED will turn off.