





**Movilent Mobile Phone**

---

User's Guide

Model:

Please read this guide  
carefully before using the  
phone for the first time.



# Contents

---

<b>1. Safety and Maintenance</b>	<b>3</b>
<b>2. Installation and charging</b>	<b>7</b>
2.1 INSTALLING THE SIM CARD AND BATTERY	7
2.2 REMOVING THE BATTERY AND SIM CARD	7
2.3 HOW TO CHARGE BATTERY	7
2.4 HOW TO INSERT MEMORY CARD / T-FLASH CARD	8
2.5 POWER ON/OFF	9
2.6 SECURITY PASSWORD	9
2.6.1 PIN code	9
2.6.2 PUK code	9
<b>3. Mobile Phone Parts Drawing and Key Functions</b>	<b>10</b>
3.1 KEY DESCRIPTION	10
3.2 ICONS ON IDLE SCREEN	12
<b>4. Main Function Guide</b>	<b>13</b>
4.1 DOWNLOAD MP3 SONGS	13
4.2 CAMERA	13
4.3 USB CONNECTION FUNCTION	13
4.3.1 Storage device	13
4.3.2 COM Port	14
4.4 MAKE A CALL	14
4.4.1 Dial a Domestic Number	14
4.4.2 Dial an Extension of a Fixed Phone	15
4.4.3 Dial an International Number	15
4.4.4 Dial a Number from the Call List	15
4.5 DIAL AN EMERGENCY NUMBER	16
4.6 ANSWER A CALL	16
4.7 END A CALL	16
4.8 PHONEBOOK	16
4.9 CALL LOGS	16
<b>5. Text input</b>	<b>17</b>
<b>7. Function list</b>	<b>18</b>
<b>8. Quick Function Reference</b>	<b>20</b>
<b>9. Troubleshooting</b>	<b>23</b>

10. Technical Parameters-----	26
11. RF Exposure Information-----	27

# 1. Safety and Maintenance

**Please follow the precautions below while using your phone:**

- Please read this manual carefully before using this phone.
- If use of mobile phone is prohibited or will lead to interference or danger, do not power on your phone.
- You are prohibited to use a mobile phone on board an aircraft, so keep it powered off.
- When using your mobile phone, please keep it away from heat sources or high-voltage environment, such as electric appliances and electric-heated cooking appliances. phone under normal temperature, because extreme temperature (over 55°C or below -10°C) is harmful to your phone.
- Guard against fire. Power off your mobile phone in gas stations, fuel storage facilities and other places where there are combustible goods.
- Do not use the mobile phone while driving.
- Use only the standard batteries, charger and accessories approved by Spice. Spice bears no responsibility for any consequences resulting from the use of third-party accessories.
- Your mobile phone may interfere with other electronic devices around it. Keep it away from such electronic devices as TV, PC, cardiac pacemaker and hearing aids. Do not place your phone in the vicinity of any credit card or magnetic field. Observe relevant rules and regulations when using your mobile phone in hospitals or other special places.
- Mechanical vibration or shaking of the phone is strictly prohibited, and it is also not allowed to strike the screen of the phone with a sharp object.
- Using any cell phone cover or plastic phone cover may damage the coating of the phone housing.
- Do not disassemble your mobile phone.

- Do not clean mobile housing with any dissolved matter, such as benzene, thinner or alcohol. Don't expose your phone to corrosive chemicals, such as cleaning agents. Use only clean, soft cloth to clean your phone gently.

- Never expose your mobile phone to direct sunlight or heavy smog or dust.

- Your mobile phone is not waterproof, so keep it dry. Never use your battery in a high humidity environment, such as in a bathroom. Keep it away from rain or damp.

- Use headsets and other accessories carefully. If your phone has an external antenna, do not touch the antenna when not necessary. Use only an original antenna. Use of unauthorized antennas may cause damage to your phone.

- When you want to unplug the charger from your mobile phone or disconnect power, please hold firm the connector and then pull it out. • Do not pull the power cord.

- Do not rely on your mobile phone as the only emergency (such as medical aid) communication tool.

Keep your mobile phone in a safe place out of the reach of children to avoid any danger.

**Please follow the precautions below to use the battery:**

- Please read carefully the instructions and labels on the surface of the battery before using it.

- Charge your battery in a cool and well-ventilated room. Charging at overheat ambient temperature may make the battery heat, fume, burn, deform or even explode.

- The battery features special protection circuits and devices. Do not disassemble battery, or short-circuit or electrolyte leakage may occur. If electrolyte splashes into your eyes, you may have the risk of getting blind. In this case, rinse your eyes with clean water (never rub the eyes) and see a doctor immediately.

- Squeezing of battery, mechanical vibration or shaking of battery or use of short-circuited battery is strictly prohibited, because such behavior will damage the battery or components connected with it. Short circuit may result from direct connection of the positive pole and the negative pole of the battery by metal objects, such as a coin, pen, or paper clip, so keep the battery away from metal objects.
- Keep metal contacts and the battery clean.
- Never use damaged or exhausted batteries.
- Replace the battery when it fails to meet the performance requirements. A battery can be recharged for hundreds of times until replacement is necessary. As consumer goods, a battery can be charged and discharged for hundreds of times, but its capacity will decrease gradually. If you notice a significant decrease in operation time (talk time and standby time), it is probably time to buy a new battery.
- Never expose your battery to direct sunlight or heavy smog or dust. Never use your battery in a high humidity environment, such as in a bathroom. The device is not waterproof, so keep your phone away from rain or damp.
- Do not place the battery places where temperatures is too high or too low. Temperature above 55℃ or below -10℃ will affect battery performance.
- Never dispose of batteries in a fire to avoid explosion.
- Do not throw your battery into water, otherwise internal short circuit may occur, which will make the battery heat, fume, deform, damage or even explode.
- Dispose of batteries (e.g. recycling) in line with regulations. Do not dispose of batteries as household garbage to avoid explosion or pollution.
- The battery can only use a dedicated charger, and time for continuous charging is not allowed to exceed 12 hours.
- Keep your battery in a safe place out of the reach of children to avoid any danger.

**Please follow the precautions below to use the charger.**

- Please read the instructions and the labels on the surface of the charger carefully before using it.
- Do not try to disassemble or modify the charger. Never use the charger when power cord is damaged, otherwise, electric shock, fire and charger damage may occur.
- Never touch the charger with a wet hand. If your charger comes into contact with water or other liquids, switch off the power immediately.
- Do not short-circuit your charger. Mechanical vibration or shaking of your charger is prohibited. Do not exposure your battery to strong sunlight. It is prohibited to use your phone under high humidity environments, such as in the bathroom. The device is not waterproof, so keep your phone away from rain or damp.
- Do not use your charger in the vicinity of electronic devices such as TV or radio.
- Hold firm the charger to unplug. Never pull the wire, otherwise the wire might be damaged.
- Keep your charger in a safe place out of the reach of children to avoid any danger.


**Please follow the precautions below to use the headset**

- Please keep appropriate volume when using the headset to avoid damage to your hearing.
- Do not pull the headset wire forcefully to avoid any crack.
- Long term use of headset in places with high temperature or high humidity can easily lead to headset damage or shorter service life.
- Do not use headset while driving, riding a bike or walking on the road in case of any traffic accident.
- Keep the headset in a safe place out of the reach of children to avoid any danger.

## 2. Installation and charging

### **2.1 Installing the SIM Card and Battery**

Ensure that the golden contact area on the SIM card is facing downward, and the beveled corner is properly aligned with the SIM card slot.

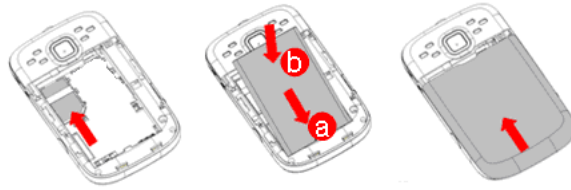

### **2.2 Removing the Battery and SIM Card**




Note: Before removing the battery, make sure your phone is powered off and external power supply is removed. Never remove the battery when your phone is powered on. Otherwise, SIM card and your phone may be damaged.

### **2.3 How to Charge Battery**

Press the charger interface and insert the charger into the charging port of the mobile phone as indicated below:



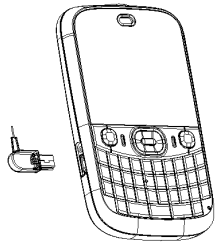

**Note:** Operate carefully. Do not try to pull the charger out of the charging interface by force to avoid possible damage to the phone or the charger.

- The battery supplied with your mobile phone must be fully charged prior to use.
- Do not remove the battery or SIM card while the battery is being charged.
- If the battery runs out of power, the phone will be powered off automatically.

#### **2.4 How to Insert Memory Card / T-Flash Card**

Ensure that the memory card is inserted with the golden contact area facing down.



## **2.5 Power On/Off**

Make sure the battery has been installed properly. Power on the phone and press [End] key until power-on menu appears on the screen. Some SIM cards may have PIN code protection. If there is a prompt to input PIN code, please enter your PIN code and then press [OK].

If the SIM card inserted is valid, the mobile phone will automatically search available network after being powered on. If the SIM card is invalid, it will indicate no SIM card.

To power off the phone, hold the [End] key until the power-off menu appears.

## **2.6 Security password**

You can use the access password described in this section to prevent unauthorized use of your SIM card.

### **2.6.1 PIN code**


PIN code is used to prevent your SIM card from illegal use. If the PIN code protection function is activated, the screen will display the prompt for entering PIN code. If wrong PIN codes are entered for three times in succession, the SIM card will be automatically locked. You must enter PUK code to unlock the SIM card. PIN code is related to the SIM card instead of the mobile phone and provided by the network operator.

### **2.6.2 PUK code**

PUK code is personal unlocking code used to unlock SIM card locked due to entering wrong PIN codes. If wrong PUK codes are entered for ten times in accumulation, the SIM card will become invalid. PUK code is provided by the network operator.

### 3. Mobile Phone Parts Drawing and Key Functions

#### 3.1 Key Description
















NO	Key	Description
1	[OK key]	Confirm the operation that has been conducted and enter the selected menu.
2	[Left soft key]	This key usually corresponds to the function shown on the lower left corner.
3	[Dial key]	Make or answer a call from SIM card. Press this key in standby state to enter Call History.
4	[Keypad]	Input numbers, letters and some special characters.
5	[Fn key]	In "ABC", or "abc" or other input modes, press this key once can input the key labeled with the desired digit. Press the key twice can input numbers continuously.
6	[Shift key]	Switch upper and lower case
7	[  key]	Switch text input modes when editing texts.
8	[Space key]	In the editing state, press the key to input a space. In standby state, press and hold the key enter to the FM.
9	[Navigation key]	Four-direction navigation keys are used for quick access to four fixed menus or select menu items through the menu operation.
10	[Right soft key]	This key usually corresponds to the function shown on the lower right corner. Press this key in menu to return to previous page. In the standby state, press this key to enter contact list.

11	[End key]	End a call. Press and hold this key to power on or power off the mobile phone. On the menu, press this key to return to standby state.
12	[Del key]	When editing a text, click Del key can clear the character on the front of cursor.
13	[Enter key]	In the editing state, press this key to move the cursor to the next line.
14	[Sym key]	Display the symbol list in any text input mode.
15	[Send key]	In the standby state, press the key enter to the Messages.



### 3.2 Icons on Idle Screen

<Icons on the screen >

Icons	Description	Location
	Signal strength indicator	Icons Area
	GPRS Connected	Icons Area
	Alert Type is Ring	Icons Area
	Alert Type is Vibration	Icons Area
	Alert Type is Vibration and Ring	Icons Area
	Alert Type is Vibration then Ring	Icons Area
	Alert Type is Silent	Icons Area
	Unread SMS	Icons Area
	Unread MMS message	Icons Area
	New WAP Push	Icons Area
	Alarm Enabled	Icons Area
	Battery level	Icons Area
	New missed calls	Icons Area
	The headset is being used	Icons Area
	Bluetooth is on	Icons Area

## 4. Main Function Guide

### 4.1 Download MP3 Songs

Your phone supports MP3 music playback, and you can download MP3 music by:

1. connecting to the Internet;
2. connecting to the computer using USB;
3. receiving MP3 music via Bluetooth.

### 4.2 Camera

You can enter the camera interface from [Camera]. [Camera] can achieve the HD pixel photograph effect. Adjust parameters to find a view, and press and hold the OK key to take a photo. You can view photos in the [multimedia]-[Image viewer] menu.

### 4.3 USB Connection Function

Your phone supports USB connection. You can select from **Mass storage**, **Webcam**, or **COM port**

#### 4.3.1 Storage device

After connecting your phone to PC using data cable, select **Mass storage** for USB connection between your phone and PC.

**Note:**

1. Since transferring files to your phone using USB connection is rather slow, please wait patiently. To exit USB connection menu, please stop the USB device on PC. Disconnect USB connection between your phone and PC only when the PC prompts that it is safe to disconnect. Otherwise, files transmitted to your phone may be lost or your phone may fail to work normally.

2. When files stored on your phone become abnormal, select memory card formatting.
3. When the phone is powered on and the USB function is activated, USB related functional modules of the phone cannot be used.

#### **4.3.2 COM Port**

Your phone supports PC synchronization. After connecting your phone to PC using data cable, select COM port. Then open the synchronization software on your PC to upload the contacts and other information from your phone to PC for backup.

Note:

1. Before opening the synchronization software on PC, make sure your phone has entered synchronization mode.
2. You need to install synchronization software on your PC.
3. When your phone is uploading or downloading files, do not unplug the data cable. Otherwise, data may be lost.
4. Driver shall be installed on PC before you use PC synchronization function.

#### **4.4 Make a Call**

You can make or receive calls when the network provider's logo appears on the screen. The signal bar on the upper left corner of the screen indicates network signal strength. Call quality is remarkably affected by barriers. You can move a little to improve call quality.

##### **4.4.1 Dial a Domestic Number**

In standby state, enter the phone number, and then press Dial key to call the number. If you need to change telephone numbers, press the right soft key to "clear" backspace characters. Dialing animation will appear when dialing. Call status information will display when the call is put through.

Press End key to end the call.

You can dial a domestic number by entering the following in series:  
area code      phone number      Dial key

#### 4.4.2 Dial an Extension of a Fixed Phone

Some fixed phones can not be put through directly. You need to enter the exchange number first, followed by \* key until "P" or "W" appears on the screen, and then enter the extension number.

You can dial an extension of a fixed phone by entering the following in series:

area code    exchange number    P(W)    extension number    Dial key

#### 4.4.3 Dial an International Number

Press and followed by \* key until "+" appears.

Enter the following in series to dial an international number:

+    country code    full phone number    Dial key

After entering +, enter the desired country code and full phone number. Country codes are such numbers as 49 for Germany, 44 for UK and 46 for Sweden.

Leave out "0" that precedes the area code.

For example, to call Shanghai Service Hotline from other countries, dial:

+86 21 114

Note: Some networks do not support the use of "+" to dial an international number.

#### 4.4.4 Dial a Number from the Call List

Each phone number you dialed and received will be saved in the Call Log of your phone. Recently dialed and received phone numbers will be listed under the submenus of Missed Calls, Received Calls, Dialed Calls, respectively. The last call dialed and the last call received will appear on the top of each list. Less recent phone numbers will be deleted automatically when the phone numbers exceed the storage limit. Do the following to view the lists:

In standby state, press Dial key to browse the list of call history, or select **Call Logs** from the main menu to view missed, received, dialed numbers.

You can dial a phone number in the list by pressing Dial key.

In the phone number list, you can press **Options** center key] to view the number, save it to the phone book, delete it and do other operations.



#### **4.5 Dial an Emergency Number**

Within the coverage of the network (as indicated by the signal strength bar on the upper left corner of the screen of your phone), you can make an emergency call, even if you do not have a SIM card. If your network provider does not provide roaming service in the area, the screen will display "Out of Service".

Note: Dialing emergency call 112 is not allowed in some networks.

#### **4.6 Answer a Call**

You can answer a call by pressing Dial key, or by pressing the button on the headset when the headset is connected to your phone. Press End key to reject an incoming call. Press End key to end a current call. Press End key to cancel a call just dialed.

#### **4.7 End a Call**

Press End key to reject an incoming call.  
Press End key to end a current call.  
Press End key to cancel a call just dialed.

#### **4.8 Phonebook**

Your phone supports name-card phonebook, you can store the name card information of your contacts using Phonebook function.


Note: The number of records your SIM card can store depends on its capacity.

#### **4.9 Call Logs**

Your phone can also store the log of recently Missed Calls, Received Calls, Dialed Calls, duration of last call, duration of received calls and duration of dialed calls, as well as number of received/sent messages and GPRS data traffic. You can also delete the above records by clearing counters.

## 5. Text input

### Changing the Text Input Mode

The indicator of the current text input mode is displayed in the upper left corner of the screen. You can press  to change the text input mode.

Note:

Press Del key to delete the character on the left of the cursor.  
Press Space key to enter a space.  
Press Enter key to move the cursor to the next line.  
Switch upper and lower case

### Entering a Word

To enter a word, press the keys according to the spelling sequence of the word.

### Entering a Digit

In "123" input mode, directly press a number key labeled with the desired digit.

### Entering a Symbol

1. Press Sym key to display the symbol list.
2. Press Navigation key to scroll to the desired symbol.
3. Press OK key to enter the symbol.

## 7. Function list

1 Phonebook	5 Bluetooth
1-1 Quick search	
1-2 Search contact	
1-3 Add new contact	6 Music
1-4 Caller groups	
1-5 Extra numbers	7 Neo messages
1-6 Phonebook settings	7-1 SMS
1-7 Call picture	7-2 MMS
1-8 Caller ringtone	7-3 Broadcast message
2 Multimedia	8 Neo application
2-1 Audio player	8-1 Alarm
2-2 Video recorder	8-2 Calendar
2-3 Video player	8-3 To do list
2-4 FM Radio	8-4 Stopwatch
2-5 Schedule FM record	8-5 World clock
2-6 Ebook reader	8-6 Calculator
2-7 Image viewer	8-7 Unit converter
2-8 Sound recorder	
2-9 File manager	9 Neo navigation
	9-1 WAP
3 Call Logs	9-1-1 Homepage
3-1 Missed calls	9-1-2 Bookmarks
3-2 Dialed calls	9-1-3 Recent pages
3-3 Received calls	9-1-4 Offline pages
3-4 Delete call logs	9-1-5 Input address
3-5 Call timers	9-1-6 Service inbox
3-6 Call cost	9-1-7 Settings
3-7 Text message counter	9-2 Data account
3-8 GPRS counter	9-3 Rights manager
4 Fun & Games	10 Camera
4-1 Java	
4-2 Java settings	11 Settings
4-3 Games	11-1 User Profiles

11-1-1 General	11-4 Call settings
11-1-2 Meeting	11-4-1 Blacklist
11-1-3 Outdoor	11-4-2 Call waiting
11-1-4 Indoor	11-4-3 Call divert
11-1-5 Headset	11-4-4 Call barring
11-1-6 Bluetooth	11-4-5 Low battery protection
11-2 Phone setup	11-4-6 Advance settings
11-2-1 Time and date	11-5 Shortcuts
11-2-2 Language	11-6 Network Setup
11-2-3 Pref. input methods	11-7 Security setup
11-2-4 Schedule power on/off	11-7-1 SIM lock
11-2-5 Dedicated key	11-7-2 Phone lock
11-2-6 Auto update of date and time	11-7-3 Auto keypad lock
11-3 Display setup	11-7-4 Fixed dial
11-3-1 Themes	11-7-5 Barred dial
11-3-2 Wallpaper	11-7-6 Change password
11-3-3 LCD backlight	11-8 Restore factory settings
11-3-4 Greeting text	12 Twitter
11-3-5 Screen saver	13 Facebook
11-3-6 Power on display	14 Nimbuzz
11-3-7 Power off display	15 Movilnet
11-3-8 Show owner number	
11-3-9 Clock type	
11-3-10 Idle shortcut menu	

Note: SIM card tool kit is the added-value SIM card service menu. The content of the menu is different due to different content contained in different cards. Some menus may be invisible.

## 8. Quick Function Reference

This chapter briefly describes functions of the mobile phone.

Function	Description	Options
Check recent call log	Check recently dialed, answered, missed and rejected calls	Main Menu-Call logs -missed calls, received calls, dialed calls
Delete Call Log	Delete all records, delete dialed, answered, missed and rejected calls	Main Menu-Call logs -Delete call logs
Call time counter	Check duration of last call, all calls, dialed calls and answered calls, reset call counter	Main Menu-Call logs-Call timers
Quick contact lookup	Quickly find contact in the phonebook	Main Menu-Phonebook- Quick search
Add new contact	Quickly find contact in the phonebook	Main Menu-Phonebook-Add new contact
Phonebook capacity	View the memory capacity of phone/SIM card	Main menu - Phonebook – Phonebook settings-Memory status
Camera	Use camera function	Main Menu –Camera
Alarm clock	Set the alarm clock at a particular time	Main menu – Neo application - Alarm
Calculator	Use the phone's calculator function	Main menu - Neo application - Calculator
Message reading	Read messages received, sent, failed to be sent or stored	Main Menu – Neo messages –SMS- Inbox,outbox
Message template	Save commonly used short messages and multimedia messages to be used when editing messages	Main Menu- Neo messages–SMS-Templates-comm only used short messages: Main Menu-Messages-MMS-Templates-

		commonly used multimedia messages
Message capacity status	Check message capacity status in the SIM card and phone	Main Menu- Neo messages -SMS-SMS settings- Memory status; Main Menu-Messages-MMS-MMS settings- Memory status;
Display setting	Change phone's display settings	Main Menu - Settings - Display setup
Time and date	Set up mobile phone's time and date	Main Menu - Settings –Phone setup - Time and date
Display language	Select your mobile phone's display language	Main Menu - Settings – Phone setup - Language
Ringtone setting	Select ring tone, switch ring tones, message ring tones and keypad tones, etc.	Main Menu –Settings –User profiles- Options - Customize – Tone setup
Through prompt	Select the way of connecting to prompts	Main Menu- Settings –User profiles-Options-Customize-Answer mode
Volume	Adjust the volume of ring tone, alarm tone, message tone, and keypad tone	Main Menu- Settings –User profiles-Options-Customize-Volume
Prompt tone	Select the prompt tone when a specific event occurs.	Main Menu- Settings –User profiles-Options-Customize-Extra tone
Security setup	Set up passwords to protect the phone from being used without authorization	Main Menu- Settings –security setup
Restore factory settings	Restore some phone settings to factory settings (factory default security)	Main Menu- Settings - Restore factory settings

	code:0000)	
--	------------	--

Note: The default security password is also 0000.

## 9. Troubleshooting

Please refer to the list below if you encounter any problems when using your phone. If you tried but the problem has not been solved, contact a qualified SPICE dealer or your local maintenance provider immediately.

### **Your display prompts Enter PIN Code:**

Enter the valid **PIN** code for your **SIM** card. If you do not know this code, contact your network service operator immediately.

### **Your display prompts Enter PUK Code:**

If you enter the **PIN** code incorrectly three times in a row, your **SIM** card will be locked. In this case, you have to enter the **PUK** code to unlock your **SIM** card. Please contact your network service operator immediately.

### **Your phone prompts Insert SIM card:**

Make sure that your **SIM** card is correctly installed. Check whether your **SIM** card works normally. This message may indicate that your **SIM** card is defective or damaged. In this case, contact your network service operator.

### **Your phone prompts Out of Service Area or Network**

#### **Failure:**

Check your signal strength indicator. If the indicator shows no signal, you may be in a basement or a building corner not covered by network. Move to another location where the signal is strong enough. There is another possibility: you may be in an area not covered by network. You may ask your network service operator to inform you of the network coverage.

### **The sound is of poor quality, or there is echo or noise, which makes calling difficult:**

Hang up the call, and dial again. Your network service operator may provide you with a better link when you retry.



**Standby Time Drops:**

If the signal is weak, your mobile phone has to search for the signal for a longer time. This is a possible cause. If you do not want to answer calls, power off your phone temporarily. Or, your battery has been used for a long time and has worn out. In this case, you have to buy a new battery.

**Your phone cannot be powered on:**

Check your battery charge level. If necessary, recharge your battery. You may try to power on your phone during the recharging. If your mobile phone has been put aside for a long time, the battery may be over discharged. In this case your phone cannot be powered on, even if the battery has been recharged for a relatively long time. You have to be patient, waiting for the recovery of your battery charge level.

**You cannot send a message:**

Check the options related to your messaging service center. You may forget to subscribe the SMS service. Or the recipient number is not available. Another possible reason is that your local network service operator does not support this service.

(You may consult the local network operators for details)

**■ Unable to charge:**

There are three possible reasons for this. First, the charger does not function normally. In that case, you should contact the nearby maintenance center or dealer designated by SPICE. Second, the working environment or temperature is not appropriate to the charger, and you can change the charging environment. Third, it may not be well connected, and you can check the plug of the charger.

**■ No more data can be added to the phone book:**

The phonebook is full. Remove some useless items to save space.

**■ Some functions can't be selected:**

The related service is not in use or the local network service provider doesn't support such service. Please contact with SPICE's designated maintenance center, dealer or your network service provider.

## 10. Technical Parameters

### Standard

Product: GSM dual band digital mobile phone with GPRS features  
Model: QT-57  
System: GSM 900/DCS 1800

### Operating Temperature

Highest: +55 °C  
Lowest: -10 °C

### Basic Parameters

Dimensions (Length x Width x Thickness): about 62.4\*107.4\*13.5(mm)  
Weight: about 120.4g (including battery)  
Talk time: 120—240min\*  
Standby time: 150—250h\*  
Battery capacity: 1000mAh

---

\*May vary depending on local signal strength

## 11. RF Exposure Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This model (FCC ID: YCNSHARK32) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.639 W/kg and when properly worn on the body is 0.778 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help