

**MOGA**  
BY  
PowerA™

**XP5-i+**

Bluetooth Controller for  
Mobile & Cloud Gaming on iOS

**USER MANUAL**

MANUEL DE L'UTILISATEUR  
MANUAL DE USUARIO  
BEDIENUNGSANLEITUNG  
MANUALE PER L'USO  
MANUAL DO USUÁRIO

Made for

Apple | iPhone | iPad | iPod



phone and game sold separately /  
téléphone et jeu vendus séparément

**OPTIONS BUTTON**

**POWER/PROGRAM LED**

**GAMING CLIP SLOT**

**MENU BUTTON**

**BLUETOOTH  
PAIRING BUTTON**

**HOME BUTTON**

**A/B/X/Y BUTTONS**

**D-PAD**

**CHECK BATTERY /  
PLAYER NUMBER  
INDICATOR**

**POWER BANK  
ON/OFF BUTTON**

**ADVANCED GAMING  
BUTTONS**





**FACTORY RESET HOLE**

**PRECISION  
ANALOG STICKS**

**PRECISION ANALOG STICKS**

**PROGRAM  
BUTTON**

**FPO**

**USB-C PORT**

**R1**

**L1**

**R2**

**L2**

**FPO**

**LIGHTNING  
PORT**

# SETUP

For best results, fully charge controller and power bank prior to first use.

## CHARGING CONTROLLER + POWER BANK

- Using a Lightning Cable, connect to the Lightning port at the top of the controller, and connect the other end to any powered USB source.
- When charging, four LEDs will display the charging level from 25-50-75-100%.

## CHARGE LEVEL INDICATOR

Check battery charge level by pressing the battery status button (🔋) on front lower left of controller. The LEDs will indicate the current charge level from 25-100% even when controller is off.

## WIRELESS MODE

- If controller is off, press the Home button (🏠) to turn on (LED will illuminate).
- Press and hold the **Bluetooth** sync button (📶) on back of controller for 2 seconds to enter pairing mode (LED will flash rapidly).
- Enter the **Bluetooth** settings on your device and choose the MOGA controller. The pairing LED will turn solid when connected.

*NOTE: A previously paired device will automatically pair to the controller when powered on.*

## POWERING OFF

Hold the Home button (🏠) for 5 seconds to turn controller off and save battery capacity.

## GAMING CLIP

A detachable gaming clip is included for use with gaming on your phone. You can use USB cables with clip attached for charging.

1. Slide Controller into Mobile Gaming Clip by tipping top edge in first.
2. Push controller bottom edge down into clip until it locks into place.
3. There are two adjustable articulation dials on the Mobile Gaming Clip. Rotate dials in opposite

directions to loosen and adjust position. Rotate dials back to tighten after reaching desired viewing angle.

4. To insert phone, push top edge of phone against top of phone grip to expand upward.
5. Push bottom of phone down flat into place as you reach top limit of phone grip. Adjust phone horizontally as needed to center over controller.
6. Remove clip by pulling front edge forward to release from notch.

## INTEGRATED POWER BANK

A Power Bank built into the controller allows you to charge your phone during gameplay or while controller is off.

- Connect the USB-C end of a Lightning Cable to the USB-C port in the top of the controller.
- If you don't have a USB-C to Lightning cable, you can use the included USB-C to USB adapter.
- During gameplay, move the Power Bank switch below right thumbstick to the right (on) to start charging. If you prefer to use battery power to extend controller usage time rather than charge phone, move switch to the left (off).
- To charge mobile device when controller is not in use, simply connect cable between controller and device to begin charging (Power Bank Switch must be ON).

## ASSIGNING THE ADVANCED GAMING BUTTONS

1. Press the Program Button on the bottom of the controller for 3 seconds. The LED Connection Indicator will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/L1/R1/L2/R2/Left Stick Press/Right Stick Press/D-pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The LED connection indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

**Note:** Advanced Gaming Button assignments will remain in memory even after disconnected.

## RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in assign mode.
1. Press the previously assigned button for 5 seconds, and the function will be cleared.

## FAQS

For latest FAQs, visit [PowerA.com/Support](https://www.powera.com/Support)

### **PROBLEM: My controller will not power on?**

**SOLUTION:** Confirm the controller is fully charged by pressing the battery status button (🔋) on front lower left of controller. Plug in to recharge as needed.

### **PROBLEM: I do not see MOGA controller listed in mobile devices Bluetooth settings?**

**SOLUTION:** Press and hold the *Bluetooth* sync button (📶) on back of controller for 2 seconds to enter pairing mode (LED will flash rapidly).

### **PROBLEM: The integrated power bank is not functioning?**

**SOLUTION:** Confirm the controller has more than 25% charge and Power Bank button is switched on.

## BATTERY WARNING

Don't attempt to replace the rechargeable battery yourself- you may damage the battery, which could cause overheating, fire, and injury. The Lithium-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste.

Dispose of batteries according to your local environment laws and guidelines.

Don't use or leave the product containing rechargeable batteries exposed to very high temperature (e.g. at strong direct sunlight or in a vehicle in extremely hot weather). Otherwise, it can overheat, catch fire, or the performance will degenerate, and the service life will be shortened.

Don't use the rechargeable battery item in a location where static electricity is rich, otherwise, the internal safety devices may be damaged, causing a harmful situation.

In case the electrolyte gets into the eyes due to the leakage of battery, do not rub eyes! Rinse eyes with clean running water and seek medical attention immediately. Otherwise, it may injure eyes or cause a loss of sight.

If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from battery charger and place it in a contained vessel such as a metal box.

Be aware discarded batteries may cause fire, do not heat the controller or throw it into fire.

## MOTION WARNING

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10 to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### **CAN ICES-003(B)/NMB-003(B)**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### **CAN ICES-003(B)/NMB-003(B)**

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **RADIATION EXPOSURE STATEMENT**

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

### **DÉCLARATION D'EXPOSITION AUX RAYONNEMENTS**

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 0 cm entre le radiateur et votre corps.

### **MANUFACTURED BY**

ACCO Brands USA LLC, 4 Corporate Way, Lake Zurich, IL 60047  
**ACCOBRANDS.com | POWERA.com | MADE IN CHINA**

### **CONTACT/SUPPORT**

For support with your authentic PowerA accessories, please visit **PowerA.com/Support**.

### **WARRANTY**

2-Year Limited Warranty: Visit **PowerA.com/Support** for details.

### **AUSTRALIAN WARRANTY STATEMENT**

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

### **AU WHOLESALE DISTRIBUTOR**

Level 2, 2 Darling Street South Yarra, Australia VIC 3141  
bluemouth.com.au Email: support@bluemouth.com.au +61 (3) 9867 2666

### **ADDITIONAL LEGAL**

© 2021 ACCO Brands USA LLC. MOGA, PowerA, MOGA by PowerA logo, and PowerA Logo are trademarks of ACCO Brands Corporation. Apple, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries. All other trademarks are the property of their respective owners.

## REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



**WEEE** (Waste of electrical and electronic equipment) symbol requires disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.



The **CE** (Conformité Européene aka European Conformity) mark is a declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.



The **UKCA** (UK Conformity Assessment) mark is a declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.



The **Regulatory Compliance Mark** is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

## DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC at 4 Corporate Way, Lake Zurich, IL 60047 USA, declares that this wireless controller is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements. The full text of the EU Declaration of Conformity is available at the following internet address: [PowerA.com/Compliance](https://PowerA.com/Compliance)

## WIRELESS RATING FOR EU COMPLIANCE

Frequency Range: 2402MHz – 2480MHz | Max E.I.R.P.: 6.16dBm

## ELECTRICAL RATING INFORMATION

Battery: DC3.7V

---

FR, ES, DE, IT, PT

TRANSLATIONS TO FOLLOW



