



HIP STREET®

USER MANUAL

- SD card / USB input and audio input jack
- Supports MP3 format
- Bright LED display
- 3.5mm audio cable included
- Over current protection with extra 2 amp fuse provided
- Rotating shaft design to fit most 12V power sockets



Unit Operation


1. Insert the transmitter into a 12V car power socket.
2. Insert a USB or SD card into the slot or use the audio cable provided to connect your audio device with the transmitter.
3. Once all connections are made, the transmitter will automatically play the music and display the frequency.
4. The "CH" key is used for choosing the frequency channel. Turn on your FM car stereo to a non-service station and press the "CH" key. Use the previous "⏮" or next "⏭" buttons to tune into the same non-service station. The FM frequency range of the transmitter is 88.1 ~ 107.9MHz.
5. Press the [PAUSE] button to pause and resume playback.
6. Press the "⏮" button to play back the previous program. Press and hold the "⏮" button to reduce the volume.
7. Press the "⏭" button to play the next program. Press and hold the "⏭" button to increase the volume.

NOTE : This unit is equipped with over current protection. There is a 2 amp fuse within the shaft of the transmitter and can be easily removed by unscrewing the top cap of the shaft. An extra fuse is provided.

Remote Control Operation

1. When you have chosen a non-service frequency, you can use the remote control to input the station. For example, if you want to tune into 88.9, simply point your remote to the transmitter and press 8,8,9 and the "CH SET" button. You can also use the "CH-" and "CH+" to manually toggle through the FM stations.
2. To choose song during playback you can use the numeric keypad to input the desired music track number and press PICK SONG button.
3. This transmitter has 5 different equalizer settings: 0 (Normal), 1 (Rock), 2 (POP), 3 (Classic) and 4 (Jazz). 0 (Normal) is the default setting. During playback press the "EQ" button to choose your setting.
4. To decrease and increase the volume, press the "-" or "+" buttons.

NOTE : THE USE OF THE REMOTE CONTROL IS ONLY FOR MP3 PLAYBACK VIA THE SD CARD OR USB DRIVE. When connected to an audio device, only the channel function will work.

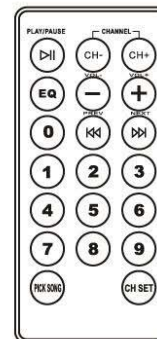

FCC Statement:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation..
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.