


MICROWAVE OVEN

INSTRUCTION MANUAL

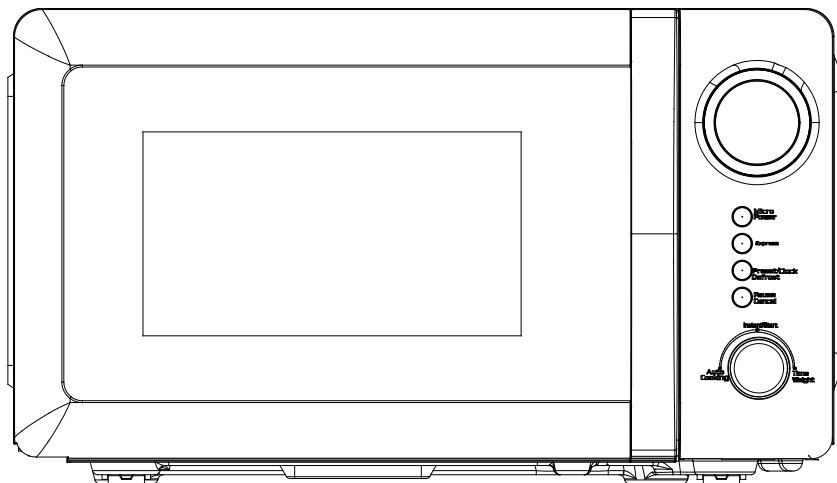

20UX79-L

Please read this booklet carefully before fixing and using, and keep it for future reference

Installation

1. Take out all the packing. if there is a safe film over the oven, tear it off before Use. Check carefully for damage. if any, immediately notify dealer or send to the manufacturer's service center.
2. Microwave ovens must be placed under dry and non-corrosiveness environments, kept away from heat and humidity, such as gas burner or water tank.
3. to ensure sufficient ventilation, the distance of the back of microwave to the wall should be at least 10 cm, the side to the wall should be at least 5 cm, the free distance above the top surface at least 20 cm. the distance of the microwave to the ground should be at least 85 cm.
4. the position of the oven shall be such that it is far from the TV, Radio or antenna as picture disturbance.
Or noise may occur.
5. the appliance must be positioned so that the plug is accessible, and must ensure a good grounding in case leakage, ground loop can be formed to avoid electric shock.
6. The microwave oven must be operated with the door closed.
7. The microwave oven shall not be placed in a cabinet.
8. The back of the oven must be placed against a wall.
9. As there is manufacturing residue or oil remained on the oven cavity or heat element, it usually would smell the odor, even a slight smoke, It is normal case and would not occur after several times use, keep the door or window open to ensure good ventilation. So it is strongly recommended to place a cup of water in the turntable, setting at high power and operate for several times.

IMPORTANT SAFEGUARDS

The following basic precautions should always be followed when using electrical appliance :

- 1 . Read all instructions before using .
- 2 . Make sure the voltage in your living area corresponding to the one shown on the rating label of the appliance . And the wall socket is properly grounded .
- 3 . TO reduce the risk of fire in the oven cavity :
 - a . DO not overcook the food .
 - b . Remove wire twist -ties from paper or plastic bags before placing bags in the oven .
 - c . Do not heat oil or fat for deep drying as the temperature of oil cannot be controlled .
 - d . After use wipe the waveguide cover with a damp cloth , followed by dry cloth to remove any food splashes and grease . Built -up grease may overheat and begin to cause smoke or catch fire .
 - e . If materials inside the oven should smoke or ignite , keep oven door closed, turn oven off and disconnect the power supply .
 - f .Close supervision is necessary when using disposable containers made from plastic, paper or other combustible material .
- 4 . TO reduce the risk of explosion and sudden boiling :
 - a . Do not place sealed containers in the oven . Baby bottles fitted with a screw cap or teat are considered to be sealed containers .
 - b . When boiling liquid in the oven , use the wide -mouthed container and stand about 20 seconds at the end of cooking to avoid delayed eruptive boiling of

liquids .

c . Potatoes ,sausage and chestnut should be peeled or pierced before cooking . Eggs in their shell , whole hard -boiled eggs should not be heated in microwave ovens since they may explode , even after microwave heating has ended .

d . The cooked liquid should not be removed out immediately . Several moments should be waited before removing. In order to avoid possible hazards caused by delayed eruptive boiling of liquids .

e . The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption , in order to avoid burns .

- 5 . Never operate the oven further if the door or door seals is damaged or the oven is malfunctioned or supply cord is damaged . Return the appliance to the nearest authorised service center for repair and maintenance . Never try to adjust or repair the oven yourself .
- 6 . If the supply cord is damaged ,it must be replaced by the manufacturer or its service agent or a qualified technician in order to avoid a shock hazard .
- 7 . After cooking , the container is very hot . Using gloves to take out the food and avoid steam burns by directing steam away from the face and hands .
- 8 . Slowly lift the furthest edge of dishes cover and microwave plastic wrap and carefully open popcorn and oven cooking bags away from the face .
- 9 . TO prevent the turntable from breaking :
 - a . Let the turntable cool down before cleaning .
 - b . Do not place hot foods or utensils on the cold turntable .
 - c . Do not place frozen foods or utensils on the hot turntable .
10. Make sure the utensils do not touch the interior walls during cooking .
11. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation .
- 12 .Only use utensils that are suitable for use in microwave ovens .
- 13 . Do not store food or any other things inside the oven .
- 14 . Do not operate the oven without any liquid or food inside the oven . This would do damage the oven .
- 15 . This appliance is not intended for using by young children or infirm persons without supervision .
- 16 . When the appliance is operated in the combination mode , children should only use the oven under adult supervision due to the temperatures generated .
- 17 . Any accessories not recommended by the manufacturer may cause injuries to persons .
- 18 . Do not use outdoors .
- 19 . Save these instructions .
- 20 . **WARNING** : If the door or door seals are damaged , the oven must not be operated until it has been repaired by a competent person ;
- 21 . **WARNING** : It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy ;
- 22.**WARNING**:Liquids and other foods must not be heated sealed container since they are liable to explode;
23. **WARNING**: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use ;
- 24 .Only use utensils that are suitable for use in microwave ovens ;
- 25 . When heating food in plastic or paper containers , keep an eye on the oven due to the possibility of ignition ;
- 26 . If smoke is observed , switch off or unplug the appliance and keep the door

- closed in order to stifle any flames ;
- 27 . Microwave heating of beverages can result in delayed eruptive boiling , therefore care must be taken when handling the container ;
 - 28 . The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption , in order to avoid burns ;
 - 29 . Eggs in their shell and whole hard -boiled eggs should not be heated in microwave ovens since they may explode , even after microwave heating has ended ;
 - 30 . The oven should be cleaned regularly and any food deposits removed ;
 - 31 . Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation ;
 - 32 . During use the appliance becomes hot . Care should be taken to avoid touching heating elements inside the oven .
 - 33 . **WARNING** : Accessible parts may become hot during use . Young children should be kept away .
 - 34 . Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface , which may result in shattering of the glass .
 - 35 . This appliance is not intended for use by persons (including children) with reduced physical , sensory or mental capabilities , or lack of experience and knowledge , unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety .
 - 36 . Children should be supervised to ensure that they do not play with the appliance .
 - 37 . The appliances are not intended to be operated by means of an external timer or separate remote -control system .
 - 38 . The temperature of accessible surfaces may be high when the appliance is operating .




: CAUTION: HOT SURFACE

Household use only

PRODUCT INTRODUCTION


1. Appearance and structure diagram

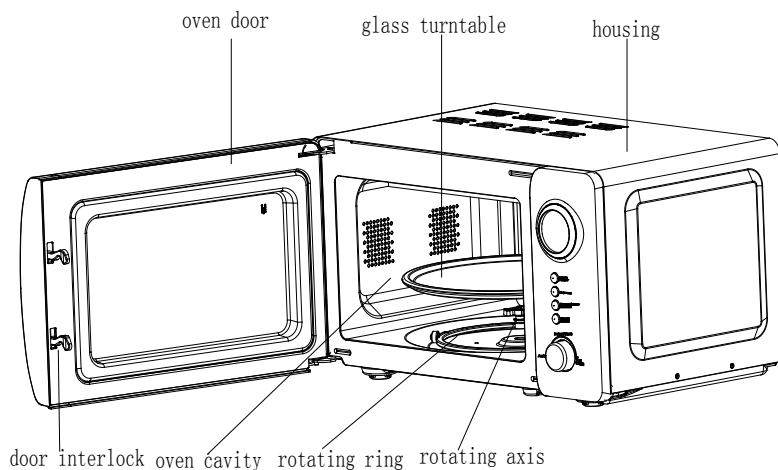

WARNING

- a. Do not remove the Waveguide cover during cleaning
- b. Make sure the Waveguide cover installation right and no damage during cooking

2. Control panel

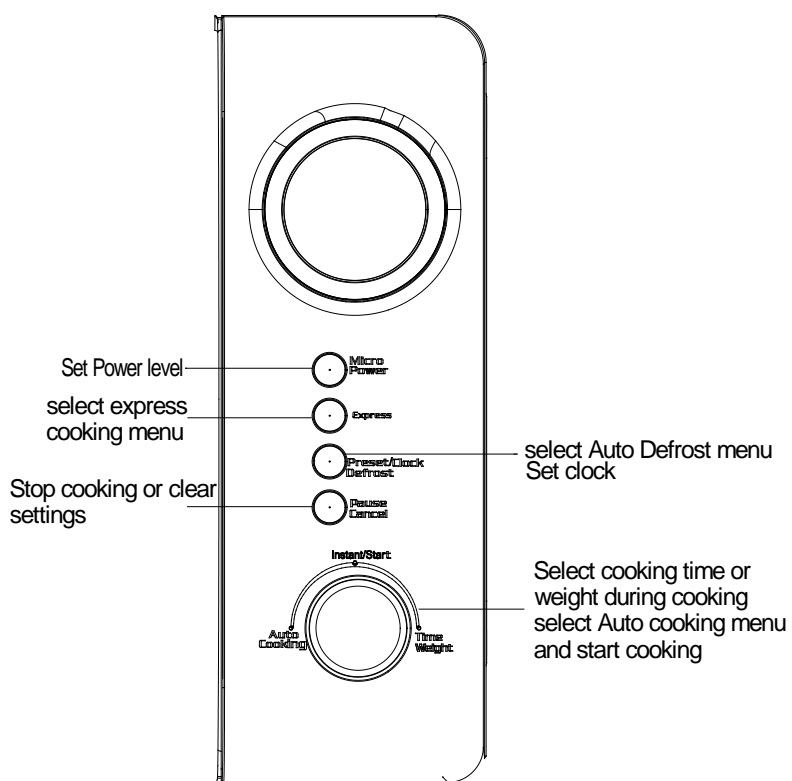

Function and Operation method



The LED flashes 3 times when plugged in power supply. Then it flashes “:”, prompting you to input the cooking menu and time.

1. Auto reminder

When your preset cooking procedure have finished, the LED Display will show End and three beeps sound will be heard to prompt you to take out food. If you do not press Pause/Cancel button once or open the door the beep will be sounded at an interval of 3 minutes.

2. Clock setting

Preset /Clock.Defrost button make it available for you to input current or preset time when “:” flashes onto LED display after plugged in, or try to skip it over to continue if unnecessary.

For example: to set 12:30		
	Depress	Display
1	After power-up, the colon flashes	:
2	Hold Preset /Clock.Defrost button three seconds	00:00
3	Turn Time. Weight knob to set exact hours.	12:00
4	Press Preset /Clock.Defrost button once again.	12:00
5	Turn Time. Weight knob to set exact minutes.	12:30
6	Press Preset /Clock.Defrost button once again or wait for 5 seconds, and the numbers will go steadily.	

3. Microwave cooking

This function use for cooking and heating food. Press Power button, LED cycles to show 100P—80P—60P—40P—20P

High power	100% microwave power. Applicable for quick and thorough cooking
Medium High power	80% microwave power. Applicable for medium express cooking
Medium power	60% microwave power. Applicable for steaming food
Medium Low power	40% microwave power. Applicable for defrosting food
Low power	20% microwave power. Applicable for keeping warm

CAUTION

- a. The max time which can be set is 60minutes.
- b. Never operate the oven empty.
- c. If you turn the food during operation, press the Instant/Start button once and the preset cooking procedure will continue.
- d. If you intend to remove the food before the preset time, you must press Pause/Cancel button once to clear the preset procedure to avoid unintended operation of next time use.

Example: To cook at P80 for 10 minutes.		
Depress		Display
1	After power-up, the colon flashes	:
2	Select the desired microwave power by depressing Micro Power button consecutively	80P
3	Set cooking time by turning Time. Weight knob	10:00
4	Press Instant/Start button and LED will count down to show running time.	

CAUTION

You may change the cooking time during cooking. And it is recommended turning the food halfway, after you turn the food. Press Instant/Start button once to continue.

4. Express

Press Express button LED Display will cycle to show 0:30, 1:00, 1:30. This function will allow you to heat a cup of water or beverage conveniently, omitting the steps of setting time. Choose the proper time depending on the beverage capacity.

Example: To cook with express for 1 minute		
	Depress	Display
1	After power-up, the colon flashes	:
2	Depress Express button consecutively to select desired menu	1 : 0 0
3	Start cooking by pressing Instant/Start button	

5. Defrost

This function use for Defrost food, Press the Clock/Defrost button and the LED display will cycle to show d.1 d.2 d.3.

d.1	For defrosting meat, the weight range from 0.1 to 2.0 kg.
d.2	For defrosting poultry, the weight range from 0.2 to 3.0kg.
d.3	For defrosting seafood, the weight range from 0.1 to 0.9kg.

CAUTION

- It is necessary to turn over the food during operation to obtain uniform effect.
- Usually defrosting will need longer time than that of cooking the food.
- If the food can be cut by knife, the defrosting process can be considered completed.
- Microwave penetrates around 4cm into most food
- Defrosted food should be consumed as soon as possible, it is not advised to put back to fridge and freeze again

Example: To defrost 0.4kg poultry		
	Depress	Display
1	After power-up, the colon flashes	:
2	Press Preset /Clock.Defrost button to set the food kind.	d . 2
3	Turn Time. Weight knob to set the defrost weight	0 . 4
4	Start cooking by pressing Instant/Start button	
5	In half way during defrosting 3 beep sound will be heard two times to prompt you turn over the food. Open the door and turn over the food and shield the warm portion. Then close the door. Press Instant/Start button again to continue defrosting	

6. Auto cooking

The oven has default cooking menu for simple operation. When the LED flash colon, turn the knob and LED will cycle to show A.1、 A.2 …… A.12

Choose the appropriate menu according to the food type and weight and strictly observe the directions in below table, otherwise the cooking effect will be largely influenced.

Display	Kind	Weight
A . 1	Popcorn	All together there are two choices (3.0Oz and 3.5Oz)
A . 2	Potato	All together there are two choices (0.45Kg and 0.65Kg)
A . 3	Vegetable	All together there are five choices (0.1 0.2-----0.5Kg)
A . 4	Meat	All together there are six choices (0.2 0.3-----0.7Kg)
a . 5	Fish	All together there are six choices (0.2 0.3-----0.7Kg)
A . 6	Chicken	All together there are six choices (0.2 0.3-----0.7Kg)

A . 7	Reheat	All together there are five choices (0.2 0.4-----1.0Kg)
A . 8	Beverage	All together there are two choices (250MI and 500MI)
A . 9	Rice	All together there are five choices (0.1 0.2-----0.5Kg)
A . 10	Pasta	All together there are five choices (0.1 0.2-----0.5Kg)
A . 11	Bread	All together there are five choices (0.1 0.2-----0.5Kg)
A . 12	Pizza	All together there are two choices (1 share and 2 share)

 **CAUTION**

- a. The temperature of food before cooking would be 20-25°C. Higher or lower temperature of the food before cooking would require increase or decrease of cooking time.
- b. The temperature, weight and shape of food will largely influence the cooking effect. If any deviation has been found to the factor noted on above menu, you can adjust the cooking time for best result.

Example: Steam 0.4kg fish	
Depress	Display
1. After power-up, the colon flashes	:
2. Turn the knob and the oven enter cooking menu mode	
3. Then set the cooking menu by turning the knob	A . 5
4. Press Instant/Start button to affirm	A . 5
5. Turn Time. Weight knob to set the weight	0 . 4
6. Start cooking by pressing Instant/Start button	9 : 00

7. Automatic starting (delayed function)

If you do not want the menu be started immediately, you can preset the cooking menu and time and the preset menu will be automatically started at your set time.

The setting will consist of 2 steps:

1. Setting the current Clock;
2. Setting the cooking menu and time.

Example: Now it is 12:30 Clock, if you hope that the microwave oven will automatically start cooking with 100P microwave power for 9 minutes and 30 seconds at 14:20

	Depress	Display
1	After power-up, the colon flashes	:
1.1	Hold Preset/Clock.Defrost button three seconds	00:00
1.2	Set hours by turning Time. Weight knob	12:00
1.3	Depress Preset/Clock.Defrost button again to confirm hours	12:00
1.4	Set minutes by turning Time. Weight knob	12:30
1.5	Depress Preset/Clock.Defrost button once or waiting for 5 seconds, and the numbers will go steady.	12:30
2	Set the cooking menu and time	
2.1	Select cooking power by pressing Mico Power button	100P
2.2	Turn Time. Weight knob to set cooking time	9:30
2.3	Press and hold Preset/Clock.Defrost button for 3 seconds to return to current Clock.	
3	Set the time you expect to start. Repeat the steps of 1.2, 1.3, 1.4	
4	Depress Preset/Clock.Defrost button to confirm the delayed menu. Now the program has been activated. And the menu will be started at 14:20.	
5	You may check the preset starting time by depressing Preset/Clock.Defrost button.	

8. Multi-sequence cooking

To obtain best cooking result, some recipes call for different cook mode and time. You may program your personalized menu as follow:

Example: You want cook food with 100P microwave for 3 minutes then 20P for 9 minutes. This is 2 sequence setting.		
	Depress	Display
1	100P microwave for 3min	
1.1	Press Mico Power button to select power level.	100P
1.2	Turn Time. Weight knob to set cooking time.	3:00
2	20P for 9min	
2.1	Press Mico Power button to select power level	20P
2.2	Turn Time. Weight knob to set cooking time.	9:00
3	Start cooking by pressing Instant/Start button	

CAUTION

- a. When microwave 100 power cooking is finished, microwave oven will begin next operation automatically.
- b. Max 4 sequences can be set per time, repeat the steps

9. Child lock function

Use this feature to lock the control panel when you are cleaning or so that children can not use the oven unsupervised. All the buttons are rendered inoperable in this mode

	Depress	Display
set lock	Depress and hold Pause/Cancel button about 3 seconds	OFF
cancel lock	Depress and hold Pause/Cancel button about 3 seconds	:

10. UTENSILS GUIDELINE

It is strongly recommended to use the containers which are suitable and safe for microwave cooking. Generally speaking, the containers which are made of heat-resistant ceramic, glass or plastic are suitable for microwave cooking. Never use the metal containers for microwave cooking and combination cooking as spark is likely to occur. You can take the reference of below table.

Material of container	Microwave	Notes
Ceramic	Yes	Never use the ceramics which are decorated with metal rim or glazed
Heat-resistant plastic	Yes	Can not be used for long time microwave cooking
Heat-resistant glass	Yes	
Grill rack	No	
Plastic film	Yes	It should not be used when cooking meat or chops as the over temperature may do damage to the film

11. Cooking Tips

The following factors may affect the cooking result:

Food arrangement

Place thicker areas towards outside of dish, the thinner part towards the Centre and spread it evenly. Do not overlap if possible.

Cooking time length

Start cooking with a short time setting, evaluate it after it times out and extend it according to the actual need. Over cooking may result in smoke and burns.

Cooking food evenly

Food such as chicken, hamburger or steak should be turned once during cooking.

Depending on the type of food, if applicable, stir it from outside to centre of dish once or twice during cooking

Allow standing time

After cooking times out, leave the food in the oven for a adequate length of time, this allows it to complete its cooking cycle and cooling it down in a gradual manner

Whether the food is done

- **Color and hardness of food help to determine if it is done, these include:**
- **Steam coming out from all parts of food, not just the edge**
- **Joints of poultry can be moved easily**
- **Pork or poultry shows no signs of blood**
- **Fish is opaque and can be sliced easily with a fork**

Browning dish

When using a browning dish or self-heating container, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and rotating ring.

Microwave safe plastic wrap

When cooking food with high fat content, do not allow the plastic wrap come into contact with food as it may melt

Microwave safe plastic cookware

Some microwave safe plastic cookware might not be suitable for cooking foods with high fat and sugar content. Also, the preheating time specified in the dish instruction manual must not be exceeded

CLEANING and MAINTENANCE

Microwave oven care

CAUTION

The oven should be cleaned regularly and any food deposits removed.

WARNING

1. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy
2. Remove the power cord from the wall outlet before cleaning
3. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation
4. The oven should be cleaned regularly and any food deposits removed
5. Details for cleaning door seals, cavities and adjacent parts.
6. Never use hard detergent, gasoline, abrasive powder or metal brush to clean any part of the appliance
7. Do not remove the waveguide cover
8. When the microwave oven has been used for a long time, there may be some strange odors exist in oven, Following 3 methods can get rid of them:
 - a. Place several lemon slices in a cup, then heat with high power for 2-3 min.
 - b. Place a cup of red tea in oven, then heat with high power.
 - c. Put some orange peel into oven, and then heat them with high power for 1 minute.

TIPS for cleaning

Exterior:

Wipe the enclosure with a dampened soft cloth

Door:

Using a dampened soft cloth, wipe clean the door and window

Wipe the door seals and adjacent parts to remove any spill or spatter

Wipe the control panel with a slightly dampened soft cloth

Interior walls:

Wipe clean the interior surfaces with a dampened soft cloth

Wipe clean the waveguide cover to remove any food splashed

Turntable / Rotation ring / Rotation axis:

Wash with mild soap water

Rinse with clean water and allow drying thoroughly

Servicing

Please check the following before calling for services.

a. Place one cup of water (approx.150ml)in a glass measure in the oven and close the door securely. Oven lamp should go off if the door is closed properly. Let the oven work for 1 min.

b. Does the oven lamp light?

c. Does the cooling fan work?

(Put your hand over the rear ventilation openings.)

d. Does the turntable rotate?

(The turntable can rotate Preset.Clockwise or counter preset.Clockwise. This is quite normal.)

e. Is the water inside the oven hot?

If “NO” is the answer to any of the above questions, please check your wall socket and the fuse in your meter box.

If both the wall socket and the fuse are functioning properly, CONTACT YOUR NEAREST SERVICE CENTER APPROVED.

SERVICING SAFEGUARDS



MICROWAVE RADIATION!



It is hazardous for anyone, other than a qualified service technician, to carry out any service for repairing operation which involves removal of any cover which gives protection against exposure to microwave energy.



The temperature of accessible surfaces may be high when the appliance is operating



The high voltage capacitor remains charge after disconnection; short the negative terminal of H. V capacitor to the oven chassis (use a screwdriver) to discharge before touching.



During servicing below listed parts are liable to be removed and give access to potentials above 250V to earth.

- 1. Magnetron**
- 2. High voltage transformer**
- 3. High voltage capacitor**
- 4. High voltage diode**
- 5. High voltage fuse**



The following conditions may cause undue microwave exposure during servicing.

Improper fitting of magnetron;

Improper matching of door interlock, door hinge and door;

Improper fitting of switch support;

Door, door seal or enclosure has been damaged.

 CAUTION

1. if LED displays Err0 during working ,it indicates that sensor has been short circuit and you need replace it at the nearest repaired department.
2. if LED displays Err1 during working,it indicates that sensor has been open circuit and you need replace it at the nearest repaired department.


 WARNING

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person;

It is hazardous for anyone, other than a qualified service technician, to carry out any service for repairing operation which involves removal of any cover which gives protection against exposure to microwave energy.

Liquids or other foods must not be heated in sealed containers since they are liable to explode;

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.