 


HOMEDICS[®]
MASSAGECHAIR

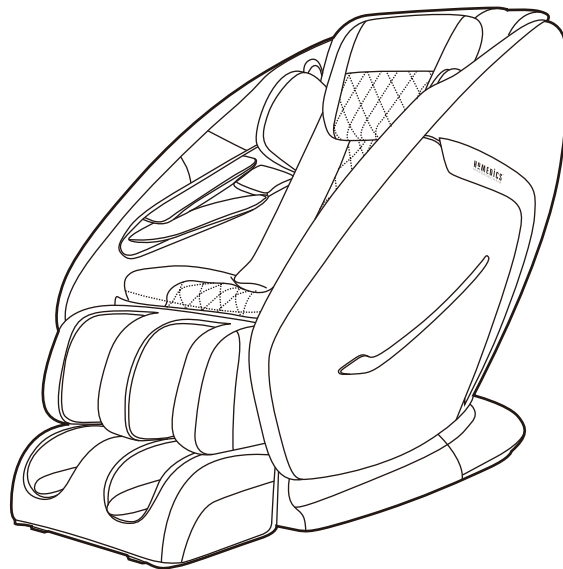

HMC-600 MASSAGE CHAIR
INSTRUCTION MANUAL AND WARRANTY INFORMATION

TWO YEAR LIMITED WARRANTY

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING

DANGER – TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.

WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- An appliance should NEVER be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts or attachments.
- NOT for use by children.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. DO NOT use attachments not recommended by HoMedics; specifically, any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to HoMedics Service Center for examination and repair.
- Use heated surfaces carefully. May cause serious burns. DO NOT use on sensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.
- Keep the cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT use this massager in close proximity to loose clothing, jewelry.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- DO NOT carry this appliance by supply cord or use cord as a handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- DO NOT use outdoors.
- NEVER operate the appliance with the air openings blocked. Keep the air openings free of lint, hair and the like.

SAVE THESE INSTRUCTIONS

CAUTION – PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

- This product is not intended for medical use. It is intended only to provide a luxurious massage.
- Consult your doctor prior to using this product, if
 - You are pregnant
 - You have a pacemaker
 - You have any concerns regarding your health
- NOT recommended for use by diabetics.
- NEVER leave the appliance unattended, especially if children are present.
- DO NOT use this product for more than 30 minutes at a time.
- Extensive use could lead to the product's excessive heating and shorter life. Should this occur, discontinue use and allow the unit to cool before operating.
- NEVER use this product directly on swollen or inflamed areas or skin eruptions.
- DO NOT use this product as a substitute for medical attention.
- This product should NEVER be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls or who has sensory deficiencies in the lower half of their body.
- This appliance is intended for household use only.



MAINTENANCE

TO STORE

Place massage chair in its box or in a safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric surface. To avoid breakage, do not wrap the power cord around the unit. Do not hang the unit by the hand control cord.

TO CLEAN

 
Unplug the unit and allow it to cool before cleaning. Clean only with a soft, slightly damp sponge. Never allow water or any other liquids to come into contact with the unit.

- DO NOT immerse in any liquid to clean.
- NEVER use abrasive cleaners, brushes, gasoline, kerosene, glass / furniture polish or paint thinner to clean.
- DO NOT attempt to repair the HMC-600. There are no user-serviceable parts. For service, call the consumer relations telephone number listed in the warranty section.


CONTENTS



HMC-600 Massage Chair

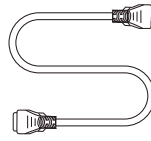


Power Cord

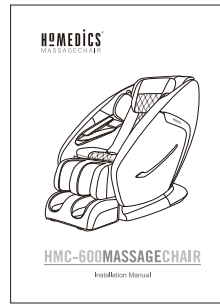 

Assembly Instructions




 User Manual

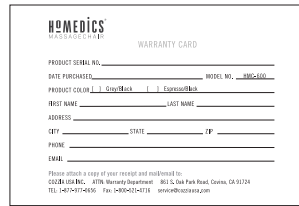

Warranty Card

 HOW TO USE

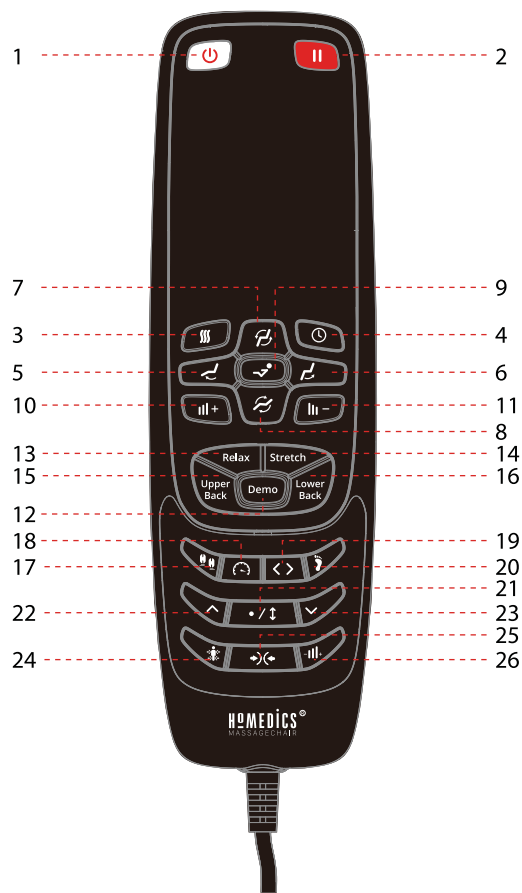

1. ON/OFF

The Start/Stop Control Button

Press this button to light up the LCD screen. Press any massage function button to start massage. This will initiate the timer function. Press this button again to stop all massage functions, massage chair will return to its original position.

2. PAUSE

Press this button once to halt current massage function and countdown timer. During the pause mode, the pause button will be blinking.

Press this button again to cease the "Pause" function and resume previous massage functions, as well as countdown timer.

3. HEAT

Lumbar Heat Function Start/Stop Control Button

Press this button to activate lumbar heat function, press this button again to stop the heat function.

Note: During Auto Program mode, pressing this button can also disable/enable the heat function.

4. TIMER

Time interval Control Button

When a massage function is activated, the timer is preset at 15 minutes. Every single press of this button will change the timer interval in the sequence of "20>25>30>5>10>15>20" minutes in circle.

5/6. LEGREST RECLINE AND RESTORE

Angle Adjustment Button for Leg Rest

Keep pressing either button until the leg rest reaches your desired position.

7/8. CHAIR RECLINE AND RESTORE

Keep pressing to comfortably lay flat or to restore the chair to its original position.

9. ZGR

Press this button in order to active the ZGR function.

10. Speed+

The Speed+ adjustment button works for Kneading, Tapping, Kneading-Tapping, Clapping, and Swedish function.

Every single press on this button will change the massage speed interval in the sequence of "Lv1 > Lv2 > Lv3 >Lv4 >Lv5".

11. Speed-

The Speed- adjustment button works for Kneading, Tapping, Kneading-Tapping, Clapping, and Swedish function.

Every single press on this button will change the message speed interval in the sequence of “Lv5 > Lv4 > Lv3 >Lv2 >Lv1”.

12. DEMO

This message will quickly demonstrate all of the message features in 5 minutes.

13. RELAX

A program designed to provide a mild message that is great for deep relaxation, best used before going to sleep.

14. STRETCH

This message will stretch your legs and back with a combination of gentle kneading and air compression.

15. UPPER BACK

This message will focus on your upper back using a combination of keading and Swedish techniques.

16. LOWER BACK

This message will focus on your lower back using a combination of tapping and Clapping techniques.

17. Manual Massage Function

KNEADING, TAPPING, KNEADING-TAPPING, CLAPPING, SWEDISH

Press this button to activate the rhythmic kneading manual message function for a full back massage at medium strength. Every time this button is pressed, the manual message function will change in the sequence of KNEADING>TAPPING>KNEADING-TAPPING>CLAPPING>SWEDISH>STOP.

18. SPEED

The Speed Adjustment Button for Massage Function

Every single press on this button will change the message speed interval in the sequence of “Lv1 > Lv2 > Lv3 >Lv4 >Lv5” in cycle.

19. WIDTH

The Width Adjustment Button for manual Massage Function

Every single press on this button will change the message width interval in the sequence of “Narrow > Medium >Wide”in cycle.

20. FOOT ROLLING

Foot Rolling Function Start/Stop Control Button

Press this button once to activate rhythmic rolling massage at soles, press this button again to stop rolling massage at soles.

Note: During Auto Program mode, pressing this button can also disable/enable the Foot Rolling function.

21. SPOT/PARTIAL

The Spot or Partial Back Massage

Press this button once to activate localized Spot Massage while the original massage mode continues to run at the latest position. Every single press on this button will change the massage function in the sequence of "SPOT<PARTIAL<STOP" in circle.

Note: Partial Massage will take the latest position as the center to perform Partial Massage with the distance approx. 8 cm. SPOT/PARTIAL button is only effective under manual massage mode.

22/23. UPWARD/DOWNWARD ADJUSTMENT

When the spot and partial massage function are activated, this button can be used to move the massage rollers. Hold this button to move the massage rollers upward/downward respectively. Release the buttons when reaching desired position.

24. FULL AIR

Press this button to activate the air massage function for full body (CALF&FOOT/ARM/SHOULDER).

Press this button again to stop the function.

25. PARTIAL AIR

 
Press this button to activate body air pressure massage from shoulder to soles. Every time this button is pressed, partial air massage function will change in the sequence of CALF&FOOT>ARM>SHOULDER>STOP.

26. INTENSITY

The Intensity Adjustment Button for air pressure massage, 5 levels of intensity to be adjusted.

When air massage function is engaged, every single press on this button will change the air intensity in the sequence of "Lv1 > Lv2 > Lv3 > Lv4 > Lv5" in cycle.

FEATURES

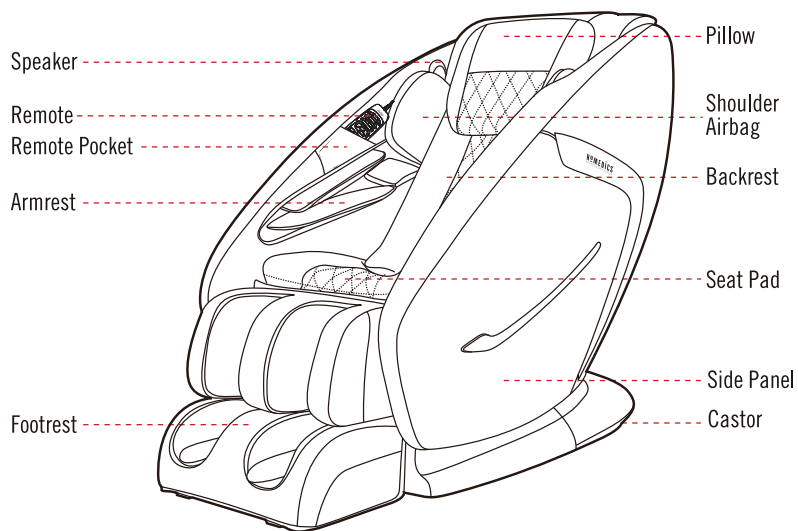

Note: The speaker will only operate when the massage chair is in operation



To play music using your massage chair's speakers please connect your smartphone, tablet, or other electronic device to your chair using bluetooth.



TWO YEAR LIMITED WARRANTY

Cozzia USA LLC sells HoMedics Massage Chair Model No. HMC-600 (the "HoMedics Massage Chairs") with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. Cozzia USA, LLC warrants that the HoMedics Massage Chairs will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

HoMedics Massage Chairs have the following warranty:

The HoMedics Massage Chair HMC-600 has a two years parts and one year labor. Cozzia's customer service will not issue Return Material Authorizations (RMAs) for products. HoMedics Massage Chairs will be either repaired by the consumer or by an in-home technician. Cozzia will not issue Return Material Authorizations (RMAs) for buyer's remorse.

Service And Technical Support

Consumers may contact Cozzia's customer service department at 1-877-977-0656 between 9:00 am and 5:00 pm PST, Monday through Friday or email us at Service@cozziausa.com or visit our web at www.homedicsmassagechair.com for warranty or service issues.

Consumers are required to provide the unit serial number and dated proof of purchase (sales receipt) when they contact the Cozzia service department regarding a repair.

A Cozzia customer service representative will attend to most consumer inquiries, but in some cases a technical service specialist will provide advanced support.

Non-warranty repair is provided on a "per incident" basis. Cozzia customer service will verify that the unit has failed and provide instructions for repairing a unit. All applicable repairs, parts, shipping, handling, local tax and a "per incident" fee will be charged for non-warranty repairs and support calls.

Proof of purchase (original receipt) is required for all warranty repairs or service.

For more information regarding our product line in the USA, please visit: www.homedicsmassagechair.com. For Canada, please visit: www.homedics.ca.

FOR SERVICE IN THE USA:

Email: service@cozziausa.com

Monday-Friday 9:00am-5:00pm PST

1.877.977.0656

HoMedics® is a registered trademark of HoMedics, LLC.
© 2017 HoMedics, LLC. All rights reserved.
HMC-600

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

HOMEDICS[®]
MASSAGECHAIR

