



- On to next widow choose option **Start with a blank project** like on the graphic below, and press continue.

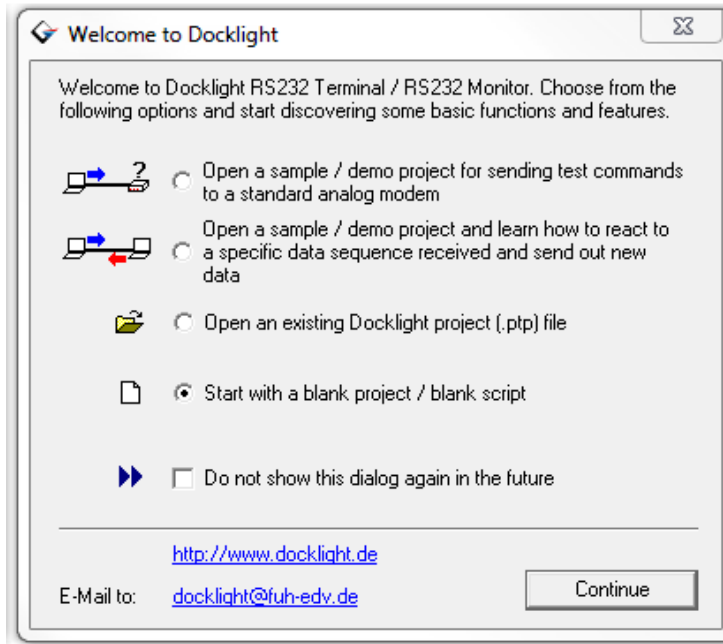

- After start of software, choose functions **Project settings, Communication settings**, like on the graphic below.

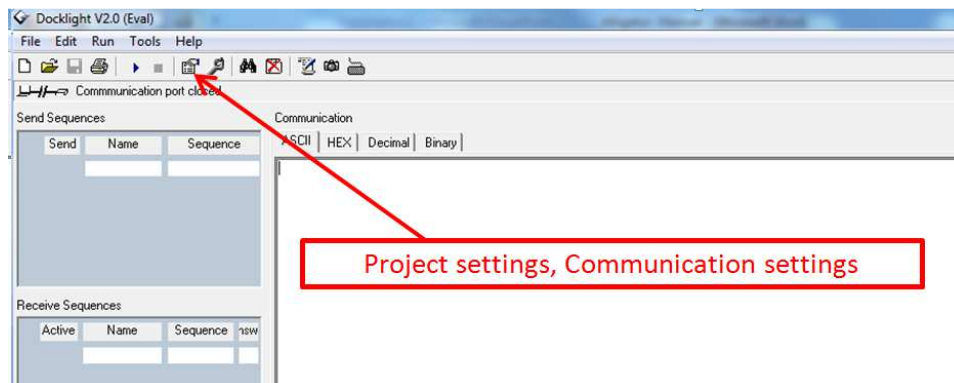

- In widow **Project settings**, set correct Baud Rate and correct COM port.

