WWE WALKIE TALKIE instructions

- 1, open the battery cover,put one 9.0 v battery into the battery box
- 2, make the switch to the" on" position, walkie talkie can use.
- 3, hold the "push to talk" button shall could begin TO speak with ordinary, tone.
- 4, releae the "push to talk" button, you can hear each other.
- 5, hold "the rid_device_info_mouse" button, can detect intercom basic functions.
- 6, when using, interphone antennas must end up, can receive the signal.

Note:

- 1 your intercom has been tuned the battery can be used, finish can be replaced, but don't run into other parts inside.
- 2 if the intercom voice decrescent, can replace the battery.
- 3 not use must turn off the switch. Radios
- 4 don't will intercom in moist place.
- 5 if long time no intercom, should take it out.
- 6 don't play the place of radio interference.

Battery note:

1 installation or replace the battery on with correct polarity battery should be put.



- 2 the rechargeable batteries cannot charge.
- 3 cannot be mixed with old and new batteries or different types of cell.
- 4 spent batteries removed from toys.
- 5 terminal not short circuit.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by switching the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.