

king-tv

User Manual

1 SECURITY MEASURES	
1.1 SAFETY PRECAUTIONS	1
1.2 USE OF THE ENVIRONMENT.....	1
1.3 FAIR USE	1
1.4 ACCESSORIES AND BATTERIES	1
1.5 DATA BACKUP.....	2
2 YOUR PHONE	
2.1 APPEARANCE	2
2.2 KEY FUNCTION	2
3 GETTING USED.....	
3.1 HOW TO INSTALL THE BATTERY	4
3.2 HOW TO REMOVE THE BATTERY.....	4
3.3 HOW TO CHARGE THE BATTERY	4
3.4 HOW TO INSTALL & REMOVE THE SIM CARD	5
3.5 HOW TO INSTALL & REMOVE THE MEMORY CARD	6
4 MAKE & RECEIVE CALLS.....	
4.1 MAKE A CALL	6

PRESSING THE DIAL KEYS WILL MAKE THE CALL	7
4.2 MAKE AN EMERGENCY CALL	7
4.3 INTERNATIONAL CALLS	7
4.4 ANSWER THE CALL.....	7
4.5 ADJUST THE VOLUME.....	8
4.6 TALK HANDS-FREE	8
4.7 CALL WAITING	8
4.8 CALL OPTIONS	8

5 PHONEBOOK

5.1 CONTACTS LIST	8
5.2 OPTIONS MENU	9

6 MESSAGE.....

6.1 EDIT SMS.....	10
6.2 INBOX.....	10
6.3 OUTBOX	10
6.4 DRAFTS	10
6.5 OPTIONS MENU	11
<i>6.5.1 Common text messages.....</i>	<i>11</i>

6.5.2 Voice Mail	11
6.5.3 Broadcast message	11
6.5.4 SMS Settings:	11

7 CALL LOGS.....

7.1 CALL LOGS	11
7.2 DIALED CALLS	12
7.3 RECEIVED CALLS.....	12
7.4 MISSED CALLS	12
7.5 REJECTED CALLS.....	12
7.6 DELETE CALL LOGS	12
7.7 CALL TIMERS	12
7.8 CALL COST.....	12

8 FILE MANAGEMENT.....

8.1 FILE MANAGEMENT.....	12
--------------------------	----

9 MEDIA

9.1 TV	13
9.2 CAMERA	14

9.3 AUDIO PLAYER.....	15
9.4 VIDEO PLAYER.....	15
9.5 FM	15

10 TOOLS

10.1 BLUETOOTH.....	16
10.2 ALARM	17
10.2 CALENDAR.....	17
10.3 CALCULATOR	17
10.4 RECORDER	17
10.5 WORLD CLOCK	17
10.6 IMAGE BROWSER	18

11 SETTINGS

11.1 CALL SETTINGS	18
11.2 PHONE SETTINGS.....	19
11.3 DISPLAY SETTINGS.....	20
11.4 SECURITY SETTINGS	20

12 PROFILES

12.1 PROFILES.....	21
13 GAMES.....
13.1 SOKOBAN	22
14 INPUT METHOD.....
14.1 INPUT METHOD KEYS	22
15 MAINTENANCE AND HELP
15.1 MAINTENANCE AND REPAIR	23
15.2 MAINTENANCE OF THE BATTERY	24
15.3 HELP	24

1 Security measures

1.1 Safety Precautions

- ✧ When mobile Phone use is prohibited or the use may cause interference or danger, please do not turn on it, and turn off the automatic startup function.
- ✧ Please read and follow the simple rules to prevent dangerous and illegal use.

1.2 Use of the environment

- ✧ When you take a plane the phone should be turned off, wireless devices may cause interference in aircraft.
- ✧ In the hospital should be powered off, the phone may make some medical equipment (such as pacemakers, hearing aids, etc.) have an impact.
- ✧ At gas stations, oil depots, chemical plants, where blasting operations or near flammable materials and chemicals areas, do not use the phone.
- ✧ Do not use mobile phones while driving, before using, you should stop your car.

1.3 Fair Use

- ✧ Just use your phone in the normal position.
- ✧ When you connect it to other devices, please read the instructions for detailed and safety actions, do not connect incompatible products.
- ✧ Only qualified personnel can install and repair the phone.

1.4 Accessories and batteries

- ✧ Use only the specified batteries and accessories.
- ✧ The use of any unauthorized accessories may affect the phone's performance, even lead to physical danger or in violation of state on the relevant provisions of communication terminal products.

1.5 Data Backup

- ✧ Please note that back up all important data, so as to avoid loss.

2 Your phone

2.1 Appearance



2.2 Key Function

- ✧ **Left and right function keys:**

- Execute the function that indicated by the left and right word of the screen'bottom.

- ✧ **Dial key:**

- Make and receive calls;
- Press this key in the Standby interface to enter the call records.
- ◇ **Hang up key:**
 - Hang up or end a call;
 - Press this key to return to the standby screen;
 - In standby layout, long press to open or close the phone
- ◇ **Navigation key:**
 - Move up,down,left,right four directions;
 - Press the navigation keys in layout standby shortcut to enter the corresponding functions.
- ◇ **Number keys 0-9:**
 - Dial and digital input mode, enter the number;
 - In the English input mode, enter the characters in English or related;
 - when you dial to input the number,press 0 key long input +, P or W.
- ◇ *** key:**
 - In a text editing interface, press this button to switch to the list of symbols;
 - Press and hold in the standby screen to switch Standard / Mute mode.
- ◇ **# key:**
 - Press this key will input #;
 - In a text editing interface, press this key to switch input methods.
- ◇ **OK key:**
 - Normal state, click here to confirm the selection, enter or save the settings;

- In standby mode, press to enter the main menu.

◇ **A-Z key:**

The input interface, input keys related letters

3 Getting used

3.1 How to install the battery

- ◇ Open the back cover.
- ◇ Insert the battery into the battery slot.
- ◇ Close the phone cover.



3.2 How to remove the battery

- ◇ Open the back cover.
- ◇ Remove the battery from the battery slot.

Note: We recommend first off and then remove the battery to avoid loss of data in mobile phones.

3.3 How to charge the battery

- ◇ Plug one end of the charger to the phone charging port, the other end into a household power outlet. **Note:** This machine can be connected to a computer USB port to charge.

- ✧ When charging the battery level indicator on the screen icon was dynamic display, until the battery is full up.
- ✧ After charging, disconnect the power, then unplug the charger, so that the charger no-load.



3.4 How to install & remove the SIM card


Before doing the following, make sure the phone is turned off and no charging.

- ✧ Open the back cover, remove the battery.
- ✧ Make the golden contact of the SIM card face down, Card gap facing the slot gap, and then put into it.
- ✧ Install the battery and close the battery cover.
- ✧ SIM card's removal and installation steps are in reverse.



3.5 How to install & remove the memory card

- ✧ Open the back cover, remove the battery.
- ✧ Insert the memory card to the card slot.
- ✧ Install the battery and close the battery cover.

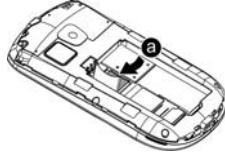

4 Make & receive calls

4.1 make a call

- ✧ Enter the phone number in the standby screen, press the dial key with the selected SIM card to make calls.
- ✧ When to input,press the right function key to delete the number.
- ✧ During the call press the end key to end the call.

You can also choose from a number of direct contacts to allocate;

- ✧ Press the right function key in the standby screen enter the phone number screen, and press the navigation key to select to dial the number.
- ✧ Press dial key to call the selected number.

Directly in the call log can also call:

- ✧ In the idle screen press the dial button to enter the call log.
- ✧ Press the navigation up and down keys to select the number to dial.

Pressing the dial keys will make the call.

4.2 Make an emergency call

Within the GSM system, you can make an emergency call. When making an emergency call, please do not arbitrarily terminate the call. Phone without a SIM card can still make emergency calls.

- ✧ Enter the emergency number.

Press dial keys to make an emergency call.

Note: As with any mobile phone, due to the network coverage reasons or wireless signal transmission case, may not support the characteristics of the mobile phones, Some networks do not even support the 112 emergency call service. Thus, for particularly critical communications (eg medical emergencies), should not rely solely on mobile phones. Please check with your local network operator and reconciliation.

4.3 International calls

- ✧ In the idle screen press 0 key to enter "+" (the symbol for the international dialing prefix).
- ✧ Then in turn enter the country code, area code and telephone number.

Press dial key to make international calls.

Note: International dialing code of some networks is not "+" sign, please discretion.

4.4 Answer the call

- ✧ If there have an incoming call, press the dial key to answer the phone, hang up the keys to reject a call.

✧ press the hang up key to end the call.

4.5 adjust the volume

During the call you can press the joystick's left and right to adjust the volume.

4.6 Talk hands-free

During the call you can press the right function key to opened or closed hands-free.

4.7 Call waiting

Conference call feature requires opening Call Waiting. If the network supports call waiting and you start this feature, During a call when there are new calls you will hear the call waiting tone, you can answer or reject the new call. Enter the "call waiting" feature to enable or disable call waiting.

4.8 Call options

In the state of calling, press the left function key to enter the call option.

you can only see the call option during a call, and call waiting, call holding, conference and other function requires network support, please contact your network provider.

IN call option. You are able to maintain / restore, end the call and other operations.

5 Phonebook

This feature can view and manage the telephone number information in the machine and in the SIM card .

5.1 Contacts List

✧ Press the right function key in the standby screen to access Contacts.

✧ Contacts list is displayed by default for all phonebook records in mobile phone and SIM card., you can press "options" to enter the menu, then select "Contacts Settings -> preferred storage location" to re-set the display of the phone book..

◇ In the list interface you can do the following:

- Select "Add Contact" you can add a SIM card or phone number;
- Press the navigation key to check the records;
- Press the number keys by the first letter to find telephone numbers;
- Press dial keys will call the current number ;
- Press the left function key to access the Options menu, and perform the corresponding function through the menu;
- Press the OK key to view the current record for more information.
- Press left and right arrow keys to view the different groups of contacts;

5.2 Options menu

In the Contacts Options menu you can do the following:

- ◇ Select "Add Contact" to add number in the SIM card or phone ;
- ◇ Phonebook' searching function: Enter the contact name in the phone book to find relevant numbers;
- ◇ Sending messages to send messages to the current number
- ◇ Delete: delete the current number
- ◇ Tag: select the current or multiple contacts
- ◇ Copy: Copy the current number
- ◇ Other: View the phone number, speed dial keys, the capacity query, display, etc.
- ◇ Contact Group: There are several commonly used group preseted in the machine, where you can view the group membership or make group settings, such as editing the group name, setting ring tones and caller pictures.

6.1 Edit SMS

SMS:

- ◇ Enter the interface of the message editing , input the message content, and press the left function key to access the options menu;
- ◇ Select "Options" to enter the menu where you can select "Send, insert commonly used statement, insert contact information, insert emoticons, save messages" and other options
- ◇ Select "Send" or press the OK key to enter the number to input interface:
 - Input number: input the recipient number directly;
 - Add from Phonebook: enter the phonebook to select recipients.
- ◇ Enter the recipient number and then press the OK button to send text messages.

6.2 Inbox

- ◇ Inbox storage and manage the received messages.

Enter the selected Inbox, press the navigation key to select text, and press the OK key to read its contents.

- ◇ Press the left function key to access the Options menu, you can restore, delete, forward, call, lock, mark, sort and so on.

6.3 Outbox

- ◇ Outbox storage and manage the messages sent and stored. Please refer to the Inbox.

6.4 Drafts

- ◇ When edit a sms which saved as a draft message can be for viewing and management, operation in this feature , please refer to the Inbox.

6.5 Options menu

6.5.1 Common text messages

The phone preset number of the unit commonly used phrases, you can edit, delete, or take the phrase as the content of messages.

6.5.2 Voice Mail

✧ Each SIM card can be set two voice mail number in the settings, select "Connect to the voice," listen to dial voice mail number voice messages.

6.5.3 Broadcast message

✧ Broadcast message is a one-way message service which the consultation service center provide for the user in the system, such as weather and traffic services. the broadcast message received will automatically be displayed in the standby screen, you can direct press the hang-up key cleared. For details, please consulting operator.

6.5.4 SMS Settings:

- SMS number center: setting the number of the SMS center
- SMS validity: setting SMS validity
- status report: setting the switch of SMS report
- storage the messages have sent: save, don't save, prompt the user choice
- preferred location: set a preferred storage position of the SMS

7 CALL LOGS

7.1 Call logs

This function records related call records. Enter call records, choose a SIM card, you can see the SIM card

related calling records options.

7.2 Dialed calls

This function records the number or name recently called. for Operations please reference Missed calls.

7.3 Received calls

This function records the number or name recently received. for Operations please reference Missed calls.

7.4 Missed calls

Enter the list of missed calls, press left function keys for details, then press left function button to enter the options menu, you can delete, preservation, send SMS, call, set for rejecting call and other operation.

7.5 Rejected calls

This function records the number or name recently rejected. for Operations please reference Missed calls.

7.6 Delete call logs

This function can be one-time delete all missed, dialed, received or the total call records.

7.7 Call timers

This function can check related calls time or make them zero.

7.8 Call cost

This function can view and set the call charges related or make them zero.

8 File management

8.1 File management

File management features provide file management functions in the phone or in the T cards storage device . Enter file

management, there will be the current storage device list.

✧ Click "OK" key enters the selected folder;

✧ Press left function key to enter options; you can perform the following operations:

◆ New a folder: build a new folder in the current storage device.

◆ Delete: delete the selected folders, this function for system folders is unavailable.

◆ Send: you can send the selected pictures by "bluetooth".

◆ Details: check the related information of the folder ;

◆ Edit: folder on the reproduction or rename;

◆ Search: enter the name to lookup the relevant folders;

◆ Sort: according to folder name, date, size, sorting, type;

Mark: mark for single or multiple folders;

◆ Memory capacity: inquires the capacity, or undertake formatting; Note: formatting will permanently delete all the data in storage device.

✧ After entering the root directory, you can see the file list, and press left function key will enter options, for details, please consult local operators.

9 Media

9.1 TV

Analog TV

In [Analog TV] mode, press [Option] to carry out the following function operations:

Add to favorites: add the channel you are watching to my channels.

My favorites: play channels you have added.

Channel list: view all the channels.

Record list: the recorded videos are saved in the Record list. You may set the video as screen protection, starting up animation, Power off display. You may send the video through Bluetooth or multimedia message. You can also mark, Unmark, mark all, and cancel all the marks the selected video.

Search channel: automatically search channels and save them in channel list.

Select country/region: select a country/region you are from so as that channels can be searched by Analog TV.

Set: set Storage for video, you may save your recorded video in phone or memory card.

Adjust brightness: adjust brightness of Analog TV. Press [5] to quickly adjust brightness of Analog TV while playing the Analog TV.

Help: provide help related to Analog TV. (Analog TV receives and deals with real-time signal from each TV station's analog signal transmitter so as to make it possible for you to watch free and synchronous TV programs)

9.2 Camera

◇ Enter photographed point interface.

◇ Press left function key to enter in the options menu, you can undertake associated Settings:

◆ **Photo album: enter photo album, you can view the photos phone took.**

◆ **camera Settings: image quality, avoid flicker, shutter sound, automatic preservation, display parameters, the front and back camera switching, etc** ◆ **storage location: you can choose to store in the photo or the memory card . Photographs stored in "Photos" directory.**

◇ click "OK" key to complete photograph.

◇ press left or right key to set camera : photo size, night or normal mode, brightness, contrast, exposure

compensation, like box, a continuous shooting, and white balance, delay taking pictures, special effects, switch to video mode.

9.3 Audio player

- ◇ Enter the interface of music playing, according to the following key executive related operation:
 - ◆ OK button: play/pause
 - ◆ navigation down key: stop playing
 - ◆ navigation left, right: switch to before and after the song
 - ◆ left function keys: enter the play list
 - ◆ *, # key: adjusting playback volume
- ◇ In the play list interface, press navigation up or down key to choose songs, press left function keys to enter the option, you can add current ringtone to ringtone library, update the play lists or enter setup.
- ◇ Settings: setting storage location, automatically generate lists switch, repeat mode, random pattern; background play switches etc, according to the navigation left, right-click on Settings.

9.4 Video player

It Can play video formats such as avid files.

- ◆ Enter video list, choose to play the file, click the OK button, select "play" into playing layout.
- ◆ press left function keys to began playing, in the process click this key to suspend or continue; Press * # key adjust volume; According to the navigation left, right-click retreat quickly, fast forward; Press the right function keys to stop playing.

9.5 FM

The system will automatically scan channels and record firstly open FM radio.

(Note: Insert the headset, the headset is the antenna.

Search Broadcast Channel

•Automatically search the broadcast channels, and press menu button → scan and save.

•Manually search the broadcast channels, and slide the roller on the screen (move the frequency red line to adjust) to slightly adjust, or manually input the channels.

Background Play

Click home button, FM plays at background.

10 Tools

10.1 Bluetooth

open/close bluetooth: you can open bluetooth devices or not.

◇ **Bluetooth visibility:** you can hide or show bluetooth.

◇ **Paired device:** Search for the bluetooth devices nearby.

◇ **shared folder settings**

◇ **shared folder permission:** you can set for "Full control" or "Read only"

◇ **shared folder:** you can set for "phone only" or "Selectdirectory" .

◇ **My bluetooth name:** when the bluetooth is opened, others can find, and will display the name.

◇ **storage:** The file received by bluetooth will store in the "telephone" or "memory card".

◇ **Help:** provide the related information for help.

10.2 Alarm

you can set a number of alarm clocks, which support ring when shutdown.

- ✧ Enter the alarm function, choose a clock, and press left key to enter editing interface.
- ✧ Press up or down of navigation key to choose setting items, Press left or right of navigation keys, or use a digital keyboard to modify, and press the right key to save Settings.

10.2 Calendar

- ✧ In the main interface of calendar, press left or right key of navigation keys to switch year and month.
- ✧ Press the "options" to enter menu, you can view the same day/all (task), add event, jump to a specified date, deal with weekly/monthly check, turn on or off the lunar switch and so on.

10.3 calculator

Calculator can execute addition, subtraction, multiplication, division, and four fundamental operations of arithmetic.

- ✧ Press numeric keys to input the numbers, and the navigation key input, +, -, x.
- ✧ Right function keys can delete datas.
- ✧ "OK" key calculate results.

10.4 recorder

Enter recording function, screens will display the record file list.

Press left key to enter options, you can record, play, rename, delete, set and so on.

World time

10.5 world clock

Understand how to check the time of other areas and set the displayed world time on the screen.

In the standby mode, enter the function list and select World clock.

Press Menu button to carry out the following settings:

Set local: Set the selected location and time to local.

Set daylight saving time: (The definition has been canceled in the national policies.)

10.6 Image Browser

Check the pictures and shoot photos in the memory card through the photo album.

1. Click media library from the main screen.
2. The phone automatically scans the supported documents in the memory card.
3. Select the needed photo album.
4. Press menu button to set.

Browse Pictures

Zoom in or out the pictures in the photo album through multi-touch function.

Picture Editor

Edit the opened pictures.

11 Settings

11.1 Call settings

✦ **Network selection:** choose “auto select” or “Manual select” .

✦ **Call divert:** Unconditional transfer, divert if busy, divert if no answer, divert if unreachable, Cancel all diverts. Note:

call transfer function need network support. For details, please consult the local network operators.

◆ **Call barring:** All outgoing calls, all incoming calls, Incoming calls when roaming, International calling, Dial when INTL roaming, cancel all barring, change password. Note: some network operators limit the function of it. For details, please contact network operators. when you apply for this service, network operator will provide you the initial network password.

◆ **Call waiting:** Open or closed, inquires the current state, and need the support of network operators.

◆ **Hide ID:** Don't display the phone number, display the phone number, by the network decision.

◆ **Select line:** Choose line 1 or lines 2.

◆ **Flight mode:** Activate or select when power on.

◆ **Others:** IP shortcut key, 50 sec voice call alert, after voice call connected, Answer/Reject mode, auto redial.

11.2 Phone settings

◆ **Time and data:** Set the time, date and local city and its format.

◆ **Select language:** Set the language the phone displays.

◆ **Shortcut settings:** Set the shortcut function of the navigation direction key. press the direction key and enter the stated function.

◆ **Auto power on/off:** Set up automatic open/shutdown of the time and switch. Open the automatic shutdown function, when the time is out the phone will automatic turn on/off.

◆ **Power management:** Show the current use of the battery.

◆ **Restore settings:** This function will be used for some settings which need restore the default Settings. Choose the item and input factory password for confirmation (factory password is 1122), the related parameters will return to

factory Settings.

11.3 Display settings

- ◇ Wallpaper settings: Set the idle wallpaper of phone.
- ◇ Idle display settings: time&date、Service provider、Today'task、 customized word.
- ◇ Screen savers settings: You can turn on the function of screen savers and set the picture or flash as the screen savers, Choose "Settings" to set the state and waiting time.
- ◇ Contrast: Adjusting backlight brightness
- ◇ Backlight: Set the screen brightness.
- ◇ keypad light: Set the backlight.
- ◇ Animation effect:
 - power on display: Set the power on display.
 - power off display: Set the power off display.

11.4 Security settings

- ◆ **Power-on password:** Open this function, when boot you need to input password, the default password is 0000.

- ◆ **PIN:** PIN is personal identification number, made up of 4 to 8 digits, to avoid the SIM card used illegal. PIN code is provided by the network operators. If open PIN, then every time phone boot you must input password. Note: if you input wrong password three times, SIM card will be lock, you have to input PUK to unlock. (network operators generally does not provide PUK code, so when the screen need you input PUK, please immediately contact network operators. Don't enter any characters by your mind.
- ◆ privacy, lock screen by end-key, power-on password, guardlock and so on.

◆**Poer-on password** To prevent your mobile phone from being used by others without your approval, you can set password when you use the function for the first time. After you use mobile phone, please change power-on password as soon as possible and keep it secret.

◆**Privacy**: Set password protection of personal information, For example:Call los,Message,Camera, Contacts, My files ,Calendar,U Disk

◆**Auto keypad lock**:set Auto keypad lock time

◆**lock screen by end-key**:set lock screen by end-key

12 Profiles

12.1 profiles

The phone provides a few profiles: Normal, silent, Meeting, Indoor,Outdoor. Select it , click left keys and choose to activate the mode. Select settings and you set associated function.

user-defined: you can set many effects if you need. ◆**Ring settings**: You can set the call ring and masage ring for sim1 and sim2.

◆**Adjust volume**: You can set the phone ring, information ring, call volume, key tone,touch tone,alarm remind and power on/off tone. how to set all the volume is just click the left /right or up/down of the direction key.

◆**Call alert**: You can set the way that call alert of sim1 or sim2. (alert way: ring, vibrate, silent, vibrate then ring,ring and vibrate)

◆**Message alert**: You can set the way manage alert of sim1 or sim2. (alert way: ring, vibrate, silent, vibrate then ring,ring and vibrate)

✦ **Alarm remind:** set the remind way. (remind way: ring、vibrate、silent、ring and vibrate)

✦ **Key tone:** set the key tone effect. (key tone: silent、**ringtone1**、**ringtone2**)

✦ **slide tone:** you can activate the slide tone or not.

✦ **Battery low alert:** you can activate the battery low alert or not.

✦ **Power on/off tone:** you can activate the power on/off tone or not.

✦ **Rename:** modify the name of profile.

13 Games

13.1 Sokoban

This game is built-in games, please according to the instructions.

14 input method

The phone support the input of Chinese and English characters . In the edit page you can click “#” key to switch input method.

The display icon of input method is as follows:

English letters input method: abc

English capital input method: ABC

Digital input method: 123

14.1 Input method keys

✦ 0-9key: Digital input method input digital 0 to 9; pinyin and English input method input the letters show on keys.

◇ Navigation keys:

- Press the up or down navigation key to enter choosing words state;

- Enter the state of choosing words, navigation key's left, right used to move the cursor.

◇ OK key: Enter the state of choosing words, navigation key's left, right used to move the cursor.

◇ remove key: right function key is used to clear input characters (short press for clear one by one, long press for clear all).

◇ A-Z key: The input interface, input keys related letters

15 Maintenance and help

15.1 Maintenance and repair

The phone is designed excellent, by understanding this cell phone's maintenance and repair, you can use safe and effective in a long time:

◇ Please put your mobile and accessories where children can't touch.

◇ Please keep the cell phone dry. Rain, moisture and liquid contain minerals, so will corrode phone's circuit.

◇ Please don't put the phone on messy, dirty place.

◇ Please do not use mobile phone or keep in high temperature. High temperature can shorten the life of the electronic components, damage to the battery, and make some plastic part deformed or melt.

◇ Please do not use mobile phone or keep in low temperature. When the phone is in normal temperature, moisture in the phone internal may coagulate, which will cause the damage of the circuit board.

◇ Do not disassemble the mobile phone, casual treatment may be damaged cell phone.

◇ Please avoid falling, beating and vibrating mobile phone, inappropriate outside force may damage mobile phone's circuit.

◇ Do not use chemical solvents or cleaner to clean mobile phone. To clean mobile phone, please use the soft cotton fabrics stained with water or neuter soap to brush cell phone.

◇ Please use the original manufacturer's recommended accessories.

◇ If the phone or its parts is out of order, please look for professional maintenance to repair your phone.

15.2 Maintenance of the battery

◇ New battery can achieve the best performance after two or three full charge and discharge.

◇ Batteries can be charged and discharged hundreds of times, but will ultimately be ineffective. When the talk and standby time is significantly short, you need to purchase a new battery.

◇ When the charger is not using, please cut off power supply. Don't connect battery to the charger more than a week, because excessive charge will shorten the battery life.

◇ if the phone is no used in a long time, please keep charging at least 20 minutes or more before used again.

◇ To make the battery life as long as possible, you can discharge the battery by turning on until turning off automatically. Don't try to use other unauthorized method to discharge.

◇ When the battery is low, and can only keep a few minutes of talk time, mobile phone will make sound warnings. when the battery is used up, phone will automatic shut down .

◇ If battery is used more than one and a half years, you'd better replace batteries. Don't abandon used batteries and just give it to local recovery site .

15.3 help

If someting abnormal happened when you use the phone, please solve refer to the table below , if there is still some questions, please contact network operator.

abnormalities	causes	solution
Receiving signal adverse	1.use mobile phones in the signal receiving bad areas . Such as tall buildings or basement near	If you are in the building, please move to the nearby window. If the signal is very weak, please move into the open place
	2.In a dense period, the line call is in congestion which cannot be calling.	Try to avoid
	3. Away from the network operator's base station	You can request network operators to provide the service area chart.
Echo or noise	1. The network operator's poor trunks caused	Hang up and dial again, trunks' choice may exchange for good lines.
	2. call line of some places is in bad	
can't be turned on	The battery is exhausted	To recharge the battery
Standby time becomes short	1. Standby time have something to do with network operators' system setting. The same cell phone is used in different networks,standby time may not the same.	In the signal receiving bad areas, please temporarily shut down
	2. The battery wears,and the performance will be gradually reduced after using a few years	Replace new battery

	3. When couldn't get a signal, phone will continue to launch to look for the base station, which will use a lot of battery, and cause standby time short.	Move to area of good signals or shutdown for the moment
No network service	1. The SIM card is invalid	Contact with network operators
	2. Not in a service area	Check the network operator's service area
	3. Weak signal	Move to the window or choose another service network
SIM card can't use	1. SIM card is damaged	Back to network operators for inspecting
	2. SIM card is not installed properly.	To properly installed the SIM card
	3. SIM card contacts is not clean	wipe the contacts with a clean cloth
Can't send SMS	Not open this service or no input text message center number	contact with network operators, and set the SMS center number
Can't call or can't answer the phone	Call limit has set	Close call limit
PIN error	Input wrong PIN code three times	Contact with network operators
Battery don't charge	1. The battery or battery charger is damaged	1. Replace new battery or charger
	2. The cell phone is 5 degrees Celsius temperature below or above 40 degrees centigrade.	2. Adjust charging environment
	3. Contact undesirable	3. Check if the joint connection is good, Keep charging more than 20 minutes

the data can't be input in the phone book	the phone book is full	Delete parts of this phone book
Unable to set some function	Network operators do not provide this function	Contact with network operators

(Note: if something abnormal happened with the phone, please refer to the table above for solutions. if problems still exist, please contact with network operator or the machine manufacturer . Text and images in the instructions leaflet is only for reference, please in kind prevail) About the statement conforming to 《the pollution's control measures of electronic products》

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that

Contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.