

# **Lov-tv**

# **User Guide**

## Table of Contents

1. Security .....	6
2. Getting Started .....	9
2.1. Batteries .....	9
2.1.1. Installing and uninstalling the battery .....	9
2.1.2. Charging the battery .....	9
2.1.3. Using the battery .....	10
2.1.4. Battery level indicator.....	10
2.2. Connecting to the Network .....	10
2.2.1. SIM card .....	10
2.2.2. Installing and uninstalling the SIM card.....	11
2.2.3. Unlock the SIM card.....	12
2.2.4. Connecting to the network.....	12
2.3. Text Input Method.....	12
3. Basic operations.....	13
4. Call Function.....	13
4.1. Phone power on/off .....	13
4.2. Dial .....	13
4.2.1. Direct dial .....	13
4.2.2. Dial from the Phonebook .....	14
4.2.3. Unanswered call .....	14
4.3. Answer call.....	14
4.4. During a phone call.....	14
4.5. Emergency service .....	14
5. Widgets .....	14
6. Main Menu .....	15
6.1. Options.....	15
6.1.1. Open: .....	15
6.1.2. Move: .....	15
6.1.3. Page transition: .....	15
6.2. Call logs.....	15
6.3. Phonebook.....	15

6.4.	Messaging .....	16
6.4.1.	Write message.....	16
6.4.2.	Inbox.....	17
6.4.3.	Drafts .....	18
6.4.4.	Outbox .....	18
6.4.5.	Sent messages .....	18
6.4.6.	Broadcast messages.....	19
6.4.7.	Messages Settings .....	19
6.4.7.1.	Text message .....	19
6.4.7.2.	Multimedia message.....	19
6.4.7.3.	Service message settings.....	19
6.5.	Telcel .....	20
6.6.	Browser .....	20
6.7.	Extras.....	20
6.8.	SIM toolkit .....	21
6.9.	Mobile TV.....	21
6.10.	Settings .....	21
6.10.1.	Pen calibration:.....	21
6.10.2.	Phone settings.....	21
6.10.3.	Network settings.....	22
6.10.4.	Security settings .....	22
6.10.4.1.	SIM1 security .....	22
6.10.4.2.	Phone security.....	22
6.10.4.3.	Privacy protection .....	23
6.10.4.4.	Mobile tracker.....	23
6.10.5.	Notification service.....	23
6.10.6.	Call settings.....	23
6.10.7.	Restore factory settings.....	23
6.10.8.	Sound effects .....	23
6.11.	Pluggger .....	23
6.12.	Msngr .....	23
6.13.	Camera.....	23
6.14.	Bluetooth .....	24
6.15.	Fun .....	24

6.16.	Calculator.....	24
6.17.	Mi Tecel.....	25
6.18.	<a href="#">Applications</a> .....	25
6.19.	Multimedia .....	25
6.19.1.	Image Viewer .....	25
6.19.2.	Camcorder .....	26
6.19.3.	Video player .....	26
6.19.4.	Music Player .....	26
6.19.5.	Sound Recorder .....	27
6.19.6.	FM radio .....	27
7.	Appendix.....	<b>27</b>
7.1.	FAQ.....	27
7.2.	Error Message .....	28
7.3.	Care and maintenance .....	28

## General Information

Thank you for selecting our GSM/GPRS mobile phone. This user guide will provide you with the general information and operation instructions.

This color screen phone is designed for the 2.5G GSM/GPRS 850/1900 network environment with Dual SIM Technology. Enjoy good call connecting quality and high speed data access over the network.

**Note:**

- Use only accessories approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.
- If the contents and displays described in this user guide do not match the actual operation of the phone set, please use the display of the actual phone set. We reserved the rights to change the mechanisms of the phone without notice.
- This user guide is subject to change without notice.

# 1. Security

## Emergency call

In any country, you can dial (or other emergency call number) for emergency help.

### Note:

➤ Based on the nature of cellular networking, the success of the emergency call cannot be guaranteed.

## For your safety

- Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.
- Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.
- Pay special attention to the ring tone volume and vibration settings if you have a heart problem.
- In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions.
- Your phone will emit radio frequency even in the standby mode. Turn off your phone when so instructed.
- Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free operation, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.
- If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.
- When you contact your service provider, they will need your IMEI number. It is printed on the back of your phone set (you can find it when you remove your battery), or call \*#06# to look up your IMEI number. Copy this number and save it for future need.
- To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.
- Do not remove the battery without turning off the phone. Failure to follow this instruction may result in data loss.
- When you leave your vehicle, take the phone with you or place it in the glove compartment to avoid theft.
- Keep the phone, battery or charger out of reach of children.

## Notices for your phone use

- Do not keep the phone near magcards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.
- Use the phone near land phone, television, radio and office automatic devices may cause interference and affect the function of the mobile phone.
- Keep the phone dry, all kinds of liquid can erode the electronic circuit.
- Keep the phone away from extreme temperatures.
- Keep the phone away from hot places where the temperature may exceed 60°C, such as the dash board, windowsill, near fire or a lighted cigarette.
- Do not paint the phone.
- Do not drop the phone or violently crush or shake the phone.
- Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.
- Use only damp cloth or non-static cloth to clean your phone. Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.
- The phone will become warm under normal use and while in battery charging.

- Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause data loss.
- The metal parts of the phone may irritate your skin depending on your health condition.
- Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone on the bottom of a bag. You may crush it.
- When the vibrate mode is on, place the phone carefully to avoid it being dropped from a height or being moved to a heat source due to the vibrating.
- Use only the stylus approved by the phone manufacturer. Do not press the touch screen with needles, pen point or other sharp objects, otherwise it can damage the LCD and violate the terms of the warranty.
- Handle the stylus with care. Place it back to its proper storing place when not in use. Keep it away from children.

#### **Notice for batteries use**

- Do not disassemble or modify your batteries, otherwise it can cause leakage, over heat, fire or explosion.
- Disposing battery in a fire can cause fire or explosion. Old batteries should be returned to your dealer or be disposed according to local regulations. Do not dispose the battery as household waste.
- Do not short the circuit of the battery with wires, needles or other metal objects, or store the batteries with necklace or other metal objects, otherwise it can cause leakage, over heat, fire or explosion.
- There is a risk of blinding if the liquid of the batteries gets into your eyes. In case of this, do not rub your eyes, you should rinse your eyes well with fresh water and go to the hospital immediately.
- If the leaked liquid of the battery touches the skin, it can burn the skin. Please wash your skin with fresh water and go to the hospital immediately.
- Never put the battery in your mouth. The liquid of the battery can be toxic.
- Stop using the battery when you find it became hotter, and change color and shape abnormally during use, charging or storing.
- Keep the batteries dry.
- Do not use or store batteries near fire, heater and other place with high temperature, otherwise it can result in leakage, over heat, fire or explosion. Store the battery in a cool and ventilated place without direct sun light.
- Do not charge the battery for more than 24 hours.
- The battery can be charged and discharged for hundreds of times but it will eventually wear out. The battery life is shortened with each charging.
- When replacing the battery, use only the batteries approved by the phone manufacturer. Damage resulting from using un-authorized batteries will not be covered by warranty.

#### **Traffic safety**

- Do not use your phone when driving a vehicle. Give full attention to driving and to the road. Provided there is an emergency, stop your vehicle in a safe place and then use your phone. Please obey all the local traffic laws and regulations.
- Normally the electronic systems in the vehicle should not be affected by the RF (Radio Frequency) signals from your wireless phone. However if you suspect any damage is resulting from the RF of your phone, contact your car dealer. Stop using your phone in the car until a qualified technician clears the problem.
- Only qualified technician can install your phone in your vehicle.
- If your vehicle is equipped with an air bag, do not place the phone above the air bag, or in the air bag deployment area. If in-vehicle wireless equipment is improperly stored or installed and the air bag inflates, serious injury could result.
- Turn off your phone when in the gas station or any place where using wireless equipment is prohibited. Do not place or transport your phone with

inflammables or explosives, the internal sparkle may cause fire.

### Airplane safety

- Power off your phone before boarding, the use of a wireless phone in an airplane will be dangerous to the operation of the airplane and disrupt the wireless telephone network and maybe illegal. Failure to observe these instructions may lead to law suit or denial of GSM cellular network service to the offender.
- Should there be an emergency situation, contact crew member.





## 2. Getting Started

 
### 2.1. Batteries

The battery is included in the package. It is not fully charged out of factory but it may still be able to power on your phone. Please completely use up the power of the battery and then charge it for at least 12 hours with your phone turned off. Your battery will reach its optimal state after three cycles of charge and discharge.

#### 2.1.1. Installing and uninstalling the battery

To install the battery, remove the back cover from the phone by pressing firmly on the cover and slide it down. Align the golden contacts of the battery to the contacts in the phone, and then gently snap down the battery into place. Re-assemble the back cover.


To uninstall the battery, flip the battery out from the bottom of the battery.

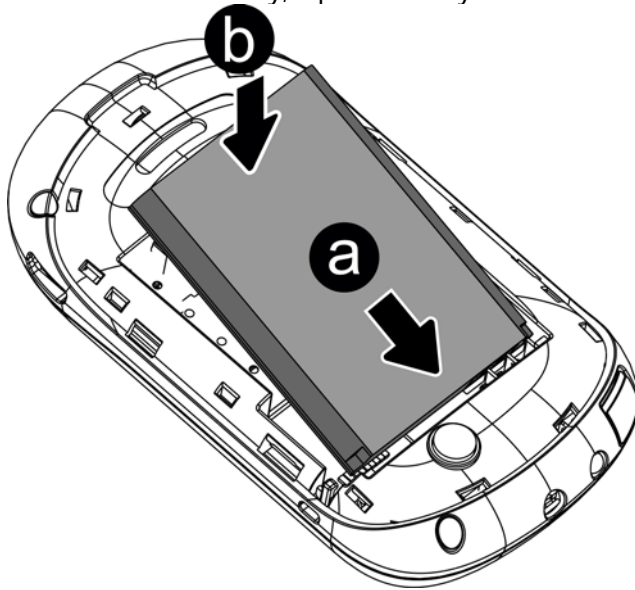

#### 2.1.2. Charging the battery

Plug the charger into the socket on the side of your phone. Connect the charger to an AC wall socket. The blinking of the battery level icon indicates the battery is being charged. When the blinking stops, it indicates the charging is finished.

 During charging, the phone and charger will feel warm to the touch. This is normal.

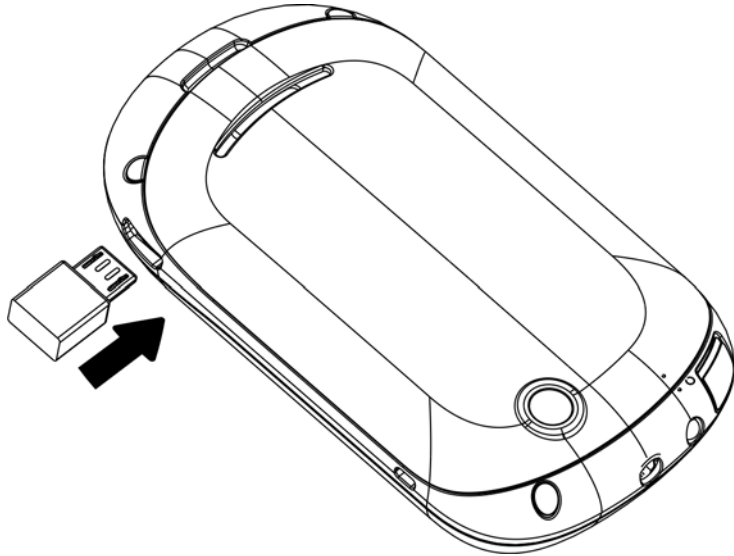

**Warning:**

- The operating ambient temperature of the charger is 0°C-50°C. Do not use it when the temperature exceeds this limit.
- Use only chargers approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.

**2.1.3. Using the battery**

The waiting time and calling time capacities specified by the phone manufacturer are obtained under the ideal operating environment. The actual values will vary with the network condition, operating environment and operation method.

Please comply with the local regulations of disposing the battery (such as recycling). Do not dispose it as household waste.

**2.1.4. Battery level indicator**

When the phone is on, the battery level indicator is located at the upper right corner of the screen.

**2.2. Connecting to the Network**

**2.2.1. SIM card**

Please insert available Subscriber Identity Module (SIM) card into your phone before using it. SIM card is supplied by your network carrier.

All the information related to network connection is recorded on the SIM card, so are the contact information such as names, phone numbers and SMSs that you set to store on the SIM. You can take out the SIM card from the phone and insert it into another GSM phone to use it. Most new phones will recognize the SIM card automatically.

Do not touch the golden contacts of the SIM card and place it away from electricity and magnetism to avoid damage. You will not be able to use the phone if the SIM card is damaged.

**Note:**

- Before inserting and taking out the SIM card, always make sure that the phone is switched off and disconnected from any external power source; otherwise

 
both the phone and the SIM card may be damaged.

### **2.2.2. Installing and uninstalling the SIM card**

The SIM card usually comes attached to a special card. The metal contacts of SIM card is easily damaged by scratching, so take it out carefully before assembling it into the phone.

Switch off the phone; remove the back cover, battery and other external power source. Fit the SIM card into the SIM card slot. Align the angled corner of the SIM card with the slot. Slide in the SIM card, make sure it is in place, install the battery, and restore the back cover.

Likewise, to remove the SIM card, switch off the phone, remove the battery and then take out the SIM card.

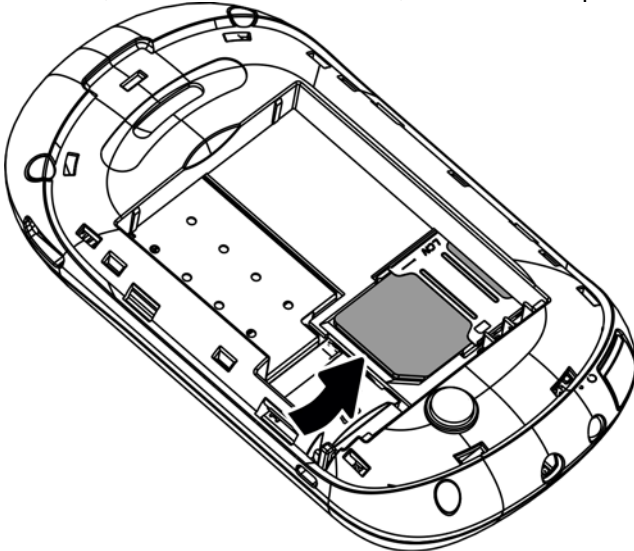


### **2.2.3. install & remove the memory card**

Open the back cover, remove the battery.

Insert the memory card to the card slot.

 Install the battery and close the battery cover.

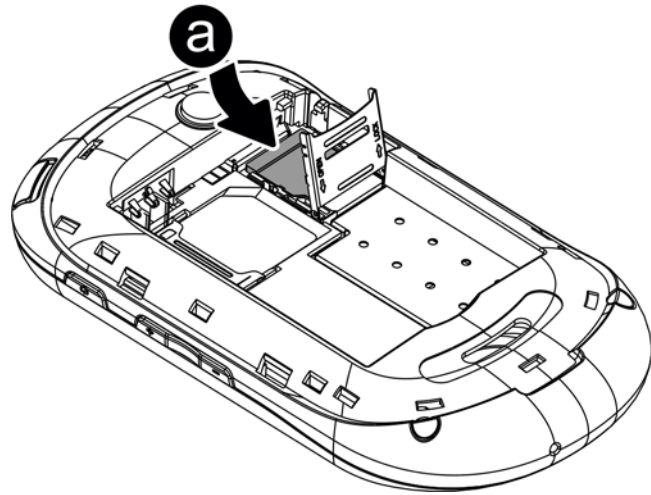

#### **2.2.4. Unlock the SIM card**

##### **PIN code**

Your Personal Identification Number (PIN) code protects the SIM card against unauthorized use. Your PIN code is usually supplied with the SIM card. If this security function is enabled, you need to enter the PIN code every time you turn on the phone. You can also disable this function.

To unlock the SIM card, press and hold the power button to turn on the phone. Enter the PIN code. After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it.

##### **PUK code**

This code is required to change a locked PIN code. If the code is not supplied with the SIM card, contact your service provider. After ten consecutive incorrect PUK code entries, the SIM card can not be used any more. Please contact your service provider to buy a new SIM card. You can not edit PUK code. If it is lost, Please contact your service provider.

#### **2.2.5. Connecting to the network**

After the SIM card is unlocked, you phone will automatically search for the registered network or other local available network. Once connected, the name of the network carrier will appear on the top of the screen.

You phone is now in Standby mode, ready for making and receiving calls

### **2.3. Text Input Method**

This phone provides various text input methods that allow you to use less key strokes to input and search for text:

- English: ABC/abc/Abc/Numeric input method
- Espanol: ES/es/Es/Numeric input method

- Portugues: PT/pt/Pt/Numeric input method
- Digit input
- Insert symbol

### 3. Basic operations

Phone screen supports touch screen, all operations with the following keys can be.

- Power on/off key
- Volume plus or minus key
- Menu / option key
- OK key
- Return key

### 4. Call Function

After the setup described in the previous sections is completed, you are ready to make and receive calls using the basic information provided in this section.

#### **Note:**

- When you are using headset, please plug/unplug the headset gently to avoid damaging the headset jack.

#### **4.1. Phone power on/off**

##### **Power on**

Press and hold **Power Key** to turn on the phone. If PIN code is required, please refer to the previous section in this guide.

##### **Power off**

In Standby mode, long press **Power Key** to turn off the phone.

#### **4.2. Dial**

When the network carrier is right, your phone has entered the Standby mode and you may make or receive calls.

##### **4.2.1. Direct dial**

Press Dialer key on the screen.

##### **Domestic call**

Using the stylus, tap the number keys on the touch panel (add area code when calling long distance), and then tap the dial key to make the phone call.

The screen will show the name and phone number of the person that you are calling. After the call goes through, the screen will show a time meter in addition to the phone number and/or the name of the person you are calling.

##### **International call**

Key in the symbol “+” by tap-and-hold **\***, followed by the desired country code and the phone number. For example, to make a call to France, tap and hold **\*** until “+” appears then enter “33” (the country code for France) and the phone number.

#### 4.2.2. Dial from the Phonebook

Enter Phonebook from the standby menu. You may use alphabet for quick search of the names.

#### 4.2.3. Unanswered call

If you have set up Auto Redial, your phone will automatically re-dial the last number that you called but unanswered.

#### 4.3. Answer call

When there's an incoming call, the phone will notify you through vibration, ringing, vibration plus ringing, etc. The name and phone number of the caller is shown on the screen if the network supports the service. You may answer or reject the call.

If call waiting is on, (You need to apply for this service to your network carrier.) when you are on the phone and there is another incoming call, your phone will notify you with a short tone. You may answer or reject that second call. If you choose to answer the second call, the current call will be on hold.

#### 4.4. During a phone call

When you are on the phone, the following functions can be used:

**Note:**

- The functions vary with the SIM card.

**Hold:** The current call is on hold and both you and the person you are calling will not hear each other. When the call is on hold, you may pick it up again or end the call through the Options menu.

**End single call:** End the current call.

**Open Homescreen:** You can open the main menu during a call.

**Background call:** Continue to make calls in the background.

**Mute:** Set DTMF on or off.

You may enter Dial or Phonebook screens to make a new phone call while the current phone call is still on-going.

#### 4.5. Emergency service

In any GSM network system, if you are in the region covered by the network, you should be able to use the emergency service even without a SIM card.

### 5. Widgets

In standby interface touch Widgets or press the return key to enter the Widgets.

- Add fav. Contact
- Add alarm
- FM
- Audio player
- Message

## 6. Main Menu

On the Standby screen, press **Menu key** to enter the Main Menu. You can then access the various functions and operations.

### 6.1. Options

#### 6.1.1. Open:

Open the first program

#### 6.1.2. Move:

Move the icon to a custom location

#### 6.1.3. Page transition:

You can select one of the following animation as menu transition effects

Shuffle; Normal; Ball; Space beam; Jump up; Wave; Tilt; Roll; Slide down; Slide up; Collect center; Collect corner; Cylinder; Tornado; Cube;

### 6.2. Call logs

In this interface , there are four functions for your select: All calls, Dialed calls, Missed calls , Received calls. Select any a log, tap **Option** to enter the Option list:

- View: View the detail of the current call
- Call: Call the current number
- Sent text message: Directly input the SMS and send it to the current number.
- Sent multimedia message: Directly input the MMS and send it to the current phone number.
- Save to Phonebook: Save the number to the phone book
- Add to Blacklist: Add contacts to the blacklist of the current call records.
- Edit before call: Call to edit the number before the call record contacts.
- Delete: Delete the current logs.

### 6.3. Phonebook

You can save a phone number in the memories of SIM cards or phone.

Select a contact in the contact list window and tap **Options** to perform:

- **View:** Display the current number.
- **Send text message:** Directly input the SMS and send it to the searched phone number.
- **Send multimedia message:** Directly input the MMS and send it to the searched phone number.
- **Call :** Call the current contact.
- **Edit:** Edit the current contact.
- **Delete:** Delete the current contact.

- **Copy:** Copy the current contact.
- **Sent business card:** through the SMS, MMS, Bluetooth to sent business card
- **Add to Blacklist:** Will the current contact added to the blacklist list
- **Groups:** In order to facilitate the address book managements, you can contact will be added to the different groups respectively. Can set for each group alone group the bell
- **Phonebook settings:** You can manage the phonebook with this function.
  - Preferred storage: You can select preferred storage in SIM1, SIM2, phone or all.
  - Speed dial: You can assign the quick dial numbers (2-9) to the 8 frequently-used phone numbers.
  - Extra number: You can choose the Fixed、Barred dial and service numbers、SOS number。
  - Memory status: View the quantity of phone saved in the SIM cards or phone memories.
  - Copy contacts: You can use the function to copy the phonebook from phone to SIM or from SIM to phone.
  - Move contacts: You can use the function to move the phonebook from phone to SIM or from SIM1 to phone.
  - Delete All Contacts: You can use the function to delete the phonebook from SIM1, SIM2 or phone.
  - Backup contacts: You can back up the phonebook numbers in this function;

## 6.4. Messaging

### 6.4.1. Write message

You can edit and send the SMS and MMS with this function.

- **Text message(SMS)**
- **Send to:** Input number and then send SMS to the input number.
- **Insert symbol:** Enter various symbols.
- **Input method:** Change the input method.
- **Input method options:**
  - Writing language: You can choose between English, Espanol or Portugues.
  - pattern: You can choose a virtual phone numeric keypad or full keyboard.
  - Advanced setting: Choose whether to capitalize the first letter.
- **Advanced:** Insert pictures, melody, phone number and bookmark.
  - Insert number: Insert the number of the contacts.
  - Insert name: Insert the phone book name.
- **Save:** Save the SMS in the Draft box.

Select [send to] to enter in the sending window after finishing the creation of the SMS. Select [Enter number] or [Add from phonebook] to search a phone number of the receiver and finally tap **Send**:

- **Send:** Send the SMS to sender
- **Edit recipient:** Edit the recipient number.



- **Remove recipient:** Delete the selected recipient.
- **Remove all recipients:** Delete all recipients.
- **Save:** Save the SMS in the Draft box.
- **Multimedia Messages (MMS)**
  - **Send:** Input number and then send MMS to the input number.
  - **Add To:** Add recipient.
  - **Add Cc:** Add Cc recipients.
  - **Add Bcc:** Add Bcc recipients.
  - **Edit subject:** Edit MMS theme.
  - **Edit content:** Edit MMS content.
  - **Preview:** Preview MMS.
  - **Save:** Save the MMS in the Drafts.

#### 6.4.2. Inbox

The Inbox lists the received SMS and MMS.

You can view the received SMS with this function. Select an entry of SMS and press <Option> under the inbox SMS list window to perform:

- **View:** View the selected message.
- **Reply by SMS:** Reply the SMS to the sender;
- **Reply by MMS:** Reply the MMS to the sender;
- **Call sender:** Call the sender of the selected message.
- **Forward:** Forward the SMS to other via SIM card 1/ 2;
- **Delete:** Delete the selected entry of the message;
- **Delete all:** Delete all messages

Select one of SMS than press <Option>

- **Reply by SMS:** Reply the SMS to the sender;
- **Reply by MMS:** Reply the MMS to the sender;
- **Call sender:** Call the sender of the selected message.
- **Forward:** Forward the SMS to other via SIM card 1/ 2;
- **Delete:** Delete the selected entry of the message;
- **Advanced:**
  - **Use number:** Extract the number in the SMS content.
  - **Use URL:** Extract URL in the SMS content.
  - **Use USSD:** Extract USSD in the SMS content.
  - **Copy to phone:** current information to copy to the phone.
  - **Move to phone:** current information to move to the phone.

#### 6.4.3. Drafts

Saved messages and unsent message are saved here.

Press **OK Key** to enter drafts. And press **Left Soft Key** under the Drafts list window to perform:

- **View:** View the selected message.
- **Send:** Send the selected message.
- **Edit:** Edit the selected message.
- **Delete:** Delete the selected entry of the message;
- **Delete all:** Delete all messages

Select one of SMS than press <Option>

- **Send:** Send the selected message.
- **Edit:** Edit the selected message.
- **Delete:** Delete the selected entry of the message;
- **Advanced:** Press [OK] under this window to perform:
  - **Use number:** Extract the number in the SMS content.
  - **Use URL:** Extract URL in the SMS content.
  - **Use USSD:** Extract USSD in the SMS content.
  - **Copy to phone:** current information to copy to the phone.
  - **Move to phone:** current information to move to the phone.

#### 6.4.4. Outbox

The out-going messages are listed here.

Your options include:

- **Send:** Send the selected message.
- **Edit:** Edit the selected message.
- **Delete:** Delete the selected entry of the message;
- **Delete all:** Delete all messages

#### 6.4.5. Sent messages

Sent messages are saved here. Your options include:

- **View:** View the selected message.
- **Forward:** Forward the SMS to other;
- **Delete:** Delete the selected entry of the message;
- **Delete all:** Delete all messages
- **Mark several:** Mark several messages to delete at the same time.

Select one of SMS than press <Option>

- **Forward:** Forward the SMS to other;
- **Delete:** Delete the selected entry of the message;
- **Advanced:**
  - **Use number:** Extract the number in the SMS content.
  - **Use URL:** Extract URL in the SMS content.
  - **Use USSD:** Extract USSD in the SMS content.
  - **Copy to phone:** current information to copy to the phone.
  - **Move to phone:** current information to move to the phone.

#### 6.4.6. Broadcast messages

Look up the broadcast messages. Your options include:

- **receive mode:** Turn on or turn off cell broadcasting.
- **channel settings:** You can add, edit channel and can delete the current channel and cancel the read.
- **Languages:** set the cell broadcast language.
- **Read messages:** Save read cell broadcast information.

#### 6.4.7. Messages Settings

This feature SMS, MMS, and service information system settings.

##### 6.4.7.1. Text message

Select the Text message card SMS settings, enter the setup menu, you can do the following:

- **Memory status:** View the quantity of MMS saved in the phone memories.
- **Save sent message:** Select whether to save sent messages.
- **Preferred storage:** Select to save the MMS in phone or memory card.

##### 6.4.7.2. Multimedia message

Select the multimedia message card (SIM1) MMS settings, enter the setup menu, you can do the following:

##### ➤ Data account

This is wap data account. You can select a server to send information first.

##### ➤ Common settings

You can set up various MMS service options with this function. Select an entry of MMS and press <OK> under the Common settings window to perform:

- **Sending:** Enter this option you can set up Validity period, Delivery report, Read report, Priority, Slide timing and Delivery time.
- **Retrieval:** Enter this option you can set up Home network, Roaming, Read report and Delivery report.
- **Preferred storage:** Select to save the MMS in phone or memory card.
- **Memory status:** View the quantity of MMS saved in the phone memories.

##### 6.4.7.3. Service message settings

- **Enable push:** Choose whether to receive.

- **Service loading:** Select the prompt way;

## 6.5. Telcel

SP application link.

## 6.6. Browser

### ➤ **Homepage**

Enter the homepage; it will connect with default page automatically.

### ➤ **Bookmarks**

You can select, add bookmark, enter the bookmark's address, name and save it. Press left soft key to access options:

- **Go to:** Connect with WAP page.
- **View:** Check the already save bookmarks.
- **Add bookmark:** Add new bookmark.
- **Set as Homepage:** Existing bookmarks set to homepage.
- **Memory status:** Check storage status

### ➤ **Search or input URL:**

Enter the website. After confirmation you can connect with this WAP page.

### ➤ **Recent pages**

Save the browsed WAP page. Select up/down navigation key to select page and press the left soft key to confirm.

- **Go to:** Connect with WAP page.
- **Delete:** Delete the page visited.
- **Delete all:** Delete all pages visited.
- **Set as Homepage:** Existing bookmarks set to homepage.
- **Add to Bookmarks:** Add new bookmark.

### ➤ **Settings**

- **Homepage:** You can select default or user defined.
- **Data account:** You can select SIM1, SIM2.
- **Browser options:** Clear cache, clear cookies and clear authentication info
- **Preferences:** You can set according to their own preferences timeout, show pictures, cache, etc.
- **Security setting:** Trusted certificate list.

## 6.7. Extras

Calendar:

The screen will highlight the date of today after displays the monthly calendar when you enter in the calendar function.

Your options include:

- **View:** enter in the routines of the predetermined date to view, Add, edit, delete and delete all or send To-Do-List.
- **View all:** view all the to-do-list.
- **Add event:** create affairs under the selected date.
- **Delete event:** delete the selected affair.
- **Jump to date:** return to the calendar window after inputting the designated date with the cursor stopping on the inputting date.
- **Go to today:** view today's calendar.
- **Go to weekly view:** view the calendar by week.
- **Start of week:** Choose start of the week.

## 6.8. SIM toolkit

SIM Card support is required in this service.

## 6.9. Mobile TV

First select the local city, and then automatically search for channels.

After the search is completed, there will be the list of Channel Preview, select options:

- **Play:** Play the currently selected channel programs.
- **Update:** Re-search channels.
- **Rename:** Rename the channel name.
- **Delete:** Delete the selected channel.

## 6.10. Settings

You can set up various functions for the phone with this function.

### 6.10.1. Pen calibration:

Calibrate touch screen accuracy

### 6.10.2. Phone settings

You can customize your favorite phone functions based on your interest with this function.

- **Time and Date:** You can set home city, set time and date, set format for your phone.
- **Schedule power on/off:** You can set up to power the phone on/off at the set time. This function can be opened or closed.
- **Write language:** Set the current system language.
- **Widget manager:**
  - **Widget display:** Select Open / Close widget.

- **Widget order:** Sort according to own preferences.
- **Shortcuts manager:** You can use the shortcut feature set contained portions of the menu appear in the shortcut menu.
- **Display**
  - **Wallpaper:** Select your favorite picture as the wallpaper of the standby window.
  - **Menu page transition:** You can select one of the following animation as menu transition effects.
  - **Lock screen image:** You can set the lock screen icon from System or User defined.
  - **Screen auto lock:** Set the automatic lock screen time.
  - **Power on display:** You can set the boot screen display from System or User defined.
  - **Power off display:** You can set the Shutdown screen displays from System or User defined.
- **Flight mode:** Switch flight mode and normal mode.
- **Misc. Settings**
  - **LCD Backlight:** here are set LCD brightness and time.

#### 6.10.3. Network settings

You can set up the phone network with this function.

- **Network selection:** choice the modes of searching the phone network, including Auto and Manual modes.
- **GPRS connection:** Select the desired connection or has been connected to.
- **GPRS transfer pref:** Select the data priority or call priority.

#### 6.10.4. Security settings

You can manage your phone safely with this function.

The phone lock password, SIM card password support 4-8digit numbers, do not support other characters. The original password of the phone when leaving the factory is 0000. The password and PIN2 and SIM card are provided by the network operator. When the PIN is input wrongly in successively three times, the SIM card will be locked.

The PUK /PUK2 are required to input if you want to unlock the SIM card. The PUK/PUK2 is provided by the network operator. If the PUK is input wrongly in successively 10 times, the SIM card will be locked and discarded permanently.

##### 6.10.4.1. SIM1 security

- **PIN lock:** open or close the PIN lock function. When PIN lock is launched, the PIN shall be input upon each power-on.
- **Change PIN:** PIN lock must be enabled, Just can be change.
- **Change PIN2:** input the correct PIN 2. Just can be change.

The SIM2 security setup is same to the SIM1 security setup.

##### 6.10.4.2. Phone security

- **Phone lock:** Open or close the phone lock function. When the phone lock is launched, the phone lock password shall be input upon each power-on.
- **Change password:** You can change the phone password.

#### 6.10.4.3. Privacy protection

Input the correct password into the interface of Data security in first.

Set the modules of the privacy protection. If you select this modules for Data security, you must input the correct password when you want to view this modules.

#### 6.10.4.4. Mobile tracker

You can track your phone when the phone lost;

#### 6.10.5. Notification service

Select SMS / call log / Download message alert settings.

#### 6.10.6. Call settings

- **Call waiting:** The network will inform you for a newly incoming call during the call. Please contact with your network operator to launch or close the function because the function requires the network support.
- **Call divert:** Divert an incoming call to a designated phone number under the presetting condition. This function can be launched or closed.
- **Call barring:** Set up the right of calling and answering. This function requires the network support. You can launch or close the function.
- **Advance settings:**
  - **Blacklist:** blacklist open the blacklist contact could not be called a native.
  - **Auto redial:** Set up whether the phone is tempted to redial when the call fails in connection.
  - **Call time reminder:** Select to release prompt tone during the call in each integral minute time.
  - **Auto Call Record:** Open automatically replay, dial-up connection failed to automatically replay.
  - **Answer mode:** You can select Any key or Auto answer when headset mode.

#### 6.10.7. Restore factory settings

You can recover the phone into the initial setting with this function.

#### 6.10.8. Sound effects

Select, edit, rename or restore default the audio effect.

### 6.11. Plugger

SP application link.

### 6.12. Msngr

SP application link.

### 6.13. Camera

With this function, you can snap. Tap to snap under the view-finding window.

Enter Camera Option, Your options include:

- **Switch to video recorder:** Switch to the video recorder

- **Photos:** Enter in the album folder.
- **Camera settings:** Set up the camera.
- **Image settings:** Set up the photo parameters.
- **White balance:** Adjust the color balance of the photo.
- **Scene mode:** Set up the scene mode.
- **Effect settings:** There are four options at your choice: Normal, Sepia, Sepia blue and Color invert .
- **Storage:** Set up the storage of the photos.
- **Restore default:** Recover all settings into the initial values.

#### 6.14. Bluetooth

Your options include:

- **Power:** Open or close the Bluetooth
- **Visibility:** Open or close the visibility.
- **My device:** Show the device which is connected
- **Search audio device:** Search for the audio device.
- **My name:** Show off the name of Bluetooth.
- **Advanced:** set up Audio path, Sharing permission and view the address of Bluetooth.
  - **Audio path:** You can select leave in phone or forward to Bluetooth headset.
  - **Storage:** You can select Storage phone or memory card.
  - **My address:** View Bluetooth address.

#### 6.15. Fun

##### Games

- **Puzzle:** Game of Puzzle.
- **Games settings**

With the game setting menu, you can set the Background music, Sound effect, Vibration and Volume.

#### 6.16. Calculator

You can conduct the basic arithmetic operations with this function.

- Input the first number.
- Press one of directional keys to select the arithmetic operation sign.
- Input the second number.

Tap "=" to view the calculation results.



## 6.17. Mi Tecel

SP application link.

## 6.18. Applications

➤ **Torch:** In torch. Tap to control torch on and off.

➤ **Alarm:**

You can set up that the alarm clock will ring at a specific time with this function.

Setup of Alarm Clock

Select an alarm clock and enter into alarm clock setup window.

Set up the alarm clock with the following options:

- Set the alarm clock status as opened or closed.
- Set the alarm clock time.
- Set the repeat, once, Everyday, Days.
- Set the Alert type.

After setting please save the change.

➤ **World clock:** You can view the current local time of various countries.

➤ **Currency converter:** Selection by the currency conversion.

➤ **File manager:** The File Manager lists the all the files stored in your phone or memory card.

## 6.19. Multimedia

### 6.19.1. Image Viewer

You can view the photos snapped with the camera through this function. Your options include:

- **View:** View the selected image.
- **Image information:** Show some information of image.
- **Browse style:** You can select list style or matrix style.
- **Send:** Send the selected image to MMS or Bluetooth.
- **Use as:** Send the selected image file to the wallpaper, to screen saver.
- **Rename:** Change the name of the image.
- **Delete:** Delete the selected image.
- **Sort by:** Sort the images by name, type, time and size and none.
- **Delete all files:** Delete all selected images.
- **Storage:** Select the photos' storage.


### 6.19.2. Camcorder

In video recorder, your options include:

- **Switch to camera:** To switch to the camera.
- **Camcorder settings:** Set up the video recorder.
- **Video settings:** Set up the video parameters.
- **White balance:** Adjust the color balance of the photo.
- **Effect settings:** There are four options at your choice: Normal, Sepia, Sepia blue and Color invert.
- **Storage:** Set the storage for the recording files.
- **Restore default:** Recover all settings into the initial values.

Note : Video can press the volume plus or minus keys to adjust the focus.

### 6.19.3. Video player

You can play the video with this function. Select a video and tap  begin to play.

Your options include:

- **Play:** Play the selected Video file with the video player.
- **Send:** Send the selected video file to MMS or Bluetooth.
- **Rename:** Change the name of the current video file.
- **Delete:** Delete the currently-selected video file.
- **Delete all files:** Delete all the currently-selected video files.
- **Sort by:** Sort the video files by menu: Name, Type, Time and Size etc.
- **Storage:** Set the storage of the files.

### 6.19.4. Music Player

You can enjoy the music with this function.

Your options include:

- **Play:** Play the currently-selected song.
- **Details:** View the detailed information of the currently-selected song.
- **Refresh list:** Refresh the list of current list
- **Settings:** Set up the music player.
  - **Pre. Playlist:** The media player can play the songs according to playlist. You can add or move the play files via playlist.
  - **List auto gen.:** set up to on/off the function.
  - **Repeat:** Set up to open/close the function. If you open the function, you can select repeat Once or repeat All.
  - **Shuffle:** Set up to open/close the function.
  - **Audio effect:** Selected the audio effect.
  - **Spectrum display:** Set spectrum display type.

#### 6.19.5. Sound Recorder

You can take a recorder in this function.

After record, access Options:

- **New record:** Select this option to record the sound.
- **Play:** Play the selected sound.
- **Append:** Above the current audio file append recording.
- **Rename:** Rename the selected sound.
- **Delete:** Delete the selected sound.
- **List:** View the currently-selected sound files.
- **Settings:** Entering this option you can set storage, file format and audio quality.
- **Use as:** Set as SIM1/SIM2 user profiles.
- **Send:** Send sound file to MMS or Bluetooth.

#### 6.19.6. FM radio

You can select radio option to hear the FM broadcast with this function.

Your options include:

- **Channel list:** play, edit or delete the saved channels.
- **Manual input:** manually input the channel to search.
- **Auto search:** automatically search the channel.
- **Settings:** set up to receive the FM broadcast at the backstage or receive the FM broadcast with the speaker as well as set up the record format and voice quality.
- **Record:** record the currently-hearing FM.
- **File list:** list all recorded files.

## 7. Appendix

### 7.1. FAQ

#### The phone cannot be turned on

When the battery is very low, the phone may not be turned on properly. Please charge the battery.

**Cannot make certain calls**

Check if Call Barring is set. If it is set, you may not be able to make calls or only certain calls are allowed.

**My call is picked up by another phone**

Check if call divert is set. If it is set, your incoming calls may be diverted to other numbers or devices.

**7.2. Error Message****Please insert SIM card**

Make sure you have inserted SIM card. If you have installed it but it cannot be detected, please try clean the golden contacts of the SIM card by using a dry cloth. If it still is not working, please contact your network carrier.

**No service**

If you are in an area not covered by your network, or if a physical obstacle is present, such as in an enclosed area, the message “No service” will be displayed on your Standby screen and you will not be able to make or receive calls. You can try move closer to a window for better reception.

**For emergency only**

When you are outside your network but inside other network, you can only make emergency call.

**No Valid SIM card**

Your SIM card is locked or it has an error. Please insert the right SIM card or contact your service provider.

**Enter PUK code**

After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it. Contact your service provider. After seven consecutive incorrect PUK code entries, the SIM card cannot be used any more. Please contact your service provider to buy a new SIM card.

**7.3. Care and maintenance**

Thank you for choosing our phone. Should you encounter any problem with the phone, please contact our dealer or qualified service provider.

Your phone is a finely designed and crafted product. Please use it with care. The following instructions will help you comply with the terms of the warranty and enjoy this product for many years:

- Keep the phone and all its parts and accessories out of the reach of children.
- Keep the phone dry, all kinds of liquid will erode the electronic circuit.
- Do not use or store the phone in a dusty place to avoid damaging the removable parts.
- Keep the phone away from hot places, high temperature can shorten the life of electronic device, warp or melt certain plastic and damage batteries.
- Do not attempt to open or disassemble the phone, non-expert handling may damage it.
- Do not drop, crush or shake the phone to avoid damaging the internal circuit board.
- Do not use harsh chemicals, cleaning solvents or strong detergent to clean the phone.
- Do not paint the phone or the paint may obstruct the removable parts and affect operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone. Do not hold the external antenna when the phone is in use. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

The above instructions apply to your phone, battery, charger and other accessories. If any of them does not work properly, please send it to a qualified service provider.

### **FCC Caution**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested

frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.