

Welcome!

PLEASE READ THIS INFORMATION BEFORE USING THE PHONE. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE/S DUE TO MISINTERPRETATION OF THIS INFORMATION AND MISUSE OF PRODUCT.

We aim to improve its products and services and reserves all rights to revise/change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

Some features introduced in this manual are network or subscription-dependent features. Please contact your service provider for more information.

 
**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Phone features:

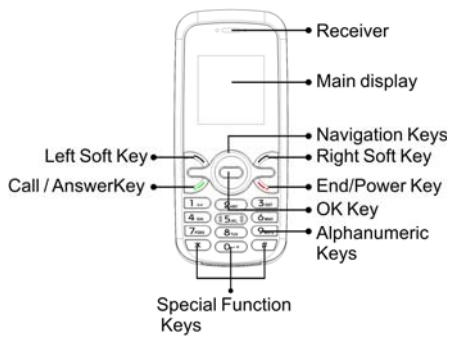

 Note: All illustrations, simulated screens and related images used in this manual are for reference only. Please refer to your handset.

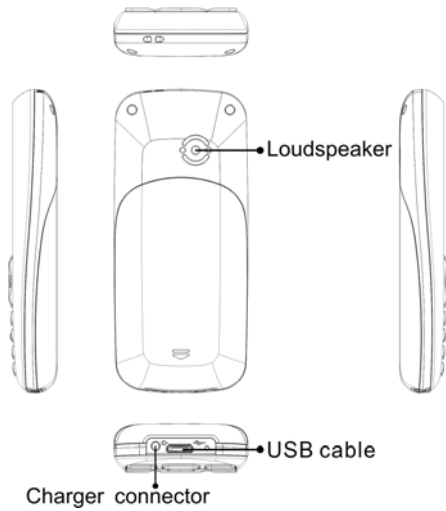

Note: All illustrations, simulated screens and related images used in this manual are for reference only. Please refer to your handset.

## Contents

1. Safety Information .....	4
Battery .....	4
Keep away from liquids.....	4
Use while driving .....	4
Aircraft .....	4
Blasting areas .....	4
Potentially explosive atmospheres	4
Medical devices .....	4
Accessories and battery .....	5
Emergency calls .....	5
When phone is lost .....	5
Keep away from children .....	5
2. ....	5
Any kind of fluid .....	5
Extreme heat or cold .....	5
Microwave .....	5
Dust and dirt .....	5

Cleaning solutions .....	5
Ground.....	5
3. Getting started .....	6
3.1 Inserting the SIM card	6
3.2 Battery Use and Installation	6
3.3 Turn on/off .....	7
3.4 Making a call .....	7
3.5 Answering or Rejecting a call	7
3.6 Operation during a call	7
3.7 Insert international access code	7
3.8 Emergency calls .....	7
4.1 Display.....	7
4.2 View missed calls .....	8
4.3 Keypad lock.....	8
4.4 Call divert .....	8
4.5 Call barring .....	8
4.6 Call waiting .....	8
4.7 Password.....	8
5. Functions.....	9
6. Phonebook .....	10
6.1 Browse .....	10
6.2 Create.....	10
6.3 SIM phonebook .....	10
6.4 ME phonebook .....	10
6.5 Storage Status .....	10
6.6 Speed dial.....	10
6.7 Copy .....	11
6.8 Delete all entries.....	11
6.9 Group .....	11
7. FM Radio .....	11
8. Call Records .....	11
8.1 Call Lists.....	11
8.2 Call Duration.....	11
9. Settings.....	12
9.1 Phone Settings .....	12
9.2 Networking Settings	12
9.3 Call Settings .....	12
9.4 Shortcut Settings .....	12
10 Short Message .....	12
10.1 Read message .....	12
10.2 Write Message.....	13
10.3 Outbox.....	13
10.4 Draftbox.....	13
10.5 Voice mail .....	13
10.6 Message setup .....	13
10.7 Broadcast message	13
10.8 Delete All .....	13
11. Time manager .....	14
11.1 Set Alarm .....	14
11.2 Clock settings .....	14
11.3 Timer.....	14
12. Game.....	14
12.1 Box Man .....	14
13. User Profiles .....	14
13.1 General.....	14
13.2 Meeting.....	14
13.3 Outdoor .....	15

13.4 Indoor .....	15
14 Extra .....	15
14.1 Calculator .....	15
14.2 Calendar.....	15
14.3 SIM Tool Kit .....	15
15. Input Method.....	16
15.1 English Input Method	16
15.2 Spanish Multitap Input Method	16
15.3 Numeric Input Method	16
Malfunctions & Measures ....	17
Can't turn the phone on .....	17
SIM Card Void .....	17
Weak signal or no signal.....	17
Bad reception/voice quality..	17
Can't make a call .....	17
Can't receive calls .....	17
Screen is dark.....	17
Specific Absorption Rate Data	18
Battery Tips.....	18
Product Maintenance.....	18

## 1. Safety Information



Read this information before using your mobile device otherwise it may result in personal injury or your device may not comply with your local laws.

### **Battery**

If a conductive material touches the exposed terminal, short circuit may occur resulting in property damage, body injury or burn. To avoid risk of leaking electricity, take care when handling a charged battery particularly when placing it inside your pocket, purse or other container with metal objects.

### **Keep away from liquids**

Do not allow your mobile device to come into contact with liquids and moisture. Do not immerse the unit in liquid.

### **Use while driving**

Abide the laws and regulations on the use of mobile devices in your locality. Give full attention to driving when on the road. Use handsfree kit or headset if a call is required.

### **Aircraft**

Mobile devices may cause harmful interference when in flight. Turn off your mobile device before boarding an airplane.

### **Blasting areas**

Abide the related limits and regulations and do not use your mobile device in blasting areas. Turn off your mobile device in areas with "Turn off electronic devices" warning sign/s.

### **Potentially explosive atmospheres**

Turn off your mobile device in gas stations and areas near fuel and chemical containers.

### **Medical devices**

Turn off your mobile device when instructed by posted signs near medical equipment/s. Mobile device may interfere with pacemakers, hearing aids and other medical transplant equipments. Do not put your mobile device near pacemakers nor carry in the breast pocket.

### **Accessories and battery**

Use only accessories, batteries and chargers provided and approved by manufacturer. Use of accessories not approved by manufacturer may cause personal injury or non-warranty of device.

### **Emergency calls**

Turn on your phone and keep it in service areas, dial emergency phone numbers and then press send key to make a call.

### **When phone is lost**

To avoid damage or other mishaps, inform your local telecommunications company/agency to block your SIM card when phone is lost.

In order to block your SIM card, they will require the IMEI number of your phone which is printed on the back label of your phone when battery is removed. Remember this number for future references.

For safety considerations, set a PIN Code for your SIM card to prevent other persons from using your SIM card without consent.

### **Keep away from children**

Keep the phone, battery and charger away from children to avoid any personal injury.

## **2. Use and Care**

Provide extra care for your mobile device, keep it away from:



### **Any kind of fluid**

Keep the device away from water, rain, humidity, sweat or other moisture.



### **Extreme heat or cold**

Avoid the temperature below  $-10^{\circ}\text{C}/14^{\circ}\text{F}$  or above  $55^{\circ}\text{C}/131^{\circ}\text{F}$ .



### **Microwave**

Do not dry your phone in a microwave oven.



### **Dust and dirt**

Do not expose your phone to dust, dirt, sand, food or other inappropriate materials.



### **Cleaning solutions**

Use a dry soft cloth to clean your phone. Do not use alcohol or other cleaning solutions.



### **Ground**

Do not drop your phone on hard surfaces.

 
### 3. Getting started

#### 3.1 Inserting the SIM card

Keep your SIM cards away from children.

Consult your SIM card franchiser about its services and usage. SIM franchiser can be the service provider, network provider or other franchisers.

Turn off your mobile device and make sure it is disconnected with charger before removing the back cover and battery.

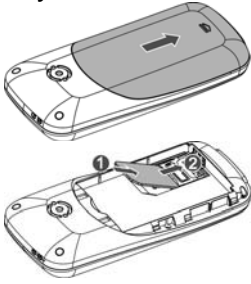

Removing the battery cover:

Press and slide the battery cover to let it glide to the bottom of the phone, then remove the battery cover.

Inserting the SIM card into the card slot:

Please insert the SIM card in the right direction with the gold strips facing downwards.

#### 3.2 Battery Use and Installation

Battery tips

Battery life depends on the network, signal strength, temperature and accessories used.

Always use original batteries and chargers. The warranty does not cover damages caused by non-original batteries, chargers and other accessories.

New batteries or batteries stored for a long time may take more time to charge.

When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool and dry place.

Never expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $55^{\circ}\text{C}$  ( $131^{\circ}\text{F}$ ).

 
Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.


Never dispose of batteries in a fire because they may explode.

Battery installation

1, Slide the battery cover down and then remove the cover.

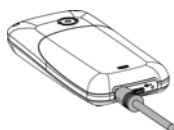

 2, Place the metal terminals of the battery with the battery contacts of the phone.

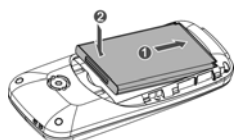

## Battery charging:

New batteries are not fully charged. Open the protective cover on your phone's accessory connector port, then insert the battery charger plug into accessory connector port on the side of your phone as shown, and plug the other end into an electrical outlet. Your phone might require several hours to charge fully. When your phone is drained, it might take a few seconds to show charging display and it shows charge complete when finished. When your phone is powered on, the battery icon flickers when it starts charging and become still with full bars in battery icon when finished.

### 3.3 Turn on/off

Caution: When powering on, the phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If your phone show "Input PUK code" that means your SIM card is locked, please contact your service provider.

To turn on your phone, press and hold the power on/off key for two seconds. If prompted, enter your six-to-eight-digit SIM card PIN code and/or four-digit unlock code.

If you don't insert a SIM card, your phone shows "No SIM Card". None of the functions related to SIM card can be used and you can make emergency calls only.

To turn off your phone, press and hold the power on/off key for two seconds.

### 3.4 Making a call

1. On standby mode, input the telephone number directly.
2. Press the communication key or press the call key on the screen to make a call.
3. After calling, select Option-Disconnect or press the power on/off key or End key to end.

### 3.5 Answering or Rejecting a call

When there is an incoming call, the phone rings and showing the number or the corresponding name. Press the Call key to answer a call. If you don't want to answer, you can press the power on/off key or right soft key.

### 3.6 Operation during a call

Press Option to perform the following operations during a call:

Mute: Set mute on or off. When setting mute on, your voice can not be heard through the line.

HandsFree: Set handsfree mode

Disconnect: End the call

Main Menu: While on the line, user can access the Main Menu to perform other operations.

### 3.7 Insert international access code

When dialing an international call, press numeric key '\*' until the international call prefix '+' shows, then enter the number in the following order:

+ Country code complete number send key

### 3.8 Emergency calls

You can make emergency calls as long as your current location has network coverage. Check the signal strength bar positioned on the top left corner of the screen.


Note: Emergency numbers vary by country. The emergency number(s) in your phone may not work in all locations. On occasions, emergency call may not work due to network, environmental or interference issues.




## 4. Basic

### 4.1 Display

The idle/standby screen includes Clue icon area, Letter area, Application area.

The Clue icon display includes signal, battery, unread message pop-up alert and alert/profile type icons.

	Signal Strength The vertical bars indicate network connection strength.
	New messages

	This icon appears when you receive a new message. The inbox is full. This icon flickers when the inbox is full. You need to delete old messages to receive new messages.
	Turn alarm on This icon appears when alarm is on.
	Battery Capacity This icon shows the status of battery capacity.

In Letter area, you can see the following contents:

Operator Name	According to the SIM card, displays the network operator's name.
Time and Date	Shows the time and date set.

## Functional Key Areas

This area shows you the corresponding operation of the Left and Right functional keys.

### 4.2 View missed calls

When your phone has a missed call, the screen will show the "X Missed call" on the center of the screen. You can press Left soft key to enter the call logs to view the first missed call. You can also enter Call Records and then press the Missed Call menu to view all the records.

### 4.3 Keypad lock

You can program the keypad to be locked automatically when not in use for a period of time. To lock manually, press Left soft key followed by '\*' key. To unlock, go to the idle/standby screen and press the Left soft key followed by '\*' key, it will indicate that mobile phone is unlocked.

### 4.4 Call divert

When you inform the service provider to open call divert, you can forward all incoming calls to another number even if your phone is off or has no reception (depending on your choice of divert mode).

Menu> Settings> Call Settings> Call Forwarding, select one divert mode and enter or select a number and then press OK to set it up.

Note: This feature must be supported by your SIM card. For details, please contact your service provider.

### 4.5 Call barring

This feature must be supported by your service provider. When activating the call barring function, you can answer or make a call according to your choice of call barring mode.

You can enter from the Menu> Settings> Call Settings> Call Barring to complete the operation.

Note: This feature must be supported by your SIM card. For details, please contact your service provider.

### 4.6 Call waiting

This is a network dependent feature. When this function is activated, your phone notifies you when there is an incoming call during a call.

You can enter from the Menu> Settings> Call Settings> Call Waiting.

Note: This feature must be supported by your SIM card. For details, please contact your service provider.

### 4.7 Password

The default password of your phone is set to '0000'. You can change it whenever you like. You can also change your SIM card password or barred dial password, however you need to contact your service provider to change them.

Note: For more details, please contact your service provider.



## 5. Functions

The phone offers you an array of functions. Under sleep mode, you can press the OK key or Left soft key to skim the main menu.

### Phonebook

- 1-1 Browse
- 1-2 Create
- 1-3 SIM phonebook
- 1-4 ME phonebook
- 1-5 Storage status
- 1-6 Speed dial
- 1-7 Copy
- 1-8 Delete all entries
- 1-9 Group

### FM Radio

|

### Call Records

- 3-1 Incoming Call
- 3-2 Outgoing Call
- 3-3 Missed Call
- 3-4 Call Duration

### Settings

- 4-1 Phone Settings
- 4-2 Network Settings
- 4-3 Call Settings
- 4-4 Shortcut Settings

### Short Message

- 5-1 Read message
- 5-2 Write message
- 5-3 Outbox
- 5-4 Draftbox
- 5-5 Voice mail
- 5-6 Message setup
- 5-7 Broadcast message
- 5-8 Delete all

### Time manager

- 6-1 Set alarm
- 6-2 Clock settings
- 6-3 Timer

### Game

- 7-1 BoxMan

### User Profiles

- 8-1 General
- 8-2 Meeting
- 8-3 Outdoor
- 8-4 Indoor

### Extra

- 9-1 Calculator
- 9-2 Calendar
- 9-3 Sim Tool Kit

## 6. Phonebook

Select Phonebook in the menu to open phone contacts.

The phonebook consists of SIM card storage.

SIM card Storage: The capacity depends on your SIM card type. It consists of a name and one number in each item. For details, please contact your service provider.

### 6.1 Browse

You can browse the phone book contacts which store in the SIM card and phone memory.

### 6.2 Create

Add new names in your phonebook with this function and save to the SIM card storage.

For SIM card storage: names and numbers can be added.

### 6.3 SIM phonebook

Input the first character/s you want to search. Use up/down navigation keys to lookup the name in the phonebook.

You can directly call one number by pressing **Send** key in phonebook screen. You can also press Option to make the following operations:

Dial to: Make a call to the number.

Send Message to: Send SMS to the number.

Detail/Edit: View and Edit the information of the contact.

Delete: Delete the contact record.

Create: To create a new contact.

Copy to ME Phonebook

Storage status: To view the storage status of the SIM card storage.

### 6.4 ME phonebook

Input the first character/s you want to search. Use up/down navigation keys to lookup the name in the phonebook.

You can directly call one number by pressing **Send** key in phonebook screen. You can also press Option to make the following operations:

Dial to: Make a call to the number.

Send Message to: Send SMS to the number.

Detail/Edit: View and Edit the information of the contact.

Delete: Delete the contact record.

Create: To create a new contact.

Copy to ME Phonebook

Storage status: To view the storage status of the SIM card storage.

### 6.5 Storage Status

Checks the capacity of the phonebook in SIM card and phone memory.

### 6.6 Speed dial

Allows you to assign up to eight phone numbers from Phonebook that you use most frequently to the number keys (2~9), and then dial them easily whenever you want, simply pressing the associated number key then pressing dial key (Or by pressing and holding the associated number key).

Press Left soft key to access Abbr. dial, displaying the Abbr. dial list: the associated digit keys "2~9"=the names stored in phonebook. The keys not to be set are displayed "2~9=". Press Left soft key to access the following options:

1).Set/Change: allows you to assign a different number to the key. If no abbr. dial number has been set in this list, it displays this option only.

2).Detail: allows you to view the number assigned to the key.

3).Delete: allows you to clear the setting so that no number is assigned to the key.

4).Dial to: dial the number.

Among them, 1 Key is set for voice mailbox number. You also can set the voicemail number on [short message]-[voice mailbox number].

## 6.7 Copy

Can copy phonebook contacts from SIM card to phone memory or from phone memory to SIM card.

1) From SIM card to phone – Copy contacts from SIM card to phone memory

From phone to SIM card – Copy contacts from phone memory to SIM card

## 6.8 Delete all entries

This feature provides you the option to delete all the names stored in SIM card and phone memory

## 6.9 Group

This feature allow you to put the contacts to different groups – Family, Friends, Office, and Others.

1) Group Member – Add contacts to the group

2) Alert tone – Select group ringtone

## 7. FM Radio

To listen to radio, plug the earphone into the earphone jack located at the bottom of the phone. The earphone cord functions as the antenna of the radio, so let it hang freely.Press navigation keys to scroll to <FM Radio> and press left soft key to turn the radio on. Your phone displays the frequency of the found radio station. Press left and right navigation keys to select your station. Press up and down navigation keys to adjust volume. Press right soft key to exit FM radio.

## 8. Call Records

Enter the main menu “Call Records”. you can view Incoming, Outgoing and Missed Calls. User can also view call duration.

### 8.1 Call Lists

Your phone records lists of Incoming and Outgoing calls, even for calls that didn't connect. Calls are listed in ascending order.

Tip: The phone records only the latest call of the same number.

To view detail information or perform other operations:

Find the lists of Incoming Calls, Outgoing Calls, Missed Calls.

Press UP/DOWN key to view the detail information i.e. date, time, etc.

Press Options key to perform the following operations:

Dial to:Dial the number of this record.

Send Message to:Send SMS to the number of this record.

Delete>Delete this record.

Save Number:Save the number to phonebook.

Delete All>Delete all records in the list.

Show Number:View information of this record.

### 8.2 Call Duration

Examine all call time records of the phone through this menu.

Outgoing Duration: Show the cumulative call time of Dialed calls.

Incoming Duration: Show the cumulative call time of Answered calls.

Last Call Duration: Show the last call time.

`Reset Clear the last call time, total dialed time and total received time.

## 9. Settings

User can set favorite wallpaper, ringtones and other functions.

### 9.1 Phone Settings

Set the following items:

Display Settings	Set LCD contrast; Set back light on/off/15/30 seconds mode; Set the preferred language; Set date time display enable or disable.
Security setting	Set Power on PIN1 on/off/change PIN1 mode Change PIN2 Set phone code on/off/change phone code mode
Own number	Set the own number
Keypad Locking Settings	Set keypad locking to disable/30/60 seconds mode
Factory Default	Enter phone code to set the phone to the mode as factory default. Default phone cpde is 0000

### 9.2 Networking Settings

Network select mode	Sets searching network by Automatic selection or by Manual selection.
---------------------	---

### 9.3 Call Settings

Call Waiting	Sets call waiting function.
Call forwarding	Sets call forwarding function.
Call Barring	Sets call barring function.
Auto redial	Set Auto redial enable or disable.
Any key answer	Set any key answer enable or disable.

### 9.4 Shortcut Settings

Set the shortcut of 4-way navigation keys. Press Up key or Down key to select option, and press Left soft key for confirmation.


## 10 Short Message

You can enter the SMS menu through the Short Message menu.

Use this menu to customize various call tones for incoming call. Select Profiles and press left soft key to access. Then press 4-way navigation up key or 4-way navigation Down key to select options.

### 10.1 Read message

You can read the Message of the Inbox.

The Inbox stores received messages. The phone alerts when user gets a new message with the screen showing the new message icon. On idle/standby screen, user will see the  on the center of the screen until the new message is opened.

While reading a message, user can perform the following operations:

Delete:Delete this message

Text reply:Reply a message to the sender

Forward:Send this message to another contact

Edit>Edit this message

Dial back:Make a call to the sender.

Extract number:Extract out the numbers from the message.

Note:  keeps flickering in idle/standby mode when Inbox is full. Please delete some messages to receive

new messages.

## 10.2 Write Message

Select the options below after editing a text message:

Send: Send the message to single or multiple contacts

Save: Save the message

Send and Save: Send the message to single or multiple contacts and save it

## 10.3 Outbox

Enter Outbox to view the sent messages and perform the following operations:

Delete: Delete this message

Forward: Send this message to another contact

Edit: Edit this message

Dial back: Make a call to the sender

Extract number: Extract out the numbers from the message

## 10.4 Draftbox

Delete: Delete this message

Forward: Send this message to another contact

Edit: Edit this message

.

## 10.5 Voice mail

The voice mail is similar to a telephone recording service. When there is a missed call, it can be transferred to the voice mailbox. When there is a new voice message, the phone automatically receives it.

Note: This function must be supported by the network. For more information, please contact your network provider.

## 10.6 Message setup

Setup the Service center number, protocol type, validity period, status report, reply path, storage media, and storage status.

-Service Center

-Protocol Type

-Validity Period

-Status Report

-Reply Path

-Storage status

## 10.7 Broadcast message

Cell Broadcast refers to messages sent from the network operator to GSM phone users, such as weather broadcast, traffic situations, stock updates, etc... Each Cell Broadcast has a fixed number that the phone automatically uses. The new Cell Broadcast message replaces the old one if they are from the same channel.

Note: This function must be supported by the network. For more information, please contact your network provider

## 10.8 Delete All

Enter Delete All Menu to delete the messages by folder and perform the following operations:

Setup the message from the menu as follows:

Service Center Number: Shows current service provider SMS

center

Delete all message:Can delete all the message of the memory.

Delete inbox messages:Can delete all the message of the inbox folder.

Delete outbox messages:Can delete all the message of the outbox folder.

Delete draftbox messages:Can delete all the message of the draftbox folder.

## **11. Time manager**

### **11.1 Set Alarm**

The phone has an alarm clock with 3 separate alarms that can be set to alert you at the time(s) you specify. To set an alarm, select one alarm and press Left soft key to edit on/off, then to set the alarm time, then to set alarm to One shot alarm or Weekly alarm. By using navigation Center key to choose the day of alarm. User can also select his/her preferred alarm tone at profiles setting.

### **11.2 Clock settings**

Date & Time setting – To setup the current date and time

Date display format – Set the date display format

Time display format – Set the time display format

### **11.3 Timer**

Use this menu to operate timer. Press “Start” to activate timer, the timer status is as below:

- 1).Left soft key: Start/Stop;
- 2).Right soft key: cancel.

## **12. Game**

### **12.1 Box Man**

Press New Game to start the BoxMan game.

## **13.User Profiles**

### **13.1 General**

You can set General mode to default mode, or customize it by selecting Personalise, or reset to initial settings.

Set as default: Set the General to default.

Personalise: this menu allows you to set ring tone, SMS alert tone, call alert, volume, etc.

Ringtone: lets you specify the ring tone for incoming calls. Select option by pressing navigation keys, and press left soft key to confirm.

SMS alert tone: lets you specify the message tone. Operate as ring tone.

Call alert: set the ring tone way for incoming call, including ring once and repeat ring.

Ringtone volume: lets you specify the ring tone volume.

Key volume: lets you specify the key tone volume.

Reset: reset the settings in Personlize to initial values.

### **13.2 Meeting**

Operated the meeting mode.

### **13.3 Outdoor**

In outdoor mode, the phone rings for incoming calls and incoming messages. Ringing volume and key volume are both 8-grade by default. Operate as Standard.

### **13.4 Indoor**

Operated the indoor mode

## **14 Extra**

### **14.1 Calculator**

Use this menu to operate calculator. The calculator status is as below:

- 1). 4-way navigation Up key: + .
- 2). 4-way navigation Down key: —
- 3). 4-way navigation Left key: x.
- 4). 4-way navigation Right key: ÷
- 5). 4-way navigation Center key: =.

### **14.2 Calendar**

Select Calendar to access the calendar function.

### **14.3 SIM Tool Kit**

STK features are provided by your service provider. If your SIM card supports STK feature, you will see the STK menu. Different STK has different STK main menu. Please contact your service provider if the STK does not work.

## 15. Input Method

The phone supports many input methods such as capital letter and small letter, smart English, numeric and so on.

### 15.1 English Input Method

English input method includes capital letter and small letter. You can input the letters using the keypad. The keys corresponding to the uppercase and lowercase input are separated by “;”. Those without a semicolon show that the characters will appear the same in both the uppercase and lowercase input method.

Numeric Key	Character
Numeric Key 0	0, space
Numeric Key 1	1 or symbols
Numeric Key 2	ABC2; abc2
Numeric Key 3	DEF3; def3
Numeric Key 4	GHI4; ghi4
Numeric Key 5	JKL5; jkl5
Numeric Key 6	MNO6; mno6
Numeric Key 7	PQRS7; pqrs7
Numeric Key 8	TUV8; tuv8
Numeric Key 9	WXYZ9; wxyz9
*Key	Select symbol
#Key	Switch input method
4-way navigation key up	Move up cursor
4-way navigation key down	Move down cursor
4-way navigation key left	Move left cursor
4-way navigation key right	Move right cursor
Right soft key	Back or Clear

While using English input method, please follow this order:

Keep pressing the desired button (as specified in the chart) until the desired character shows (Multitap).

Press ‘\*’ key to find symbols.

Press ‘#’ key to switch input method.

Press Right soft key to clear the wrong character or go back.

### 15.2 Spanish Multitap Input Method

Spanish input method includes capital letter and small letter. You can input the letters using the keypad.

### 15.3 Numeric Input Method

Use the keypad to choose the numeric input method. Below are the corresponding keys while using numeric input method:

Numeric Key	Character
Numeric Key 0	0
Numeric Key 1	1
Numeric Key 2	2
Numeric Key 3	3
Numeric Key 4	4
Numeric Key 5	5
Numeric Key 6	6
Numeric Key 7	7
Numeric Key 8	8
Numeric Key 9	9
*Key	Select symbol



#Key	Switch input method
4-way navigation key up	Move up cursor
4-way navigation key down	Move down cursor
4-way navigation key left	Move left cursor
4-way navigation key right	Move right cursor
Right soft key	Back or Clear

While using Numeric input method, please follow this order:  
 Press numeric key 0-9 to input desired character.  
 Press \*key to find symbols.  
 Press # key to switch input method.  
 Press Right soft key to clear the wrong character or go back.

### **Malfunctions & Measures**

Here is a list of some malfunctions and measures that may occur. If the measures suggested can not solve the problem, please contact authorized after-sales service center.

#### **Can't turn the phone on**

Check battery installation, please install battery correctly.  
 Check battery life. If the battery level is low, change the battery or charge the battery.  
 Check if you entered the incorrect PIN code 3 times in a row. If yes, the phone is locked, then you should enter PUK code (contact your network provider for PUK code).

#### **SIM Card Void**

When the phone shows "SIM Card Void", you can try the following:  
 Turn off the phone and restart the unit.  
 If your SIM card is a prepaid card, make sure the card is active or if the balance is sufficient.  
 Please check your network provider, check the signal and make sure that you are registered to the network.

#### **Weak signal or no signal**

You may be in a location where the reception is bad, such as tunnel, cellar or other underground and enclosed places. Please relocate and try again.  
 You can try to direct the phone where there is a window or any access to an open area.

#### **Bad reception/voice quality**

Weak signal, you can try the solutions indicated above.  
 Low battery, change a new battery or charge the battery.  
 Adjust the volume key to increase microphone volume.

#### **Can't make a call**

Check if you entered the correct number and press Send key.  
 Check if you set call barring, if yes cancel it.

#### **Can't receive calls**

Check if your phone is turned on.  
 Check if screens shows no signal, if yes, try solutions indicated above.  
 Check if you set call barring, if yes, cancel it.

#### **Screen is dark**

Check if battery is low, change a battery or charge the battery.  
 Adjust the brightness in settings.  
 Your phone may be affected because of dampness, make sure to keep the phone dry.

Tips: If all suggestions and solutions can not solve the problem/s encountered, please contact authorized service center for after-sales service. Please do not disassemble or repair phone without professional guide.

### **Specific Absorption Rate Data**

Specific Absorption Rate (SAR) information

This wireless phone meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR, The SAR limit set by the FCC is 1.6 W/Kg.

Information from the World Health Organization

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of SAR Data mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "handsfree" device to keep the mobile phone away from the head and body. Revisions and Improvements that is made or will be made to this device may cause a little change of the SAR data. However, in any case, the device is designed in accordance with the guidelines.

### **Battery Tips**

The product is provided with a reusable, rechargeable battery.

A new battery should only undergo the discharge and full charge cycle two or three times in order to achieve optimum performance.

Battery can be recharged many times for repeated use, but it will eventually wear and tear. When the talk and standby time is significantly shorter than usual, then it is time to replace a new battery.

Use only battery that the handset manufacturer approved and use only the supplied charger for the battery.

Cut off the power supply when the charger is not in use.

Do not connect a battery to a charger for more than one week, over extending the charging time can affect battery life.

Storing the battery too long can also affect the battery life and performance. And the battery will automatically discharge if unused for a long period of time.

Do not use a damaged battery or charger.

Never expose batteries to temperatures below -10°C (14°F) or above 55°C (131°F).

Always take your phone with you when you leave your vehicle.

Do not let the batteries short-circuit. When metal objects (such as coins, etc...) is directly connected to the battery's anode and the cathode (with the metal side), accidents due to short-circuit can occur. Be particularly careful in storing spare batteries in your pocket or handbag so as to avoid any contact with metallic objects. Short-circuit will damage the battery.

Please dispose of used or damaged batteries accordingly as it can be hazardous if not disposed of properly.

Never dispose of batteries in a fire because they may explode.

### **Product Maintenance**

Your phone is a product with outstanding design and superior quality, please take good care in using it. You are strongly suggested to take the following advice which should help you extend the usage period of the product.

Keep your phone and its parts away from children.

Keep your phone dry. Keep it away from rain, damp places or any kind of fluid.

Don't touch your phone with wet hands when charging or there may be bodily injury or damage to the phone.

Keep your phone away from extreme heat which can shorten your phone's life, damage the battery, twist

or melt some plastic parts.

Keep your phone away from extreme cold because when the temperature lowers, water vapor accumulated from inside the phone may damage the electronic circuit.

Keep your phone away from dust and dirt.

Keep your phone away from cigarettes, fire or any sources of heat.

Don't disassemble your phone by yourself.

Don't drop, beat or shake your phone. Any misuse of the unit can damage the inner electronic circuit board, not to mention its warranty.

Don't paint your phone because it can jam up the earpiece, microphone or any other removable part and disable your phone.

Clean the camera or screen with a clean, soft and dry cloth. Don't use alcohol or other cleaning solutions.

If your phone, battery, charger or parts are not working, please take them to the authorized service center for assistance and/or repair.