

便携式笔记本

使用说明书  
User Manual



## Contents

<b>Contents</b>	01
<b>1. Performance Parameters</b>	03
<b>2. SmartBook Description</b>	04
2.1 Appearance Description	04
2.2 Desktop Description	05
<b>3. Battery Charge</b>	05
<b>4. Basic Operations</b>	06
4.1 Power Switch	06
4.2 Start Application	07
4.3 Keyboard Introduction	07
4.4 Touchpad	09
4.5 How to use SD Card	09
4.6 USB Device	10
4.7 Connect to the Internet via a wired network card	10
4.8 Connect to the Internet through a wireless network card	11
4.9 Connect to the Internet via 3G module	12
<b>5. Application</b>	13
5.1 Internet Explorer	13
5.2 Word Processing	13
5.3 Instant Messenger	16
5.4 Multimedia	17
5.5 Games	20
5.6 Other	20
<b>6. System Settings</b>	21
6.1 Time Setting	21

6.2 Display .....	21
6.3 Input Panel .....	22
6.4 Internet Options .....	22
6.5 Keyboard .....	22
6.6 Mouse .....	22
6.7 Network and Dial-up Connections .....	22
6.8 Owner .....	23
6.9 Password Settings .....	23
6.10 Power .....	23
6.11 Locale Settings .....	23
6.12 Remove Programs .....	24
6.13 Storage Manager .....	24
6.14 System .....	24
6.15 Volume and Sound .....	24
6.16 System Reset .....	24

## 1. Performance Parameters

**Processor:**VIA 8505 processor

**Display:**7 inch display

**Video Format:**M-JPEG hardware decoder

**Audio Format:**Supports MP3, WMA format music

**Memory:**DDR2 SDRAM: 128MB, and speed up to 512MB.Nand Flash: 1GB/2GB/4GB.

**Interface:**

3 USB 2.0 Port.

1 Wired Internet Port.

1 SD Card Slot.

1 Headphone Jack.

1 Microphone Jack.

**User Interface:** 80-keys keyboard Touchpad Speaker

**WI-FI:**Support 802.11b/g.Support WPA/AES.

**Operating System:**WinCE 6.0

**Application:**


Internet Explorer,Word Pad, Excel, Text Maker, Plan Maker, Presentations,Picture viewer,Calculator,Media Player,Player, Web Video, MSN, Skype,Recorder,WinRAR.

**Battery:**1300mA/H Lithium Battery


**Power:**9-12V DC Power

## 2. SmartBook Description

### 2.1 Appearance Description

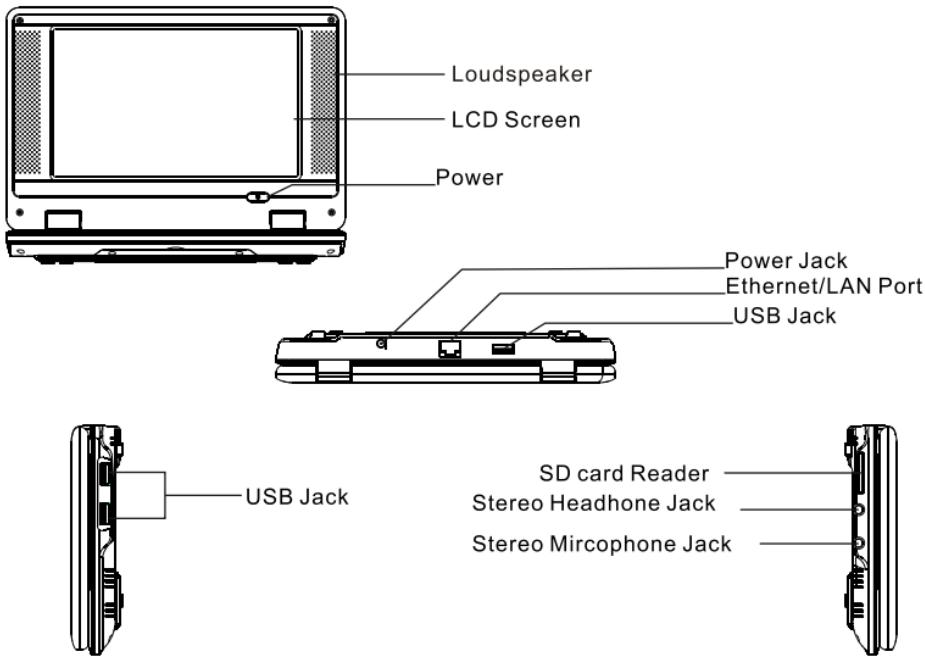

### 2.2 Desktop Description

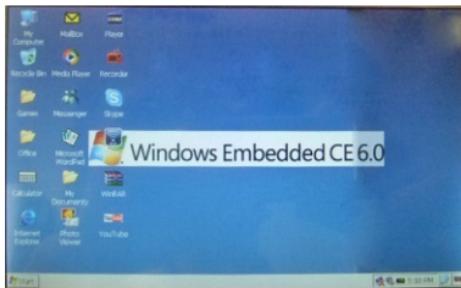

## 3. Battery Charge

SmartBook has a built-in battery, the system will recommend to charge when the battery power is low.

### Charging Method

1. Plug in the power adapter, the battery charge indicator light changes to show it is charging. When the battery is fully charged, the indicator light will automatically shut down.
2. During charging, the user can still use SmartBook.

### Notice:

Turned on, and charging time will be longer.


Check the level of battery



Double-click the desktop icon in the notification area of the battery will pop-up "Power Properties" window, you can view the current battery power. You can also via "Start" Menu - "Settings" - "Control Panel" icon to find the power control to open the "Power Properties" window.

Status	Description
Normal	Normal battery
Inadequate	Power consumption is low, the need for recharging
GrosslyInadequate	Very low power consumption, we must charge

When the battery power is low, the system will automatically pop up the following tips.

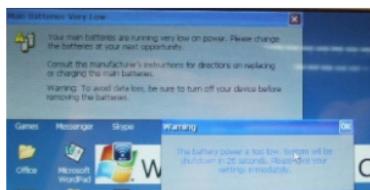

## 4. Basic Operations

### 4.1 Power Switch

1. Power on: When using the power adapter, the user can press the power button boot.
2. Power off:

- a) The user press the power button (2 seconds), it will pop up a dialog box, select "Yes" to shut down the system.
- b) Through the Start Menu to shut down the system.
- c) The user press the power button still(8 seconds), the system will automatically shut down.

### 4.2 Start Application

The application can through double-click the icon on the desktop application to run, but also can use the "Start" menu - "procedure" to select the program to run.

Notice:

When the application is running, click on the icon can be minimized application window, show the desktop.

We do not recommend running multiple applications, or open multiple IEwindows, otherwise the system will become very slow.

### 4.3 Keyboard Introduction

SmartBook use the American-style 80-keys standard keyboard.



Function keys are as follows:

		Page Up
		Home
		Page Down
		End
		F11
		F12
		Scroll Lock

The number keys are as follows:

Press switch to the digital input mode . Directly use the above-mentioned key to input corresponding values.Press it again to switch back to the letter input.



### 4.4 Touchpad

Touchpad is composed of the running track capable of sensing fingers and feeling the pressure plate and two buttons, two buttons is equivalent to the standard left and right mouse button.

Notice:

Please do not place objects on the touchpad surface, it can be scratched or crushed.

### 4.5 How to use SD Card

Insert SD Card:

Insert the SD card into the SD card slot,as the above-picture show.Press the SD card with your finger until you hear the a "carbazole."

View Card's documents: Double-click

"My Computer" on the desktop.In the window that opens, ouble-click icon to view the content of card.

