

flextone[®]
GAME CALLS

HD GAME CALL

 
**DOG
SOLDIER** ^{TV}  **FLX500**
HIGH DEFINITION E-GAME CALL

User's Manual

Model # FLX500


INCLUDED PARTS

- 1) Dog soldier FLX500 electronic game call unit with remote – (2 pieces)
- 2) Product Information Guide – (1)
- 3) Shoulder Strap - (1)

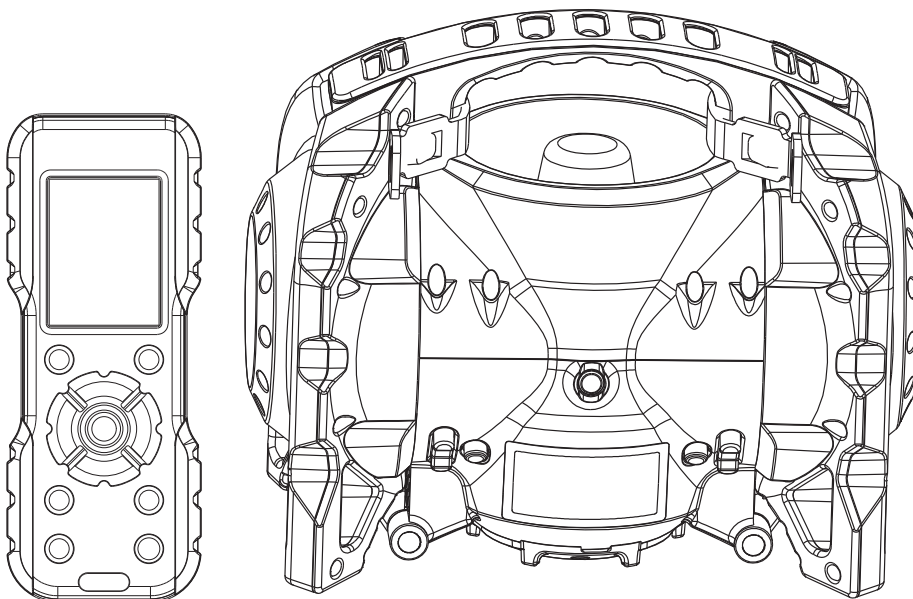


INSTALLING BATTERIES IN UNIT

 
1 Turn the call on it's side and rotate battery door to the left. You will hear and feel a click.

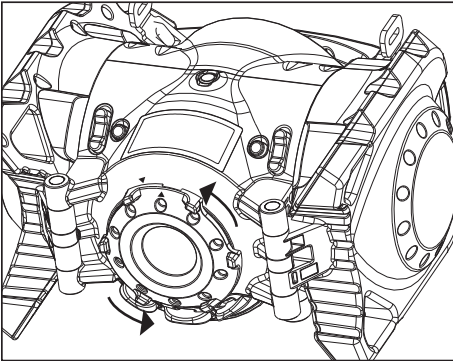

 2 Next, pull out the battery chamber, confirm that the positive (+) and negative (-) terminals are oriented correctly and insert ten (10) AA batteries.

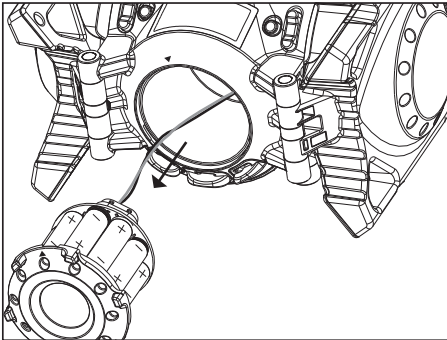


 3 To close put battery chamber back inside cavity while aligning the arrows and rotate to the right till you can't turn it any further.

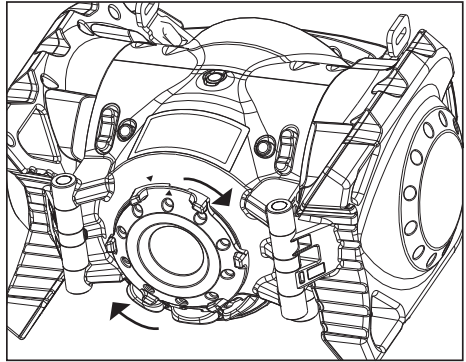


INSTALLING BATTERIES IN REMOTE

 
1 To install three (3) AA batteries for the remote, slide the cover down to open.

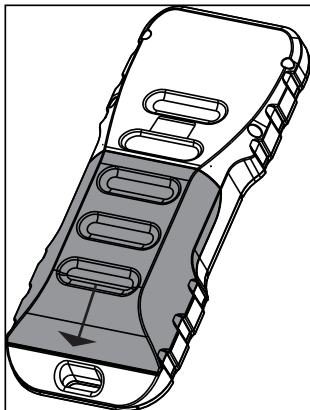

3 To close, slide the cover up.

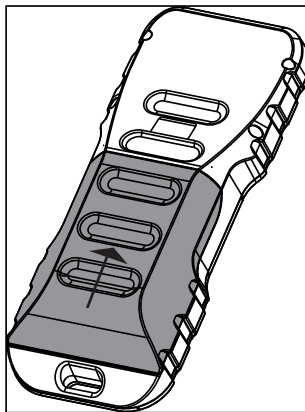 

 
2 Next, confirm that the positive (+) and negative (-) terminals are oriented correctly and insert the batteries.

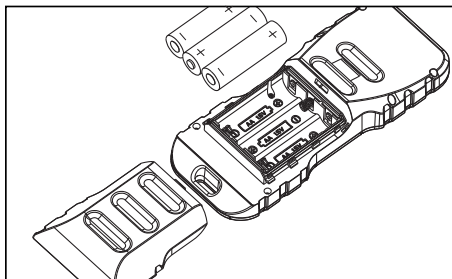

TURNING SPEAKER UNIT ON

Press and hold the power button until LCD is illuminated and then release. Unit is now on.

 Note: The LCD will enter sleep mode in approximately 1 minute of inactivity. The Speaker unit will auto turn off after 30 minutes of inactivity.

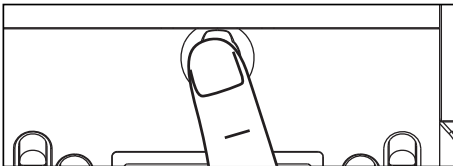


CHOOSING PRELOADED INDIVIDUAL CALLS ON SPEAKER UNIT


1 First, press the play/enter button while CALLS is on display.



 2 Next, press either the up or down button to choose Preloaded. Press the play/enter button when the desired option is highlighted.

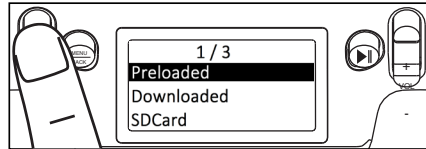

 3 Scroll through calls by pressing the up or down button. Press the play/enter button when the desired option is highlighted.

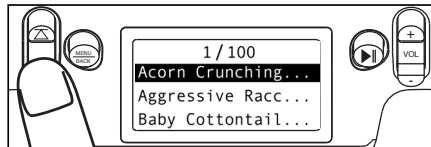


This will activate the audible call. To maximize the effectiveness of the Electronic Game Call, point the call in the directions you want the sound to go. **Note:** Call will loop repeatedly until call is deactivated.

CHOOSING DOWNLOADED INDIVIDUAL CALLS ON SPEAKER UNIT


1 First, press the play/enter button while **CALLS** is on display.



 2 Next, press either the up or down button to choose Downloaded. Press the play/enter button when the desired option is highlighted.

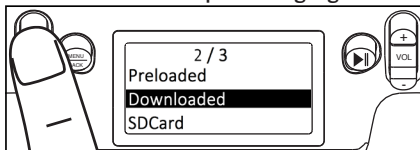

 
3 Scroll through calls by pressing the up or down button. Press the play/enter button when the desired option is highlighted.

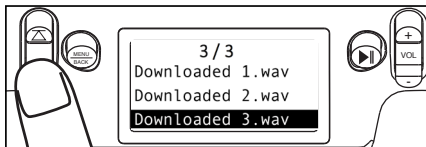


This will activate the audible call. To maximize the effectiveness of the Electronic Game Call, point the call in the directions you want the sound to go. **Note: Call will loop repeatedly until call is deactivated.**

CHOOSING SD CARD

 
1 First, insert SD card.

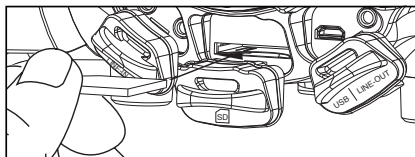

 2 Next, press the play/enter button while **SD CARD** is on display. **NOTE: This option will only show up if an SD card was inserted.**

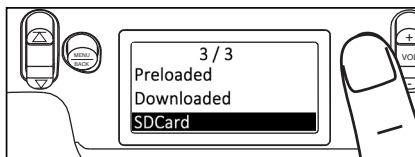

 
3 Scroll through calls by pressing the up or down button. Press the play/enter button when the desired option is highlighted.

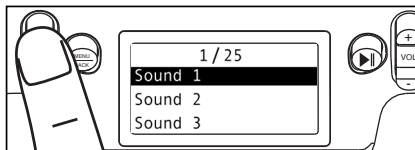

This will activate the audible call. To maximize the effectiveness of the Electronic Game Call, point the call in the directions you want the sound to go. **Note: Call will loop repeatedly until call is deactivated.**


VOLUME CONTROL

 To adjust volume, press the volume + or – buttons.

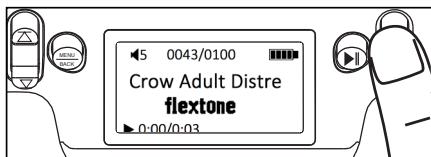


SETTINGS

 1 First, press the play/enter button while **SETTING** is on display.

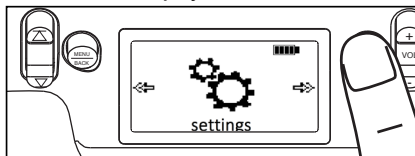

 2 Scroll through the options by pressing the up or down button. Press the play/enter button when the desired option is highlighted.

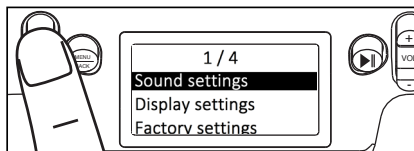

Sound Settings: You can switch to All, Side Speakers or Center Speakers

 
Display Settings: Backlight timer can be adjusted to 10 sec, 20 sec, 30 sec or Always On.

Factory Settings: Restore to factory settings.

About: Information about the unit.

DOWNLOAD CALLS FROM PC ONTO SPEAKER UNIT

- 1 First, connect a USB cable from the PC to the Speaker Unit.

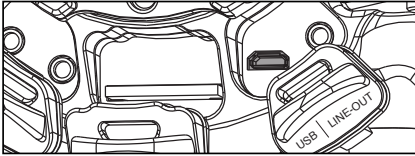

- 2 The computer will auto detect it as a mass storage drive.

 
- 3 Then, copy your calls into this drive.

- 4 Unplug and disconnect the USB cable once you copied the calls into the drive.

NOTE: MP3 and .WAV file types can be played.

LINE-IN


The Flextone Electronic-game calls also support Line-in from external audio player. You must first connect the audio cable from external audio player into the Line-in port. After that, go to the settings menu, you will be able to see Line-in setting which you can turn it on or off.

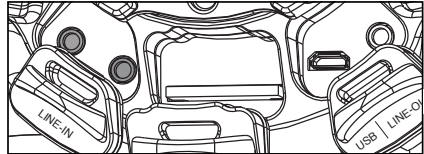

NOTE: Line-in function is only available on the Speaker Unit.

LINE-OUT

 The Flextone Electronic-game calls also support audio out to external speaker. You must first connect the audio cable from external speaker into the Line-Out port.

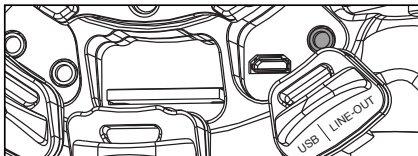


NOTE: Line-out function is only available on the Speaker Unit.

TURN SPEAKER UNIT OFF

Press and hold the power button until LCD is illuminated and then release. Unit is now off.

 
Note: The LCD will enter sleep mode in approximately 1 minute of inactivity. The unit will turn off in 30 minutes of inactivity.

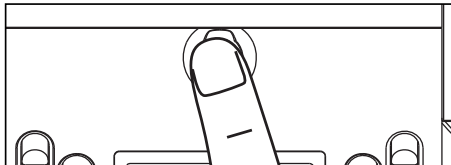

TURNING REMOTE ON


Press and hold the power button until LCD is illuminated and then release. Unit is now on.

 Note: The remote LCD will go into sleep mode in approximately 1 minute of inactivity. It will power off in 30 minutes of inactivity.

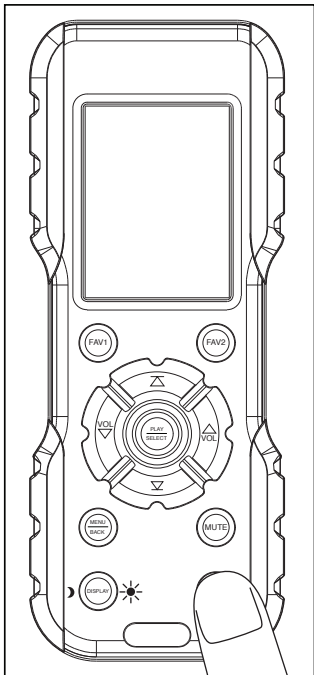


CHOOSING PRELOADED CALLS

 1 First, press the play/select button while Preloaded is highlighted.

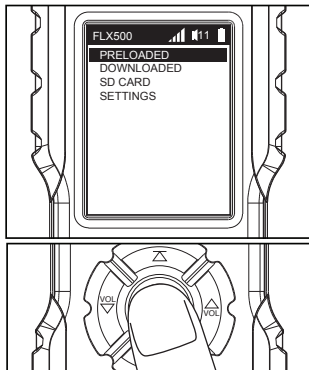


 2 Next, select desired call category by pressing the play/select button. Category name will show in the top left corner.

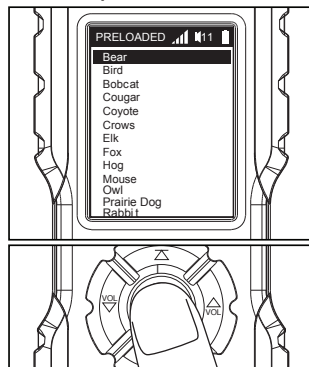


CHOOSING DOWNLOADED CALLS

 3 Scroll through the call list by using the up or down arrow buttons to the desired call, press the play/select button for the call to begin playing. This will activate the audible call. Note: Call will loop repeatedly until call is deactivated.

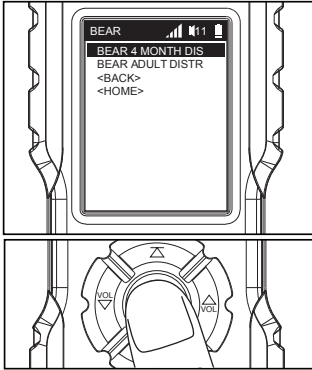


4 Press the play/select button to stop the call from continuing.

 1 From the main menu, press the down arrow to highlight DOWNLOADED. Then press the PLAY/SELECT button.

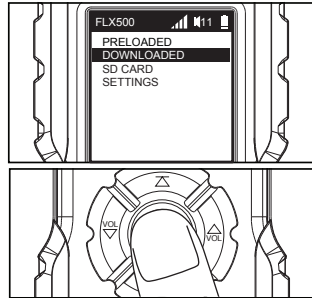


The Remote control will start to sync the calls with the speaker unit at this time. It may take a few minutes to complete this operation.

 2 Scroll through the call list by using the up or down arrow buttons to the desired call, press the play/select button for the call to begin playing. This will activate the audible call. Note: Call will loop repeatedly until call is deactivated.

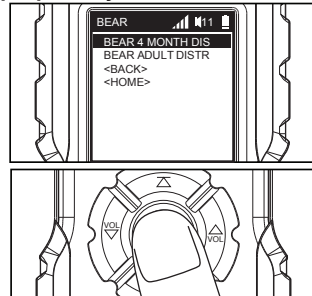


CHOOSING SD CARD CALLS

 1 From the main menu, press the down arrow to highlight SD CARD. Then press the PLAY/SELECT button.

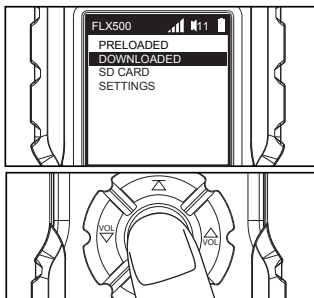


The Remote control will start to sync the calls with the speaker unit at this time. It may take a few minutes to complete this operation.

 2 Scroll through the call list by using the up or down arrow buttons to the desired call, press the play/select button for the call to begin playing. This will activate the audible call. **Note: Call will loop repeatedly until call is deactivated.**

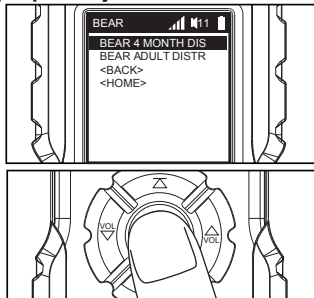

SETTING FAV BUTTONS

 1 While playing any sound from any location (preloaded, downloaded or sd card) press the FAV1 or FAV2 buttons for 3 seconds to set that sound for the selected FAV button.

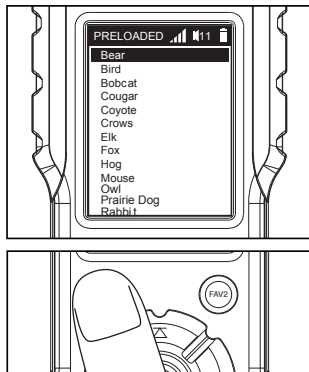


The selected call will blink when set.

2 Once selected, you can press either FAV button to play saved sound no matter what sound is playing at the time.


3 Press FAV button to activate sounds and press a second time to mute the sound (the mute button also mutes the sound).

SETTINGS: SPEAKER CONTROLS

 
1 First, use the down button until Settings is highlighted. Then, press the play/select button to enter settings options.

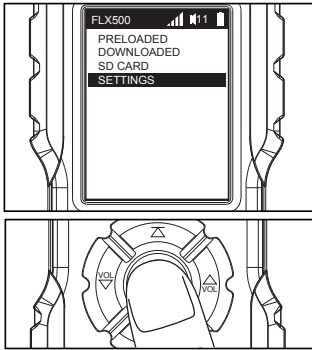

 3 Use the up or down buttons to select desired option, then press play/select button.

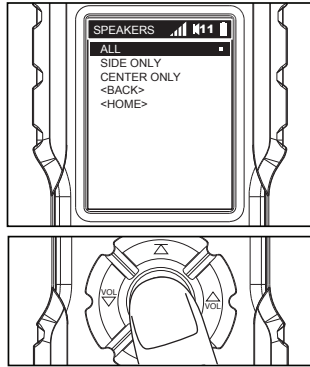

 
2 Next, use the down button until Speakers is highlighted. Then, press the play/select button to enter speaker options.

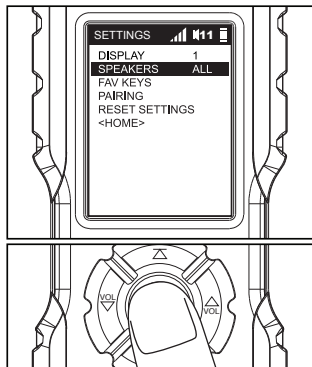


SETTINGS: DISPLAY OPTIONS

You can change the display settings to make the remote easier to read based on lighting conditions.

 
1 First, use the down button until Settings is highlighted. Then, press the play/select button to enter settings options.

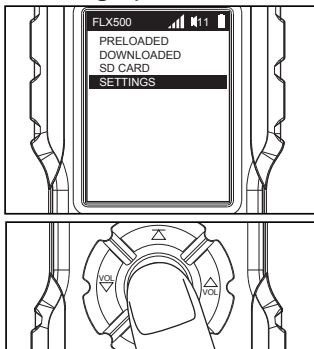

 2 Next, press the play/select button while display is highlighted.

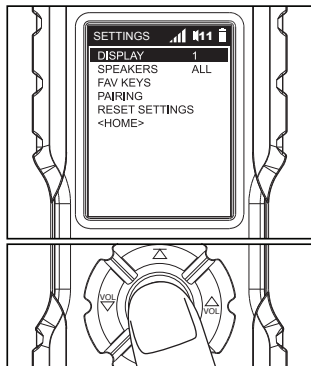


 3 Scroll to desired display option by using the up and down buttons. Press the play/select button to change display.

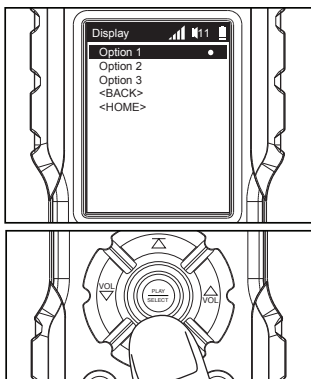


SETTINGS: FAV KEYS OPTIONS

 
1 First, use the down button until Settings is highlighted. Then, press the play/select button to enter settings options.

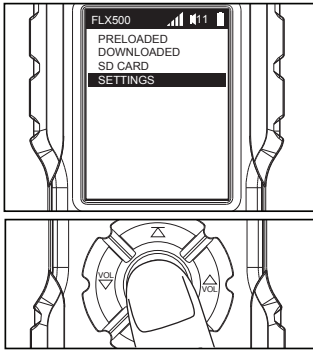

 2 Next, use the down button until Fav keys is highlighted. Then, press the play/select button to enter Fav keys options.

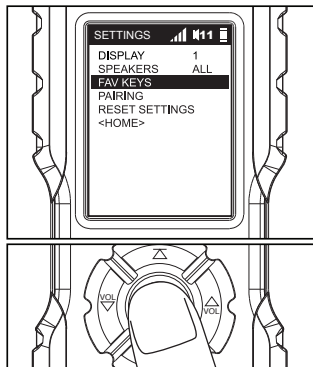

 
3 Use the up or down buttons to select desired option, then press play/select button.

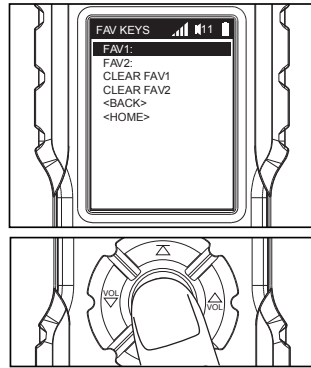


NOTE: FAV buttons cannot be set from this screen. See setting FAV buttons.

SETTINGS: PAIRING OPTIONS

 
1 First, use the down button until Settings is highlighted. Then, press the play/select button to enter settings options.

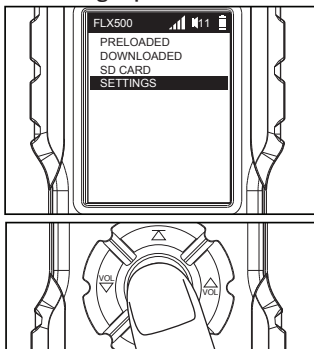

 2 Next, press the play/select button while Pairing is highlighted.

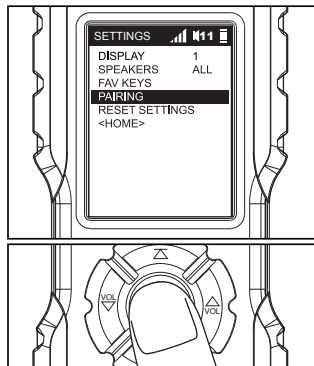


 3 It will tell you "Successful" if the pairing was completed. NOTE: If the screen says Please Wait, it maybe having trouble connecting.

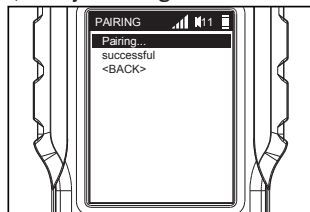


SETTINGS: RESET SETTINGS OPTION

 
1 First, use the down button until Settings is highlighted. Then, press the play/select button to enter settings options.

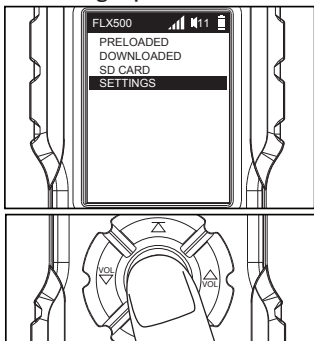

 2 Next, press the play/select button while Reset Settings is highlighted. Then, press the play/select button to enter reset options.

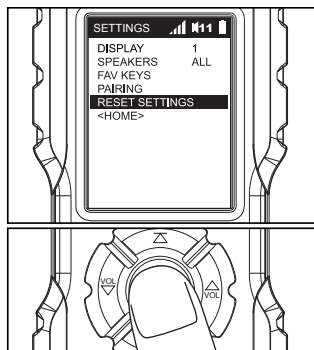


 3 Press play/select button while Factory Settings is highlighted.

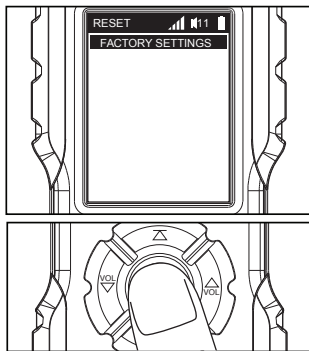


VOLUME CONTROL

 To adjust volume, press the volume up or down buttons.

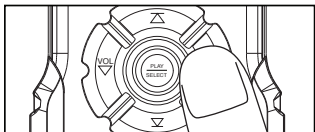

REMOTE BUTTONS

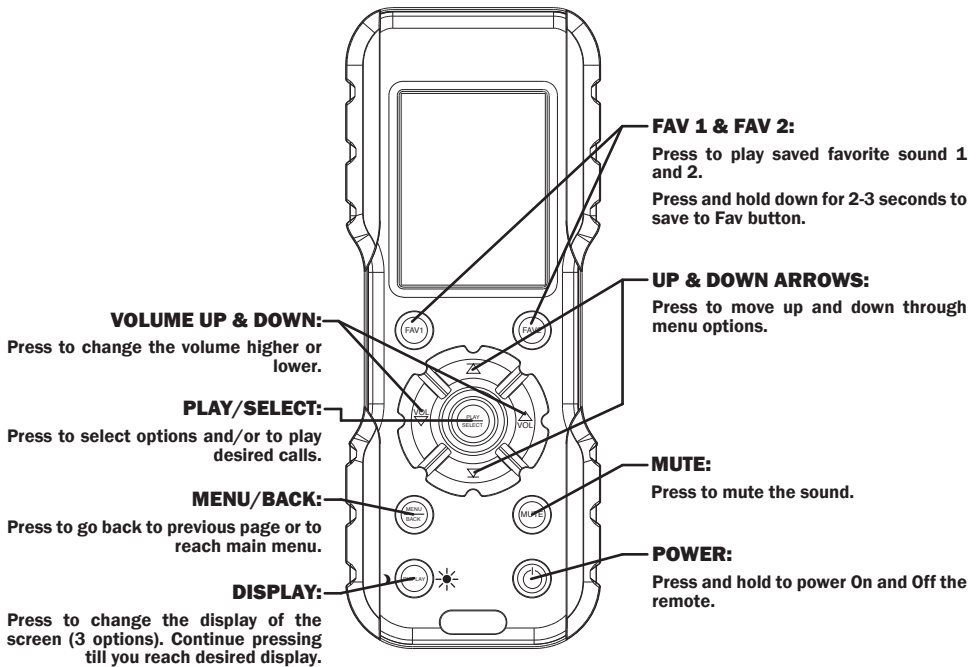 

WARRANTY

DISCLAIMERS

WGI Innovations, LTD. is not responsible for damage, expense or injury caused by the unauthorized use of, alterations to, improper connection of and abuse or neglect of the WGI Innovations™ products.

WARRANTY

For the warranty to be in effect, you **MUST** completely fill out and mail the warranty card along with your proof of purchase to WGI Innovations within (14) days after the date of purchase. As an alternative to mail, you may also visit our website and register your product at www.wildgameinnovations.com (you are still required to mail WGI Innovations your proof of purchase before the warranty is placed in effect.) Follow the onscreen directions to complete the process. WGI Innovations, LTD will replace all workmanship defects free of charge for ONE (1) YEAR after the date of purchase as long as your warranty is in effect.

This warranty **DOES NOT COVER** damage, expense or injury caused by unauthorized repairs, alterations, improper connection, shipping, abuse, theft, accident, neglect, animal damage or collateral loss.

When returning product(s) for service you **MUST** obtain a Return Merchandise Authorization (RMA) number from WGI Innovations, LTD. Please include name, UPS address (No P.O. Box), telephone number, RMA number and a complete description of the problem on all enclosed correspondence. When possible, pack product carefully in original carton. Customers are responsible for any shipping cost to WGI Innovations. WGI Innovations will pay the shipping cost of replacement product to the customer. We are not

responsible for damage incurred in returning items for repair.

For product service send to:

WGI Innovations
602 Fountain Parkway
Grand Prairie, TX 75050
(800) 847-8269

Thank you for your purchase!

CUSTOMER SERVICE

WGI Innovations, LTD. stands behind every product we manufacture for a one year product workmanship warranty and a strong commitment to customer service. If you are in need of customer service for missing parts or need assistance with the operation or assembly of your product, we encourage you to call one of our customer service representatives and let us assist you with your WGI Innovations product.

DISCLAIMER

WGI Innovations, LTD. reserves the right to make changes to product features, functionality and physical design at its sole discretion. As a result, such changes may not be reflected in this version of the manual.

FCC STATEMENT

Product Name: Electronic Game Call
Trade Name: Flextone
Model# FLX500

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two criteria: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

WGI INNOVATIONS, LTD

602 Fountain Parkway
Grand Prairie, TX 75050
800.847.8269



"Flextone" is a registered trademark of Wild Game Innovations, LLC.

"Sport Responsible" is TM trademarks of WGI Innovations, LTD.

"Dog Soldier TV" is a registered trademark of Steve Criner, all rights reserved.

