



Owner's Manual
Guide d'utilisation
Manual del propietario



Model/ Modelo/ Modèle: RO502801
PWRCORE-20™ Bluetooth Speaker

⚠ WARNING: To reduce the risk of injury, the user must read and understand the Owner's Manual before using this product. Save these instructions for future reference.

⚠ AVERTISSEMENT : Afin de réduire les risques de blessure, l'utilisateur doit lire et comprendre le guide d'utilisation avant d'utiliser cet article. Conservez le présent guide afin de pouvoir le consulter ultérieurement.

⚠ ADVERTENCIA : Para reducir el riesgo de lesiones, el usuario debe leer y comprender el Manual del operador antes de utilizar este producto. Guarde estas instrucciones para consultarlas en caso sea necesario.



For Customer Service
Pour le service à la clientèle
Servicio al cliente

1-877-SKIL-999 OR www.skiltools.com

TABLE OF CONTENTS

Important Safety Instructions.....	
FCC Caution.....	
Symbols.....	
Get to Know Your Bluetooth Speaker.....	
Specifications.....	
Operating Instructions.....	
Maintenance.....	
Troubleshooting.....	
Limited Warranty of SKIL Cordless Tool.....	

DRAFT

Important Safety Instructions

⚠ WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not use this apparatus near water. Dry location use only.

Only operate this apparatus in a well-ventilated area.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Clean only with dry cloth.

Do not block any ventilation openings. *Install in accordance with the manufacturer's instructions.*

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Only use attachments/accessories specified by the manufacturer.

Detach the battery pack from the apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. *Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Service or maintenance performed by unqualified personnel could result in a risk of injury.*

A battery operated apparatus with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery. *A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.*

Never disassemble the apparatus or try to do any rewiring on the apparatus's electrical system.

Maintain the apparatus. Check for misalignment, breakage of parts and any other condition that may affect the apparatus operation. If damaged, have the apparatus repaired before use. Use the apparatus in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the apparatus for operations different from those intended could result in a hazardous situation.

Keep the apparatus away from other metal objects, such as paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the terminals together may cause burns or a fire.

Do not use the apparatus if it has been dropped or received a sharp blow. A damaged apparatus will increase the risk of fire.

Dispose of a used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

Save these instructions. Refer to them frequently and use them to instruct others who may use this product. If you loan someone this product, loan them these instructions also.

FCC Caution

The manufacturer is not responsible for radio interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

-
- Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

⚠ DANGER People with electronic devices, such as pacemakers, should consult their physician(s) before using this product. Operation of electrical equipment in close proximity to a heart pacemaker could cause interference or failure of the pacemaker.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.





DRAFT

Symbols

Safety Symbols

The purpose of safety symbols is to attract your attention to possible dangers. The safety symbols and the explanations with them deserve your careful attention and understanding. The symbol warnings do not, by themselves, eliminate any danger. The instructions and warnings they give are no substitutes for proper accident prevention measures.

⚠ WARNING: Be sure to read and understand all safety instructions in this Owner's Manual, including all safety alert symbols such as "**DANGER**," "**WARNING**," and "**CAUTION**" before using this tool. Failure to following all instructions listed below may result in electric shock, fire, and/or serious personal injury.

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.	
	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, will result in minor or moderate injury.

Damage Prevention and Information Messages

These inform the user of important information and/or instructions that could lead to equipment or other property damage if they are not followed. Each message is preceded by the word "NOTICE", as in the example below:

NOTICE: Equipment and/or property damage may result if these instructions are not followed.



⚠ WARNING: The operation of any power tools can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full face shield when needed. We recommend a Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.








Symbols (continued)

IMPORTANT: Some of the following symbols may be used on your tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and more safely.

Symbol	Name	Designation/Explanation
V	Volts	Voltage (potential)
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
kg	Kilograms	Weight
min	Minutes	Time
s	Seconds	Time
Wh	Watt-hours	Battery capacity
Ah	Ampere-Hours	Battery capacity
	Direct current	Type or a characteristic of current
	Li-ion RBRC seal	Designates Li-ion battery recycling program
	Ni-Cad RBRC seal	Designates Ni-Cad battery recycling program
	Read manual symbol	Alerts user to read manual
	Wear eye protection symbol	Always wear safety goggles or safety glasses with side shields and a full face shield when operating this product.

Symbols (Certification Information)


IMPORTANT: Some of the following symbols for certification information may be used on your tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and more safely.

	<p>This symbol designates that this tool is listed by Underwriters Laboratories.</p>
	<p>This symbol designates that this tool is recognized by Underwriters Laboratories.</p>
	<p>This symbol designates that this tool is listed by Underwriters Laboratories, to United States and Canadian Standards.</p>
	<p>This symbol designates that this tool is listed by the Canadian Standards Association.</p>
	<p>This symbol designates that this tool is listed by the Canadian Standards Association, to United States and Canadian Standards.</p>
	<p>This symbol designates that this tool is listed by the Intertek Testing Services, to United States and Canadian Standards.</p>
	<p>This symbol designates that this tool complies to NOM Mexican Standards.</p>

Get to Know Your Bluetooth Speaker

PWRCORE-20™ Bluetooth Speaker

FIG.1

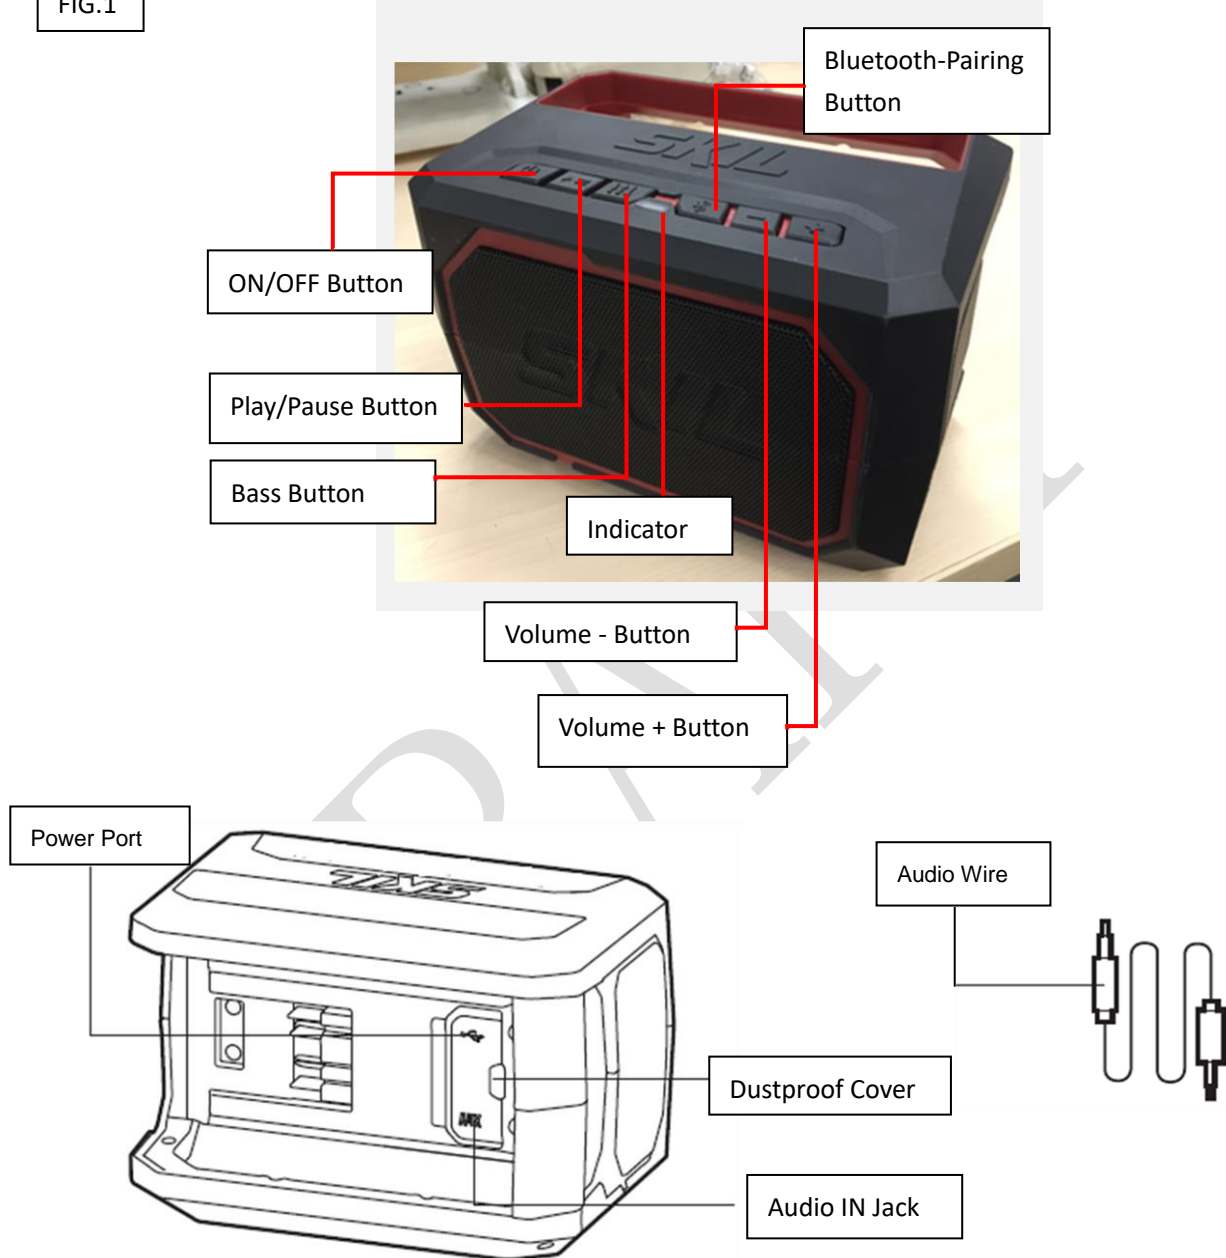

SPECIFICATIONS

Rated input	20V d.c.
USB output voltage	5V d.c.
USB output current	Max 2.1A

Operating Instructions

⚠ WARNING: To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc. can cause a short circuit.

⚠ WARNING: If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

⚠ WARNING: Do not attempt to modify this speaker or create accessories not recommended for use with this speaker. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious injury.


This cordless Bluetooth speaker must be used only with the battery packs and chargers listed below:

Battery Pack					Charger	
2Ah	2Ah	2.5Ah	4Ah	5Ah		
SKIL BY519701	SKIL BY519702	SKIL BY519703	SKIL BY519601	SKIL BY519603	SKIL SC535801	SKIL QC536001

NOTICE: Please refer to the battery and charger manual for detailed operating information.

To Attach Battery Pack (Fig. 2)

- Align the raised portion on the battery pack (not included) with the grooves on the back of the Bluetooth speaker, then slide the battery pack onto the Bluetooth speaker as shown.
- Make sure that the latch on the battery pack snaps into place and that the battery pack is secured to the tool before beginning operation.

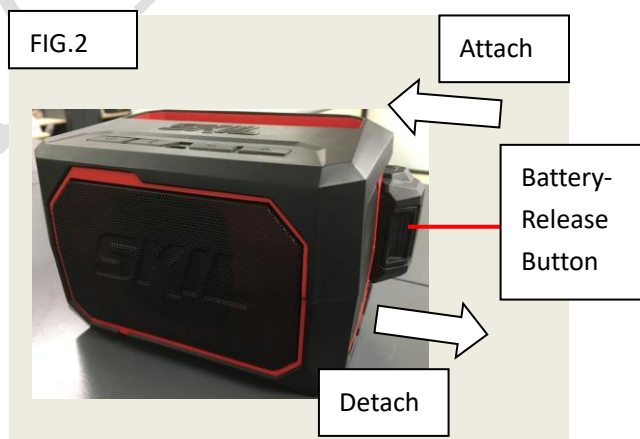

NOTICE: When placing the battery pack onto the tool, be sure that the raised rib on the battery pack aligns with the groove inside the tool and that the latches snap into place properly. Improper attachment of the battery pack can cause damage to internal components.

To Detach Battery Pack

Depress the battery-release button, located on the front of the battery pack. To release the battery pack, pull the battery pack out and remove it from the speaker (Fig.2).

Turn the Speaker ON/OFF (Fig. 3)

- a) To turn on the Bluetooth speaker, press and hold the ON/OFF button for approximately 1 second; the blue indicator will illuminate and begin to flash to indicate that the Bluetooth speaker is active.
- b) To turn off the Bluetooth speaker, press and hold the ON/OFF button for approximately 3 seconds; the blue indicator light will be off to indicate that the Bluetooth speaker is deactivated.
- c) When the Bluetooth speaker has not been in use for approximately 10 minutes, the Bluetooth speaker will automatically turn off with a sound and the blue indicator light will be off.



Volume

Use the Volume + button and Volume - button to increase or decrease the volume of the speaker, respectively.

Play/Pause Button

Use the Play/Pause button to play or pause a track when listening to Bluetooth source.


Bass Button

To add extra bass, press the Bass button. To turn off the extra bass, press the Bass button again.

USB Power Port (Fig. 4)

When a battery pack is installed and the speaker is turned on, the USB power port on the Bluetooth speaker supplies a charging site suitable for your cell phone or other small USB device (5 Volt DC, up to 2.1 Amp).

NOTE: Any device that uses more than 2.1A of DC electrical current will trip a self-resetting overload switch and disable the output. To reactivate the Bluetooth speaker, remove the device and turn on the Bluetooth

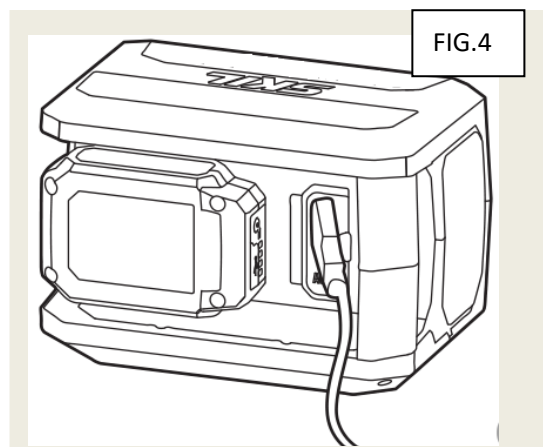

speaker.

Connecting to Bluetooth

- a) Turn on the Bluetooth speaker. The speaker will default to Bluetooth pairing mode and the indicator will flash blue light continuously until it has successfully paired or it has timed out.
 - b) If previously paired to the desired device, the speaker will automatically reconnect to the same device when the speaker is turned on.
 - c) If no Bluetooth device was previously paired, the speaker will continue to search for a signal for about 10 minutes.
 - d) To pair the speaker to a different device, press and hold the Bluetooth pair button for 3 seconds until the blue indicator light flashes. The speaker will then be in Bluetooth pairing mode and can be connected to a different device. Consult the instructions for your device.
-

Connecting directly to AUX Device

- a) Insert the plug of the audio wire into the audio IN jack and make sure that they are properly connected.
- b) Turn on the Bluetooth speaker. The speaker will be in AUX mode and the indicator will shine blue.
- c) Connect an MP3 player, CD player, or other audio device directly to the speaker, using the audio wire and plug.

NOTE: In the absence of a connection to an audio wire, the speaker will enter into Bluetooth pairing mode. When connected to an audio wire, the speaker will change from Bluetooth pairing mode to AUX mode.

Maintenance

⚠ WARNING: To avoid serious personal injury, always remove the battery pack from the tool when cleaning or performing any maintenance.

Service

⚠ WARNING: Preventive maintenance performed by unauthorized personnel may result in misplacing of internal wires and components which could cause serious hazard. We recommend that all tool service be performed by a SKIL Factory Service Center or Authorized SKIL Service Station.

General Maintenance

⚠ WARNING: When servicing, use only identical replacement parts. Use of any other parts could create a hazard or cause product damage.

Cleaning

⚠ WARNING: Always use only a soft, dry cloth to clean the Bluetooth speaker. Never use detergent or alcohol. Clean dust and debris from vents. Keep the speaker handle clean, dry and free of oil or grease. Never use flammable or combustible solvents around tools.

⚠ WARNING: Certain cleaning agents and solvents damage plastic parts. Some of these are: gasoline, carbon tetrachloride, chlorinated cleaning solvents, ammonia and household detergents that contain ammonia.

Storage

Store the tool indoors in a place that is inaccessible to children. Keep away from corrosive agents.

Troubleshooting

Problem	Cause	Remedy
The Bluetooth speaker does not work.	Low battery capacity.	Charge the battery.
Bluetooth speaker is not charging USB device.	The device draws more than the rated output of the port.	Remove the device and turn the Bluetooth speaker on again. Use only 5V DC devices that draw no more than 2.1 Amp
Bluetooth speaker is not properly paired with audio device.	<ol style="list-style-type: none">1. Out of Bluetooth pairing range.2. The speaker is connected to the audio wire.3. Incorrect pairing operation	<ol style="list-style-type: none">1. Move your device or speaker within 30 feet connecting range.2. Unplug the wire and connect the speaker by Bluetooth.3. Refer to Connecting to Bluetooth and correctly pair the audio device to the speaker.

LIMITED WARRANTY FOR SKIL CORDLESS TOOL

5 YEARS LIMITED WARRANTY

Chervon North America, Inc. ("Seller") warrants to the original purchaser only, that all SKIL consumer POWER TOOLS will be free from defects in material or workmanship for a period of five years from date of purchase, if original purchaser registers the product within 30 days from purchase. BATTERIES AND CHARGERS are warranted for 2 years. Product registration can be completed online at www.Registermyskil.com. Original purchasers should also retain their receipt as proof of purchase. THE FIVE-YEAR WARRANTY PERIOD FOR POWER TOOLS IS CONDITIONED ON REGISTRATION OF THE PRODUCT WITHIN 30 DAYS OF PURCHASE. If original purchasers do not register their product timely, the foregoing limited warranty will apply for a duration of three years for power tools. All batteries and chargers will remain under the two-year limited warranty.

Notwithstanding the foregoing, if a SKIL consumer portable power tool is used for industrial, professional or commercial purposes, the foregoing warranty will apply for a duration of ninety days, regardless of registration.

SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the repair or replacement of parts, without charge, which are defective in material or workmanship and which have not been misused, carelessly handled, or repaired by persons other than Seller or Authorized Service Station. To make a claim under this Limited Warranty, you must return the complete product, transportation prepaid, to any SKIL Factory Service Center or Authorized Service Station. For Authorized SKIL Power Tool Service Stations, please visit www.Registermyskil.com or call 1-877-SKIL-999 (1-877-754-5999).

THIS LIMITED WARRANTY DOES NOT APPLY TO ACCESSORY ITEMS SUCH AS CIRCULAR SAW BLADES, DRILL BITS, ROUTER BITS, JIGSAW BLADES, SANDING BELTS, GRINDING WHEELS AND OTHER RELATED ITEMS.

ANY IMPLIED WARRANTIES APPLICABLE TO A PRODUCT SHALL BE LIMITED IN DURATION EQUAL TO THE DURATION OF THE EXPRESS WARRANTIES APPLICABLE TO SUCH PRODUCT, AS SET FORTH IN THE FIRST PARAGRAPH ABOVE. SOME STATES IN THE U.S., SOME CANADIAN PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT. SOME STATES IN THE U.S. AND SOME CANADIAN PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE IN THE U.S., PROVINCE TO PROVINCE IN CANADA AND FROM COUNTRY TO COUNTRY.

THIS LIMITED WARRANTY APPLIES ONLY TO PRODUCTS SOLD WITHIN THE UNITED STATES OF AMERICA, CANADA AND THE COMMONWEALTH OF PUERTO RICO. FOR WARRANTY COVERAGE WITHIN OTHER COUNTRIES, CONTACT YOUR LOCAL SKIL DEALER OR IMPORTER.

© Chervon North America, 1203 E. Warrenville Rd, Naperville, IL 60563.

XXXXX(Part#) 09/17

XXXXXX(Bar code)

DRAFT