

Shenzhen UnionTrust Quality and Technology Co., Ltd.

Address: Unit D/E of 9/F and 16/F, Block A, Building 6, Baoneng science and technology park, Longhua district, Shenzhen, China

 
Tel: +86-755-28230888

Fax: +86-755-28230886

E-mail: info@uttlab.com

<http://www.uttlab.com>

UTTR-RF-EN300328-V1.2

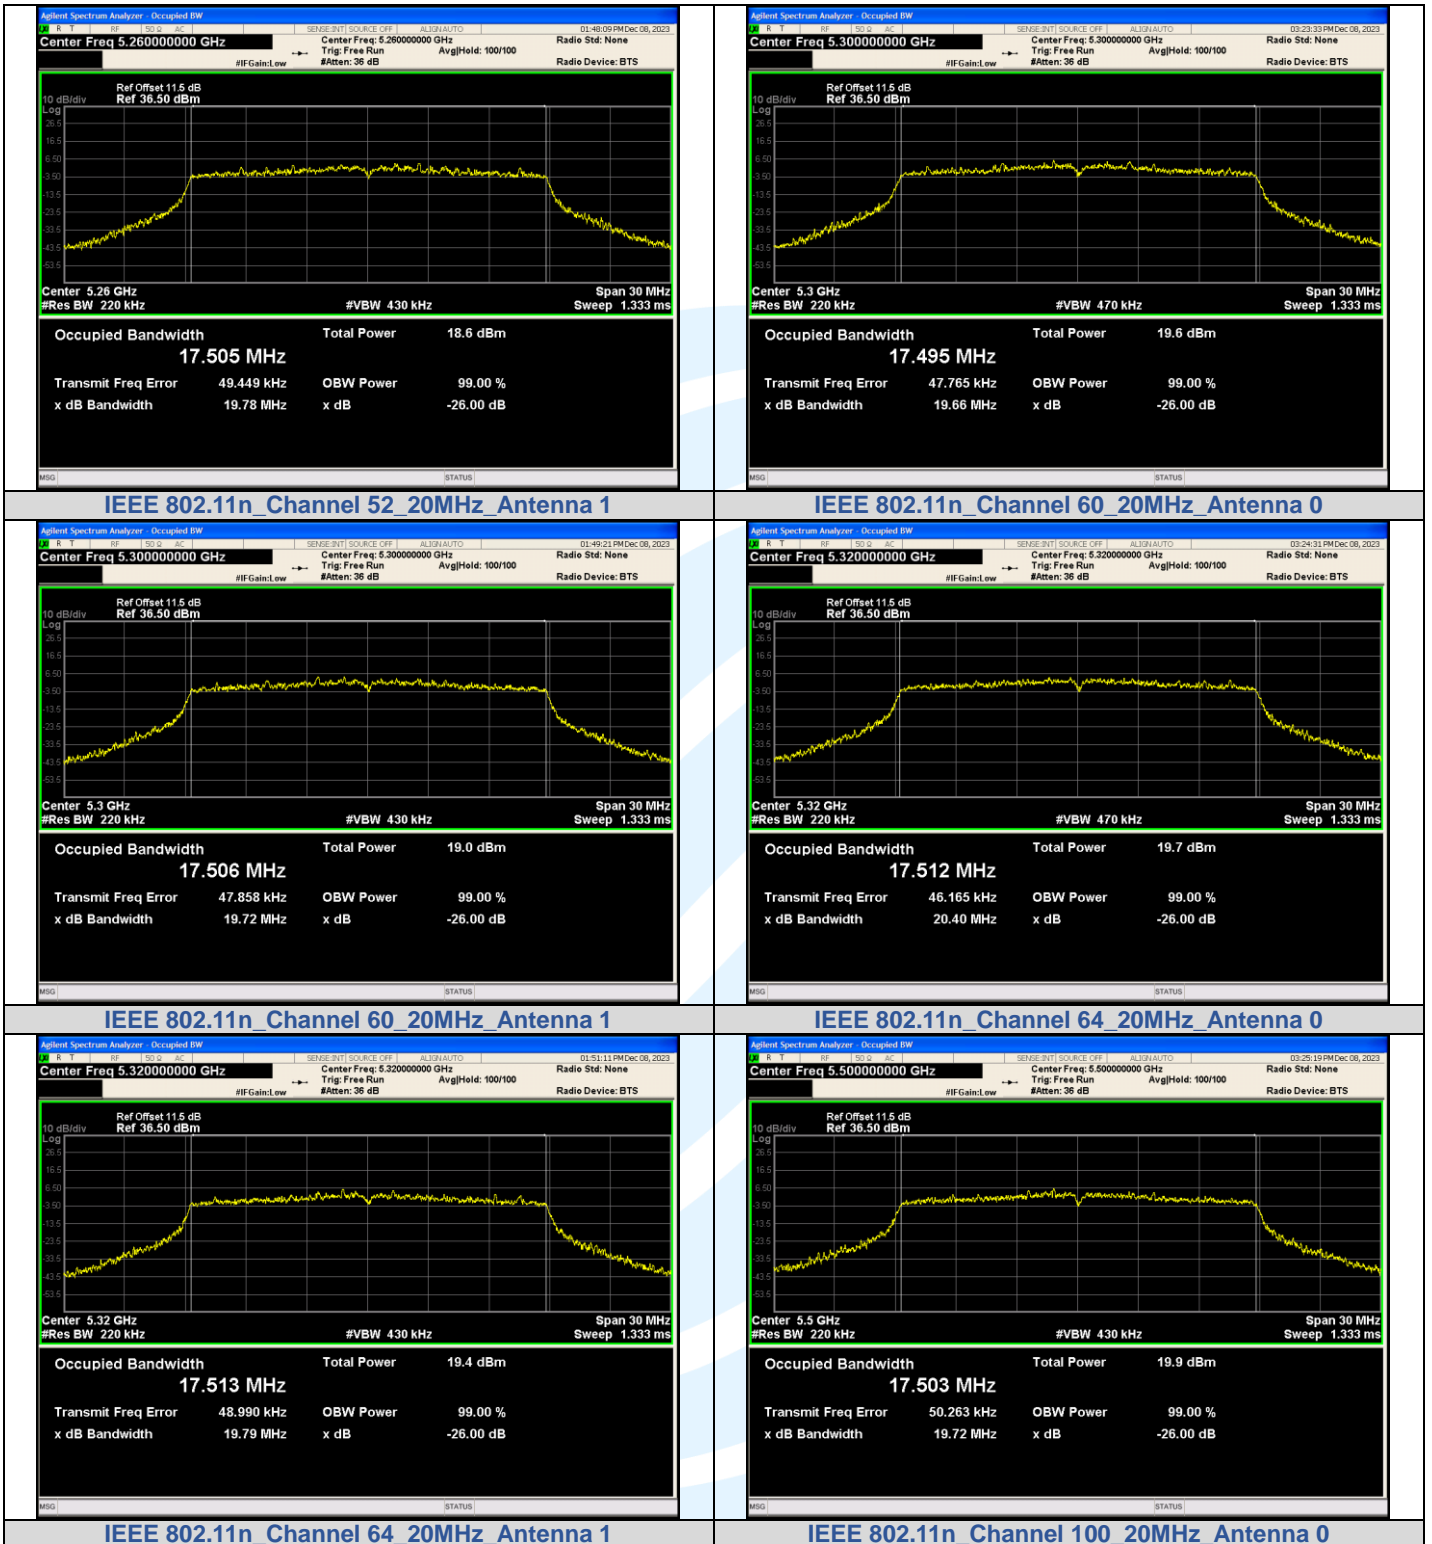

Shenzhen UnionTrust Quality and Technology Co., Ltd.

Address: Unit D/E of 9/F and 16/F, Block A, Building 6, Baoneng science and technology park, Longhua district, Shenzhen, China

 
Tel: +86-755-28230888

Fax: +86-755-28230886


E-mail: info@uttlab.com

<http://www.uttlab.com>


UTTR-RF-EN300328-V1.2

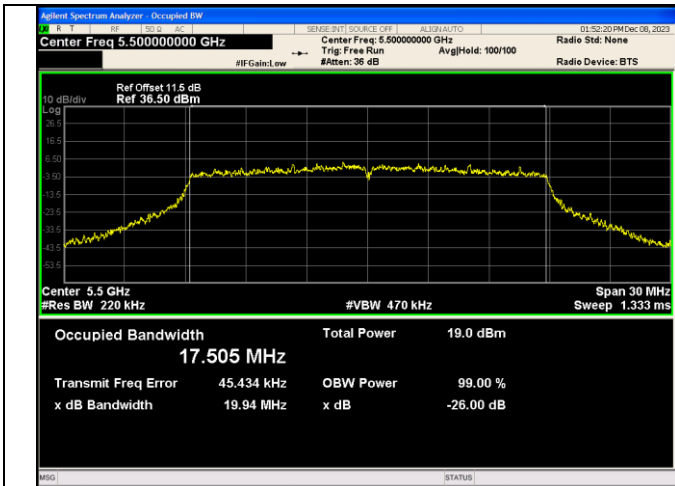


IEEE 802.11n_Channel 100_20MHz_Antenna 1

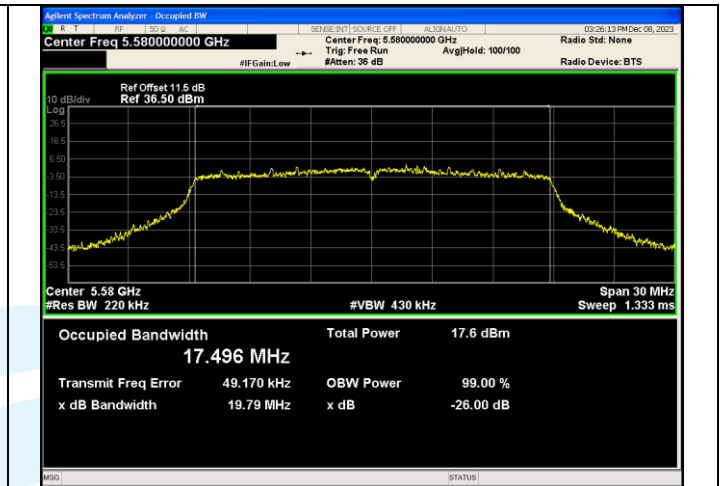 


IEEE 802.11n_Channel 116_20MHz_Antenna 0

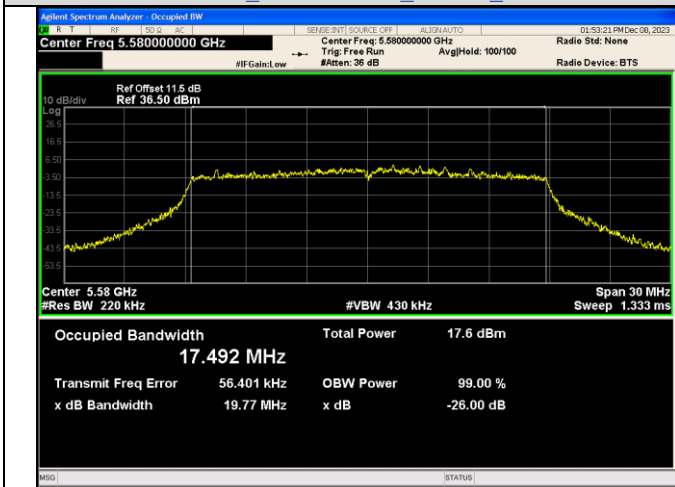 


IEEE 802.11n_Channel 116_20MHz_Antenna 1

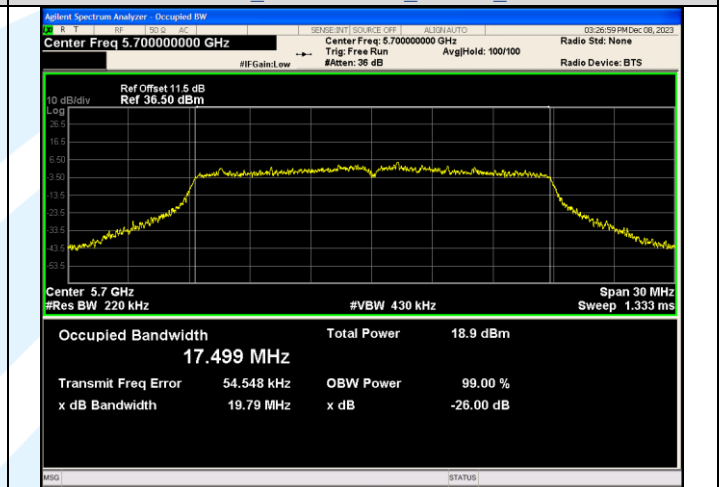 


IEEE 802.11n_Channel 140_20MHz_Antenna 0

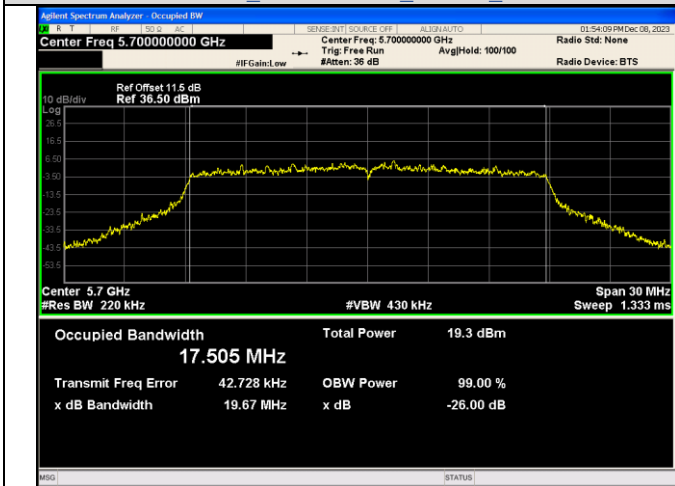 


IEEE 802.11n_Channel 140_20MHz_Antenna 1

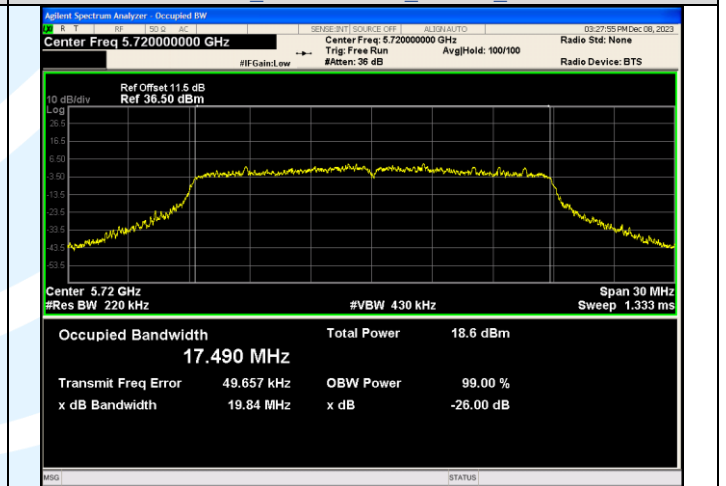 


IEEE 802.11n_Channel 144_20MHz_Antenna 0

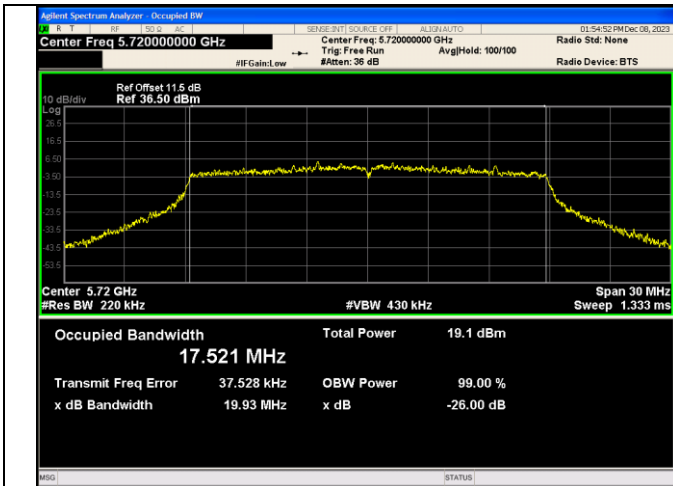 


IEEE 802.11n_Channel 144_20MHz_Antenna 1

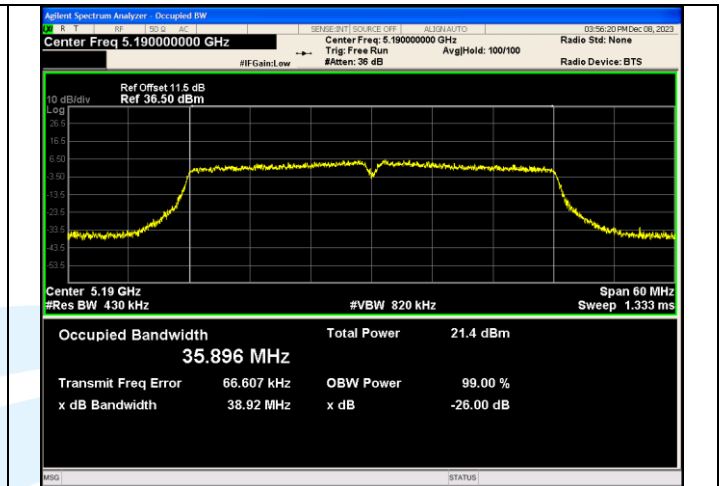 


IEEE 802.11n_Channel 38_40MHz_Antenna 0

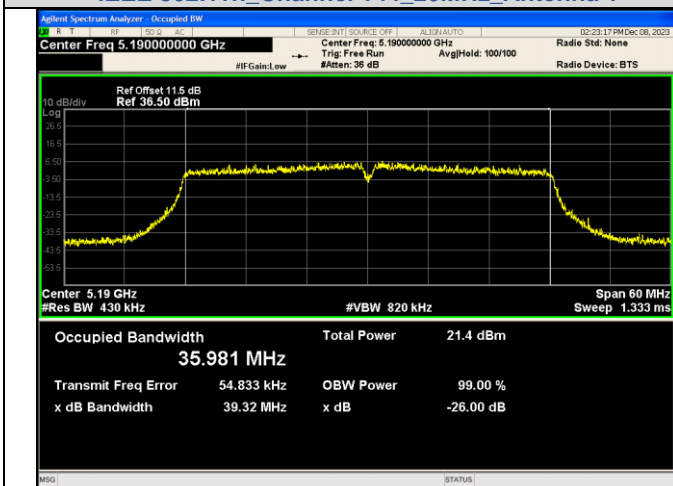 


IEEE 802.11n_Channel 38_40MHz_Antenna 1

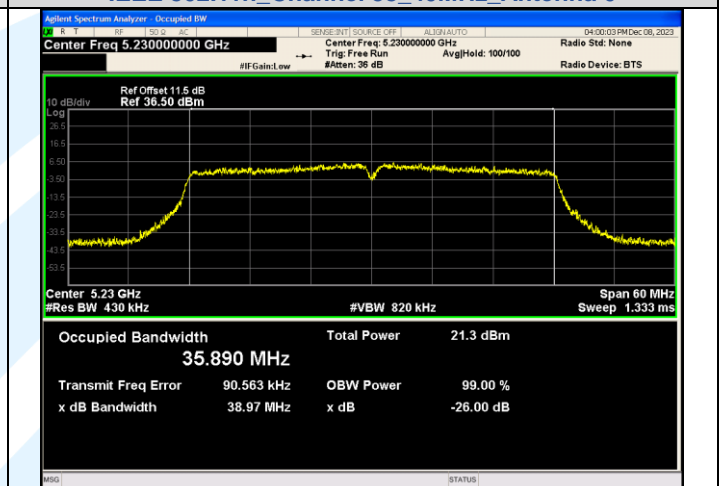 


IEEE 802.11n_Channel 46_40MHz_Antenna 0

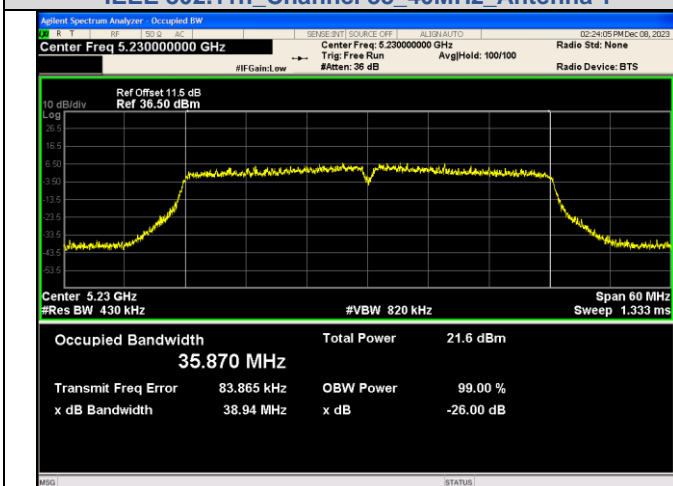 

IEEE 802.11n_Channel 46_40MHz_Antenna 1

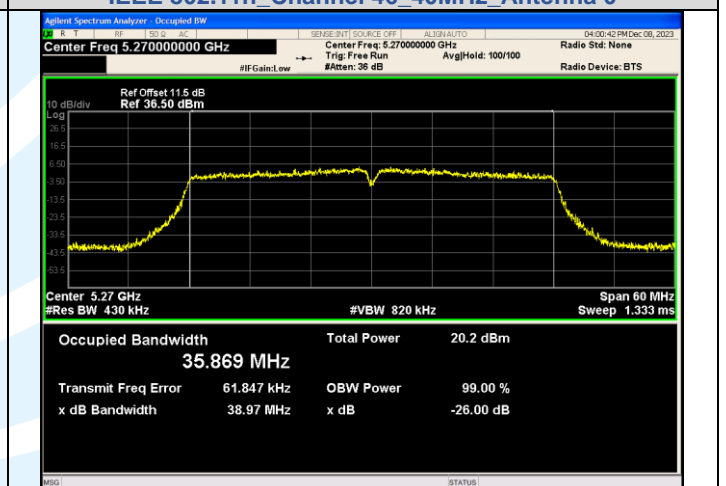 

IEEE 802.11n_Channel 54_40MHz_Antenna 0

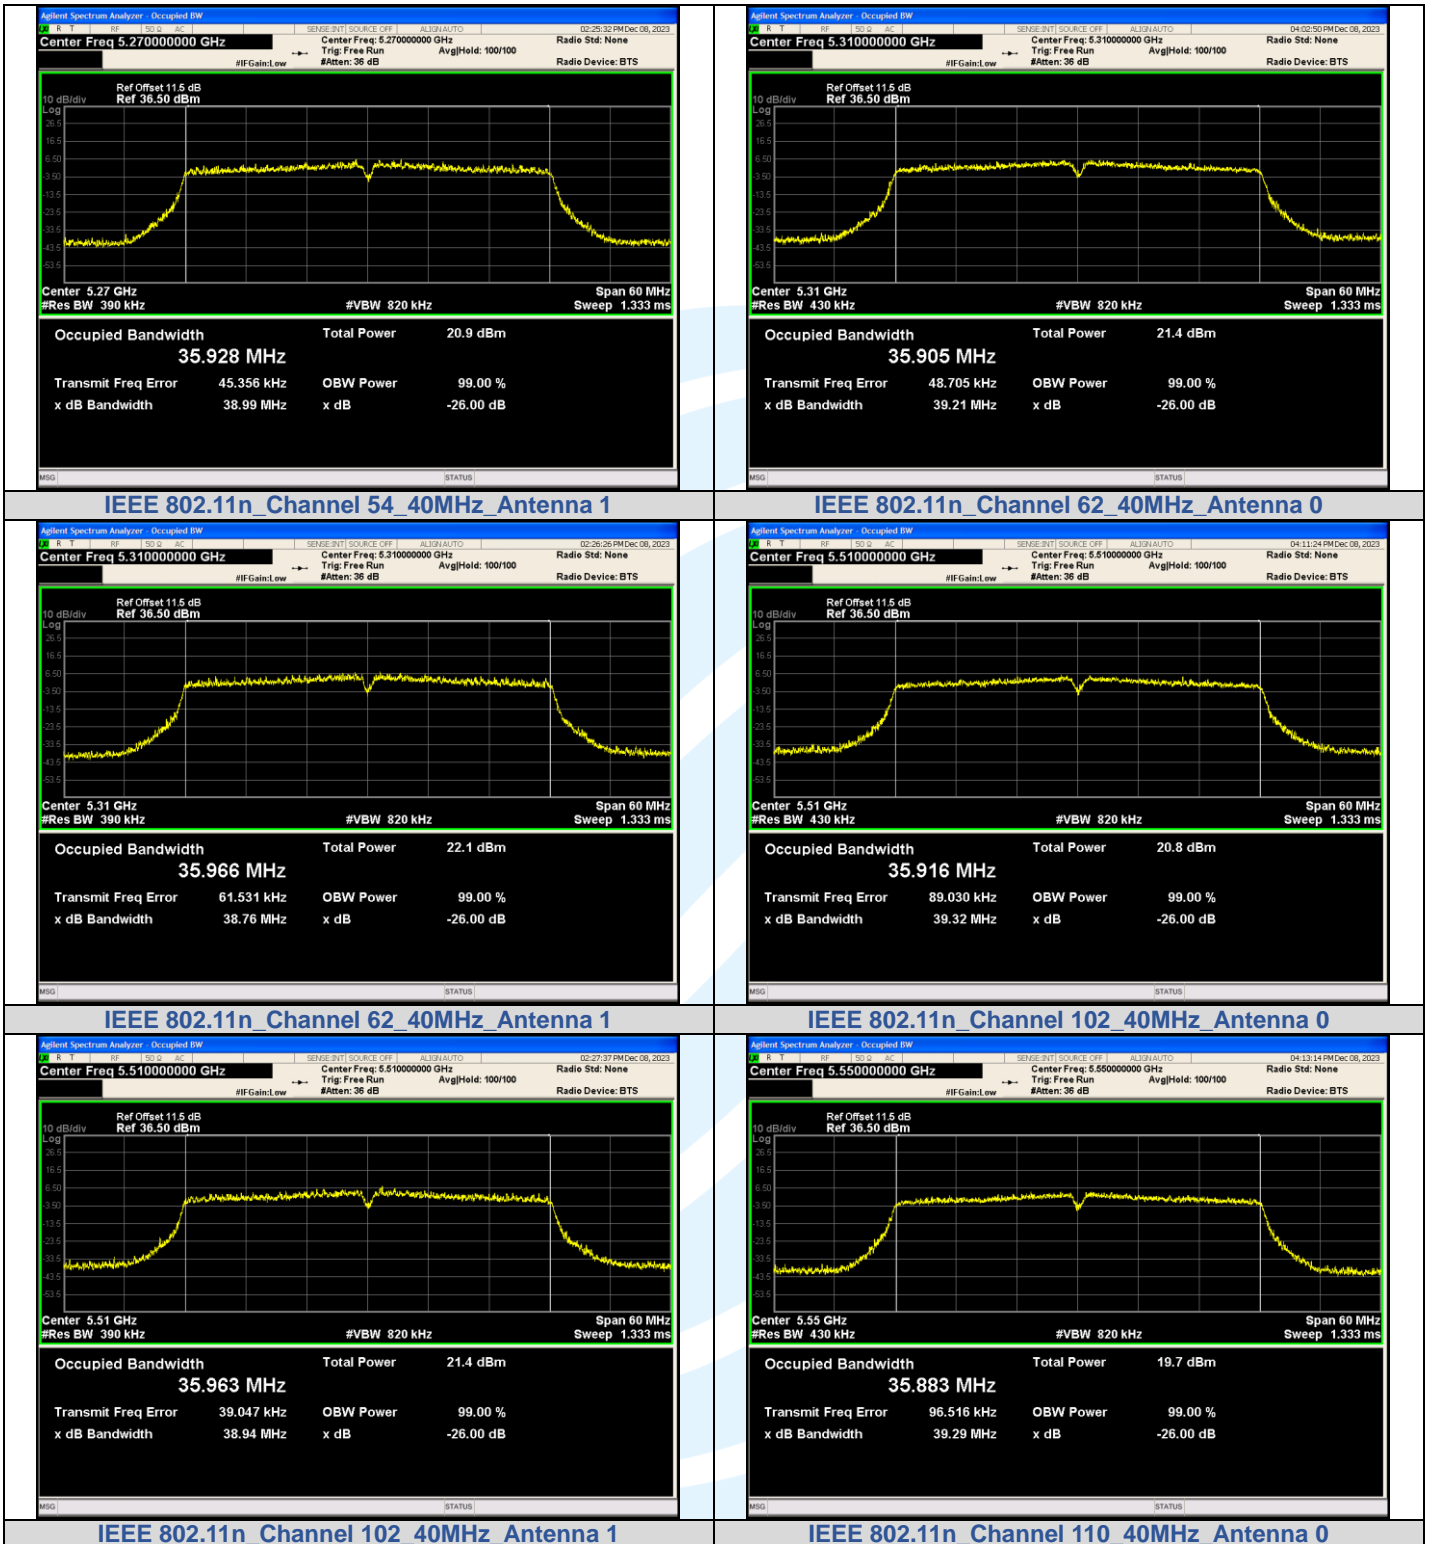 

Shenzhen UnionTrust Quality and Technology Co., Ltd.

Address: Unit D/E of 9/F and 16/F, Block A, Building 6, Baoneng science and technology park, Longhua district, Shenzhen, China

 
Tel: +86-755-28230888

Fax: +86-755-28230886


E-mail: info@uttlab.com

<http://www.uttlab.com>


UTTR-RF-EN300328-V1.2

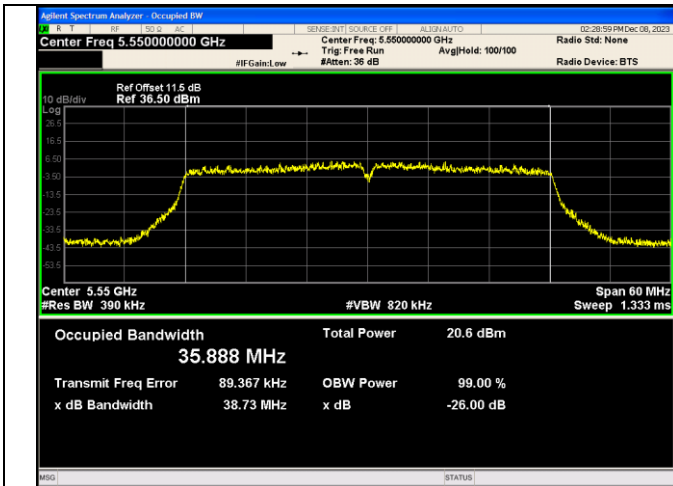


IEEE 802.11n_Channel 110_40MHz_Antenna 1

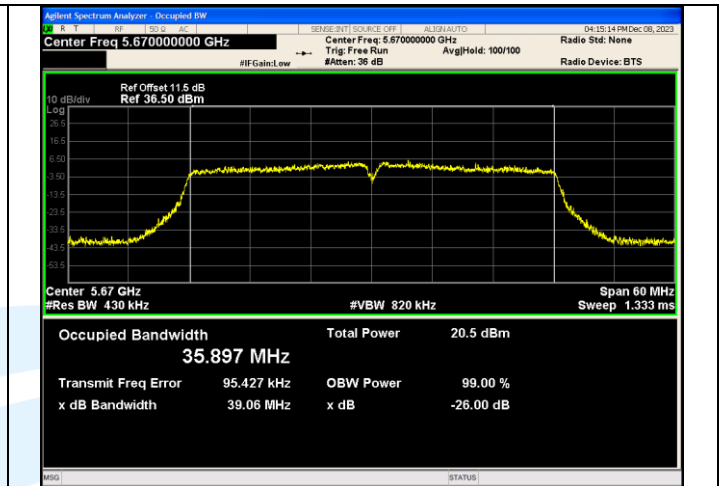 


IEEE 802.11n_Channel 134_40MHz_Antenna 0

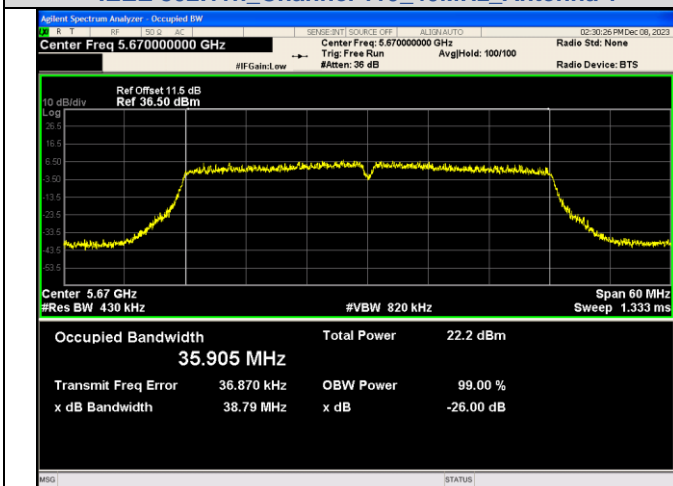 


IEEE 802.11n_Channel 134_40MHz_Antenna 1

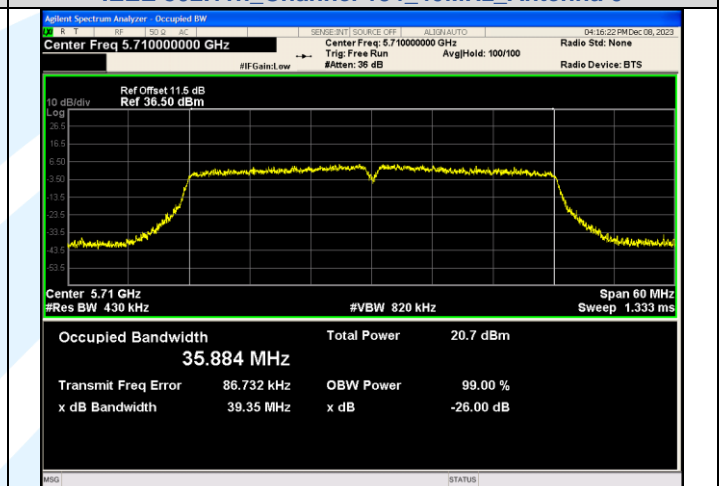 


IEEE 802.11n_Channel 142_40MHz_Antenna 0

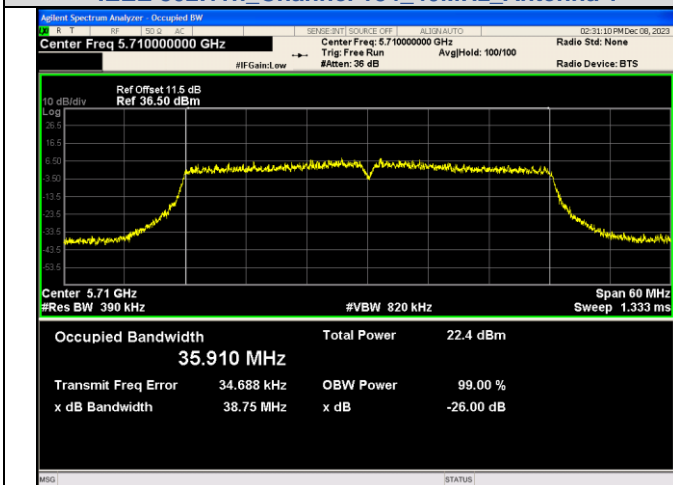 

IEEE 802.11n_Channel 142_40MHz_Antenna 1

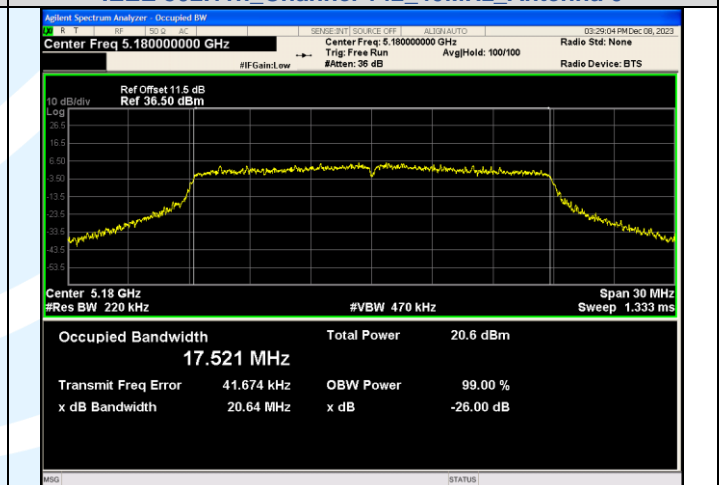 

IEEE 802.11ac_Channel 36_20MHz_Antenna 0

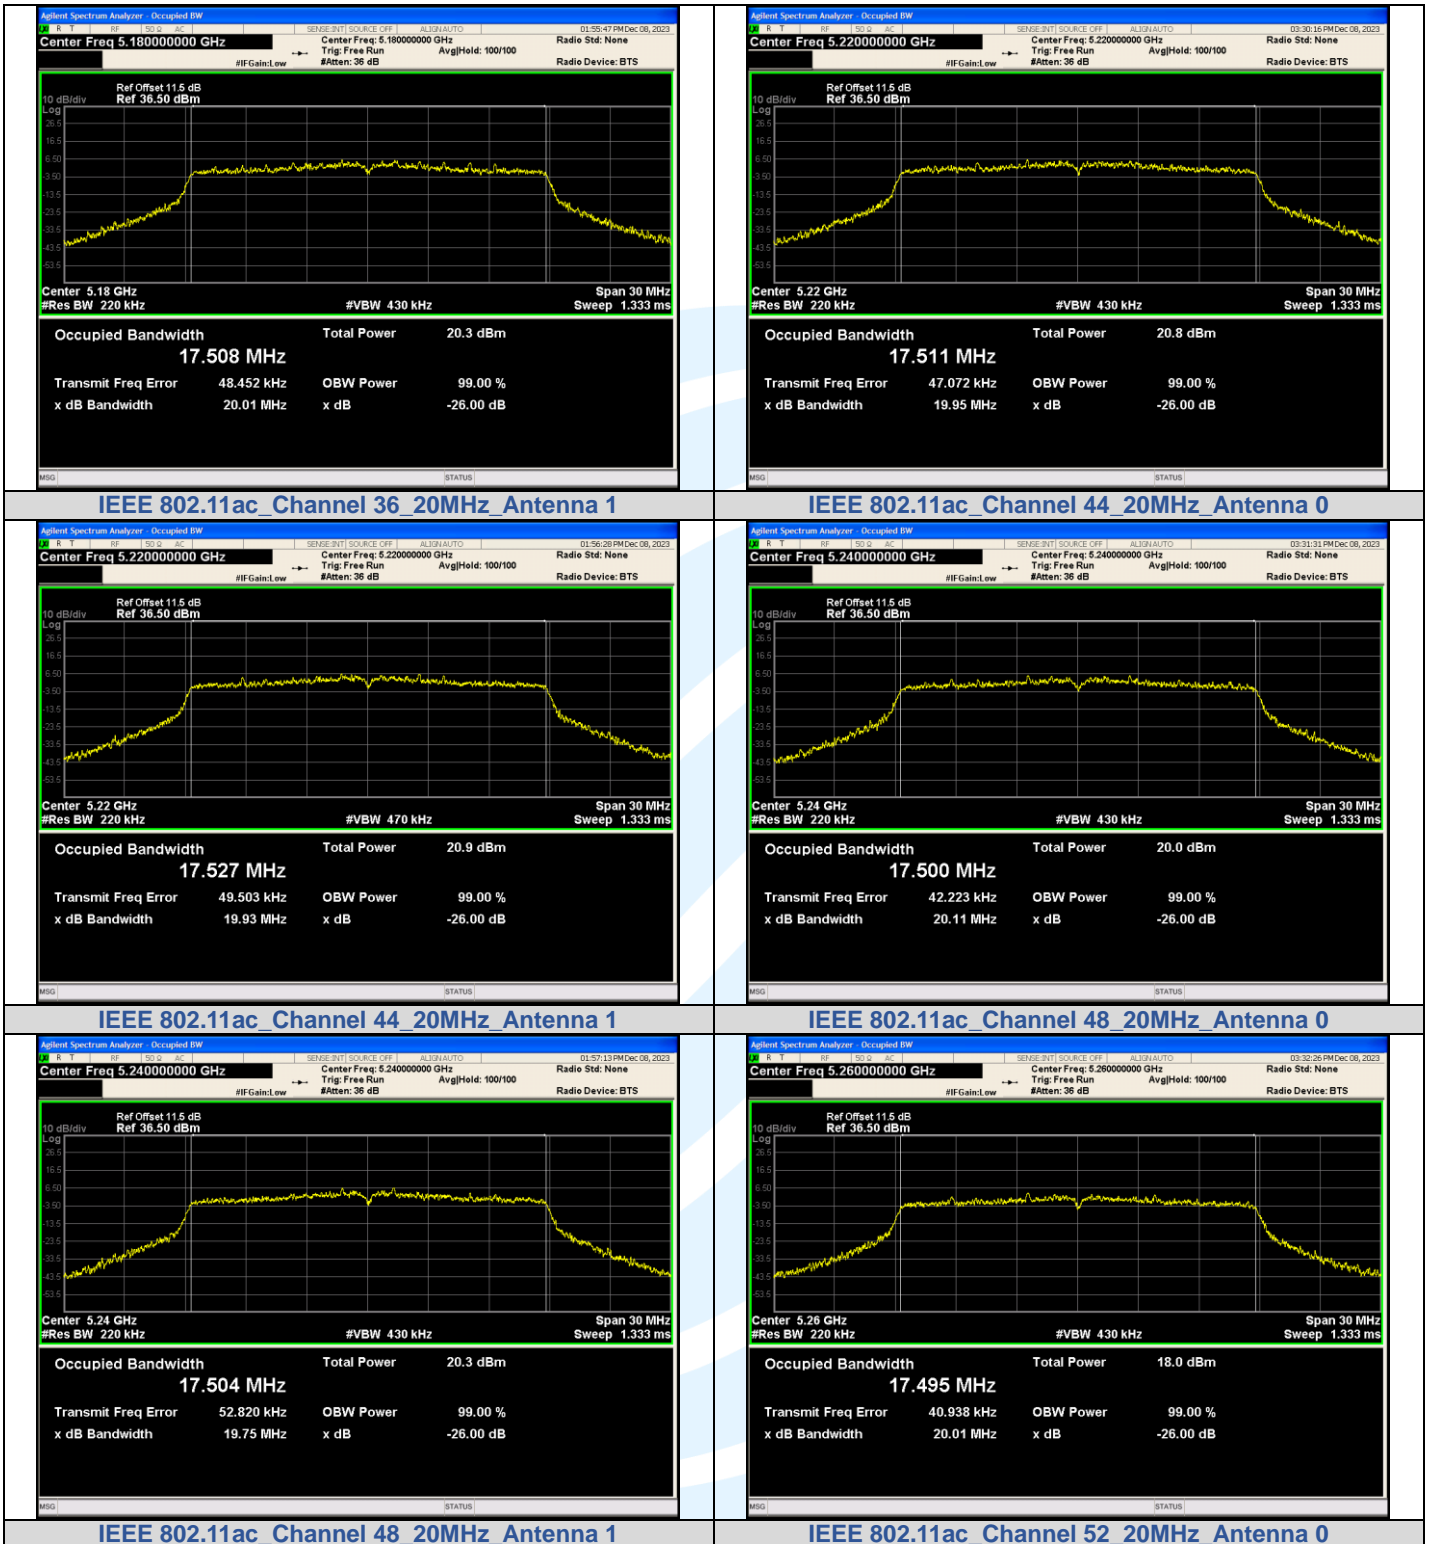 

Shenzhen UnionTrust Quality and Technology Co., Ltd.

Address: Unit D/E of 9/F and 16/F, Block A, Building 6, Baoneng science and technology park, Longhua district, Shenzhen, China

 
Tel: +86-755-28230888

Fax: +86-755-28230886


E-mail: info@uttlab.com

<http://www.uttlab.com>


UTTR-RF-EN300328-V1.2

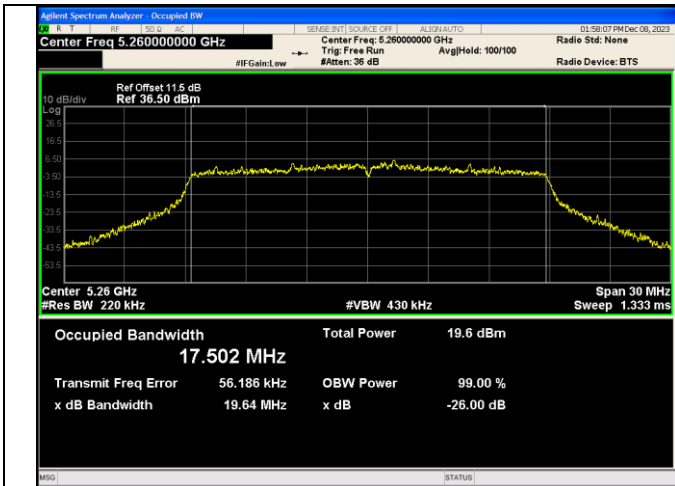


IEEE 802.11ac_Channel 52_20MHz_Antenna 1

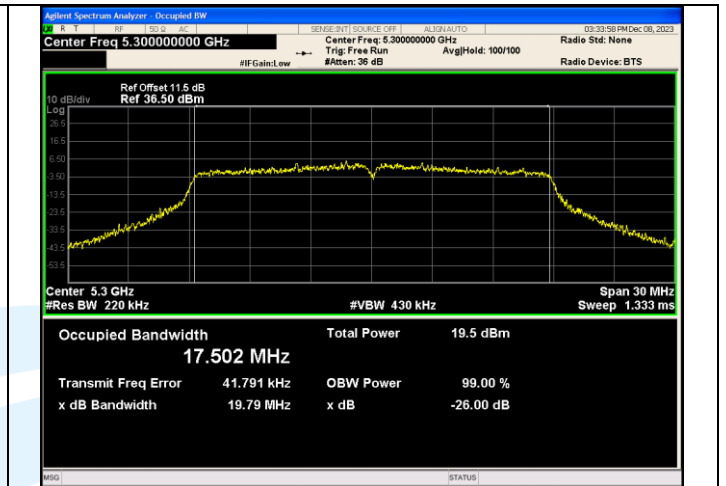 


IEEE 802.11ac_Channel 60_20MHz_Antenna 0

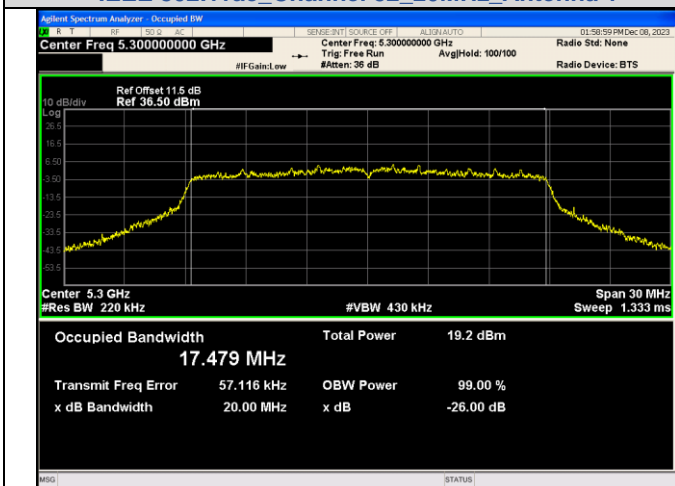 


IEEE 802.11ac_Channel 60_20MHz_Antenna 1

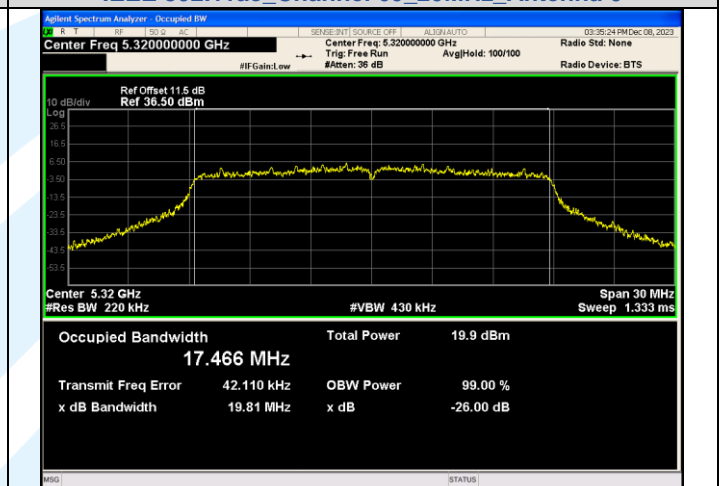 


IEEE 802.11ac_Channel 64_20MHz_Antenna 0

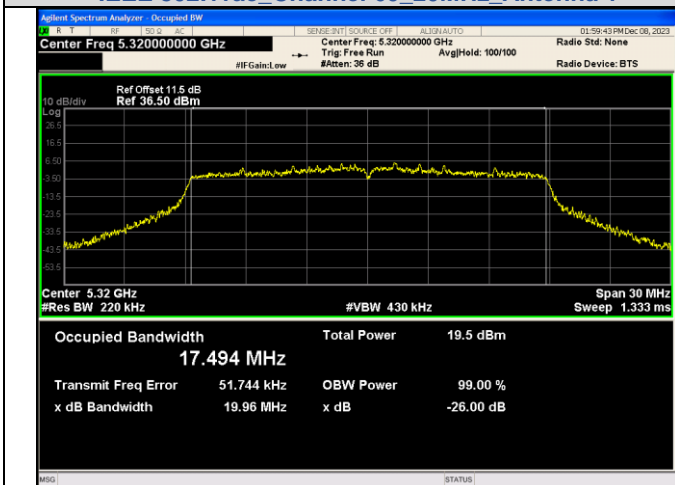 


IEEE 802.11ac_Channel 64_20MHz_Antenna 1

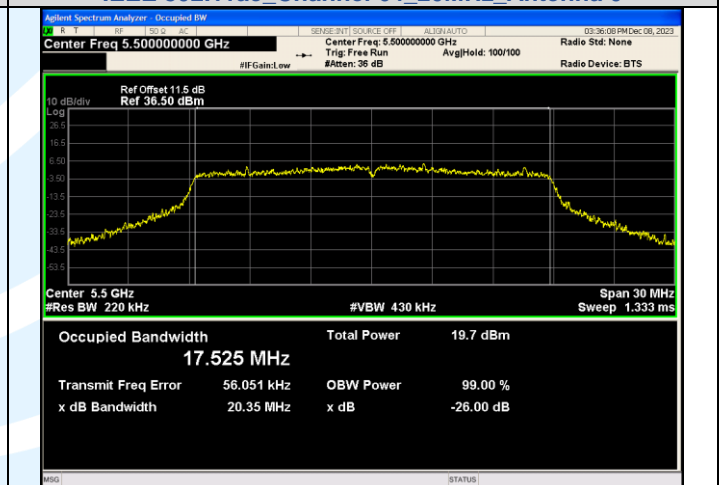 


IEEE 802.11ac_Channel 100_20MHz_Antenna 0

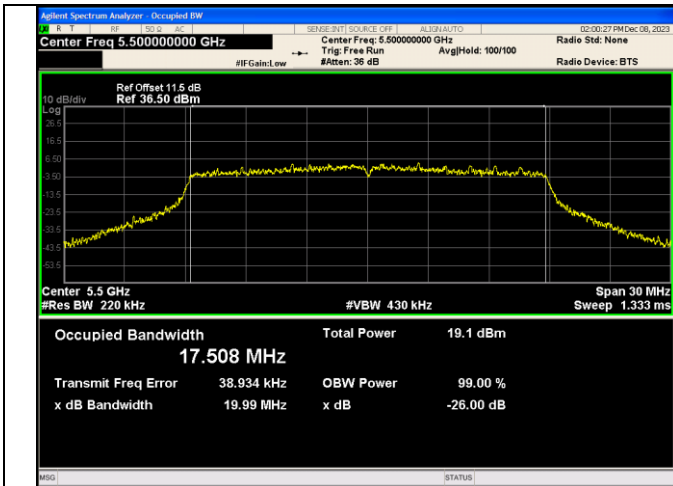 


IEEE 802.11ac_Channel 100_20MHz_Antenna 1

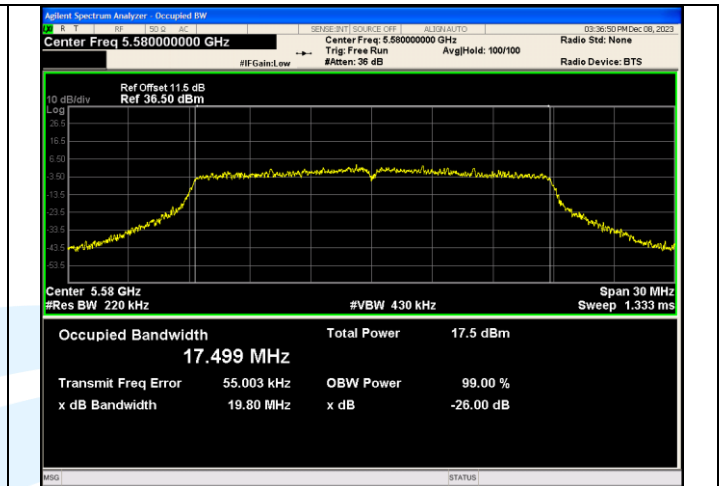 


IEEE 802.11ac_Channel 116_20MHz_Antenna 0

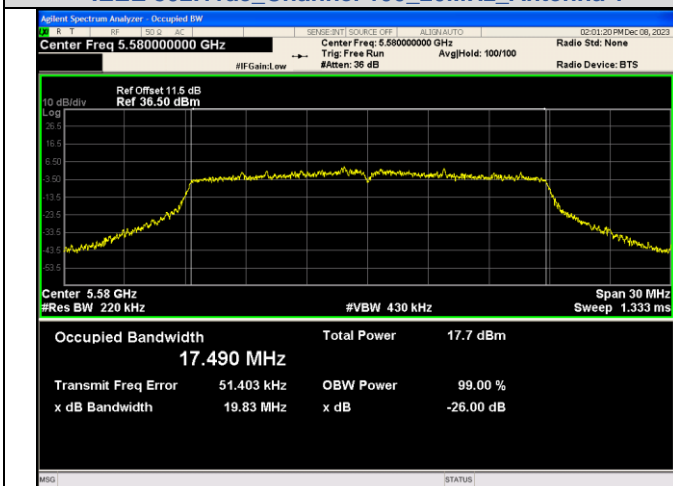 


IEEE 802.11ac_Channel 116_20MHz_Antenna 1

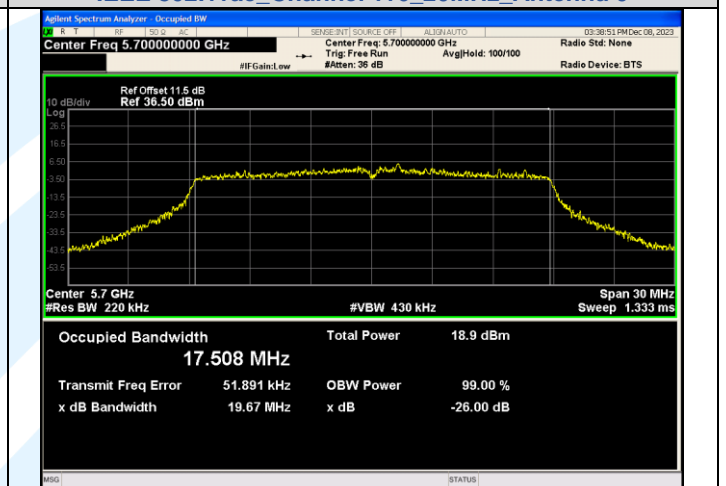 


IEEE 802.11ac_Channel 140_20MHz_Antenna 0

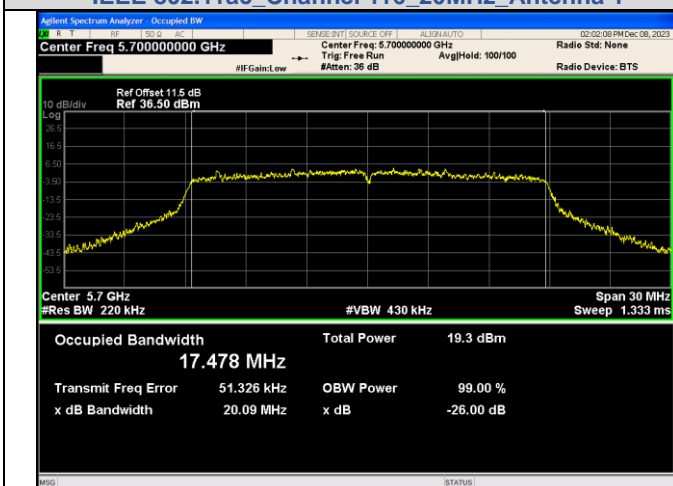 


IEEE 802.11ac_Channel 140_20MHz_Antenna 1

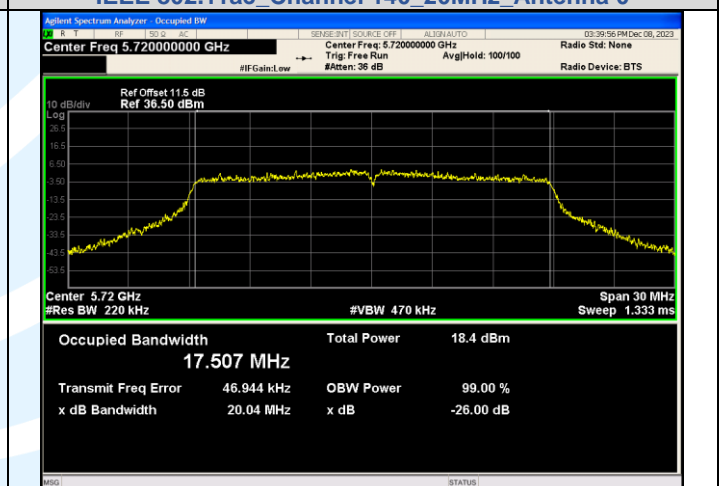 


IEEE 802.11ac_Channel 144_20MHz_Antenna 0

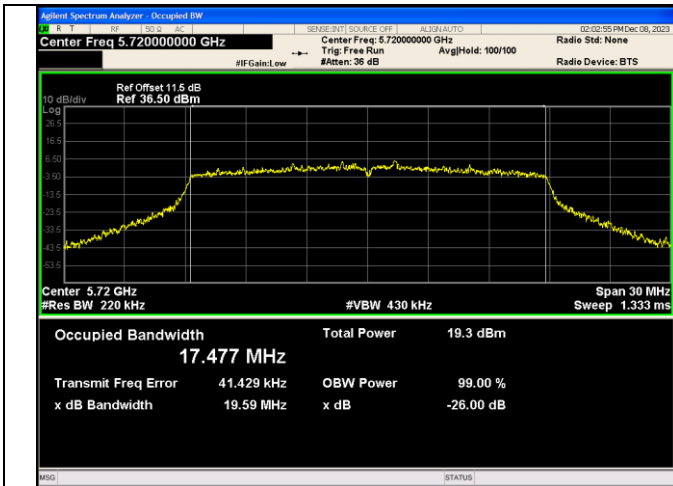 


IEEE 802.11ac_Channel 144_20MHz_Antenna 1

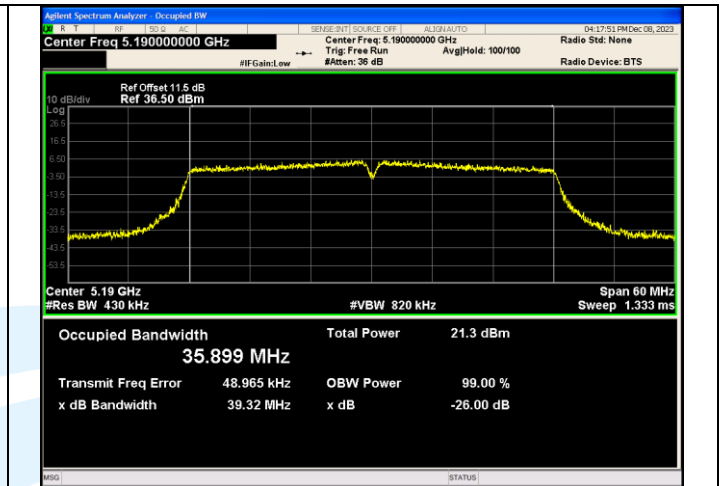 


IEEE 802.11ac_Channel 38_40MHz_Antenna 0

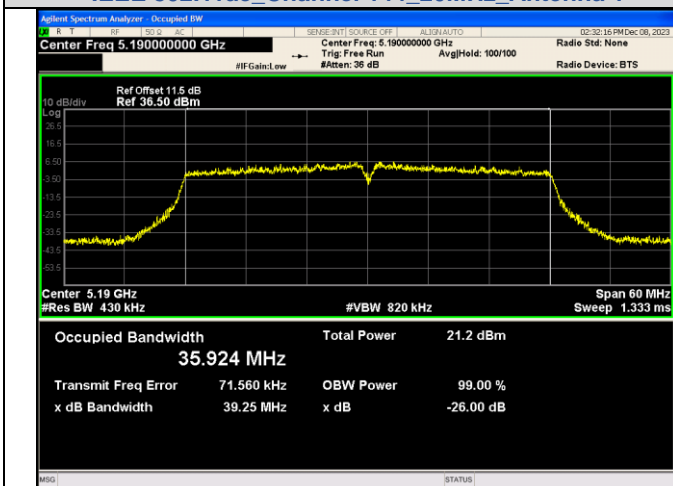 


IEEE 802.11ac_Channel 38_40MHz_Antenna 1

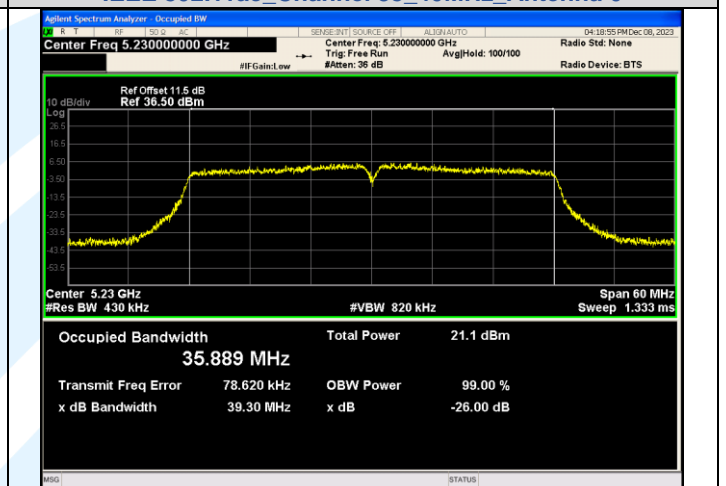 


IEEE 802.11ac_Channel 46_40MHz_Antenna 0

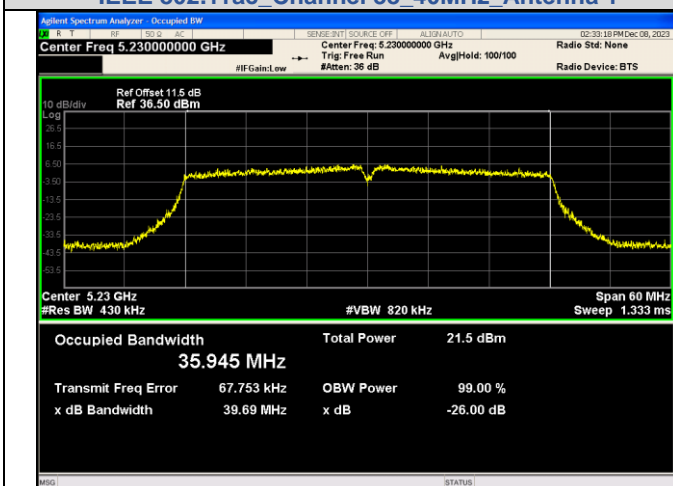 


IEEE 802.11ac_Channel 46_40MHz_Antenna 1

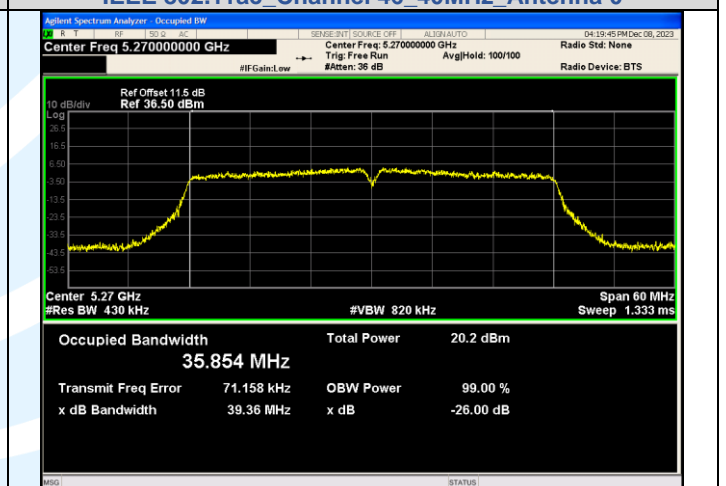 


IEEE 802.11ac_Channel 54_40MHz_Antenna 0

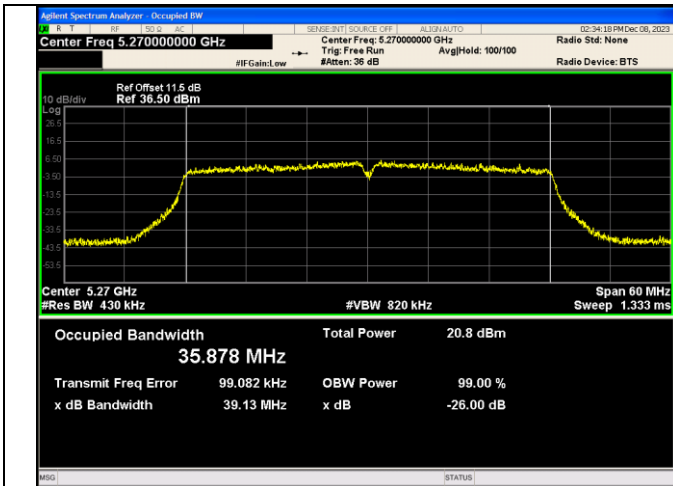 


IEEE 802.11ac_Channel 54_40MHz_Antenna 1

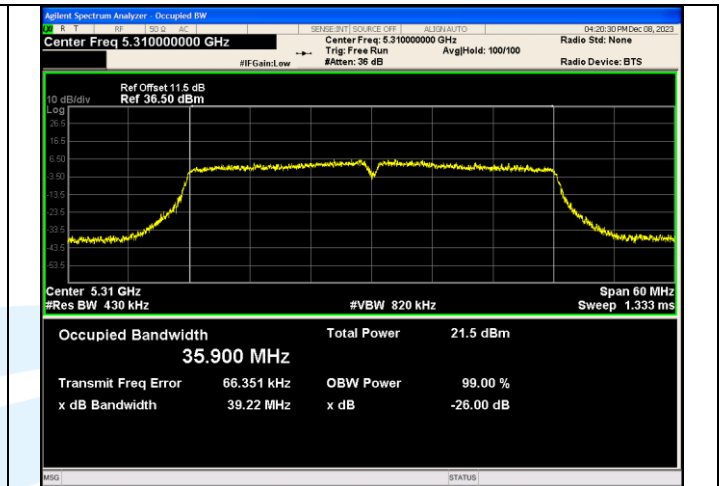 


IEEE 802.11ac_Channel 62_40MHz_Antenna 0

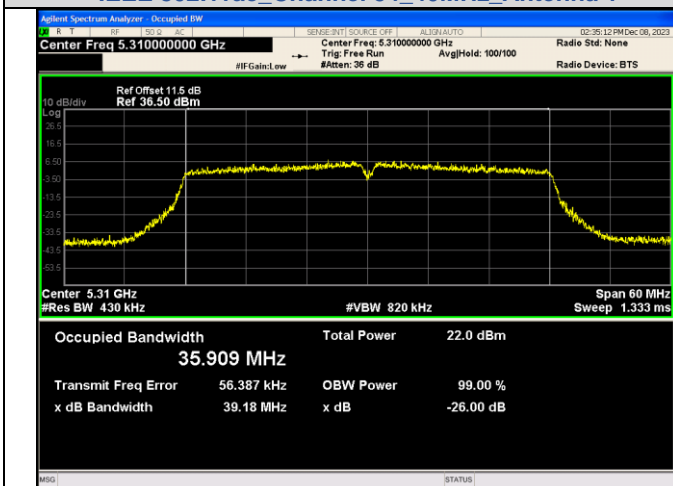 


IEEE 802.11ac_Channel 62_40MHz_Antenna 1

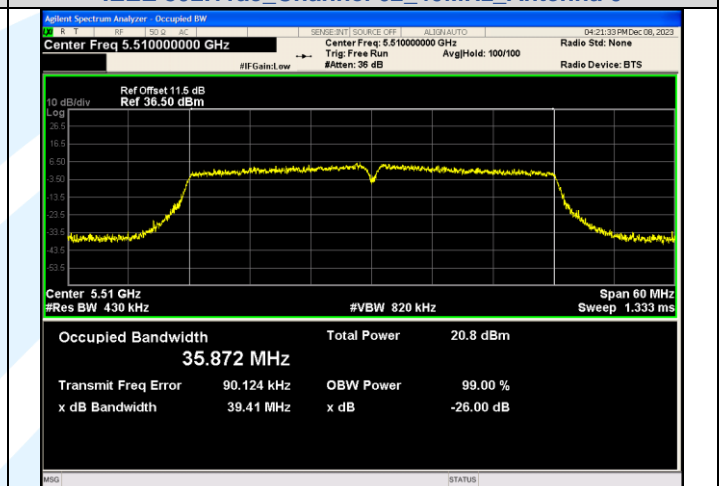 


IEEE 802.11ac_Channel 102_40MHz_Antenna 0

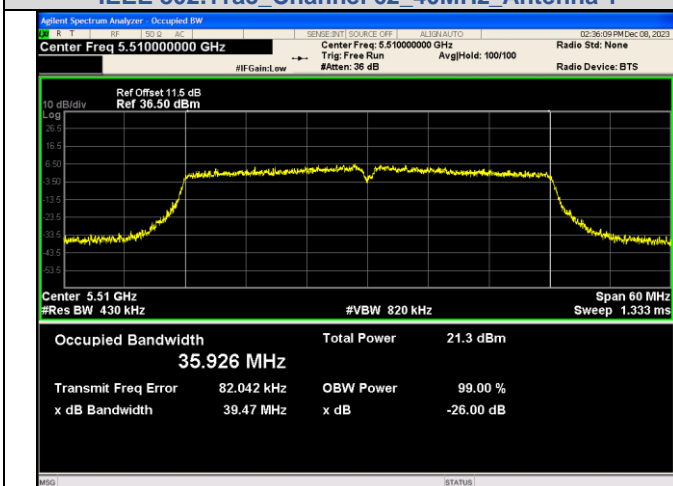 


IEEE 802.11ac_Channel 102_40MHz_Antenna 1

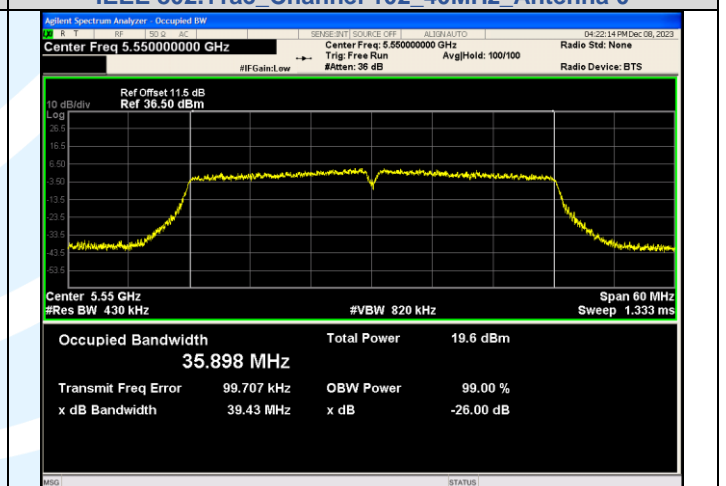 


IEEE 802.11ac_Channel 110_40MHz_Antenna 0

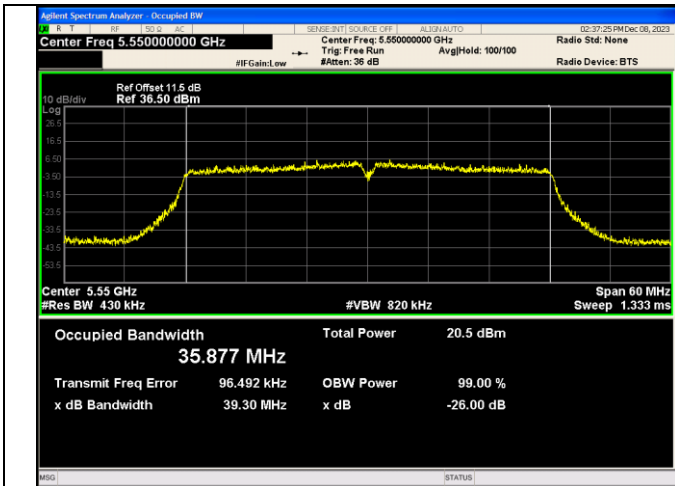 


IEEE 802.11ac_Channel 110_40MHz_Antenna 1

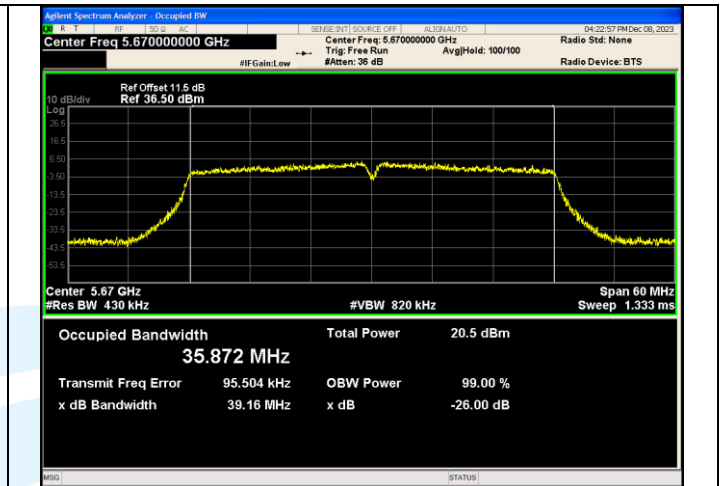 


IEEE 802.11ac_Channel 134_40MHz_Antenna 0

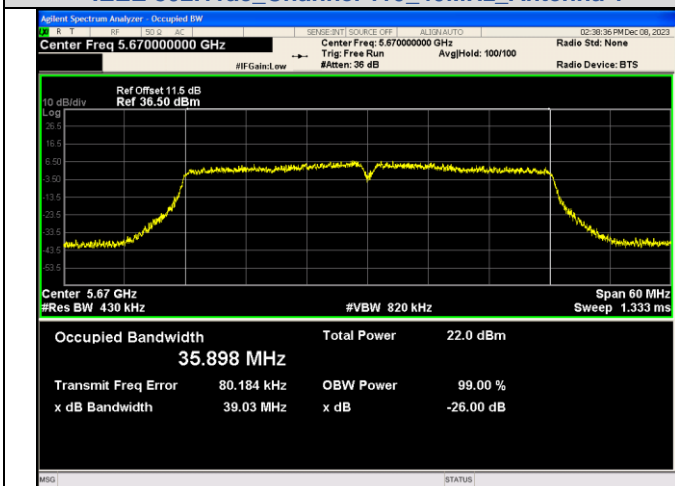 


IEEE 802.11ac_Channel 134_40MHz_Antenna 1

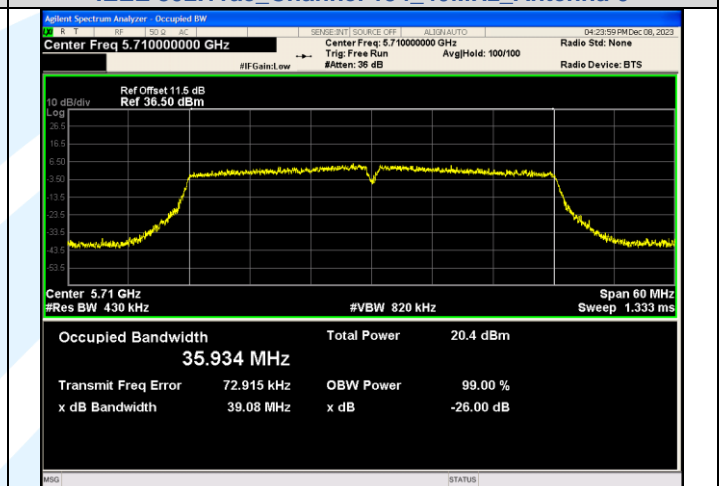 


IEEE 802.11ac_Channel 142_40MHz_Antenna 0

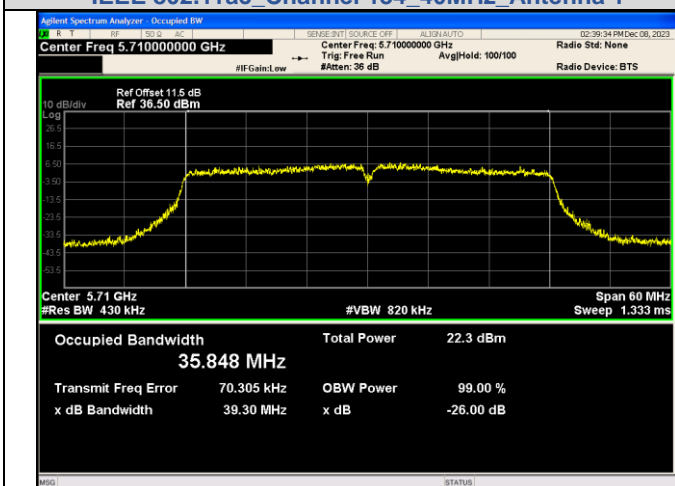 


IEEE 802.11ac_Channel 142_40MHz_Antenna 1

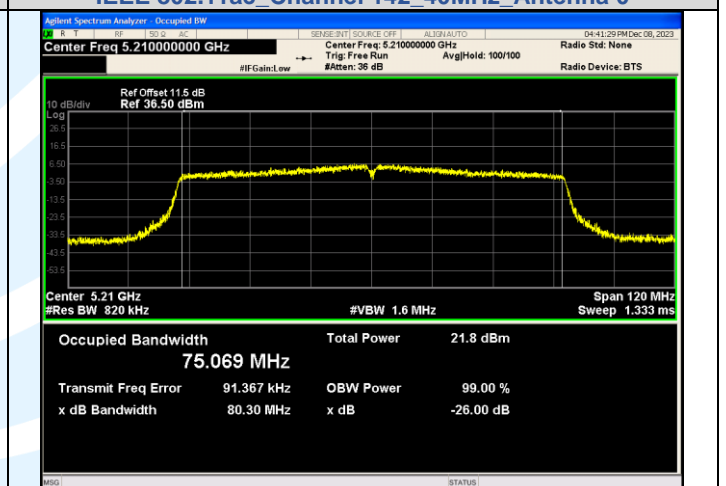 


IEEE 802.11ac_Channel 42_80MHz_Antenna 0

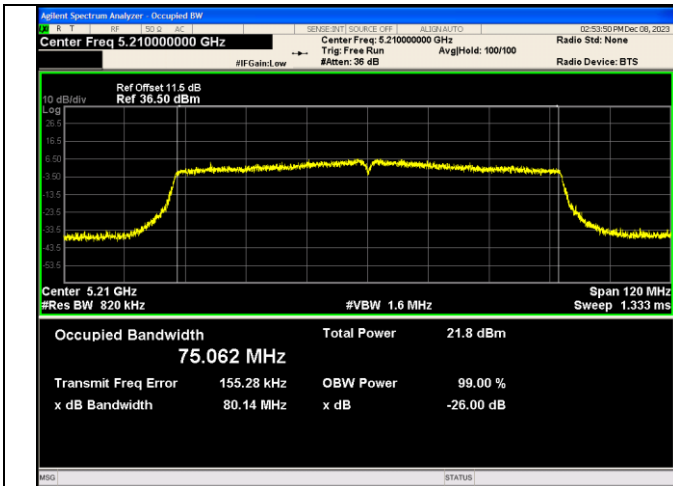 


IEEE 802.11ac_Channel 42_80MHz_Antenna 1

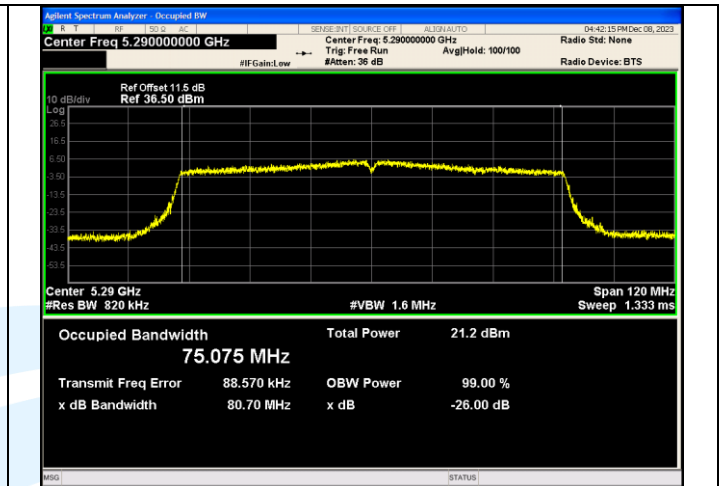 


IEEE 802.11ac_Channel 58_80MHz_Antenna 0

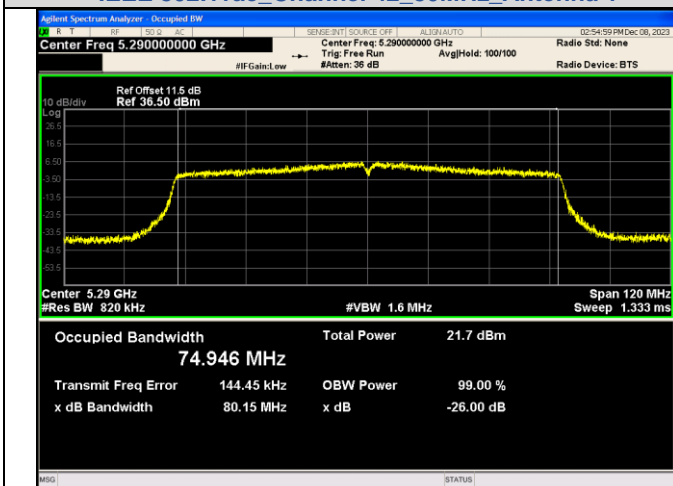 


IEEE 802.11ac_Channel 58_80MHz_Antenna 1

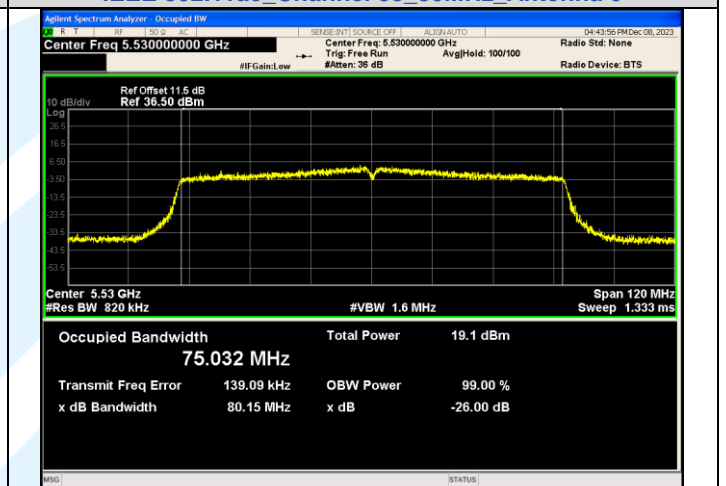 

IEEE 802.11ac_Channel 106_80MHz_Antenna 0

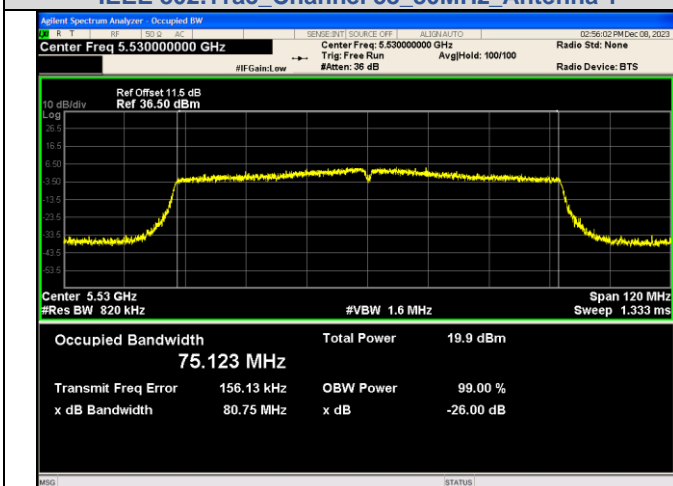 

IEEE 802.11ac_Channel 106_80MHz_Antenna 1

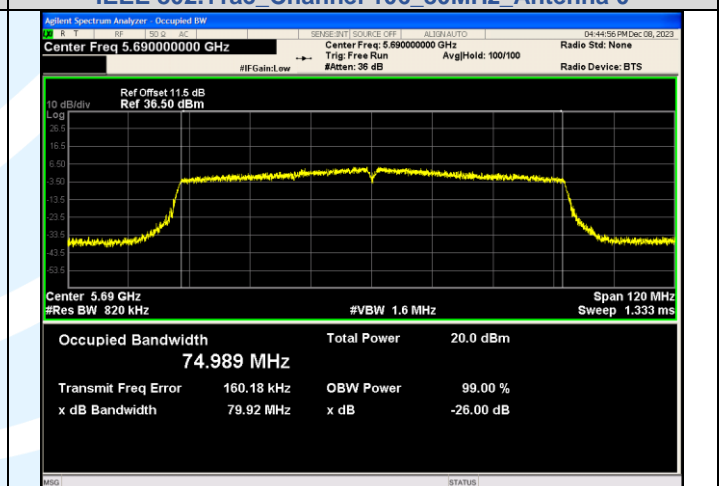 

IEEE 802.11ac_Channel 138_80MHz_Antenna 0