

External Photos











Adapter 1 (F18W8-120150SPAUY)






Adapter 2 ( DSA-18PFR-09 FUS 120150 )





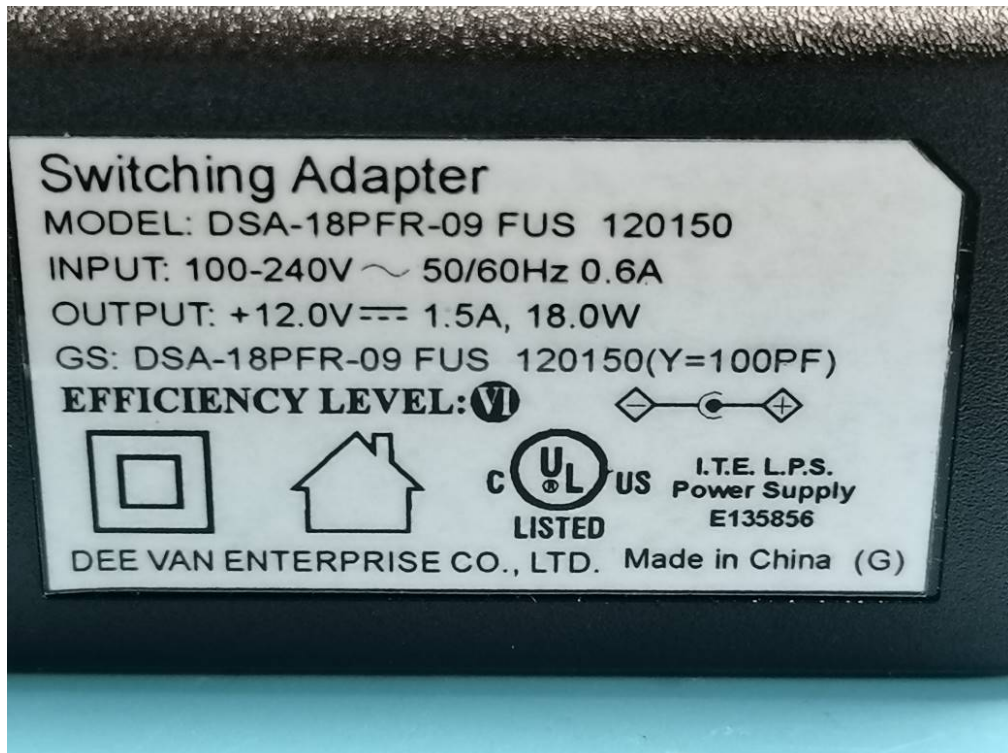

Adapter 3 (H18US1200150A)



