

Product Warranty

Chop or label by the dealer :

Dealer:

Purchase Date: MM/DD/YY

- Thanks for purchasing the music peripheral product and to ensure product stability as well as achieve customers satisfaction, the product has undertaken stringent quality control before release.
- In a bid to guarantee your rights, please retain the invoice or ask the dealer to affix a stamp to the warranty card (also specify the purchase date). The warranty period starts from the date of purchase and for detailed articles, please refer to the relevant website descriptions.
- The warranty service is based upon the purchase date (or otherwise stipulated in the website). And it is unable to present such a date, it is considered out of warranty period and extra charges should be collected.
- For complete information about product and service, please visit our website and only with your support, we can go further.

Manufacturer
Agency
Online Customer Service
Website

Warranty & Product Service

About Warranty

- The warranty is attached to the product (distributed by dealers).
- Read through the warranty carefully and keep it up securely.
- Regarding the warranty period, please refer to relevant description in the website.

About After-sales Service


- **In the case of product irregularity:**
Check out the manual again.
- **In the case of non-conformity product:**
Consult dealer immediately.
- **For failures during warranty period:**
Maintain or replace with a new one according to the warranty

For device maintenance out of warranty period, please refer to the dealer's website.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
a) Reorient or relocate the receiving antenna.
b) Increase the separation between the equipment and receiver.
c) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
d) Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

SOUNDYOU[®] MICRO Bluetooth Version Quick Start Guide

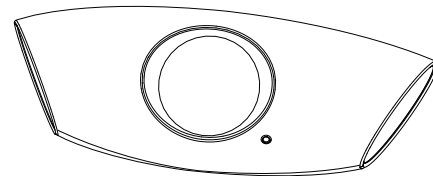


8cm

8cm

7.8cm

Configuration & Cable Connection Method

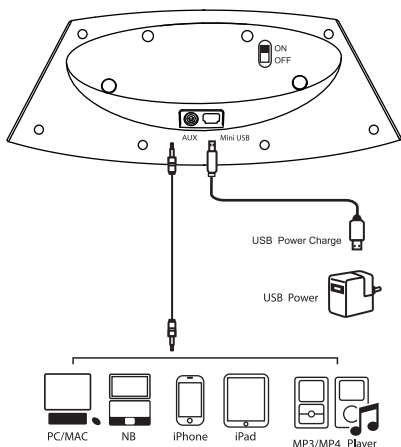

Usage Recommendations

- Please do not connect the 3.5mm audio cable and Bluetooth audio signal simultaneously.
- If they are connected simultaneously, device will first play back the music from the 3.5mm audio cable.
- If you want to play back music through Bluetooth, please remove this device's 3.5mm audio cable in order to avoid interruptions to the Bluetooth music transfer.
- Every device can only correspond to one Bluetooth music playback device at any given time; if there is a need to use different Bluetooth music playback devices, please first confirm that the connection between device and the Bluetooth music playback device not in use is disconnected in order to avoid unsuccessful music playback.

Light Signal Description / Charging Status



Power Status	Charging	Charge Completed
ON	Red/Blue	No signal
OFF	Red	No signal

Trouble-shooting





Status	Reason	Solution
Distortion or Explosive Sounds	The speaker volume turned up too much.	Turn down the volume.
No sound or Low Sound	The ON switch at the bottom of the speaker is not turned on.	Please adjust it to the ON position.
	Power is almost depleted.	Please charge it as soon as possible.
	Input Line-in is not well connected.	Check out earphone terminal is well connected with the said device input terminal.
	The notebook computer in use has insufficient power; the AC adaptor is not connected	Confirm the power status.
	The power of the connected machine equipment is not on.	Please turn on the power.
Unable to connect to the Bluetooth music playback device.	When using computer audio output, the USB and 3.5mm cable are connected simultaneously.	Please only use either the USB cable or 3.5mm cable.
	The audio device volume is minimum.	Turn up the audio device volume.
Unable to connect to the Bluetooth music playback device.	The system asked you to enter the password (but no password or the wrong password was entered).	Please set the password (the default value is 0000; it usually requires you to set it during the first connection).
	The two Bluetooth devices were not matched successfully and the connection was not set properly.	Refer to the usage steps and redo the Bluetooth device matching and connection steps.

Safety Cautions (please read before getting started)


 
 
- For the purpose of correct installation, trouble-free operation of this product as well as avoiding injuries to user or other persons as well as damages to properties, the safety cautions are described as follows.
 - Please apprehend each symbol and read instructions carefully and then stick to them stringently.
- Dangers or damages resulted from operation mistakes are classified into the following 2 categories according to their severity and description is attached to each category symbol.
- Dangers or damages resulted from operation mistakes are classified into the following 2 categories according to their severity and description is attached to each category symbol.



Attention

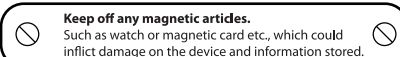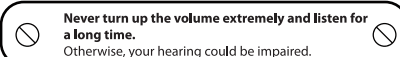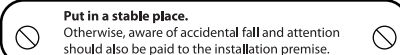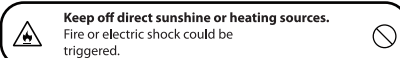    

Warning

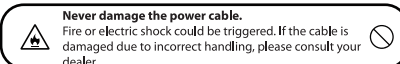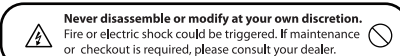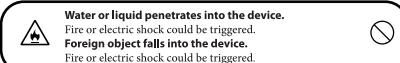

Installation and Operation

- Connect this BT device's USB cable to PC or Notebook to recharge the built-in lithium battery. The LED light is red during battery recharge.
- Switch on the speaker (ON/OFF switch is at the bottom of device). When the device is fully charged, the LED light will turn off.
- Turn on Bluetooth in your music playback device (cell phone, PC or Notebook) and it will detect this device automatically. For the first time connection, select "BT Device" on your music playback device. When this device is selected and connected successfully, you will hear a double beep sound. Then you can play back music from this device. The LED light will flash slowly. If you are asked to enter PIN code during the connecting process, please enter 0000.
- You can also connect this device to your music playback device (if it has 3.5mm headphone jack) via 3.5mm audio cable for music listening.
- When this device is fully recharged, it can continuously play back for approximately 8 hours depending on sound volume.
- Turn off this device to save power when not in use.
- When the battery is completely depleted, it takes approximately 2 hours to fully recharge it.