


LYRIX POWERBALL

WIRELESS SPEAKER

User Guide



Package Contents:

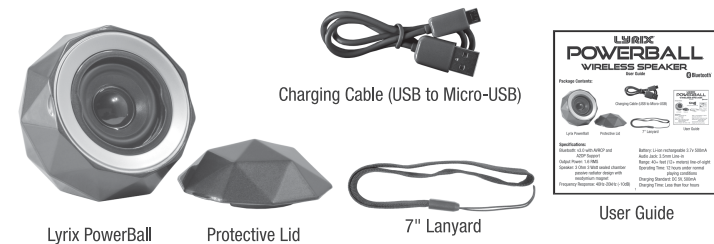


Specifications:

Bluetooth: v3.0 with AVRCP and A2DP Support
 Output Power: 1.6 RMS
 Speaker: 3 Ohm 3 Watt sealed chamber passive radiator design with neodymium magnet
 Frequency Response: 40Hz-20kHz (-10dB)

Battery: Li-ion rechargeable 3.7v 500mAh
 Audio Jack: 3.5mm Line-in
 Range: 30+ feet (10+ meters) line-of-sight
 Operating Time: 12 hours under normal playing conditions
 Charging Standard: DC 5V, 500mA
 Charging Time: Less than four hours

At A Glance:

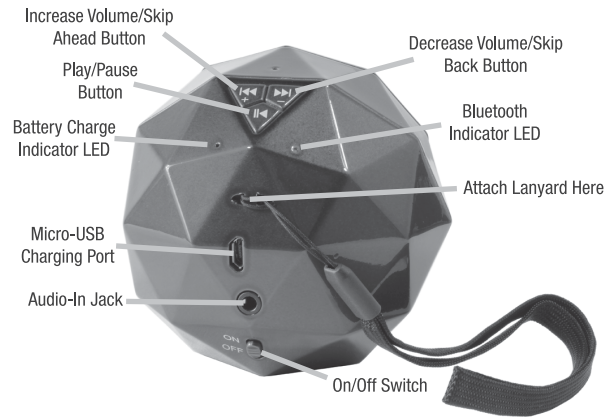

Important: Make sure that your Lyrix PowerBall is fully charged before first use.

Charging Your Lyrix PowerBall

Insert the Micro-USB end of the Charging Cable into the Micro-USB Charging Port and then insert the USB end of the Charging Cable into a USB port on your computer or a UL/ETL Approved 5V/1A USB wall adapter.

The Battery Charge Indicator LED will glow red while the battery is charging. It will turn green when the battery is fully charged.

The Battery Charge Indicator LED will blink red when the battery charge is low and it is time to recharge your Lyrix PowerBall.

Pairing Your Lyrix PowerBall with a Bluetooth Device

Remove the protective lid and slide the On/Off Switch to the "ON" position. The Bluetooth Indicator LED will blink on and off. Activate the Bluetooth function on the device you want to pair with your Lyrix PowerBall and select "Lyrix PowerBall" from the list of available Bluetooth devices. The Bluetooth Indicator LED will stop blinking and glow steadily when the device has successfully paired with your Lyrix PowerBall.

Playing Music

Once you have paired your Bluetooth device with your Lyrix PowerBall, start the music playing on your Bluetooth device. If the music does not start playing through your Lyrix PowerBall, press the Play/Pause Button on the PowerBall. To pause the music, press the Play/Pause Button again. To turn the volume up, press and release the Increase Volume/Skip Ahead Button multiple times. To turn the volume down, press and release the Decrease Volume/Skip Back Button multiple times. To skip to the next song, press and hold the Increase Volume/Skip Ahead Button. To skip back to the beginning of the song that is playing, press and hold the Decrease Volume/Skip Back Button. To skip back to the previous song, quickly release and then press and hold the Decrease Volume/Skip Back Button a second time. **Note:** When you are done playing music, slide the On/Off Switch to the "OFF" position to conserve battery power.

Connecting Your Lyrix PowerBall to a Non-Bluetooth Device

Remove the protective lid and slide the On/Off Switch to the "ON" position. Use a 3.5mm audio cable (not included) to connect Your Lyrix PowerBall to your non-Bluetooth device. Start the music playing on the connected device. **Note:** When you are done playing music, slide the On/Off Switch to the "OFF" position to conserve battery power.

Troubleshooting

The Lyrix PowerBall should work well within the effective range of approximately 30 feet (10 meters). If it does not, please try the following:

- 1) Make sure that your Lyrix PowerBall is charged up and turned on.

- 2) Make sure that the device with which you want to pair has its Bluetooth setting in the "On" position and is within the effective range of 40 feet (12 meters).
- 3) Move your Lyrix PowerBall and/or Bluetooth Device away from sources of electromagnetic interference such as cordless phones, microwave ovens, wireless network routers, or other Bluetooth devices.
- 4) If you have difficulty connecting your device with your Lyrix PowerBall after it has been paired with your device, delete it from your device and re-pair.
- 5) If you have too many Bluetooth devices listed under "Devices" the pairing process may take longer or be unsuccessful. Delete one or more of the devices to improve pairing performance.

Caution

- 1) Use only with USB version 2.0 or higher. Do not use with "Power USB."
- 2) Contains no user-serviceable parts. Do not disassemble.
- 3) Do not expose to water or damp conditions.
- 4) Do not expose to heat or high temperatures.

How to Properly Dispose of Batteries

This product contains a lithium-ion battery. To properly dispose of expired batteries, view your city's website or newsletter to find what guidelines, if any, should be followed and to make note of their hazardous waste collection days.

Technical Support

If you have any questions about the operation and/or performance of this product that were not covered in this user guide, please email support-lyrixpowerball@pctreasures.com or call (248) 236-0061, Mon.-Fri., 9:30am-5:30pm for assistance.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: a) Reorient or relocate the receiving antenna b) Increase the separation between the equipment and receiver c) Consult the dealer or an experienced radio/TV technician for help.

Note 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important Note

FCC Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.
2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

One (1) Year Limited Warranty

PC Treasures, Inc. warrants this product to be free from defects in materials and workmanship. This warranty covers the original purchaser only, and is not transferable to anyone who subsequently buys, leases, or otherwise obtains from you. Your One Year Limited Warranty begins on the date of purchase. Your original purchase invoice or sales receipt, showing date of purchase, is your proof of warranty period. The duration of this warranty does not extend beyond the initial period of coverage should any repairs or replacements be made or performed.

This warranty does not extend to any product not purchased from PC Treasures, Inc., or an authorized PC Treasures, Inc. reseller. This warranty does not extend to product that has been damaged or rendered defective as a result of use for which the product is not intended, is contrary to instructions provided in the user guide, as a result of the use of parts not manufactured or sold by PC Treasures, Inc., or due to any misuse, abuse, negligence, modification, or improper packing when returning product to PC Treasures, Inc.

EXCEPT FOR THE WARRANTY SET FORTH HEREIN, PC TREASURES, INC. DISCLAIMS ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY APPLICABLE LAW ARE LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL PC TREASURES, INC. BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF BUSINESS, PROFITS, DATA OR USE, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT. YOU AGREE THAT REPAIR, AND (UPON AVAILABILITY) REPLACEMENT, AS APPLICABLE, UNDER THE WARRANTY SERVICES DESCRIBED HEREIN IS YOUR SOLE AND EXCLUSIVE REMEDY WITH RESPECT TO ANY BREACH OF THE PC TREASURES, INC. LIMITED WARRANTY SET FORTH HEREIN.

How Do I Obtain Warranty Service?

In the event that you require warranty service, please email to warranty-lyrixpowerball@pctreasures.com or contact PC Treasures, Inc. directly at (248) 236-0061 to report a claim, at which time PC Treasures, Inc. technicians will attempt to solve any issues. If unable to resolve your issue, you will be issued an RMA to authorize the return of the item for repair/replacement. All charges incurred while returning product, including postage, duties, export taxes, and customs duties, are the responsibility of purchaser, and purchaser assumes all risk of loss during shipment.

Models Covered Under This Warranty: 08940, 08944, 08945, 08946, 08947, 09005



Digital Treasures is a division of PC Treasures, Inc., 3720 Lapeer Rd., Auburn Hills, MI 48326 • (248) 236-0061 • www.digitaltreasures.com • Made in China
 Bluetooth and the Bluetooth logo are registered trademarks of Bluetooth SIG, Inc. All rights reserved. Digital Treasures, the Digital Treasures logo, PC Treasures, Lyrix, the Lyrix logo, PowerBall, and the PowerBall logo are trademarks or registered trademarks of PC Treasures, Inc. © 2014 PC Treasures, Inc. All rights reserved. LyrixPowerBall_MAN_9-14