

# User Manual

Product Name: Super Bed Shaker

Model: SS-201

Brand: SERENE, Aurismed, Amplicomms

Manufacture: INTELLI INNOVATIONS(USA), LTD


## Super Bed Shaker Model SS-201



Bluetooth®

### Feature Identification:

1. "RESET/SNOOZE"
2. Power ON /OFF
3. Bluetooth® Indicator
4. Low Battery/ Charge Indicator
5. Charger Port

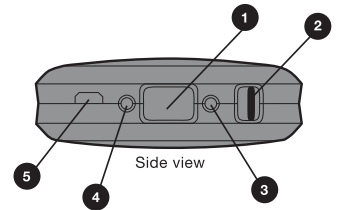

### Download APP:

1. Go to APP Store or Google Play and search for the "Super Bed Shaker App by Serene Innovations".
2. Download the free App on your iOS or Android device.

### Purpose:

The free App comes with a built-in alarm clock function. SS-201 provides vibrating notification on alarm clock, text messaging and other social media App's. Alarm settings will be remembered if its power stays on. Built-in battery can last up to 45 days on a full charge.

### Pairing Super Shaker to your Smartphone:

1. Turn **ON** your smartphone's Bluetooth® function and open the Super Bed Shaker App.
2. Turn **ON** the power switch Super Bed Shaker unit.
3. The App will search for the Super Bed Shaker unit.
4. Press "**Pair**" on smartphone when prompted. When successful, the Bluetooth® indicator on the Super Bed Shaker unit will blink once every 6 seconds, and the Super Bed Shaker App banner will turn green

5. If the Super Bed Shaker App banner is Red and displayed "**Not Connected**", pairing has failed. Repeat the process.

### Setting Up Alert Notifications:

#### Follow the App to:

1. Select Language
2. Set Alarm Times
3. Select Notifications for:
  - Incoming Call
  - Text/SMS/Email
  - Social Media App's:  
Facebook, Twitter, Skype,  
Whatsapp, etc.)

### Super Bed Shaker's Vibrating Alerts:

#### 1. For incoming calls:

It vibrates 10 times. Press the "**RESET/SNOOZE**" button once on Super Bed Shaker or answer the call on your smartphone to end vibration.

#### 2. For text and Social Media Notifications:

It vibrates 3 times. Press the "**RESET/SNOOZE**" button once on the Super Bed Shaker to end vibration.

#### 3. For Alarm Clock Alert:

It vibrates for about 85 seconds. To activate snooze, press the "**RESET/SNOOZE**" button once on the Super Bed Shaker. After 5-minutes, the alarm will start again, you can repeat this process a maximum of 8 times for each alarm. To stop vibration and this alarm for the day, press and hold the "**RESET/SNOOZE**" button for 2 seconds, or from the App, drag the "**OFF**" button from right to left as it appears on smartphone.

### FCC Caution.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.