

WARNING: ONLY USE PROVIDED USB CABLE FOR CHARGING

Each blade has a letter on it. Match the blades with the corresponding letter on

Turn off the drone before charging.

Connect connector to power source.

Note: The red rear lights will light up while

when the battery is fully charged. Charge

the battery is charging and will turn off

time is approximately 120 minutes.

Connect the Battery Charger to the charge port

Auto Orientation

PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY

This drone weighs 0.20lbs (93g). As of November 2017, the Federal Aviation

Federal, state and local laws regarding operation is an owner's sole responsibility.

Administration (FAA) requires registration of unmanned aircrafts weighing more than

0.55lbs. Visit www.faa.gov/uas/registration for more information. Ongoing compliance with

QUESTIONS OR CONCERNS?

LEASE GIVE US A CALL ... WE'RE HERE TO HELP

**CUSTOMER SUPPORT (800) 374-2744** 

Before calling please locate the 10-digit code printed on the back of your remote  $% \left( 1\right) =\left( 1\right) \left( 1\right)$ 

**FAA WARNING** 

Practice flying your drone at heights below 10 feet and at low speed until comfortable with all controls to avoid unnecessary damage or injury.

Left stick:

Up/down controls elevation

• Right stick: - Controls flight direction

To power down the drone, hold the left stick down.

- Left/right controls spin

Trim: - Reduces drone drift