

## CONTENTS AND BATTERY INSTALLATION

### Contents

- 1 RC Drift Racer XL
- 1 Remote Control

### Battery Installation

 
The vehicle requires 5 AA 1.5V batteries (not included) and the remote control requires 3 AAA 1.5V batteries (not included).

#### Drift Racer

Use a Phillips-head screwdriver to loosen the screw in the battery cover on the bottom of the vehicle. Insert the batteries as indicated in the diagram. Replace the battery cover and tighten the screw.

#### Remote Control

Use a tool to press and hold the battery release button on the back of the remote control. Slide down the battery cover. Insert batteries as indicated in the diagram. Slide the battery cover back into place securely.

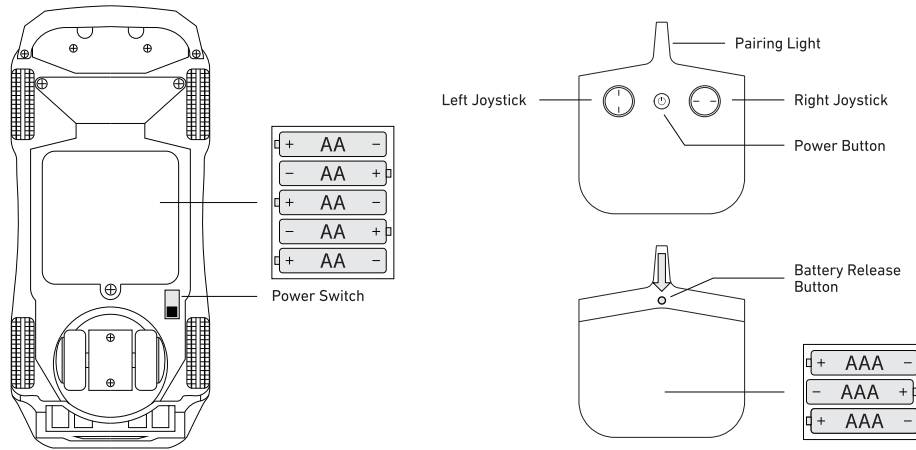

## PLAY

 
### START UP

1. Slide the power switch on the bottom of the vehicle to the on position.
2. Place the vehicle on level ground with plenty of room to drive without obstacles.
3. Press the power button on the remote control.
4. Wait for the pairing light on the remote control to quit blinking. The pairing light will turn off when the remote control and vehicle have been successfully paired.
5. Control the vehicle using the left and right joysticks. Have fun drifting!


### DRIVING

1. Press the left joystick forward to move forward or pull it back to move in reverse.
2. Press the right joystick left or right to turn when driving forward or in reverse.
3. Make sharp turns left or right to drift and slide around turns.


### Forward/Backward

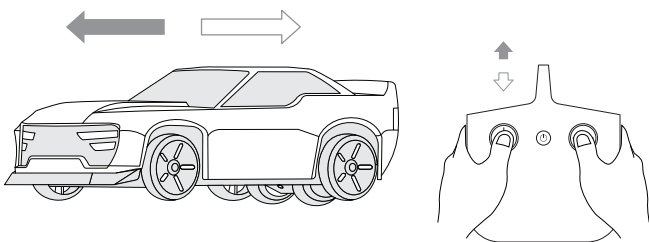

### Turn Left or Right (Forward)

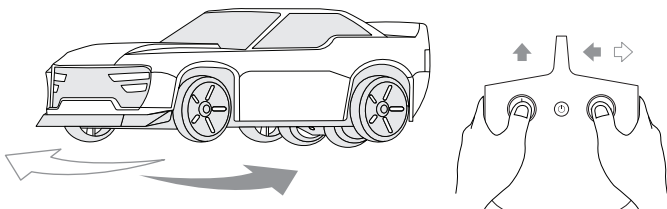 

### Turn Left or Right (Reverse)

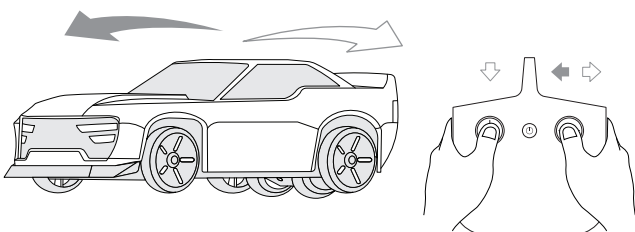 

## SAFETY WARNINGS

- Adult supervision required.
- Do not drive towards or in close proximity to people or animals.
- Never operate your vehicle in inclement weather, rain, or standing water.
- Keep fingers, hair, and loose clothing away from wheels while vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Adult supervision is recommended when operating the vehicle.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

## BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## WARNING:

CHOKING HAZARD - Small Parts. Not For Children Under 3 Years of Age.

Model No.: 1016928

Sharper Image® name and logo (including the 77 Logo) are trademarks or registered trademarks. Distributed by and © 2022 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE. Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.

FOR CUSTOMER SUPPORT, PLEASE CALL

**1-800-374-2744**