

Video recordings: Select Video mode on your Smartphone. Next push trigger button **5** on selfie stick. Video recording commences.



With some Smartphones video recording commences automatically once the video mode has been selected. Using the trigger button additional photos can be taken during video recording.

Switch off: When no longer using the selfie stick switch selfie stick off using ON/OFF switch **5**.



Once the selfie stick has not been used for 10 minutes, the Bluetooth® connection is automatically interrupted.

Charging: The battery of the selfie stick can be charged from the USB port of a computer, using the supplied USB charging lead **3**. During charging, the LED **10** is permanently red. The LED is switched off once the battery has been fully charged.

Declaration of conformity



The EC Declaration of Conformity can be requested from the address specified on the Warranty card (at the end of these Instructions).

The EC Declaration of Conformity can be requested from the below address.

The Manufacturer hereby declares that the CE marking was applied to the product in accordance with the basic requirements and other relevant provisions of the following European Directives:

2011/65/EC RoHS Guideline

2014/53/EU RED Guideline

2012/19/EU WEEE Guideline

supra

Foto-Elektronik-Vertriebs-GmbH

Denisstr. 28A, 67663 Kaiserslautern, Germany

Disposal

Dispose of packaging



For disposal, separate packaging into different types. Cardboard and board must be disposed of as paper and foil must be recycled.

Disposal of used device

(Applicable in European Union and other European countries using systems for separate collection of recyclables)



Do not dispose of used devices in household waste! If the selfie stick can no longer be used each consumer **is legally obliged to dispose of used head sets separately from domestic waste**, e.g. at a collecting point of the municipality/district. This ensures that used equipment is recycled correctly and that negative effects on the

environment are avoided. Electrical equipment is consequently marked with the adjacent symbol.

Batteries and storage batteries may not be disposed of in domestic waste.



As a consumer you are legally obliged to correctly dispose of all batteries and storage batteries irrespective of whether they contain contaminants or not at a collection point of your municipality/council or in shops, ensuring an environmentally friendly disposal. Prior to disposal, the integrated batteries must first be removed and disposed of separately from the housing. Never remove batteries yourself. This could lead to injuries. Contact the dealer from whom you bought the device or take it to the collection and returns point of your local council

*marked with: Cd = Cadmium, Hg = Mercury, Pb = Lead

Removing the battery

Never remove batteries yourself but have batteries removed by a qualified expert at your disposal point.

Remove Bluetooth® module **7** from selfie stick to access battery. The housing of the Bluetooth® module **7** can now be opened, allowing removal of the battery (see **Fig. C**).

Advantages

- Compatible with Android and IOS systems.
- No Apps have to be installed, allowing immediate operation after connection.
- A combination of selfie stick and Bluetooth® remote control.
- Even without attaching the Smartphone to the selfie stick, pictures can be taken within a 10 m range (without obstacles).
- Containing integral rechargeable Lithium-Ion battery.

Technical specification

Model:	BSS-930
Max. load:	1000 g
Length:	13 to 36 inches
Sections:	4
Weight:	170 g
Bluetooth® standard:	3.0
Battery:	3.7 V /50 mAh Lithium-Ion battery
Charging voltage:	5V , 10 mA
Charging time:	approx. 1 hour
Standby time:	up to approx. 100 hours with fully charged battery
Operating temperature:	+5° C to +40° C
Supported systems:	IOS 6.0 or higher, Android 4.1 or higher
Compatible devices:	Apple: iPhone 4, 4S, 5, 5S, 5C, 6, 6S, 6 plus, SE Samsung: S3/S4/S5/S6; Note 2/3/4, A3/A5/A7, G3568V, G3606, E7000, N9100, 5108, G5308W, G7109, 7200, 67106, 67108, 67508, 3588V, A7000, 9106, I9152



We reserve the right to make technical and optical changes to the product as part of product improvements.

The Bluetooth® brand name and the logo are registered trademarks of Bluetooth® SIG, Inc. and any use of these brands by **supra** Foto-Elektronik-Vertriebs-GmbH will be under license. Other brands and brand names are the property of the respective owners.

FCC Rules

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

User Manual

MAGINON SELFIE STICK WITH BLUETOOTH®



DISTRIBUTED BY • DISTRIBUIDO POR:

ALDI INC., BATAVIA, IL 60510
www.aldi.us

AFTER SALES SUPPORT • SERVICIO POSVENTA

1 800 270 5071

info@supra-electronics.com

MODEL/MODELO:
BSS-930

51370




11/2016

3
YEARS WARRANTY
AÑOS DE GARANTÍA

V1.0.US



USER-FRIENDLY
Manual
ID: #07177

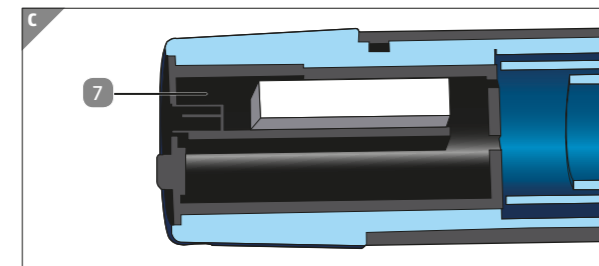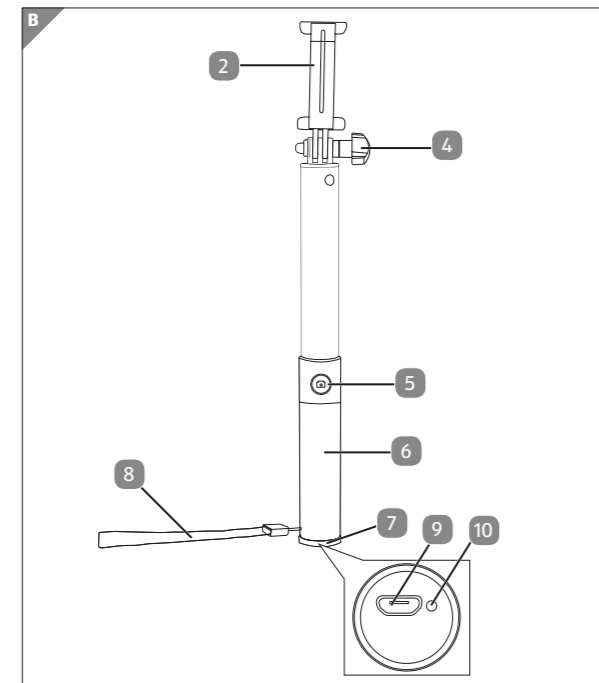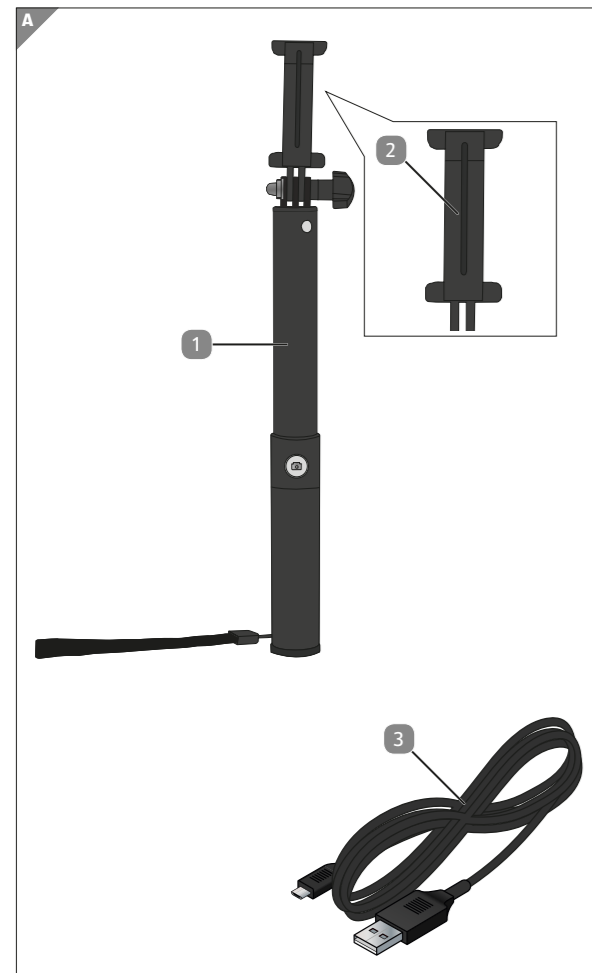


Scope of supply / camera parts

- | | |
|----------------------------------------|------------------------|
| 1 Maginon selfie stick with Bluetooth® | 6 Handle |
| 2 Smartphone holder | 7 Bluetooth® module |
| 3 USB charging lead | 8 Wrist strap |
| 4 Fixing screw | 9 Micro USB connection |
| 5 Triggering key and ON/OFF switch | 10 Status LED |

General

Read and keep instructions

 These Operating Instructions belong to this selfie stick. They contain important information about the start-up and handling.

Study these Operating Instructions and, in particular the Safety information in detail prior to using the selfie stick. Non-observance of these Operating Instructions can lead to damage to the selfie stick.

These Operating Instructions are based on valid standards and regulations of the EU. Also observe specific guidelines and laws in other countries!

Keep Operating Instructions for further use. When passing on the selfie stick to third parties please also include these Operating Instructions.

Safety

Correct use

The selfie stick is designed to be solely used as a selfie stick. It is only suitable for private and not for commercial use.

Only use the selfie stick as described in the operating instructions. Any other use is deemed to be incorrect and can cause material damage.

The manufacturers or dealers do not accept any liability for damage resulting from improper or incorrect use.

Safety information



Danger of electrocution!

Faulty electrical installations or excessive mains voltage can cause electrocution.

- Only connect the selfie stick to an easily accessible socket allowing quick disconnection from the power supply in case of a fault.
- Do not operate selfie stick in case of visible damage or if the USB charging lead is defective.
- Do not use USB charging lead of selfie stick if damaged.
- Never immerse selfie stick or USB charging lead in water or other fluids.
- Do not expose the selfie stick with integral battery and USB charging lead to extreme heat, such as a sun, fire or hot surfaces.
- Do not kink USB lead and do not install it over sharp edges.
- Ensure that children do not push objects into the selfie stick.
- Do not leave selfie stick unintended during charging.

- Keep packaging foil away from children. They could get caught in it during play and could suffocate.

NOTE!

Danger of material damage!

Incorrect use of the selfie stick can damage the selfie stick.

- Never place selfie stick on or near hot surfaces (e.g. stove tops, etc.).
- Ensure that USB charging lead does not come into contact with hot parts.
- Never expose selfie stick to excessive temperatures (heating, etc.) or weather conditions (rain, etc.). Never pour liquid into the selfie stick.
- Do not use selfie stick if plastic or metal parts of the device show cracks or tears or are deformed. Replace damaged parts only with original spare parts.
- Damage to the electronics or accessory caused by external influences such as impacts, falls or others are not covered by the warranty and are chargeable.
- Do not use chemical solvents to clean selfie stick.
- Do not apply any acidic substances or varnishes to product.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Start

Check contents of box

NOTE!

Material damage!

If the packaging is carelessly opened with a sharp knife or other pointed objects, the product can be easily damaged.

- Please open packaging carefully.
 1. Check that delivery is complete (see Fig. A).
 2. Remove selfie stick from packaging and check whether the equipment or parts are damaged. If they are, do not use the selfie stick. Contact the service address of the manufacturer listed on the Warranty card.

System requirements

This product supports systems IOS 6.0 or higher and Android 4.1 or higher. As Android is an Open Source system, every manufacturer can determine their own key assignment.

Consequently no picture can be taken with some Smartphones/tablets, using the original camera app. In this case check whether the camera has a setting option that can activate the trigger on the volume control. In some Smartphones this function is disabled and can be activated by ticking this option. If this setting is not available in the camera app, install an alternative camera app from the "Play Store", such as "SelfieShop Camera" (from another provider), offering this option under settings.

Use

Assembly: Fold up top part of Smartphone holder **2** until your Smartphone can be inserted in the Smartphone holder **2**. The upper part of the smartphone-holder can be adjusted by pulling it slightly to fit for larger smartphones.



Danger of crushing hazard!

When you assemble the holder and the stick, make sure that your hand won't get squeezed.

Switch on/connect: Switch on selfie stick by pressing and holding the ON/OFF-Trigger-Switch **5** for a few seconds. The blue ON/OFF LED **5** flashes quickly. Open the Bluetooth® menu of your Smartphone and select the Search option to find the signal of a new Bluetooth® device. The selfie stick appears under the name "Maginon selfie" in the list of Bluetooth® devices. Select "Maginon selfie" from the list.



If a password is requested when setting up the Bluetooth® connection enter "0000".

The Bluetooth® connection is now automatically established. Once the selfie stick has been successfully connected to your Smartphone the blue ON/OFF LED **5** on the selfie stick flashes more slowly.

Taking photos: Once the Smartphone and selfie stick are connected, open the camera app on your Smartphone. You can now take photos by pushing the trigger button **5** on the selfie stick

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.