

Wireless mini keyboard

Art.no


Model KG8004

Please read the entire instruction manual before use and save it for future reference. We reserve the right for any errors in text or images and for making any necessary technical changes to this document. If you should have any questions concerning technical problems please contact our Customer Services.

Product description


- Wireless mini keyboard with optical trackball and integrated mouse buttons.
- Range: up to 15 m.
- Compatible with Windows 7 (32/64-bit), Vista (32/64-bit) and XP.
- Comes with USB receiver and batteries.

1. Left mouse button
2. Right mouse button
3. Optical trackball
4. ON/OFF switch
5. USB receiver (under the battery cover)
6. Battery compartment
7. Battery cover

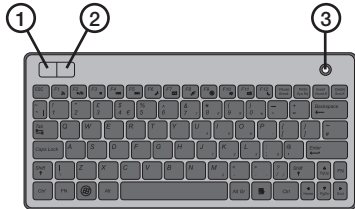

System requirements

- USB port
- Windows XP/VISTA/Win 7

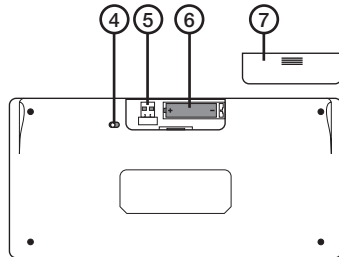

Contents

- Wireless mini keyboard
- USB receiver (stored in the battery compartment under the keyboard)
- 2 x AAA/LR03 batteries
- Instruction manual

Installation

1. Slide the battery cover (7) in the direction of the arrow and remove it.
2. Insert the batteries according to the markings in the battery compartment.
3. Remove the USB receiver (5) and replace the battery cover.
4. Set the on/off switch (4) to **ON** to activate the keyboard.
5. Connect the USB receiver (5) to an available USB port on your computer.
6. The computer will detect and install the drivers automatically. A message window will appear once installation is complete.

Operation

1. Changing between numerals and letters:
Depress [FN] and then press [Insert Num LK] to activate the numerical function keys [0] – [9], marked with blue.
Keep [FN] depressed the entire time you want to use the numerical function.
Release [FN] to return to normal letter functioning.
2. Using the blue marked function keys for adjusting audio, e-mail, etc.
E.g. To increase volume: Depress [FN] an then press [F11].

Turn off the keyboard with the ON/OFF switch (4) to save the battery, if it is not to be used for a while.

Care and maintenance

Use a vacuum with a brush attachment for cleaning. Dust and debris can be blown clean with low pressure compressed air. Never use strong solvents or cleaning agents.

Troubleshooting

1. Restart the keyboard by moving the ON/OFF switch (4) from **ON** to **OFF** and back to **ON**.
2. Make sure the batteries are good and that they are correctly inserted.
3. Make sure the USB receiver is connected to a functioning USB port.
4. Matching the receiver and keyboard again via pressing the three keys together: ESC;key 1;key ahead of backspace
When the green LED starts flashing ,pls insert the USB receiver into any port available on PC/ Notebook within 10 seconds,place the keyboard around the USB receiver within 30cm to enter the pairing connection.
Upon the successful pairing, the LED Indicator stops flashing

Disposal

When it is time to dispose of this product, do so in accordance with local regulations. If you are unsure how to proceed, contact your local authority.

Specifications

Frequency range	2.4000–2.4835 GHz
Range	Up to 15 m
Power supply	2 x AAA/LR03 batteries (1.5 V), alkaline batteries recommended.
USB Interface	1.1
Size (W x H x D)	265 x 127 x 17 mm

Note:

- Other wireless equipment using the same frequency can reduce the transmission range.
- The range of all wireless equipment depends on the type of obstacles located between the transmitter and the receiver (e.g. a concrete wall will interfere with the signal more than a plasterboard wall).

If you experience problems, try the following:

- Turn off any existing wireless equipment to see if that could be causing the problem.
- Move the wireless equipment and/or shorten the distance and reduce the number of obstacles (walls, furniture, etc) between the transmitter and receiver.

FCC NOTE

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.