



USER GUIDE

MD-SPBT01

Bluetooth Speaker

Before using your new product, please read these instructions

Modal MD-SPBT01 Bluetooth Speaker

Contents

Introduction	2
Features	3
Setting up your speaker.....	7
Using your speaker	7
Troubleshooting	9
Specifications.....	9
Legal notices	10
One-Year Limited Warranty.....	11

Introduction

Congratulations on your purchase of a high-quality Modal product. Your MD-SPBT01 represents the state of the art in Bluetooth speaker design and is designed for reliable and trouble-free performance.


Features




- Compatible with most MP3 players, computers, mobile phones, and tablets.
- Pairs and plays in seconds using a Bluetooth wireless connection. Up to 33' range offers flexible use.
- Built-in rechargeable lithium-ion battery, providing up to 5 hours of battery life.
- Battery level monitor that shows the battery level on your Apple/ iOS devices (currently this feature is not available on Android devices).
- Lightweight design offering easy portability.
- 3.5 mm line input providing a simple input connection.



Package contents

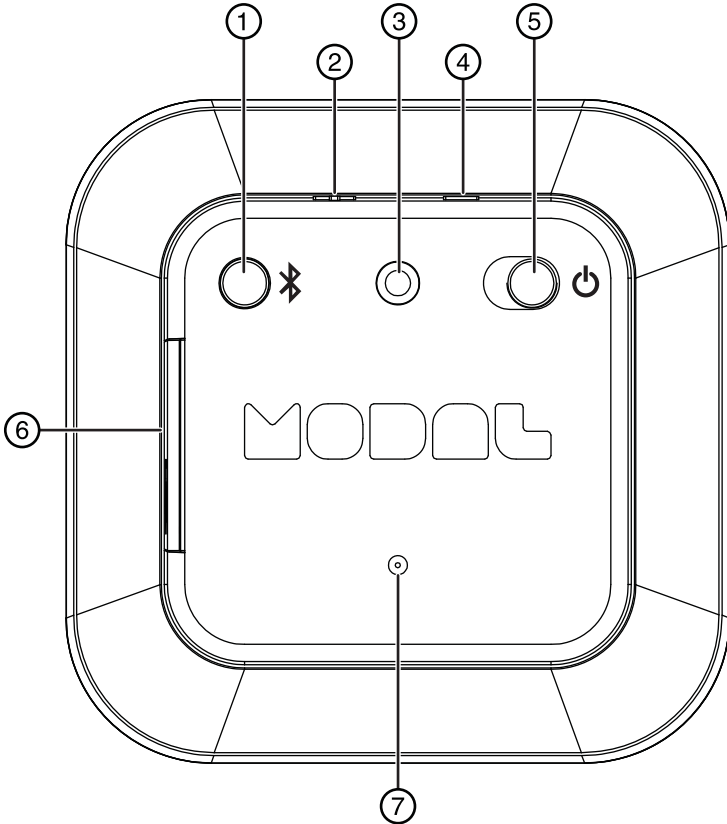- Bluetooth speaker
- USB charging cable
- *Quick Setup Guide*


Top view



Number	Component	Function
1	Multi-function button ()	<p>In power-on state, press and hold the button for more than two seconds to enter into pairing mode. The LED alternates blinking red and white.</p> <ul style="list-style-type: none"> • When the phone rings, quickly press the multi-function () button to answer the phone call. • To end a call, press the multi-function () button twice. <p>Note: For Android users: make sure that the "Phone Audio" function is active in the Bluetooth settings. For more information see "Pairing your speaker with a Bluetooth device" on page 7.</p>

Number	Component	Function
2	+	Volume Up
3	AUX IN jack	Plug an external audio device into this jack. The default source for this speaker is Bluetooth. If a cable is inserted into this AUX IN jack, the source is automatically switched to AUX IN. Unplug the cable and the source automatically switches back to Bluetooth.
4	-	Volume Down
5	⏻ (power) button	<ul style="list-style-type: none"> Slide the switch to the right  to power on the speaker – LED ON (red/white LED blinking to enter auto pairing mode). Slide the switch to the left  to turn the speaker off – LED OFF. <p>When power is on, the unit automatically connects to the last paired Bluetooth device within six seconds. If the last paired Bluetooth device is not in range, the unit automatically searches for another device to pair to.</p>
6	USB port	Plug the USB cable into this port.
7	Status indicator LED	<p>Power</p> <ul style="list-style-type: none"> LED is white when the speaker is turned on. LED is off when the speaker is turned off. <p>Charging</p> <ul style="list-style-type: none"> When the speaker is off, the LED is red while charging. After charging is complete, the LED turns off. When the speaker is on, the LED is solid red while charging. After charging is complete, the red LED turns off and the white LED turns on. <p>Other</p> <ul style="list-style-type: none"> No Bluetooth connection, the white LED flashes slowly. Bluetooth is in pairing mode, the white and red LEDs alternate blinking. Successful Bluetooth connection, solid white LED. The white LED blinks quickly when increasing/decreasing the volume. When the minimum/maximum volume is reached, the LED is solid white. The LED quickly blinks red when the battery is low. The speaker remains on for approximately 10 more minutes.

Side views

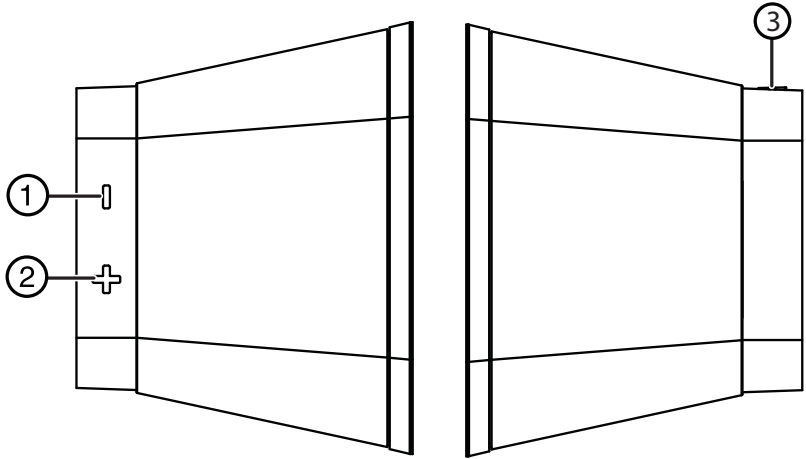

Number	Component	Function
1	— (volume down)	Press to decrease the volume.
2	+ (volume up)	Press to increase the volume.
3	Micro-USB port.	Plug the USB cable to charge battery


Setting up your speaker

Charging your speaker

When your speaker's battery is low, the red LED blinks.

To charge your speaker:

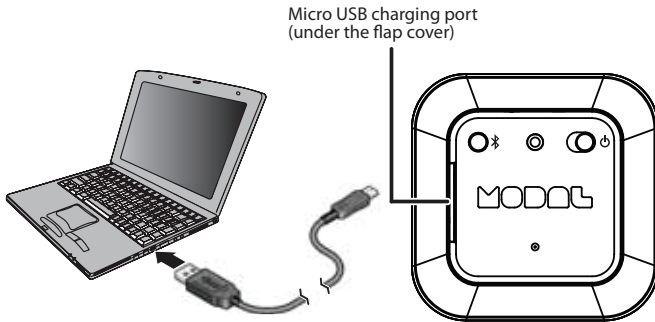

- Connect the charging cable to your Bluetooth speaker and to an available USB port on your computer or a USB charging station.



Using your speaker

Turning your speaker on and off


To turn your speaker on and off:

- 1 Slide the  (power) switch to the right to turn your speaker on.
- 2 Slide the  (power) switch to the left to turn your speaker off.

Pairing your speaker with a Bluetooth device

Note: Bluetooth range is 33 feet (10 meters).

To pair your speaker with a Bluetooth device:

- 1 Press and hold the multi-function button () on your Bluetooth speaker until the white and red LED indicators blink.
- 2 Enter pairing mode on your Bluetooth device, then select "Modal MD-SPBT01" from the list to pair.

Note: For more information on entering pairing mode, see the instructions that came with your Bluetooth device.

- 3 To unpair, turn off Bluetooth on your Bluetooth device.

To pair your speaker with an Android Bluetooth device:

- 1 Open **Settings**, then open **Wireless and Network**.
- 2 Open **Bluetooth Settings** and turn on Bluetooth.
- 3 Press and hold the multi-function button () on your Bluetooth speaker until the white and red LED indicators blink.
- 4 Search for devices and select **Modal device** or **MD-SPBT01** from the list to pair and connect with.
- 5 Once paired and connected with the MD-SPBT01, touch and hold the paired device name (MD-SPBT01) until the sub-menu screen appears. Select **Options**.
- 6 When the *Options* menu opens, select **Phone Audio**. Make sure that the **Media Audio** option is also selected. Audio from your phone will now be routed through your Bluetooth speaker.
- 7 To unpair, turn off Bluetooth on your Android Bluetooth device.

Connecting other devices


To listen to audio from a non-Bluetooth device:

- Connect a 3.5 mm audio cable (not included) from your speaker to your audio device.

Controlling volume and playback

 

To control volume and playback:

- 1 Use the controls on your audio device to play, pause, and select tracks.
- 2 Press **Volume +** or **Volume -** to raise or lower the volume (make sure that the volume level on your Bluetooth device is at least 50%).
- 3 Turn your Bluetooth speaker face down to mute the sound.

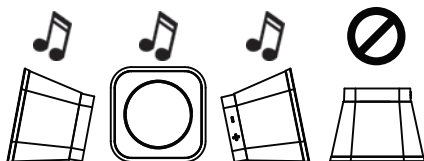

Using the speakerphone

To use the speakerphone when your Bluetooth speaker is paired to your phone:

- 1 Press the multi-function button () on your Bluetooth speaker once.
- 2 Press **Volume +** or **Volume –** to raise or lower the speakerphone volume.
- 3 Turn your speaker face down to end the call.
- 4 To end a call, press the multi-function button () on your Bluetooth speaker twice or a volume button (+ or –) twice.

Storing your cables

To store your cables:

- Insert the end of the charging cable into the USB storage slot, then wrap the charging cable around the base of the speaker.

Specifications

Dimensions (LxWxH)	3.7 x 3.7 x 2.9 in. (94.21 x 94.21 x 73 mm)
Frequency	100Hz - 20KHz 3W of power with 1% THD
Weight	7.65 oz. (217 g)
Bluetooth range	33 ft. (10 m)
Supported Bluetooth profiles	A2DP, HFP

Legal notices

FCC Statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Interference Notice

Bluetooth products are a radio device that might cause interference with other non-Bluetooth devices (for instance, devices using wireless LAN). 802.11b technology might cause degradation on the performance of Bluetooth devices.

Caution:

- To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.
- This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Department of Communications-Canada

Canadian Compliance Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Cet équipement est conforme à l'exposition aux rayonnements Industry Canada limites établies pour un environnement non contrôlé."

MD-SPBT01 10

One-Year Limited Warranty

Modal Products (“Modal”) warrants to you, the original purchaser of this new **MD-SPBT01** (“Product”), that the Product shall be free of defects in the original manufacture of the material or workmanship for one (1) year from the purchase of the Product (“Warranty Period”). This Product must be purchased from an authorized dealer of Modal brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Modal during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

How long does the coverage last?

The Warranty Period lasts for one year (365 days), beginning on the date you purchased the Product. The purchase date is printed on the receipt you received with the product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Modal repair center or store personnel, Modal will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Modal and are not returned to you. If service of Products and parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Modal Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident

- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the Product, including the antenna

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Modal to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. MODAL SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. MODAL PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Modal:
www.modalproducts.com

Distributed by Best Buy Purchasing, LLC
 7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645
 © 2013 Best Buy Enterprise Services, Inc.

All rights reserved. MODAL is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

MODAL™

www.modalproducts.com

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN 55423-3645 USA

© 2013 Best Buy Enterprise Services, Inc.

All rights reserved. MODAL is a trademark of Best Buy Enterprise Services, Inc.
All other products and brand names are trademarks of their respective owners.

V1 ENGLISH 13-0842