

SAFETY PRECAUTIONS:

- Do not use the product near small children or animals; the detachable head can pose a choking hazard.
- Adult supervision is recommended at all times.
- Avoid water, sand and snow when operating your vehicle. Never submerge any portion of the product in water.
- Never leave the product near sources of heat, under direct sunlight or outside overnight as this is harmful to internal components.

BATTERY WARNING:

- Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
 - Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire, as they may leak or explode.
 - Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
 - Always use, replace, and recharge (if applicable) batteries under adult supervision.
- KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2905041 (33706)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2014 MerchSource, LLC. Blue Hat Toy Company, Blue Hat Toy Company logos are trademarks of MerchSource, LLC, used under license. All rights reserved. Distributed by MerchSource, LLC, Irvine, CA 92618.

China Patent No. ZL201330161104.7; PATENT PENDING

For technical support, please visit www.merchsource.com or call 1-800-374-2744


The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published, or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notices from this package.

OPERATING INSTRUCTIONS


Each robot requires 3 "AAA" 1.5V batteries (not included). Each remote control requires 1 9V battery (not included). When changing batteries, adult supervision is required. Use alkaline batteries for best performance.

1. Carefully remove items from the package.
2. Locate the battery compartment on the back of each robot, as well as each remote.
3. On robots, loosen the screws and remove battery doors. Side doors open on rc units.
4. Insert "AAA" batteries inside robots while observing the correct polarity in each compartment (see diagram). Insert one 9V battery into each remote control.
5. Replace the battery doors and tighten screws.
6. Switch robot and remote control power switches to the "ON" position. The power switch is located on the side of the robot(s).

NOTE: Before use, adjust the robots to make sure both feet have good contact with the ground before use. Use on a hard, flat surface for best results.

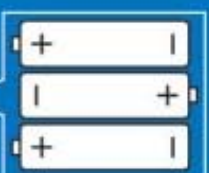

Each robot requires 3 "AAA" 1.5V batteries (not included).

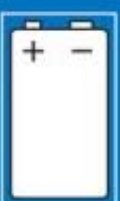

Remote requires 1 9V battery (not included).



LEFT JOYSTICK

RIGHT JOYSTICK

OPERATING CONTROLS

- Press both buttons up to move forward.
- Press both buttons down to move backward.
- Press left lever to move left and back.
- Press right lever to move right and back.
- Press the left lever up and the right lever down to spin clockwise.
- Press the left lever down and the right lever up to spin counter-clockwise.

HOW TO PLAY

There are sensors located beneath each robot's chest plate. The object of the game is to knock the opposing boxer's head off by making contact with the chest (thus ejecting the robot's head). To replace the head, place it face forward onto the neck and gently press down until it clicks into place.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.