VIDEO STREAMING DRONE

GETTING TO KNOW YOUR DRONE

PLEASE READ ALL WARNINGS AND INSTRUCTIONS PRIOR TO USE. KEEP THIS DOCUMENT AS IT CONTAINS IMPORTANT INFORMATION ABOUT YOUR DRONE.



- Drone must be charged before each use (USB Charge Cable included) Indicator light will turn off once fully charged Install batteries in remote

- "Mission Limits American State State

- White lights indicate the front of the drone Red lights indicate the back of the drone Not applicable in auto-orientation mode

4. REMOTE CONTROL OVERVIEW

A. REMOTE CONTROL OVERWEW
Practice (Plang you'd rone below 10 feet and at low speeds until comfortable with all controls to avoid damage or injury
 I.adi jogatic.
 UpDown controls elevation
 Lettifyight controls spin
 Right joyatics; controls flight direction
 Direction Time; use to letiminate drift
To cut power to drone, move left joyatick to down position

QUESTIONS OR CONCERNS? PLEASE GIVE US A CALL ... WE'RE HERE TO HELP

CUSTOMER SERVICE (800) 374-2744

Before calling please locate the 10-digit code printed on the back of your remote



VIDEO STREAMING DRONE

INTRODUCTION

Congratulations on your purchase of the Streaming 2.4 GHz Video Drone. Get ready to soar to new heights. Master the art of drone flying with remote control maneuverability. This lightweight drone will provide hours of fun.

SPECIFICATIONS

Drone Battery: 650 mAh Li-po
Remote Controller Battery: 6 x 1.5V AA
Charging Time: Approximately 100 minutes
Maximum Recommended Altitude 120 ft.

TABLE OF CONTENTS

General Warnings	Page 1
Contents and Remote Battery Installation	Page 2
Charging Battery and Replacing Propellers	Page 3
Remote Overview	Page 4
Operating Drone	Page 5
Modes	Page 6
Tips and FCC Warning	Page 7

VIDEO STREAMING DRONE

READ ALL WARNINGS AND PRECAUTIONS BEFORE USE.

A SAFETY WARNINGS:

- Not recommended for children under 12 years of age. As with all electrical products, precaution should be observed during handling and use to reduce the risk of electrical shock. Adult supervision is required at all times.

 Before each use, an adult should review the product and battery to determine that no damage
- - or hazards exist.
 DO NOT TOUCH SPINNING PROPELLERS.

- of hazards exist.

 Do not illow anything to interitorially make contact in any way with spinning propellers.

 Prevent contact with spinning lades by turning off remote pror to handling drone.

 Prevent contact with spinning lades by turning off remote pror to handling drone.

 Use exaction and pay attention to your surroundings while operating drone.

 Repert drone area from insular, people for insulantice objects.

 Repert drone area from insular, people for insularities objects.

 Repert drone area from insular, people for insularities objects.

 Repert drone area from insular, people for insularities of the areas, and any other potentially hazardous areas.

 Do not operate in rain, heavy wind, and or any type of severe weather.

 Do not perate in rain, heavy wind, and or any type of severe weather.

 Do not perate in rain, heavy wind, and or any type of severe weather.

 Now touch or allow others to bouch drone while it is flying.

 Always fur drone in large open areas.

 Newer fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected cranks.

 Always use caution when flying drone vehicles, obey relevant taws, respect the privacy and property rights of others.

 
 The drone shall never be modified or used for anything except its intended purpose.



Invasion of Privacy Warning
Always be mindful of others privacy and do no record video or take images of others without their consent. Check and comply with your federal, state and local laws regarding privacy

VIDEO STREAMING DRONE

CONTENTS







Smart Phone Mount

Replacement Propellors





- Slide open battery compartment Install 6 "AA" batteries as shown in diagram
- **▲**LITHIUM-POLYMER BATTERY WARNING
- LUTHUM-POLYMER BATTERY WARNIN
 There is a risk of the and personal rejury if LPo
 satiety is purchared, damaged or misused
 Newler access better by certerne temperatures
 Do not subject battery to strong impacts
 Arways keep battery away from famermable
 materials
 Only use manufacturer specified batter(ies),
 charger(s), and/or adapters, if applicable,
 better produced to the control of the control of the control
 Battery is not controlated.
 Let battery could no come the control
 Let battery c

- charging but not manipal and before charging. never leave battery unattended While charging, never leave battery unattended Recycle or dispose of battery according to federal, state and local laws

BATTERY WARNING

Ensert batteries using the con-Only use manufacturer specifies applicable, specified by the mar Alexys use, replace, and recha

 
VIDEO STREAMING DRONE

CHARGING BATTERY

Note: The Battery Charge Cable will light up when it is charging the battery and turn off the battery is fully charged. Charge time is approximately 100 minutes.

Connect the Battery Charge Cable to the charging port on the Drone.

- Replacing Propellers
- Follow diagram
 Remove screw from top of Propeller
 Remove broken Propeller and replace
 with new Propeller
 Make sure you installed the correct
 blade. Each blade has a number
 written on it. Match the blades with
 the corresponding number on the
 drone
- 5. Insert screw into top of Propelle



J.

DRONE APP

Go to your app store on your smart phone and download the "360 Flight" application




button 2. Follow the on screen





Page 3

VIDEO STREAMING DRONE

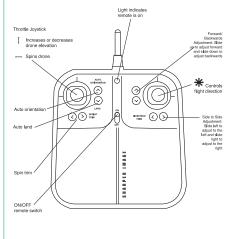

VIDEO STREAMING DRONE CUSTOMER SERVICE (800) 374-2744

Page 4

VIDEO STREAMING DRONE

INSTALLING PHONE HOLDER



OPERATING DRONE

OPERATING DROWN
Step 1 - Pre Flight Checklet
1. Read all warnings and instruction
2. Install remote batteries, page 2.
3. Make sure that drone and remote
4. Install drone holder.
5. Charge batteries, page 3.

Step 2 - Choosing a location

• Drone is designed to be flown indoors and

outdoors.

Always make sure you have enough space to fly drone.

Always follow warnings, page 1.

Always follow warnings, page 1.

Skep 3 - Starting Droves

I Meding bury por termine in cit. diske chore switch

Nesting bury por termine in cit. diske chore switch

Nesting bury por termine in cit.

Prize or denor on a filt even surface with clearance

Countries on Marke sure the cit.

I first revents on Marke sure the cit.

I first revents on Marke sure the cit.

I first revents on Marke sure the cit.

A congle control on the countries

A congle control on the countries

A congle force indicates that the done is pared.

The countries of the countries

A congle company for the turn on

On if pointing is unsuccessful, repeat steps 2-4.





 Drone drifts backwards: Press the forward Direction Trim Button. drifts forwards: Press the Backwards Direction Trim

Oncor will begin to blist, but displayed to remote and battery is low.
 Step 7 - Landing Drone of the displayed to remote and battery is low.
 Step 8 - Landing Drone of the displayed to the step of the step of



VIDEO STREAMING DRONE

Auto Crientation Button
Auto Crientation Gutton
Auto Crientation Gutton
Auto Crientation Gutton
Auto Crientation Guttall setting is off. To enter this mode press Auto Crientation button. Remote will beep hadox.
After done is accessfully pased, in Ear a helie LED light beauto intertablism will be the original forward orientation, when done is
setting and any original access as a consideration of the control original forward in the allowed to the control original forward in the control original forward i

Camera – taking pictures and creating videos

- Taking a picture- press camera ixon on app once to take a picture.

- Creating video- press video ixon on app once to take a video. Press the video ixon on app again to stop recording

Note: Auto Orientation mode is oriented to the user when pairing. If the remote is moved after pairing Auto Orientation, please follow directions above to reset Auto Orientation.

And Landing Button

* Make are you have achieved herd, balanced light, where the done is neither climbing nor descending. This mode allows you

* Make are you have achieved herd, balanced light, where the done is neither climbing nor descending. This mode allows you

* The deal also bedring height as 25-30 it.

* Press the Land button is trigger and land, Render of the deep continuously unit you on the auto land mode.

* Press the Land button is trigger and land, Render of the deep continuously unit you on the auto land mode.

* Press the Land button is trigger and land, and the continuously unit you on the auto land mode.

**NOTE: Please make sure the throttle joyatick is in the down position before exiting auto landing mode

WARNING: Changes or modifications to this unit not expressly approved by the party rauthority to operate the equipment.

TROUBLESHOOTING:
When remote switch is turned on, the remote light does not illuminate:
1) Check that betteries in the remote are installed correctly OR
2) Replace with new batteries

During drone flight, the remote LED is flashing:

1) Remote batteries are low; replace them with new batter.

TIPE
On and counts drown area based or olds. Drown glasers may become diagogat

When I fail sharings this, produce things glasers may become diagogat

When I fail sharings this produce that you are the second things gots shack in prophetics

Allowage press through I have any form with or country or when second things gots shack in prophetics

Allowage press through I have any form with or country or when second the growing and properly rights of offices.

Allowage use culture when I stign given a virialities, allowy industrial time, respect the growing and properly rights of offices.

The drown will when the member of a world or wight years the frameworld party properly rights of offices.

one and remote properly pair, but the drone will not lift-off:

1) Drone battery needs charging. Use the USB Charge Cable to connect the drone to power source.

Remote Controller and Drone can not be paired:

1) Check Point: Remote Controller must be closed to Drone, not exceed 12 feet.

This desire complies with Part 15 of the PEC Rules. Operation is subject to the following two conditions (II) this device may not cause hornful interference, and (2) this desire must accept any interference received, including interference that may cause undesired operation.

NOTE. This experies has been been for all out of a complet with the limit to act lamb displacations, answer in Part 1.6 for PCO Buts. These limits are despired in recommittee proceedings are processed in the part of the pa

FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the **drone at lea** 20cm from nearby persons.

The above including of the policy are replaced to denote, All right reserved. Collaborate by MediSource, LLC, bries, C. The above includings of the policy are probability. St appropriate and my reflect reproduced, districted, deplaced, published or used to permission. Allering, sensoring or expendituring any of the inderess. or copyright release on the purchase in a operation.
PATENT PROBEM.

Page 7