


TALK&TALK TK2 Bluetooth Headset User Manual V4

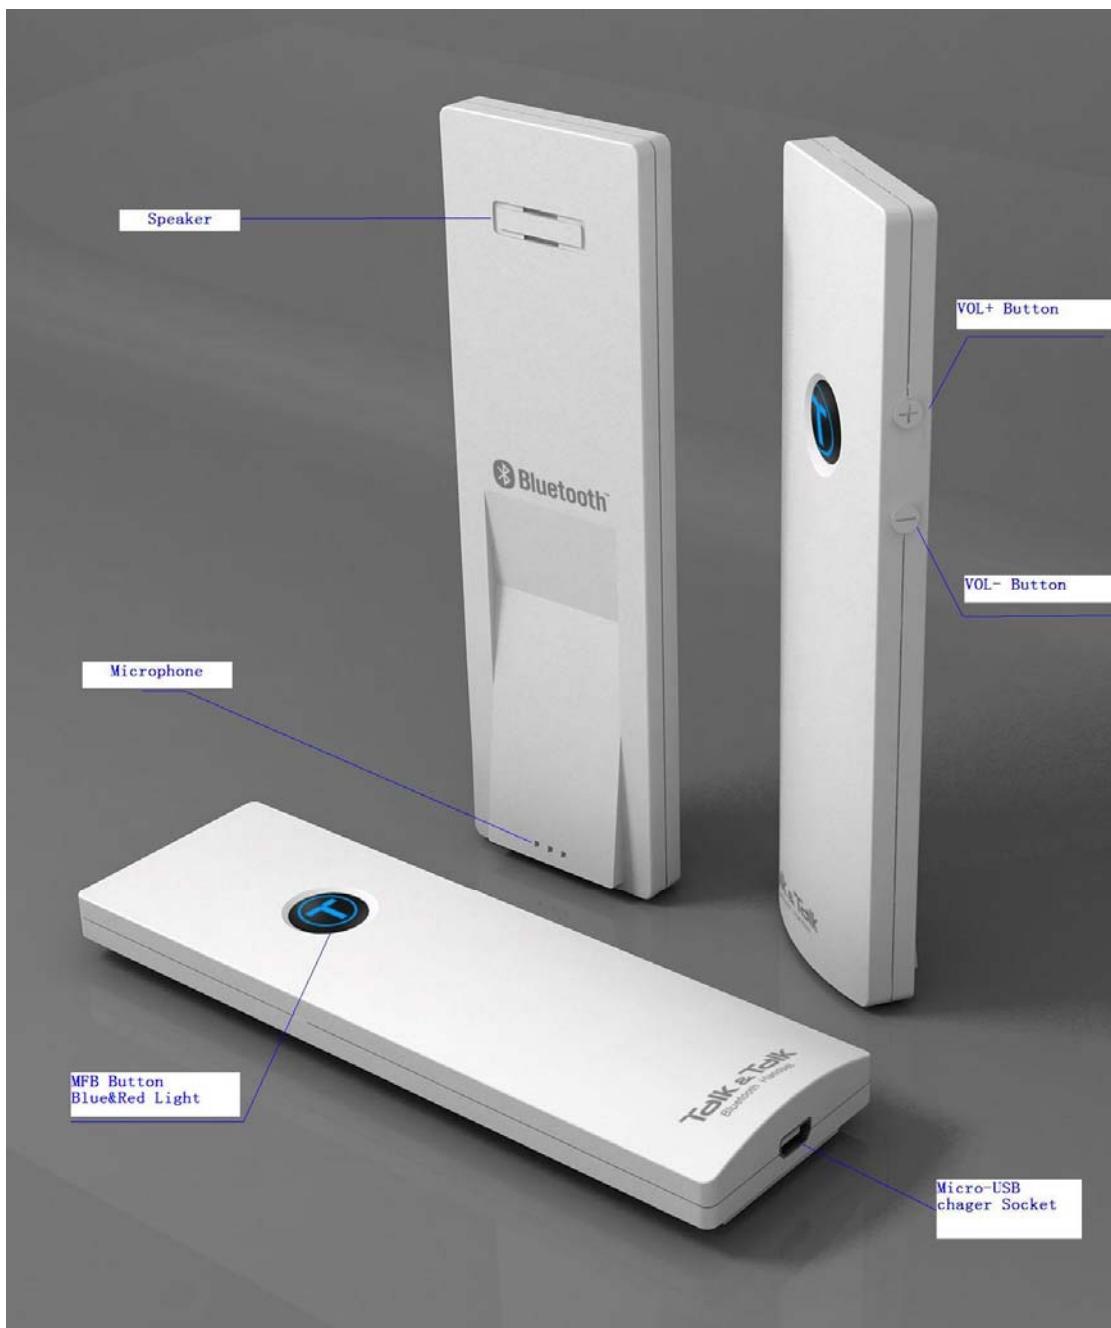

Turning your TK2 ON & OFF-----

ON

Press and hold the MFB  Button for 3 seconds, and the Blue LED will light 1 second. The TK2 will automatically connect to the previously paired Bluetooth enabled phone. If the connecting is fail, the Blue LED will flash twice per 5 seconds.

The TK2 will enter Idle mode. **And it will automatically turn off if TK2 don't connect to any Bluetooth device in 4 minutes.**

OFF

Press the MFB  Button for 4 seconds, and the Red LED will light 1 second.

Pairing

1. In power Off Mode, Press and hold the MFB  Button until you see the Blue and Red LED alternantly flash. If a Bluetooth enabled phone **or others device** don't connect to the TK2,then it will automatically **turn OFF in 2 minutes**.
2. Follow your Bluetooth enabled cell phone's instructions for searching for Bluetooth device.
3. After a successful search the Bluetooth device will be shown on your mobile phone,choose "TALK&TALK TK2" and confirm.
4. Maybe ,your mobile will request for a password,please enter "0000"
5. If it's successful. TK2 will stop flashing Red LED and light 1 time per 5S.

Quick Connect

Press and release the MFB  button in 1 second. The TK2 will try connect to the previously paired Bluetooth enabled phone. If the connecting is fail, the Blue LED will flash twice per 5 seconds. The TK2 will enter Idle mode.

Last Number Redial

When TK2 is paired with a Bluetooth enabled phone , Quick press twice the MFB  button then release it in 1 second to Redial the previously dialed the phone number on the phone.

Voice Dial

When TK2 is paired with a Bluetooth enabled phone , Quick press the MFB  button then release it in 1 second to start-up a voice dial. If you speak a voice tag(for example a personal name) ,the phone will dial out a corresponding phone number.

Answering A CALL

When there is an incoming call ,press the MFB  button then release it in 1 second to answer the call.

Reject A CALL

When there is an incoming call ,press and hold the MFB  button for 2 seconds to reject the call.

End A CALL

When the TK2 is in talking or outgoing call states, press the MFB  button then release it in 1 second

to end the call.

Transfer Audio between Phone or TK2-----

When the TK2 is in talking states, press and hold the MFB  button for 2 seconds to transfer audio between the phone or TK2.

Controlling Volume-----

Press the VOL+  or VOL-  buttons to adjust the volume .

Charging battery-----

Plug the big connector of Micro-USB cable into your USB port of your pc or others. Then plug the small connector of Micro-USB cable into your TK2 charging socket.

When you plug the USB cable for charging ,the TK2 will be Reset. But you can power-on it again in charging state.

Others: It will automatically turn off if TK2 don't connect to any Bluetooth device in 3.5 minutes.

2.4.2 Bluetooth RF Char.

항목		Test condition					min	max	unit
		Test mode	Hopping	Packet type	Payload	No. of Packet			
Average power		TX	on	DH1	PRBS9	5	-6	4	dBm
Modulation	Δf_1 avg	TX	off	DH1	BS55 BS0F	5	140	175	khz
	Δf_2 avg						115		khz
	Δf_1 avg/ Δf_2 avg						0.8		
ICFT		TX	on		PRBS9	5	-65	65	khz
Carrier frequency drift		TX	on	DH5	BS55	5	-30	30	khz
sensitivity	Single slot	Loop back	Off	DH1	PRBS9		-82	---	dBm
	Multi slot	Loop back	Off	DH5	PRBS9		-82	---	

Button functionality		
Functionalities	Status	Action
Pairing	Power Off	Ultra Long Press MFB
Pick Up	Receive a ingcoming Call	Short Click MFB
Hang Up	In-Call Mode	Short Click MFB
Reject Call	Receive a incoming Call	Long Press MFB
Last Number Redial	Standby Mode	Double Click MFB
Transfer Audio Between Tk2 and Phone	Talking mode	Long Press MFB
Voice Dial	Standby Mode	Short Click MFB
Voice Dial Cancel	Voice Dial	Short Click MFB
Volume Up	In-Call Mode	Short Click VOL+ BUTTON
Volume Down	In-Call Mode	Short Click VOL- BUTTON
Clear Paired Phone List	Standby	Short Click VOL-,VOL+ and MFB

mark:
 *MFB= Multi-Function Button
 *Short Click: Click and release less than 1 second
 *Long Press: Press and hold the key for 2 seconds
 *Ultra Long Press: Press and hold the key for more than 5 seconds
 *Double Click: Click twice within 0.5 second

LED flash pattern	
. TK2 STATES	LED status.
1. Power-On.	Blue LED flash 1 second
2. Idle(no link phone)	Blue LED flash 2 times per 5 second
3. Pairing mode	Blue&Red LED alternantly flash 1 time per 1 second
4. connected mode	Blue LED flash 1 time per 5 second
5. Talking mode	Blue LED flash 1 time per 5 second
6. Low Power	Red LED flash 1 time per 2 second
7. Clear paired phone list	Red LED and Blue LED flash 3 times in 1 second

Tone Pattern

No.	Event or Status	Tone	Remark
1	Power On	Long Dee	
2	Power Off	Long Beep	
3	Pairing successful	Short Beep	
4	Connected to Phone	Very Long Beep	
5	Pairing fail	Long Doo	
6	Enter Pairing Mode	2 Beep	
7	Last number redial out	Short Beep	
8	Incoming call	Ring tone	
9	Answer a call	2 Beep	
10	Reject a call	2 Doo	
11	End a call	Short Beep	
12	Clear paired phone list	2 Doo	
13	Transfer Audio between phone or Tk2	Short Beep	
14	Voice dial	Short Beep	
15	MAX volume	Long Beep	
16	MIN volume	Long Doo	
17	Battery voltage low	5 short Beep	
18	Disconnected to phone	2 short Beep	
19	Incoming call from the 2 nd phone	1 Beep	
20	Incoming call waiting	1 Beep	
End			

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.
SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT**

Warning:

Changes or modifications made to this device not expressly approved by HongKong AtoB Co. Ltd. may void the FCC authorization to operate this device.