

504 mm

72 mm

76 mm

## CALL

### Answer / End call

Press the Multifunction button once.

### Reject a call

Press and hold the Multifunction button for about 2 seconds.

### Redial the last call

Double-press the Multifunction button in standby mode. Your device will redial the last call number.

### Mute on/off

Press the volume "+" button for about 2 seconds to mute on/off.

### Switch between the earbuds and phone

Press volume "+" for 2 seconds during a call to switch from earbuds to your device. Repeat to return call back to the earbuds.

### Answer incoming call and end current call

While on a current call, press the Multifunction button to answer a new incoming call and hang up on the current phone call.

### Accept incoming call and put current call on hold

Press the multifunction button for 2 seconds to answer the new call and put your existing call on hold.

## MUSIC

### Music play / pause

Press Multifunction button once to play / pause music. (Some phones may require you to start a media player first).

### Skip forwards / backwards

Hold volume "+" for 2 seconds to skip forwards. Hold volume "-" for 2 seconds to skip backwards.

### Switch between call and music

If a call is made or received while playing music, the music is automatically suspended. When the call is over, the music is played automatically.

## BASIC OPERATION

### Status indicator

Function	LED status	Voice prompts
Power on	Stays blue about two seconds	Beep
Power off	Stays red about two seconds	Beep
Standby	Blinks blue twice every 5 seconds	/
Pairing	Flashes red and blue alternately	Beep
Calling	Blue light flashing	/
Battery low	Blinks red	Beep
Charging	Stays on red while charging Stays on blue after fully charged	/

### Power on

Press and hold the Multifunction button for about 4 seconds, the LED stays blue for about two seconds.

### Power off

Press and hold the Multifunction button for about 5 seconds, the LED stays red for about two seconds.

### Clear paired list

Simultaneously depress the volume "+", multifunction, and volume "-" buttons for about 5 seconds in standby mode. Earbuds will now enter pairing mode when powered on again.

### Hard reset

If the earbuds are not turned on even when fully charged or do not respond during use, follow the instructions below to reset.

1. While holding the multifunction button, plug in the earbuds to charge with the included Micro-USB cable.

2. Continue holding the Multifunction button until the earbuds turn back on. Your earbuds are now reset.

## SAFETY AND CARE

1. Using earbuds at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety.

2. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

3. Do not use earbuds in a thunderstorm, the earbuds may not work properly in the condition, and increase the risk of being hit by lightning.

4. Earbuds may not work properly in high temperature or humid conditions.

5. Do not use any corrosive cleaner/oil to clean the earbuds.

6. If the earbuds come in contact with liquids, quickly wipe away. If submerged in water, do not turn the earbuds on until completely dried.

7. Keep earbuds and packaging out of reach of children.

Note: Liquid submersion will void the warranty.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### IC:

This device complies with ICESD licence-exempt RSS standard (s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ICESD licencés aux aérails radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### ISED Radiation Exposure Statement:

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Cet appareil est conforme aux limites d'exposition de rayonnement RF ISED établies pour un environnement non contrôlé. Cet émetteur ne doit pas être co-emplacé ou fonctionner en conjonction avec toute autre antenne ou transmetteur.

### Battery:

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

BRAVEN

 
WIRELESS  
SPORT  
EARBUDS



USER GUIDE


## START HERE

### The following items are included

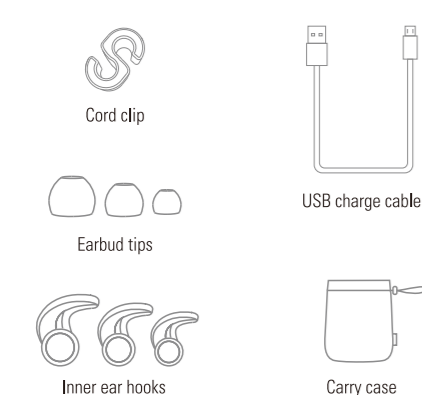

### Product overview

 
1. Volume up / skip forward
2. LED indicator
3. Micro USB charge port
4. Multifunction button
5. Microphone
6. Volume down / skip backward

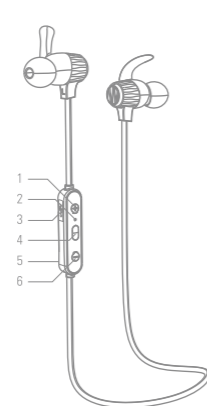

### Charging

Your new earbuds have enough power to pair and make a few calls out of the box. It takes approximately two hours to fully charge the earbuds. While charging, the battery indicator light is red. Once charging is complete, the light flashes blue.

 Note: The lifetime of the battery will be significantly reduced if your earbuds are left uncharged for a long period of time. It's recommended that you recharge your earbuds at least once per month.

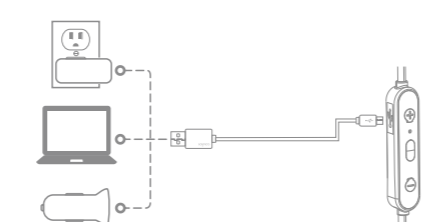

## PAIRING

### Pair one device

Note: earbuds will automatically connect to the last device they where paired to when the earbuds are on and Bluetooth is activated on the device. When the distance between the earbuds and device is beyond effective range, earbuds disconnect with phone. Earbuds will power off automatically if not active for 15 minutes.

1. Make sure the earbuds are turned off and within 1 meter of your device. Press and hold the Multifunction button until the LED indicator flashes red and blue alternately (Approximately 5 seconds), then release the Multifunction button.
2. Activate Bluetooth on your phone (see below for more details).

### iPhone

 
- a. On your iPhone, open the Settings menu.
- b. Select Bluetooth. If Bluetooth is off, turn it on. Your iPhone will search for new devices automatically.

### Android device


- a. On your device, open the Settings menu.
- b. Select Bluetooth (For older Android devices, Bluetooth is found in Wireless & Networks). If Bluetooth is off, turn it on. Select Search for Devices if your device does not automatically search for new devices.

### Windows 8 device

- a. Open your Settings menu.
- b. Select Bluetooth. If Bluetooth is off, turn it on. Your phone will search for new devices automatically.

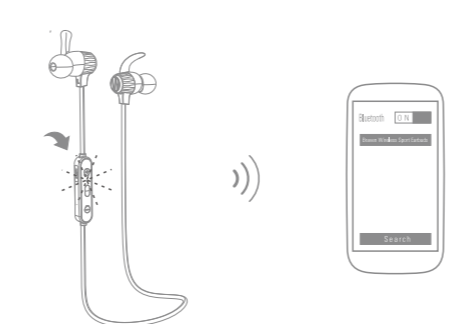

 - a. Select "Braven Wireless Sport Earbuds". If asked for a pass code, enter 0000. The LED indicator stops flashing red and blue once successfully paired. Audio cue will confirm once connected.

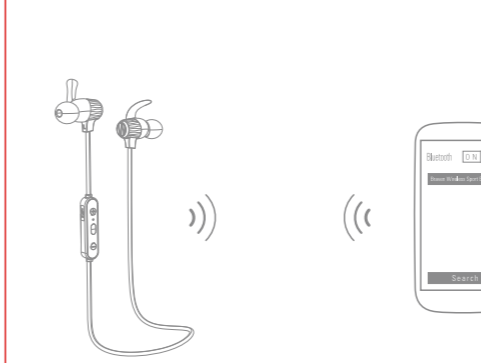

### Pairing with two devices

Multipoint technology enables you to pair headset to two devices at the same time and take calls from either:

1. Once paired with phone A successfully, turn off the earbuds.
2. Power on earbuds and repeat pairing procedure with phone B.
3. Power off earbuds.
4. Switch on headset without entering pairing mode (a short press until blue light comes on). The headset should automatically re-connect to the last connected phone (which is phone B).
5. Select "Braven Wireless Sport Earbuds" in Bluetooth settings on phone A.

Both phones should now be paired to the headset.

