

**onn.**<sup>TM</sup>



**5.1 CH Wireless Sound Bar/  
Wireless Subwoofer / Surround**  
100043839











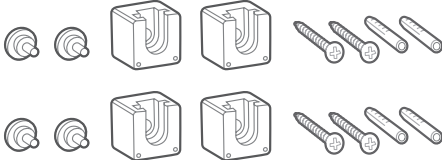
**USER MANUAL**

## Welcome

Congratulations on purchasing this Sound Bar. This product will improve and amplify the sound from your TV or MP3 player.

Please read the warning section on pages 18 & 20 carefully before using your Sound Bar.
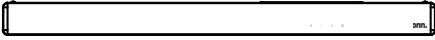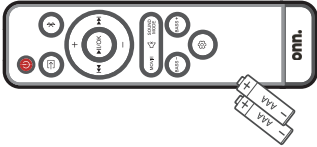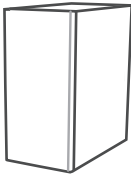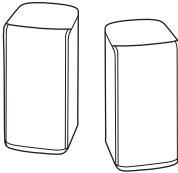
## You should have
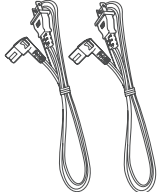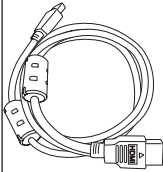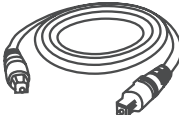
<p>Sound Bar</p> 	<p>Remote control (AAA batteries x 2)</p> 
<p>Wireless Subwoofer</p>  <p>Wireless Surround</p> 	<p>Adapter Cable</p>  <p>Surround Speaker Cable</p>  <p>Power cable</p> 
<p>HDMI cable</p>  <p>Optical cable</p>  <p>3.5-3.5mm audio cable</p> 	<p>Wall mount kit</p> 

## Need something else?

 
There are a wide range of accessories and other products that can be ordered direct to your door.

For more information see [www.walmart.com](http://www.walmart.com)

# Contents

You should have	2
Your Sound Bar	4
Wireless Subwoofer	5
Surround speaker	5
Recognis the remote control buttons	5
Prepare the Remote Control	6
Position your Sound Bar	7
Fitting the wall brackets	8
Connecting your Sound Bar	9
Mounting the Sound Bar	9
Mounting the Surround	9
Basic Operation	12
AUX / OPTICAL / HDMI Operation	14
Bluetooth <sup>®</sup> Operation	14
USB Operation	15
Troubleshooting	16
Technical specification	17
Warnings	19

## Your Sound Bar

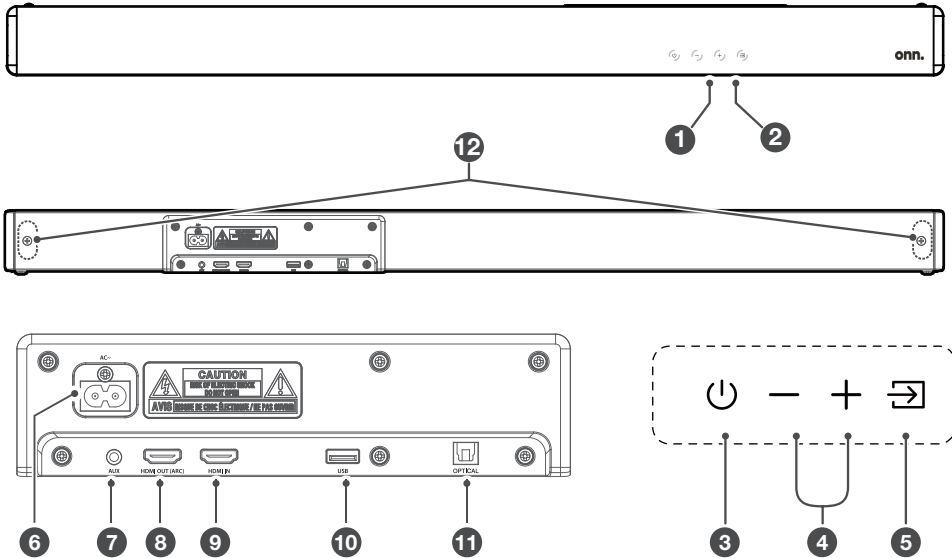


- 1 Remote Control Sensor**  
Receive signal from the remote control.
- 2 Display Window**  
Show the current status.

**Wall bracket screws**
- 3 ⏻ (ON/OFF) button**  
Switch on/off.
- 4 VOL+/VOL- buttons**  
Increase/decrease the volume level.
- 5 ↗ (SOURCE) button**  
Select the play function.
- 6 AC~ Socket**  
Use to connect to power cable.
- 7 AUX Socket**  
Connect to an external audio device.
- 8 HDMI OUT (ARC) Socket**  
The port for connecting a TV. The port supports the ARC HDMI feature, which allows the Sound Bar to play audio that originates on the connected TV.
- 9 HDMI IN Socket**  
The port for connecting HDMI source devices, such as a DVD player, Blu-ray Disc™ player, or gaming console.
- 10 USB Socket**  
Insert the USB device to play music.
- 11 OPTICAL Socket**  
Use to connect to the OPTICAL OUT socket on an external device.
- 12 Wall bracket screws**


## Wireless Subwoofer

 - 1 **AC~ Socket**  
Connect to power.
- 2 **PAIR button**  
Press activate the pairing function between the main unit and the subwoofer.
- 3 **Subwoofer's PAIR Indicator**  
Light stops blinking once the subwoofer is paired with the Sound Bar.

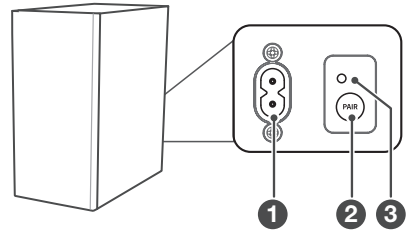


## Recognis the remote control buttons

 - 1 : Switch the unit between ON and STANDBY mode.
- 2 : Select the play function.
- 3 : Select the Bluetooth mode.  
Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- 4 : Increase/Decrease the volume level.
- 5 : Skip to next/previous track.
- 6 : Play/pause/resume playback. Confirm a selection.
- 7 **MOVIE** : Select a preset sound effect.
- 8 **SOUND MODE** : Select a preset sound effect.
- 9 (**MUTE**) : Mute or resume the sound.
- 10 **BASS +/-** : Adjust bass level.
- 11 (**MENU**) : Enter setup menu.

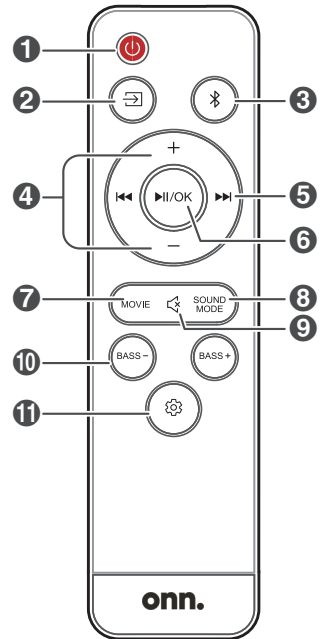

## Surround Speaker

 - 1 **Surround's PAIR Indicator**
- 2 **SPEAKER (L) Socket**
- 3 **PAIR button**  
Press activate the pairing function between the main unit and the Surround.
- 4 **DC~ Socket**
- 5 **SPEAKER (R) Socket**

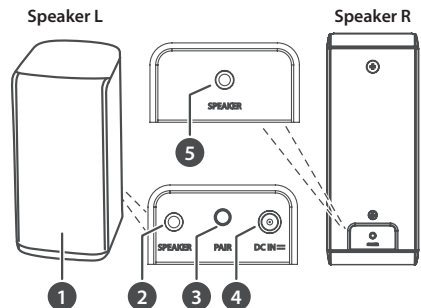


## Prepare the Remote Control

**IMPORTANT:** The remote control will work within a 6m range, however this may be impossible if there are obstacles between the unit and the control.

If the remote control is used near other devices which generate infrared rays then it may not operate properly and may interfere with other devices.

### Install/replace the batteries:

 - 1 Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two **AAA** size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.

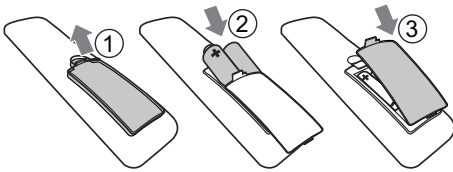

- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.



### Precautions Concerning Batteries

  - Be sure to insert the batteries with correct positive “⊕” and negative “⊖” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.

# Position your Sound Bar

## Placement

- (A) You can place the unit on the table directly in front of the TV stand, centered with the TV screen. Or (B) you can mount the unit on the wall directly below the TV screen.
- Place the Subwoofer at least 1 meter (3 feet) away from your Soundbar, and ten centimeters away from the wall.
- Place the surround speakers in the left and right positions. For best results, place your Subwoofer & Surround as shown below.

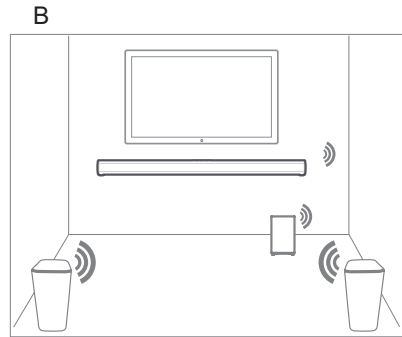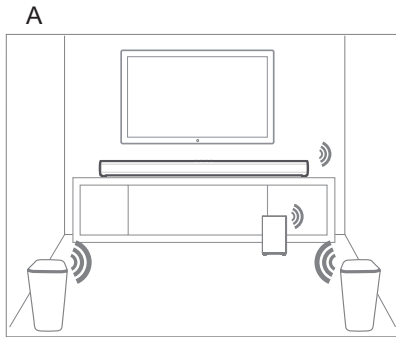

## How to mount your SoundBar on a wall

**IMPORTANT:** Before installing your Sound Bar please read the information below.

- Improper wall mounting may result in accident, injury or damage. If you have any query, contact Consumer Care in your country.
- Before wall mounting, make sure the wall can support the weight of your SoundBar.
- Before wall mount, you need not remove the rubber feet at the bottom of the Sound Bar, otherwise the rubber feet cannot be fixed back.
- Depending on the type of wall mounting your Sound Bar, make sure that you use screws of a suitable length and diameter.
- Please check whether the USB port on the back of the Sound Bar is connected to a USB device. If it is found that the connected USB device affects the wall-mount, you need to use another USB device of the appropriate size.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height:  $\leq 1.5$  meters.

 
**WARNING:** Before attempting to fit the Sound Bar to the wall, if you are in any way unsure about how or where to fit the Sound Bar you should employ a qualified person to install your Sound Bar.

**IMPORTANT:** The fittings supplied with your Sound Bar may not be suitable for all types of wall. Please consult a professional for advice before drilling any holes if you are in any doubt.

**IMPORTANT:** Mark the position on the wall that you want the Sound Bar to be fitted to and check that they align with the holes in the brackets before drilling any holes.

## Fitting the wall brackets

1. Drill 2 parallel holes ( $\text{Ø}$  5.5-6 mm each according to wall type) in the wall. The distance between the holes should be 905 mm (35.6").
2. Insert the supplied wall anchors into 2 screw holes on the wall. Insert the supplied wall bracket screws through the wall brackets into the wall anchors. Fix and tighten the screws on the wall.

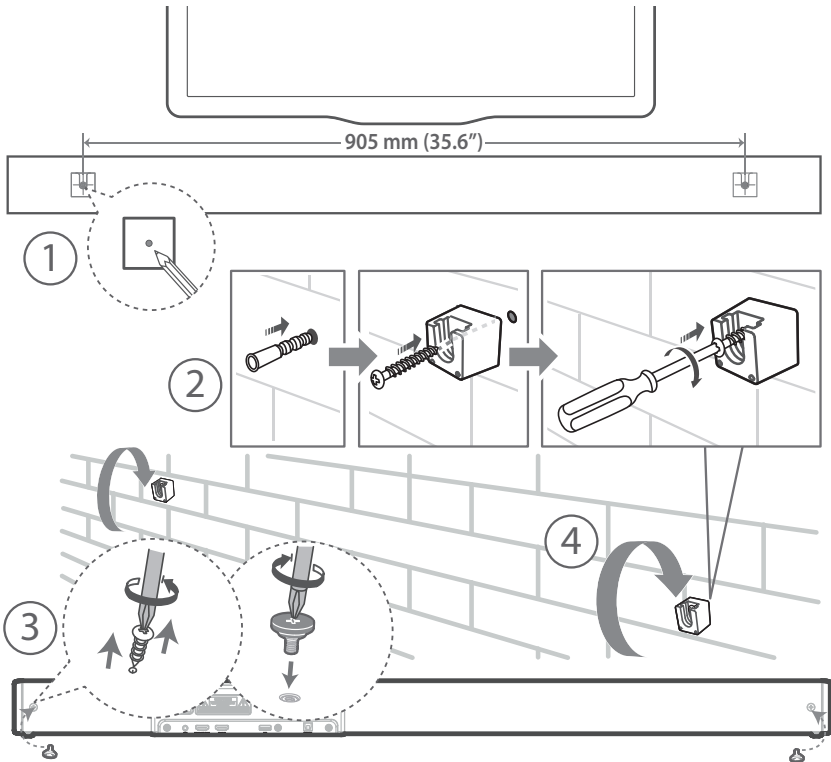




## Mounting the Sound Bar

3. Remove the screws at the back of the unit. Install the wall mounting screws into the back of the unit.
4. Lift the unit onto the wall mount brackets and slot into place.

## Mounting the Surround

 1. The (R / L) surround speakers can be fixed to the wall using the included wall mount package.
2. Note: Before installing the wall bracket, you need to connect the power / speaker cables of the (R / L) surround speakers.

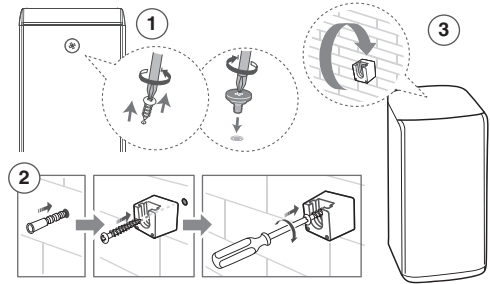


## Connecting your Sound Bar

### HDMI Connection

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

#### Method 1: ARC (Enhance Audio Return Channel)

 The ARC (Enhance Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your sound bar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the sound bar.

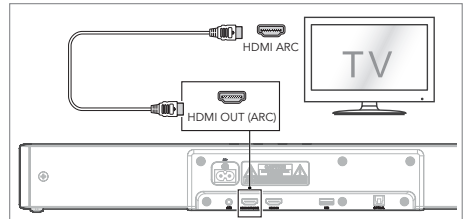

- Connect the HDMI cable from Sound Bar's **HDMI OUT (ARC)** socket to the HDMI ARC socket on your ARC compliant TV. Then press the remote control to select **HDMI ARC**.


#### Tips:

 - Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.

- ARC only works with devices that are HDMI ARC capable as well as with an HDMI 1.4 cable (and higher).
- Your TV digital sound output S/PDIF mode setting must be PCM.

## Method 2: Standard HDMI


- If your TV is not HDMI ARC-compliant, connect your Sound Bar to the TV through a standard HDMI connection.

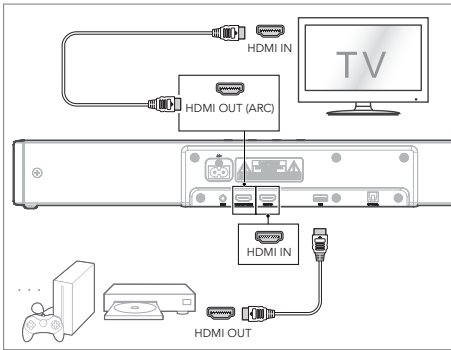

1. Use an HDMI cable to connect the Sound Bar's **HDMI OUT (ARC)** socket to the TV's HDMI IN socket.
2. Use an HDMI cable to connect the Sound Bar's **HDMI IN** socket to your external devices (e.g. games consoles, DVD players and blu ray).

## Use the OPTICAL Socket

 
- Use an OPTICAL cable to connect the Sound Bar's **OPTICAL** socket and the TV's **OPTICAL OUT** socket.

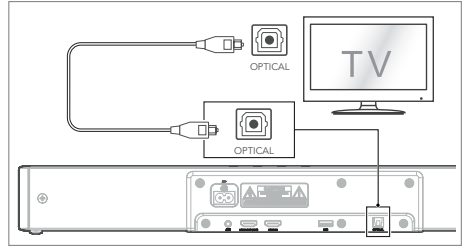

**Tip:** The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI / OPTICAL input.

## Use the AUX Socket


 
- A. Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **AUX** socket on the unit.

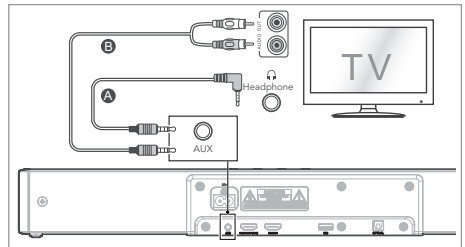

- B. Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphone socket to the **AUX** socket on the unit.

## Connect Surround Speakers

  1. Use the 2.5mm surround speaker cable (included) to connect to the SPEAKER speaker socket on the bottom of the (R / L) surround speakers.
2. Use the DC adapter, connect to the DC IN socket on the bottom of the main surround speakers and to a power outlet.

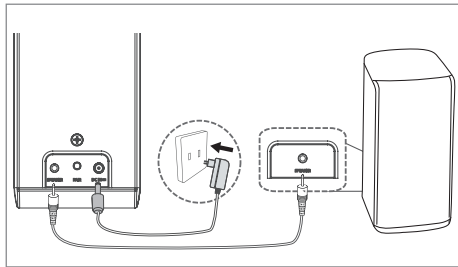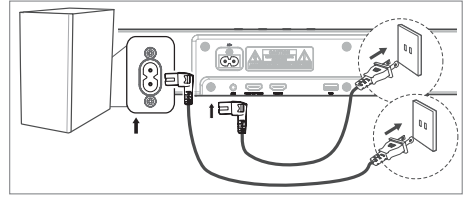

## Connect Power

**Risk of product damage!** Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.

Before connecting the AC power cord, ensure you have completed all other connections.

### Soundbar

Connect the mains cable to the **AC~** socket of the Sound Bar and then into a mains socket.

### Subwoofer

Connect the mains cable to the **AC~** socket of the Subwoofer and then into a mains socket.

## Pair up with the Subwoofer & Surround

### Automatic Pairing

Plug the Sound Bar and the Subwoofer / Surround into the mains sockets and then press on the unit or remote control to switch the unit to **ON** mode. The Subwoofer / Surround and Sound Bar will automatically pair.

- Determine the status based on the Wireless Subwoofer / Surround indicator.


LED State	Status
Fast blink	Subwoofer / Surround in pairing mode
Slow blink	Connection / Pairing Failed
Constant on	Connected / Pairing successful

**Tip:** Do not press **PAIR** button on the Subwoofer / Surround, except for manual pairing.

### Manual Pairing

If no audio from the Wireless Subwoofer or Surround can be heard, manually pair up the Subwoofer or Surround.

- When manually pair up Soundbar with Subwoofer, the Surround must be powered off.
- When manually pair up Soundbar with surround, the Soundbar must be powered off.

1. Unplug both units from the mains sockets again, then plug them in again after 3 minutes.
2. Press and hold the **PAIR** button on the rear of the Subwoofer or Surround for a few seconds. The Subwoofer or Surround will enter the pairing mode and the Pair Indicator will blink quickly.
3. Press the  button on the main unit or on the remote control to switch the main unit on.
4. The Pair indicator on the Subwoofer or Surround will become solid when successful.
5. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the Subwoofer or Surround and then reconnect the main cable after 4 minutes. Repeat step 1 ~ 4.

### Tips:

- The Subwoofer&Surround should be within 6 m of the Sound Bar in an open area (the closer the better).
- Remove any objects between the Subwoofer&Surround and the Sound Bar.
- If the wireless connection fails again, check if there is a conflict or strong interference (e. g. interference from an electronic device) around the location. Remove these conflicts or strong interferences and repeat the above procedures.
- If the wireless connection fails again, check if there is a conflict or strong interference (e. g.


interference from an electronic device) around the location. Remove these conflicts or strong interferences and repeat the above procedures.

- If the main unit is not connected with the Subwoofer / Surround and it is in ON mode, the Pair Indicator on the Subwoofer / Surround will blink slowly.

## Basic Operation

### Standby/ON

When you first connect the main unit to the mains socket, the main unit will be in Standby mode.

Press the  button on the unit or on the remote control to switch the unit ON.

Press the  button again to switch the unit back to STANDBY mode.

Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.

### Auto Wake

If a TV or an external device is connected, the unit will switch on automatically when the TV or the external device is switched on.

### Automatic Power Off Function

The unit automatically turns to Standby mode after about **15** minutes if the TV or the external unit is disconnected, switched off.

To switch the unit off completely, remove the mains plug from the mains socket.

Please turn the unit off completely to save energy when not in use.

## Select Modes

Press the (SOURCE) button repeatedly to select the **AUX**, **OPTICAL**, **HDMI IN**, **HDMI ARC**, **USB** and **BT** (Bluetooth) mode. The selected mode will show on the display.

## Adjust the Bass Level

Press the **BASS**  $\pm$  buttons on the remote control to adjust bass level.

## Adjust the Volume

Press the  $\pm$  (VOL) buttons on the unit or on the remote control to adjust the volume.

If you wish to turn the sound off, press the (MUTE) button on the remote control. Press the (MUTE) button again or press the  $\pm$  (VOL) buttons on the unit or on the remote control to resume normal listening.

## Select Equalizer (EQ) Effect

While playing, press the **SOUND MODE** button on the remote control to select desired preset equalizers.

- **MOVIE:** Create a surround listening experience. Ideal for watching movies.
- **MUSIC:** Create two-channel or multi-channel stereo sound. Ideal for listening to music.
- **TALK:** Create sound effect which makes human voice more clear and outstanding for listening.

## Setup Menu

The unit allows you to configure advanced settings to provide you with an even better experience.

1. Press the (MENU) button repeatedly to switch the menu.
2. Select the content with / on the remote control.
3. Press / **OK** (Enter) to confirm your selection.

**Tip:** If no button is pressed within **5** seconds, the system will automatically exit the menu.

Display	Description ( , )
BASS	Adjust the bass level. (bass +3 ~ bass -3)
TREBLE	Adjust the treble level. (treble +3 ~ treble -3)
AV SYNC	Set the audio delay. (AV 00 ~ AV 200)
DIM	Set display brightness. (DIM 03, DIM 02, DIM 01)
DISPLAY	Auto turn off display. (ON / OFF)

**BASS:** Adjust the bass level.

**TREBLE:** Adjust the treble level.


**AV SYNC:** Video image processing, sometimes longer than the time required to process the audio signal. This is called "delayed." Audio Delay feature is designed to remedy this delay.

Set the audio delay, provided only for the current playback mode. (As provided in the HDMI ARC audio delay mode, the delay mode is valid only for the HDMI ARC).

**DIM:** Set display brightness.

**DISPLAY:** Set to turn off the display automatically after 3 seconds of idle when no user operation.

## AUX / OPTICAL / HDMI Operation

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 Press the  button repeatedly to select the **AUX, OPTICAL, HDMI IN, HDMI ARC** mode. The selected mode will show on the display.
- 3 Operate your audio device directly for playback features.
- 4 Press the **+/-** button to adjust the volume to your desired level.

### Tip:



- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital (Refer to the user manual of the input source device for its audio setting details) with HDMI IN / HDMI ARC / OPTICAL input.
- When the DOLBY DIGITAL audio format is entered, the Sound Bar display shows DOLBY AUDIO.
- When the PCM audio format is entered, the Sound Bar display shows PCM AUDIO.

- When entering non-PCM or DOLBY DIGITAL audio formats, if there's no sound output from the unit and the display show NO SUPPORT.
- The Sound Bar will still function when connected via other methods (such as a Digital Optical cable) but these are unable to support all of the Dolby features. Given this, our recommendation is to connect via HDMI, in order to ensure full Dolby support.

## Bluetooth® Operation

Pairing the unit with a Bluetooth® device to listen to music:

### First time pairing

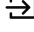1. Press the  button on the unit or  button on the remote control to select Bluetooth® mode. The display will show **NO BT**.
2. Activate your Bluetooth® device and select the search mode. "**100043839**" will appear on your Bluetooth® device list.
3. Select "**100043839**" enter "0000" for the password if necessary. The unit will voice "**Paired**" and the display will show **BT**.

### Pairing a new device after first time pairing

1. In Bluetooth® mode, press and hold the **▶II/OK** button to clear all pairing. The unit will enter pairing mode. The unit will voice "**Pairing**" and the display will show "**PAIR**".
2. Follow step 2-3 to pair your Bluetooth® device.

## To disconnect the Bluetooth® function, you can:

- Switch to another function on the unit;
- Disable the function from your Bluetooth® device.
- Press and the **▶II/OK** button on the remote control. The Bluetooth® device will be disconnected from the Sound Bar after the “**Pairing**” voice prompt.

## Listen to Music from Bluetooth® device

If your Bluetooth® device supports A2DP, play music via your device.

If your Bluetooth® device supports AVRCP, use the supplied remote control to control play.

- To increase/decrease the volume, press **+/-** button.
- To pause/resume playback, press **▶II/OK** button.
- To skip to a track, press **◀◀ / ▶▶** button.

 
### Tips:

- The operational range between the unit and the device is approximately 8 metres.
- Before connecting a Bluetooth® device to the unit, ensure you know the device’s capabilities.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.

- The player will also be disconnected when your device is moved beyond the operational range.

## USB Operation

1. Slot the USB device into the USB slot in the back of the Sound Bar.

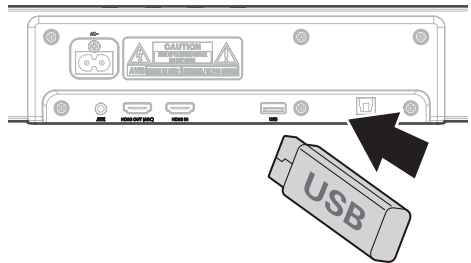

2. Press the **☐** (SOURCE) button repeatedly to select the **USB** mode.

### During playback:

To pause or resume play: press the **▶II/OK** button on the remote control.

To skip to the previous/next file: press the **◀◀ / ▶▶** buttons on the remote control.

### Note:

- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB Multifunctional card reader, the USB storage device may not be recognized.
- USB can only support MP3 file, maximum memory size 32G.

## Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

<p><b>No power</b></p>	<ul style="list-style-type: none"> <li>• Ensure that the AC cord of the apparatus is properly connected .</li> <li>• Ensure that there is power at the AC outlet.</li> <li>• Press ⏻ (standby) button to turn the unit on.</li> </ul>
<p><b>Remote control does not work</b></p>	<ul style="list-style-type: none"> <li>• Before you press any playback control button, first select the correct source.</li> <li>• Reduce the distance between the remote control and the unit.</li> <li>• Insert the battery with its polarities (+/-) aligned as indicated.</li> <li>• Replace the battery.</li> <li>• Aim the remote control directly at the sensor on the front of the unit.</li> </ul>
<p><b>No sound</b></p>	<ul style="list-style-type: none"> <li>• Make sure that the unit is not muted. Press MUTE or VOL+/VOL- button to resume normal listening.</li> <li>• Press ⏻ button on the unit or on the remote control to switch the Sound Bar to standby mode. Then press the ⏻ button again to switch the Sound Bar on.</li> <li>• Unplug both the Sound Bar and the subwoofer from the mains socket, then plug them again. Switch on the Sound Bar.</li> <li>• Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL) connection.</li> <li>• The subwoofer is out of range, please move the subwoofer closer to the Sound Bar. Make sure the subwoofer is within 5 m of the Sound Bar (the closer the better).</li> <li>• The Sound Bar may have lost connection with the subwoofer. Repair the units by following the steps on the section "Pairing the Wireless Subwoofer with the Sound Bar".</li> <li>• The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect.device is not muted.</li> </ul>
<p><b>TV has display problem while viewing HDR content from HDMI source.</b></p>	<ul style="list-style-type: none"> <li>• Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.</li> </ul>
<p><b>I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing</b></p>	<ul style="list-style-type: none"> <li>• Ensure the Bluetooth function is activated on your Bluetooth device.</li> <li>• Ensure you have paired the unit with your Bluetooth device.</li> </ul>
<p><b>This is a 15 mins power off function, one of the ERPII standard requirement for saving power</b></p>	<ul style="list-style-type: none"> <li>• When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.</li> </ul>



## Technical specification

Soundbar	
Power Supply	AC100-240V~ 50/60Hz
Power Consumption	30 W / < 0.5 W (StandBy)
USB	5V --- 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max) , MP3
Dimension (WxHxD)	37.4" x 2.4" x 2.7" (950 x 62 x 70 mm)
Net weight	x.x lbs (x.x kg)
Audio input sensitivity	500mV
Frequency Response	120Hz - 20KHz
Subwoofer	
Power Supply	AC100-240V~ 50/60Hz
Power Consumption	30 W / < 0.5 W (StandBy)
Dimension (WxHxD)	4.7" x 15.8" x 11.8" (120 x 403 x 300 mm)
Net weight	x.x lbs (x.x kg)
Frequency Response	40Hz - 120Hz



## Technical specification


Surround speaker	
Adapter Mode	KA3601A-2401500US
Input	100-240V~ 50/60Hz, 1.0A (Max)
Output	24V $\approx$ 1.5A $\leftrightarrow$ $\oplus$ $\ominus$
Dimension (WxHxD)	5.3" x 2.4" x 2.7" (135 x 62 x 70 mm)
Net weight	x.x lbs (x.x kg)
Frequency Response	120Hz - 20KHz
Impedance	8 $\Omega$ x 2
Amplifier (RMS Output power)	
Total	170 W
Main Unit	30W + 30W
Subwoofer	60 W
Surround	25W + 25W
Remote Control	
Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V x 2)
<ul style="list-style-type: none"><li>• Design and specifications are subject to change without notice.</li></ul>	


# Warnings

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some operation precautions that you should be aware of:



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

- 1 **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 **Follow all instructions** – All operating and usage instructions should be followed.
- 5 **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6 **Clean only with a dry cloth.**
- 7 **Do not block any ventilation openings.** Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

- 15  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 16 The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- 17 Minimum distance around the apparatus for sufficient ventilation is 5cm.
- 18 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- 19 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 20 Batteries should be recycled or disposed of as per state and local guidelines.
- 21 The use of apparatus in moderate climates.

### Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is

incorrectly replaced. Replace only with the same or equivalent type.

### Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

~ **AC voltage:** This symbol indicates that the rated voltage marked with the symbol is AC voltage.

### **Battery usage CAUTION**

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and -

as marked on the apparatus.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Remove batteries when the unit is not used for a long time.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent

possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Walmart Inc. is under license.

Other trademarks and trade names are those of their respective owners.



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2020 Dolby Laboratories. All rights reserved.



Roku TV Ready and the Roku TV Ready logo are trademarks of Roku, Inc.

### Warning

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

## Free 1 year guarantee

All our electrical items are covered by a full 1 year guarantee from the day you buy it. In the unlikely event that your product is faulty or you are simply struggling to set it up, don't worry, here's what you do:

1. First call our Customer Helpline as they may be able to help you with the problem.
2. If the problem can't be resolved, you will receive a reference number.
3. Take the reference number along with the item, all its components and your receipt to your nearest store for a full refund.

### Customer Services

# 1-888-516-2630

This does not affect your statutory rights.

### FCC Statement :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### IC-CANADA: CAN ICES-3(B)/NMB-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

### FCC&IC-Caution:

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

### California Prop 65 Warning :



This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer.

For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**Déclaration de la FCC :**

Cet appareil est conforme à la partie 15 du règlement de la FCC. Le fonctionnement est sujet aux deux conditions suivantes :

1) Cet appareil ne doit pas provoquer de brouillage préjudiciable et (2) cet appareil doit accepter tout brouillage reçu, y compris le brouillage susceptible de provoquer un fonctionnement indésirable.

**Remarque :** cet équipement a été soumis à des essais et a été déclaré conforme aux limites stipulées pour un appareil numérique de classe B, conformément aux spécifications de la partie 15 du règlement de la FCC. Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio. Cependant, il est impossible de garantir qu'aucun brouillage ne se produira dans une installation particulière. Si cet équipement cause un brouillage de la réception de radio ou de télévision, ce qu'il est possible de déterminer en éteignant puis en rallumant l'équipement, l'utilisateur est prié d'essayer de corriger le brouillage au moyen de l'une ou de plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne du réception.
- Augmenter la distance séparant l'équipement du récepteur.
- Brancher l'équipement dans une prise dont le circuit est différent de celui où est branché le récepteur.
- Consulter le revendeur ou un technicien expérimenté de radio/télévision.

**Avis d'Industrie Canada: CAN ICES-3(B)/NMB-3(B)**

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1. L'appareil ne doit pas produire de brouillage;
- 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.


**FCC & IC Attention**

- Tout changement ou modification non expressément approuvés par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur d'utiliser l'appareil.
- Cet appareil est conforme à FCC et IC l'exposition aux rayonnements limites fixées pour un environnement non contrôlé. Cet appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet transmetteur ne doit pas être co-situé ou opérant en liaison avec toute autre antenne ou transmetteur.
- Des câbles blindés doivent être utilisés avec cet appareil | pour assurer la conformité avec les limites de la classe B de la FCC.fonctionnement de l'appareil.


**Avertissement California Prop 65 :**

Ce produit peut vous exposer à des produits chimiques, dont le plomb, reconnu par l'État de Californie comme étant cancérigène. Pour plus d'informations, visitez : [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

# onn.<sup>TM</sup>



**Questions?  
Need some help?**  
This manual will help you enjoy your new product.



**If you still have questions,  
call our help line:  
1-888-516-2630**