 


onn.TM

USER GUIDE

5.1ch Soundbar with wireless subwoofer
and semi-wireless sub

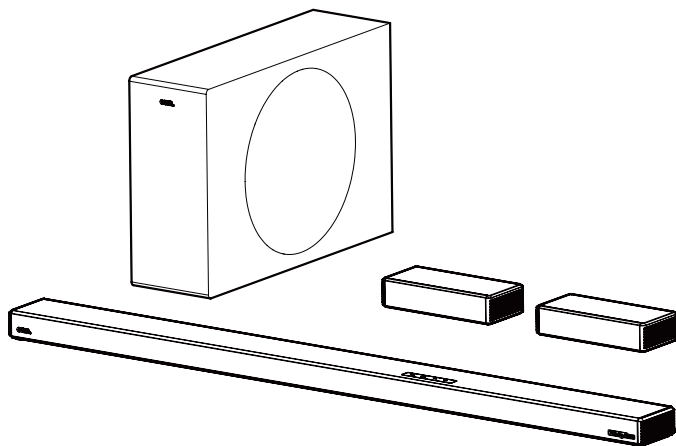

100135498_EN_01052024

Contents & Information

Contents & Information

Overview

Safety Precautions

Unpacking

Wall Mounting Setup (Optional)

Assembly

Operation

Cleaning & Care

Specifications

Troubleshooting

 
Features

- 5.1 Channels
- Roku TV Ready™
- Bluetooth®
- DTS X and DTS VX
- 6 Internal speaker + 1 wireless subwoofer +1 Semi-wireless surround
- 175W RMS output / 700 W peak output (4 x RMS)
- Dolby Atmos (supporting Dolby Atmos)

Connections



- 1 x HDMI® (eARC/ARC)
- 1 x Optical
- 1 x AUX
- 1 x USB

Overview

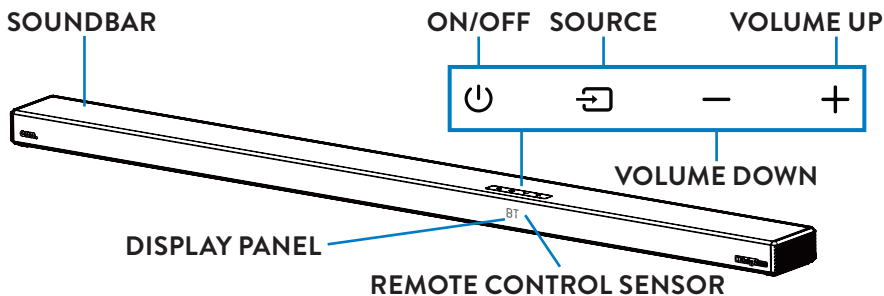


Standby	STANDBY
AUX	AUX
USB	USB
Optical	OPT
HDMI eARC/ARC	EARC
Bluetooth device connected	BT
Bluetooth device disconnect	NO BT
Maximum/minimum volume	V MAX / V MIN
Mute	MUTE
VRT:X	VRT X ON / VRT X OFF
Dimmer (Low/Medium/High)	DIM01 / DIM02 / DIM03
Sound mode (Movie/Music/Talk)	MOVIE / MUSIC / TALK
Bass/Treble +/-	BAS+3 ~ BAS-3 / TRE+3 ~ TRE-3
Center/Surround	CTR+3 ~ CTR-3 / L+3 ~ L-3 / R+3 ~ R-3

 
 
SUBWOOFER BACK

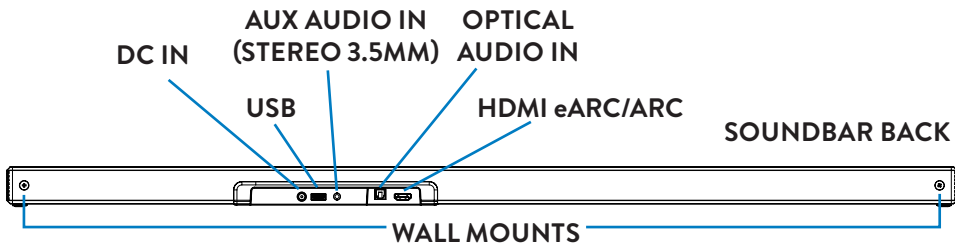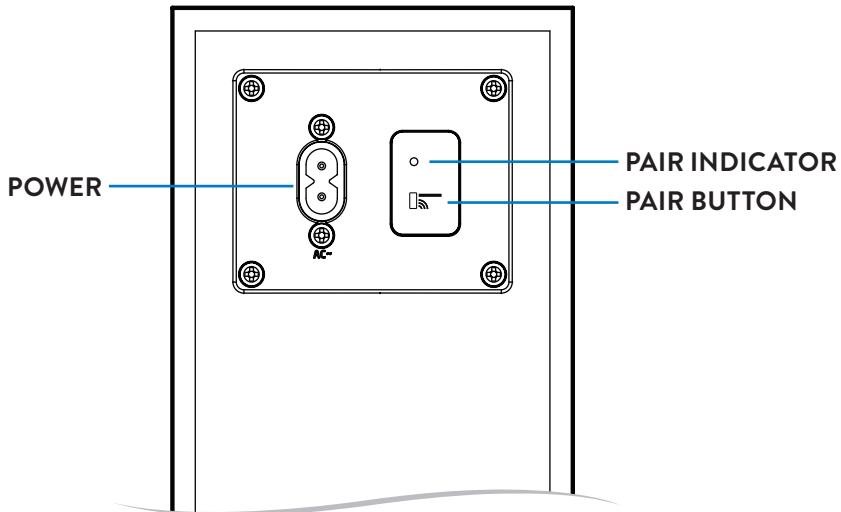

REMOTE CONTROL

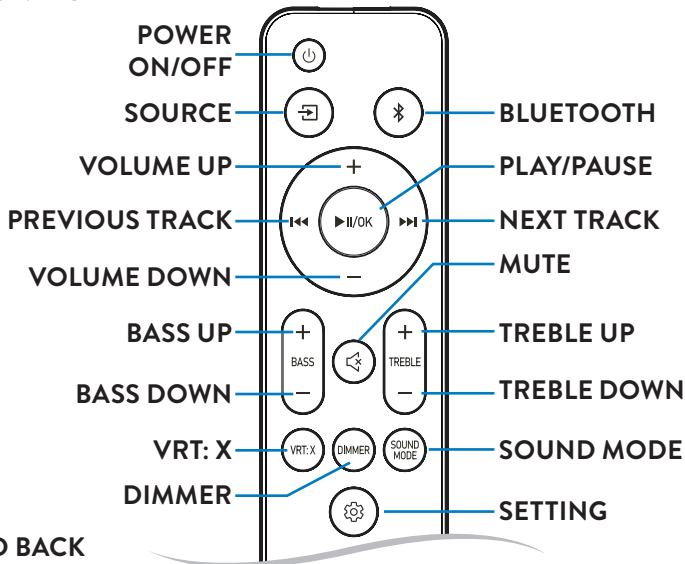 

SURROUND BACK

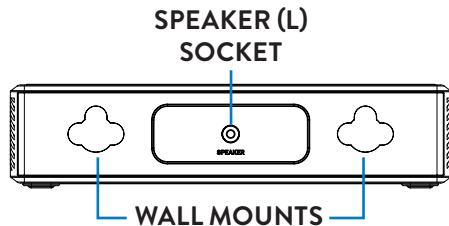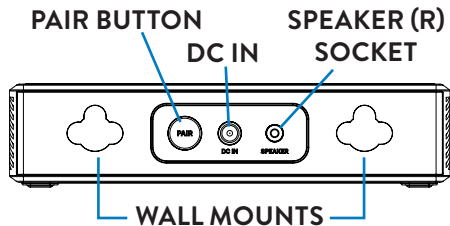  

Safety Precautions



WARNING

- Read these instructions – All safety and operating instructions should be read before product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on appliance and in operating instructions should be adhered to.
- All operating and use instructions should be followed.
- Do not use this apparatus near water – Appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, etc.
- Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- Unplug apparatus during lightning storms or when unused for long periods of time.

- Refer all servicing to qualified personnel. Servicing is required when apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus. Apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Maintain ventilation around equipment. Do not install in a confined space such as a book case or similar unit. Do not cover the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- The equipment shall be used at maximum 35 degree C ambient temperature.
- Do not replace a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Do not dispose of a battery in a fire or a hot oven. Do not mechanically crush or cut a battery. These conditions can result in an explosion.
- Leaving a battery in an extremely high temperature environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping, splashing or objects filled with liquids, such as vases, etc.
- The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- To prevent injury, this apparatus must be securely attached to the floor/ wall in accordance with the installation instructions.
- Danger of explosion if the remote control batteries are incorrectly replaced. Replace only with the same or equivalent type.

FCC Statement :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- L'appareil ne doit pas produire de brouillage;
- L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



CAUTION

- Batteries should not be exposed to excessive heat such as sunshine, fire, etc.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Dolby Atmos

- Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.



- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Walmart Inc. is under license. Other trademarks and trade names are those of their respective owners.



- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. or DTS Licensing Limited. DTS, DTS:X, Virtual:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



- Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United State. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email rokutvready@roku.com.


Unpacking

PARTS

Part	Description	Qty
1	Soundbar	1
2	Subwoofer	1
3	Surround Speaker	2
4	AC adapter	2
5	Power cable	1
6	2.5mm AUX cable	1

Part	Description	Qty
7	HDMI cable	1
8	Wall mounting template	1
9	Wall mounting kit (for Soundbar)	1
10	Wall mounting kit (for Surround Speaker)	1
11	Remote control (AAA batteries x2)	1

 PARTS DIAGRAM

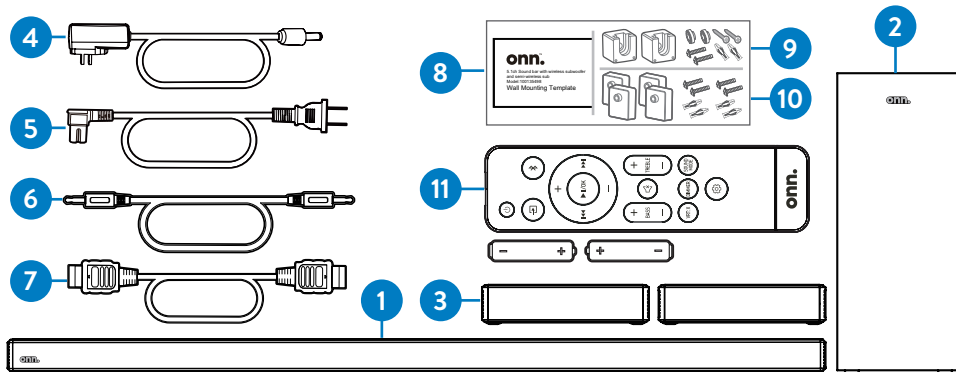

Wall Mounting Setup (Optional)

SETUP

TOOLS NEEDED (NOT SUPPLIED)



 
Drill bit



Drill



Cross Head Screwdriver



Ruler



Level



Hammer

HARDWARE (SOUNDBAR)

Part	Description	Picture	Qty
A	Anchor		2
B	Screws		2
C	Screws		2
D	Washers		2
E	Wall mounting		2

(SURROUND SPEAKER)

Part	Description	Picture	Qty
A	Anchor		4
B	Screws		4
C	Wall mounting		4

onn.

onnnn.com
1-800-453-3333
Wall Mounting Template



Wall mounting template



(Wall mounting, optional)

 
 
Assembly

ON A SURFACE



1A. CENTER

1. Below TV, close to ear level
2. Go to step 4




ON A WALL



1B. PLACE (SOUNDBAR)

 1. Wall mount template on wall under TV.
2. Mark Bracket holes (Ensure enough space between soundbar and TV) See 4B. HANG.



- Be sure screws will be attached to wood studs or use anchors for drywall, or anchors for concrete or brick walls.

ON A WALL

 


2B. INSTALL (SOUNDBAR)

Wallmounts Screws and Anchors (if required)




1. Drill holes



2. Hammer
in anchors



 3. Screw in screws
and wall mounting
into anchors

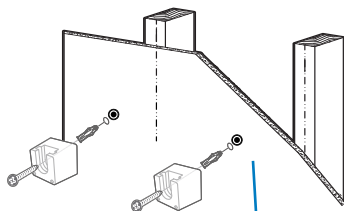



Anchors not
needed if screwed
into Studs



4. Remove the screws at
the back of the soundbar



  5. Install the screws and
washers into the back of
the soundbar

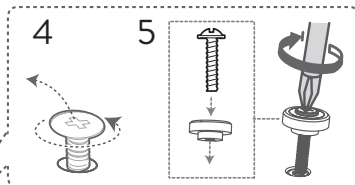

REQUIRED

(A) Anchors x2



(B) Screws x2



(C) Screws x2



(D) Washers x2



(E) Wall mounting x2



 
ON A WALL

3B. INSTALL (SURROUND SPEAKER)

Wallmounts Screws and Anchors (if required)




1. The distance between the holes should be 96mm.

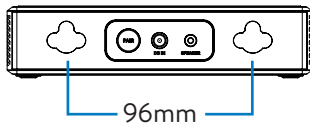

2. Drill holes



 3. Hammer in anchors

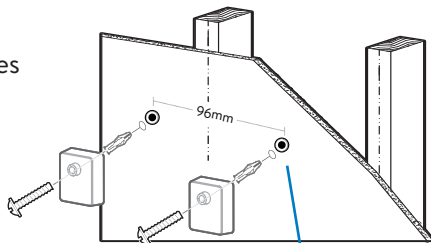

4. Screw in screws and wall mounting into anchors

Anchors not needed if screwed into Studs

REQUIRED

- (A) Anchors x4



- (B) Screws x4



- (C) Wall mounting x4



 
 
CAUTION

If you are unfamiliar with power tools or layout of electrical wiring in the walls of your home, consult a professional installer.

4B. HANG



Mounting hooks on screws then slide down to lock in place.

- Soundbar

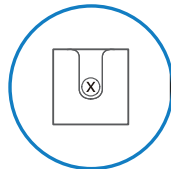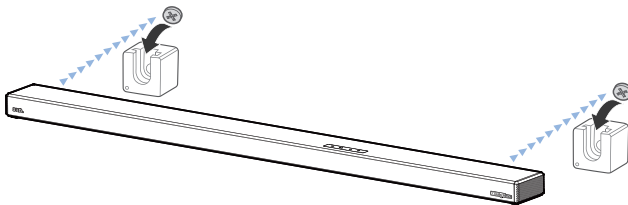

Note: Make sure wall mount orientation matches example

  
- Surround Speaker

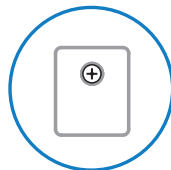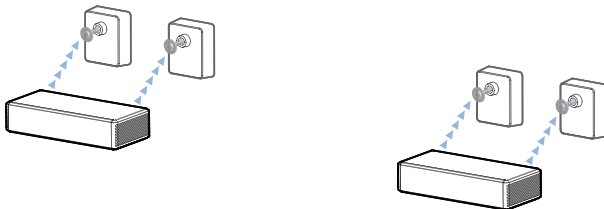

Note: Make sure wall mount orientation matches example

5. CHOOSE CABLE

 
Connect one cable to soundbar and TV

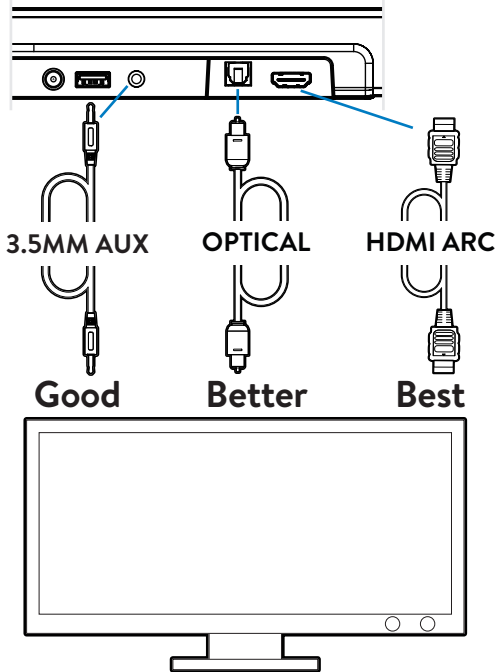


- To use **Dolby Atmos** in HDMI eARC/ARC mode, your TV has to support Dolby Atmos®
- Enable CEC and ARC on TV
- Settings for CEC and ARC may differ by TV manufacturer. See TV's user guide for more.
- To control soundbar volume on TV remote, enable System Audio Control in CEC menu.
- CEC Function naming may differ by TV Manufacture. See TV's user guide for more.
- The full Dolby Atmos experience is only available when the soundbar is connected to the source via a HDMI 2.0 cable.
- * If no Audio using Digital Inputs See troubleshooting.

Tip: If you have a Roku TV™, setup is easy. Just use the included cable to connect your soundbar to the HDMI ARC port on your TV and follow the on-screen instructions.

 
6. CONNECT SURROUND SPEAKERS

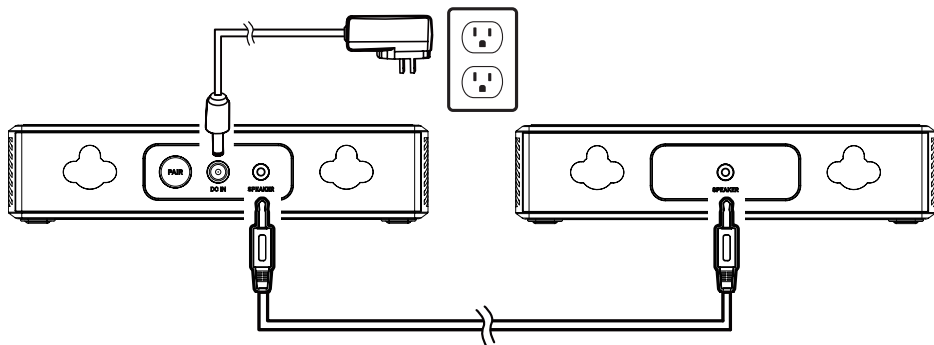

 
7. CONNECT POWER

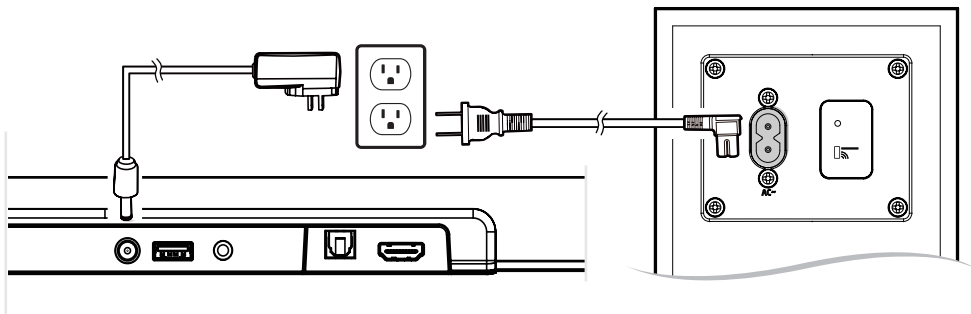

 
8. INSTALL BATTERIES

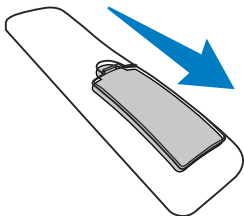

Remove battery door

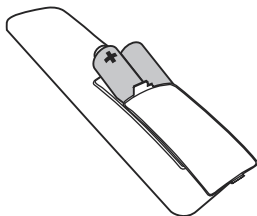 

Insert batteries

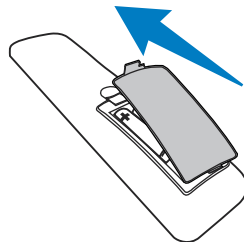 

Replace battery door



WARNING

Do not mix old and new batteries.



WARNING

 
Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

Operation




Connect Subwoofer



1A. AUTOMATIC PAIRING

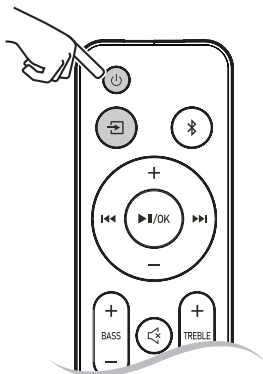

-OR-

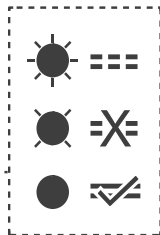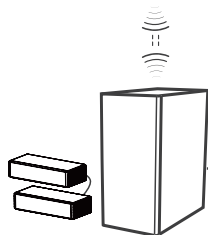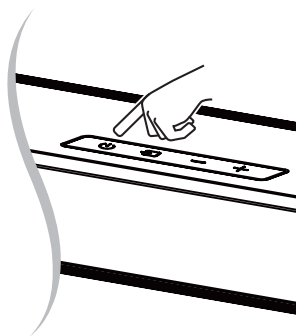   

LED State

Status

Quick flash

Subwoofer/Surround in pairing mode

Slow flash

Connection/Pairing Failed

Solid

Connected/Pairing successful


Connect Subwoofer



1B. MANUAL PAIRING (IF AUTOMATIC PAIRING FAILED)

 
A: Press and hold the PAIR button of the subwoofer () or surround (PAIR).

B: Press the  button on the soundbar or on the remote control.


C: Press and hold the  button, the subwoofer/surround and soundbar will enter the pairing mode.

D: When wireless connection is successful, the indicator will be solid orange.

The indicator will flash rapidly.

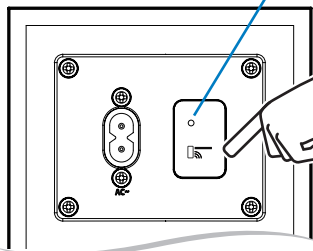


-OR-

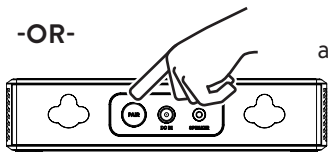 

Press and hold

ON/OFF

 SETTING

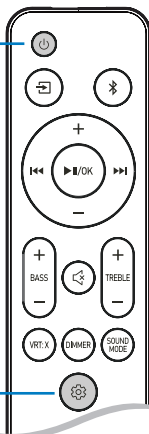


WARNING

The subwoofer and surround is within 5m of the soundbar.

ON/OFF

 -OR-

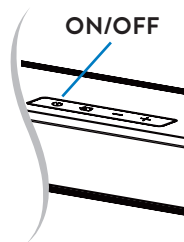


Bluetooth® Operation

1C. POWER ON/OFF

Soundbar (Remote or Bar)

ON/OFF

 SOURCE

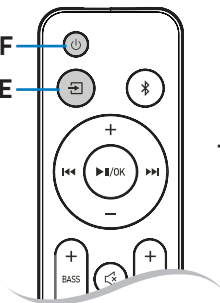


-OR-



ON/OFF

 
SOURCE

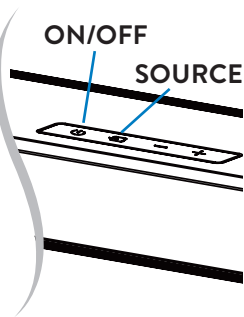


2C. SELECT SOURCE

To switch between audio sources
(Remote or Bar)


3C. PAIR DEVICE

Press and hold the  button on remote.

 Press and hold

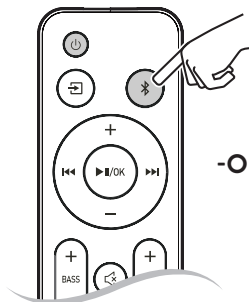



-OR-

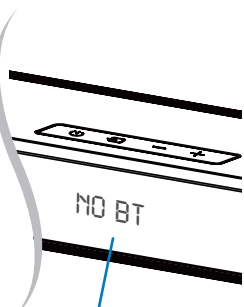 

Display show NO BT

4C. SEARCH ON DEVICE

  Select “onn. 5.1 slim soundbar” on device

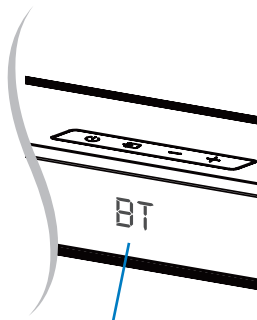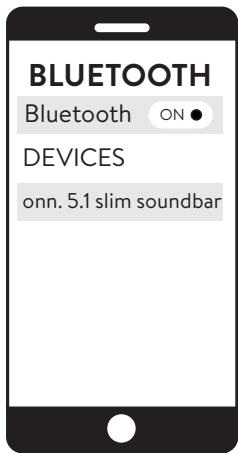

Device is connected
when display show BT.



IMPORTANT

Soundbar does not include microphone and cannot operate as hands-free device.

5C. PLAY AUDIO

From device

6C. VOLUME

Controlled by Device, Remote or soundbar



WARNING

High volume levels can damage your hearing. Reduce the volume levels before pressing Play.

Bluetooth use

Your soundbar supports music streaming from smartphones, tablets, and computers with Bluetooth capability.

Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the soundbar, as long as you stay within range of the soundbar, your device should remain paired.

 
If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, any paired Bluetooth device will reconnect automatically.

A Bluetooth signal has a range of up to 27 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.

USB Operation



1D. INSERT THE USB DEVICE

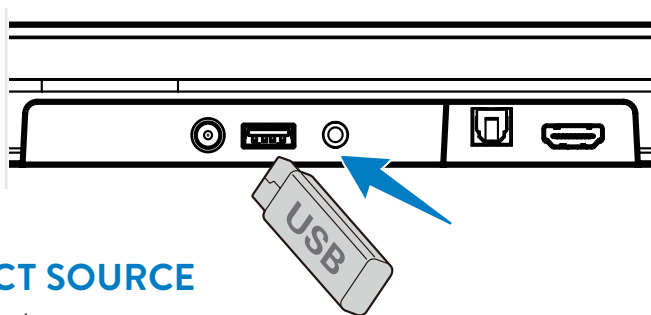




2D. SELECT SOURCE

Select USB Mode

(Remote or soundbar  button)

3D. PLAY AUDIO

Tip: Support the USB music file format of MP3.

Button	Action
 /OK	Play, pause or resume play.
 / 	Skip to the previous or next track.
+ / -	Increase/decrease the volume.

Cleaning & Care

CLEANING


- Wipe down surfaces with a light cloth.
- Never use abrasive pads to clean device.
- Avoid using liquids to clean device.




CAUTION

Ensure the unit is fully unplugged from the power supply before cleaning.

Specifications

Soundbar	
Adapter Mode	KA4801A-2402000US
• Input	100-240V~ 50/60Hz, 1.2A (Max)
• Output	24V \equiv 2.0A 
Power Consumption	30W
USB	5V \equiv 500mA Hi-Speed USB (2.0) / FAT32 / FAT16, MP3
Dimension (WxHxD)	35.98" x 1.38" x 3.19" (914 x 35 x 81 mm)
Net weight	2.87 lbs (1.3 kg)
Audio input sensitivity	500mV
Frequency Response	120Hz - 20KHz
Wireless Specification	
Bluetooth version/profiles Bluetooth frequency range	V 5.3 (A2DP, AVRCP) 2402 MHz ~ 2480 MHz
Modulation Type	GFSK, $\pi/4$ DQPSK, 8DPSK
Subwoofer	
Power	100-240V~ 50/60Hz 30 W / < 0.5 W (StandBy)
Dimension (WxHxD)	6.2" x 1.38" x 3.19" (157.5 x 35 x 81 mm)
Net weight	7.78 lbs (3.53 kg)
Frequency Response	40Hz - 120Hz

 Surround Speaker

Adapter Mode	KA3601A-2401500US
• Input	100-240V~ 50/60Hz, 1.0A (Max)
• Output	24V= 1.5A 
Power Consumption	15 W x 2
Dimension (WxHxD)	2.52" x 5.31" x 2.75" (64 x 135x 70 mm)
Net weight	0.79 lbs (0.36 kg)
Frequency Response	160Hz-20KHz

Remote Control

Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V x 2)

Troubleshooting

Problem	Cause	Solution
No power	Power off	Press “⏻” button on remote control or on soundbar.
	Loose power cord	Ensure the power cord is securely connected.
	Faulty outlet	Plug a different device into the electrical outlet to verify that the outlet is working correctly
No audio	Low Volume / Mute	Press “🔊” Increase volume
	Some TVs do not Pass through Digital Audio	Change TV output to PCM
	Input source	Select different Input source
	Not All TVs have Audio outputs listed.	Connect directly to another device (Blu-Ray, Game System, etc.)
	TV set to variable audio output	Set audio output to fixed or standard, NOT variable.

- Input LEDs will flash rapidly if an unsupported format is present.
- Consult your TV’s user manual for more detailed information.

Problem	Cause	Solution
No audio	Bluetooth source device	Increase volume / unmute source device
	Subwoofer and soundbar too far	The subwoofer or surround is out of range, please move the subwoofer or surround closer to the soundbar. Make sure the subwoofer or surround is within 5m of the soundbar.
Bluetooth break-up or disconnect	Source too far	Move the source device closer to soundbar
	Solid obstruction	Move source device into line-of-site of soundbar
	Other wireless devices	Turn off / move devices away (wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens)

NOTES

onn.TM

For product assistance:
WE CAN HELP

1-888-516-2630

7 DAYS/WEEK 7:00am- 9:00pm CST

**THIS GUIDE CONTAINS
IMPORTANT SAFETY
INFORMATION.**

PLEASE READ AND KEEP
FOR FUTURE REFERENCE.

Find more at **Walmart.com**

Manufactured in China for Walmart Inc.