


TR-6 User Manual

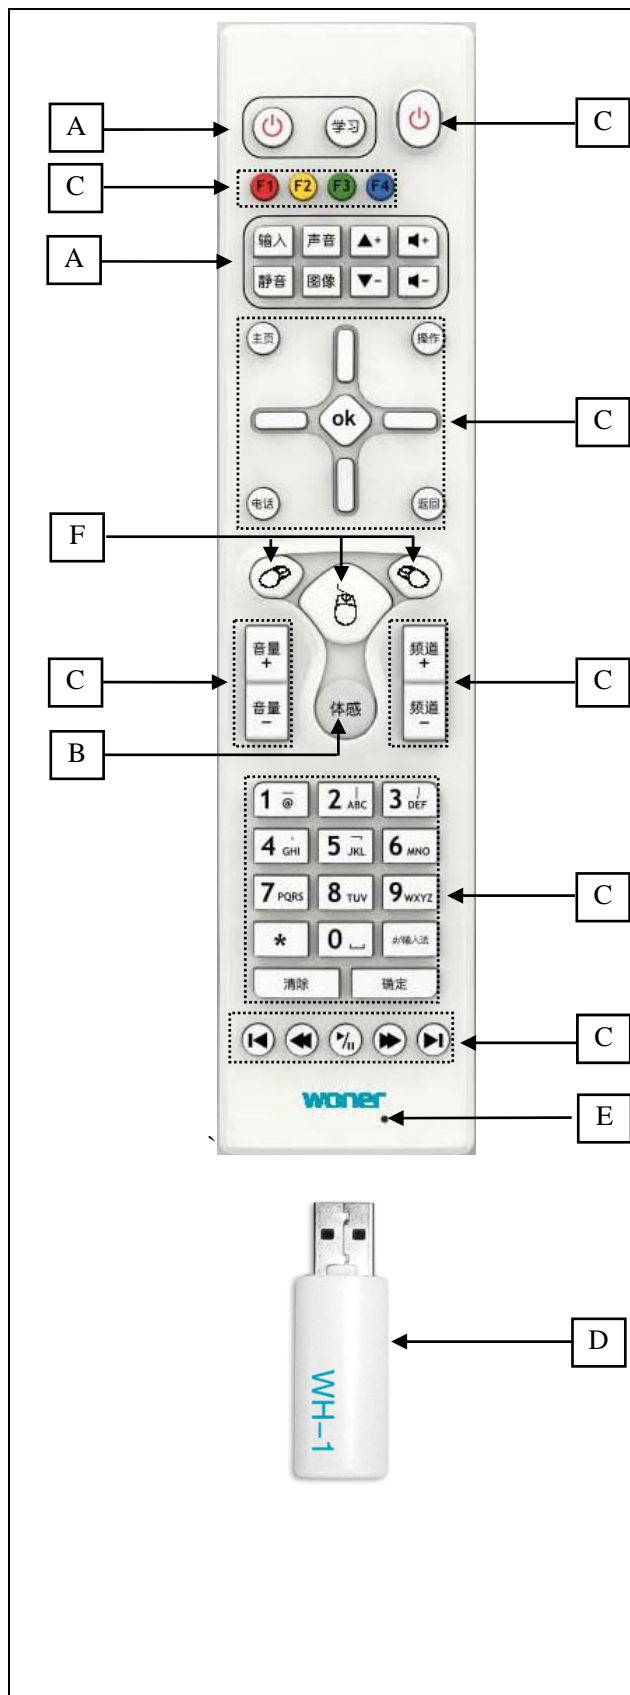

A. TV control area

- 1) Press【学习】button about 2s until the red LED turned on and then release this button.The TR-6 enter learning status.
 - 2) Press & release the desire button for learning(“A” area), the red LED will flash,TR-6 enter learning receiver status.
 - 3) Press the correspondence button on original remote control aim at the top of TR-6.
 - 4) The red LED will flash three times to confirm store the present remote code.
 - 5) Otherwise if the red LED flash two times it means fail
 - 6) Repeat (2) ~ (5) for other remote code learning.
 - 7)Press【学习】button to exit the learning mode.
- Now you can use your TR-6 to control your TV set now.

F+B.Mouse+Game control

- 1)Plug the micro receiver into your computer’s USB port.
- 2) Double click the middle button of the “F”area to open the Air mouse and Game control function,the blue LED will turned on.
- 3) Now the cursor on your computer will be moved following the movement of the TR-6.
- 4) Also you can use the TR-6 to control the body feeling games we provide for you.
- 5) Double click the middle button again to close the Air mouse and Game control function,the blue LED will turned off.
- 6) If the TR-6 don’t connect with the micro receiver ,when you pressed any button under the “F”area,the blue LED will flash.

C. Set-top box control

- 1)You can use this buttons to control the Set-top box’s functions.When any button pressed the red LED will turned on and send infrared codes through the IR LED,and turned off when you released it.
- 2)Press【F4】button to turn on the mircophone function,the red LED will turned on and you can use the TR-6 as a wireless microphone.Press【F4】again to exit this function.
- 3)Also you can use this button to operation your computer. You can use the UP/LEFT/RIGHT/DOWN buttons as the normal keyboard UP/LEFT/RIGHT/DOWN buttons.

D. Micro receiver

The receiver connects via USB to computer, Fly mouse, Keys, Microphone, IR remote control, Learning, Body

	<p>feeling game control,, it can receive the signal transmitter to control the connected devices.</p> <p>And it can also transmit.</p> <p>E. Mircophone input</p> <p>F. Mouse control</p> <p>It includes left mouse button,right mouse button and cursor enable button. Open the Air mouse function and hold TR-6 at any angle and point in any direction.No need to keep it level or pointed at the screen.For maximum responsiveness,hold TR-6 like a remote,point by tilting the nose of mouse up,down,or side-to-side.</p> <p>FCC Radiation Exposure Statement:</p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.</p> <p>This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p> <p>FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <p>(1) This device may not cause harmful interference, and</p> <p>(2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter</p>
--	--