

## Welcome

Thank you for purchasing this product. To ensure optimum performance and safety, please read these instructions carefully before operating the product. It is strongly recommended you keep the manual for future reference.

Model No. WD-251A

## Product picture



## Description:

1. LED Indicator
2. Power Switch Button
3. USB Output
4. Micro USB Input Port

## Specification

Product Name: Wireless Power Bank

Battery Type: Li-Polymer Battery

Input (Micro USB): DC5V 2A

Wireless Output: 5W

USB A Output: DC5V 2.1A

Output: 10.5W Total

Capacity: 5000mAh, 18.5Wh/3.7V

iPad, Mobile Phones, iPhone, iPod, and all other digital devices requiring charging through a DC 5.0V 1A or DC 5.0V 2.1A USB port.

## Note:

- (1). Both USB ports are of standard USB specification.
- (2). Support more than 85% of Samsung Tablets; Please use included "USB to Micro USB cable" to charge your device when your original cable does not support this power bank. Hence the USB ports support all iPod, iPhone.

## Information

### Using your WD-251 Power Bank

1. You can use the included USB-Micro USB cable to charge the WD-251A Power Bank from a

USB power source.

Note: While the WD-251A Power Bank is being charged, the blue LEDs will flash and light up one after another. Once the Power Bank is fully charged, all LEDs will light up and the Power Bank will stop charging. You should be able to charge your mobile devices once the Power Bank completes its charging or disconnected from its power source.

2. Short press the on/off Power Switch Button on the Power Bank, the LEDs will be illuminated for 60 seconds and the power bank will start charging your ipad, mobile phone or any electronic devices. To stop charging your devices, simply disconnect them from the Power Bank. The Power output will remain for 60 seconds and stop automatically if the Power Bank does not start charging any device again within this period.

#### Preparing to Wireless Charge:

- The Wireless charging Pad can charge Qi enabled smartphones.
- You can charge your smartphone with a protective case on it.  
(Works with most cases up to 4mm thick)
- If your protective cases has metallic studs, magnetic clasps, or a magnetic plate, you should remove the case before placing your phone on the mount,
- Also ensure the protective case does not create distance between the charging pad and the back of the phone that is greater than 4mm.

Charging:

- Connect the Wireless Charging Pad using the included USB to micro USB cable.
- Once plugged in, the blue LED light informs you that the mount is powered and ready to charge.
- Your smartphone will automatically begin to charge when placed on the Wireless Charging Pad.
- The green LED light indicates your smartphone is successfully charging.
- For optimum charging, place your mobile phone in the center of the charging pad.
- Adjust the viewing angle of the Wireless Charging Pad between flat or tilted by twisting the bottom of the pad.

#### Battery Capacity Indicator & LED Light Switch Button

The LED power indicators provide information about the battery charging status and battery power level:

Press the Power Switch Button to check power level, the LED will be illuminated for 60 seconds.

LED's indicate from the right to left:

- 1 LED Flashes:<5% Power
- 1 LED on:<25%
- 2 LEDs on:25%-50%
- 3 LEDs on:50%-75%
- 4 LEDs on:75%-100%

It takes around 4 hours to fully charge this Power Bank via a 5V 2A USB power source.

#### Maintenance

In order to maximize the battery life, please maintain your WD-251A Power Bank as recommended below:

1. Re-charge your WD-251A Power Bank dry once every three months if it has not been in use.
2. Keep your your WD-251A Power Bank dry and away from moist or corrosive materials.
3. Do not wash the your WD-251A Power Bank with harsh chemicals, soaps or detergents.

#### Package Contents

- 1X WD-251A Power Bank
- 1X USB Cable
- 1X User Manual

#### Warning

Read all instructions and warnings prior to using this product for the first time. Failure to read and follow these safety and usage instructions could result in fire, explosion, electric shock or other hazard that could potentially cause property damage or even fatal injury.

1. Do not modify, disassemble, open, drop, crush, puncture or shared the product
2. Do not expose the product to water or excessive moisture
3. Keep away from heat sources and direct sunlight to prevent heat build-up
4. Keep away from high voltage devices
5. This product is not a toy, keep away from children and ensure that all persons who use the product read and follow these instructions and warnings
6. Please do not try to charge your device when you are charging the power bank.

#### FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.