


TWS Earphone User Manual



FCC ID: ZBCWX-336A


Overview

 Chose eartips

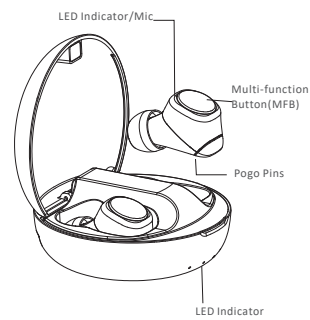

Medium eartips fit for most of the people, recommend to try it for the first time.

 Start to Using

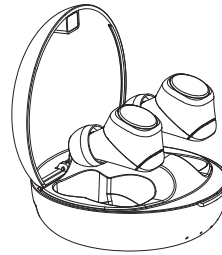

Take out both 2 earbuds then re-insert them back into the case to activate the earphones.
Notes: If Earbuds fail to be charged, please charge the case via USB cable(for details, please refer the following step)

How to pair

1. Activating the EarBuds
2. Take out the EarBuds from the case, they will auto power on and pair with each other.
3. The master earbud LED light flashes Red and White, and the sub earbud LED light flashes White, the earbuds enter pairing mode
4. Search for "C10J" on mobile devices and tap to pair it to both EarBuds

Wearing



Put the Earbuds into ears lightly with mic towards to the front side.

 
Charging

a Charging the Earbuds



Insert the Earbuds into the charging case (Pogo pins should be well-connected)
LED lights will be Red while charging. Once completely charged the lights would turn off.

b Charging the Case

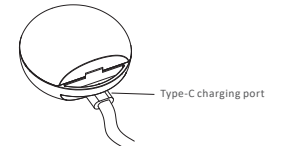


Note: There are 4 LED lights to show the charging case battery status, its means there is 25%, 50%, 75%, 100% battery in sequence.

Functions

Power-On

Method 1: Take out the EarBuds from the charging case, it will auto power on.

 Method 2: Tap the multi-function buttons for 1s



Power-Off


Method 1: Put the EarBuds back into the charging case, it will auto power off.

Method 2: Tap the multi-function buttons for 3s




Play the music

 Tap the multi-function button to play the music




Play the music

 Tap the multi-function button to pause the music



Skip to next song

 Tap the multi-function button for 2 times to play next song.




Voice Assistant

Tap the multi-function button for 3 times to activate the voice assistant (eg. Siri)



Answer/Hang up the call

 Tap the multi-function button to answer the call, Tap the button again to hang up.



Specification

Model: WX-336A

Bluetooth Version: V5.0

Range: ≤10m

Earbud battery capacity: 40mAh

Charging case battery capacity: 300mAh

Charging time: 1.5H

Playing time: About 4H

Weight: Earbud around 5g, Charging case around 46g

NOTE actual results may vary by device

Tips

1. Before use it, please read the user manual carefully and keep it for future references.
2. It should be fully charged before first-time use.
3. If it is not being used for over 1 month, please charge it before use it again.
4. Please use the qualified adapter.
5. If it cannot be found by your mobile devices, please check whether it is in pairing mode; if not pair it with mobile devices for a long time, it will exit pairing mode, please re-enter the pairing mode; if a procedure error occurs on mobile devices, please reset it; otherwise, reset the EarBuds.

Warning

1. Never disassemble or modify it to avoid causing any damages or dangers.
2. Do not store it in extreme temperatures (under 0 °C or over 45 °C)
3. Keep it away from the kids.
4. Do not use it during thunderstorm s.
5. Do not use harsh chemicals or strong detergents to clean it.
6. Keep it dry.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

MADE IN CHINA