 


Date: 07.06.22
Artworker: KR
Project Manager: DOM
Job description: INMOTION PHASE 3
Job no: 4.17.69
Supplier: D&S
Supplier code: 84188
Version no: 01
SKU no: 3094761
Barcode no: 5020420036873
Line no: 05
Product: INSTRUCTIONS: WIRELESS OVER EAR HEADPHONES
Pattern reference: -
Stock specification: UNCOATED PAPER
Finish: MATT
Size: A5
A/W scale: 100%
Colour: BLACK ONLY

Print colours



Additional/Special Finishes

Cutter/Crease & Perforation Guides



SIGN OFFS

PM (colour breakdown/copy): _____
Designer (design): _____
QC (quality copy): _____
Buyer (all elements): _____
 Date sent to print: _____

Please note this run out is not a cromalin or colour proof. This run out should ONLY be signed when all the copy has been checked and is correct, and the colour breakdown, cutter dimensions and design checked and approved. Any corrections to be made should be marked on this run out and returned unsigned. Artwork will not be released until signed approval is received.

It is not WHSmith policy to send out fonts. To purchase our fonts, please contact Agfa Monotype on 0800 371242 or visit www.agfamonotype.co.uk

© WH Smith plc and its subsidiaries, 2017. All rights reserved. The contents of this artwork are not to be reproduced, copied or transmitted in any form or by any means without the consent of the copyright owner.

PLEASE NOTE ALL AMENDS MADE AFTER SIGN-OFF WILL INCUR ADDITIONAL SBU COSTS

WHSSmith


Tel: 01793 616161 • Ftp: whsmith.wamnet.com
 WHSmith, Greenbridge Road, Swindon, Wiltshire SN3 3RX

INMOTION

INSTRUCTIONS WIRELESS OVER EAR HEADPHONES

Please read this manual carefully before using the headphones as this contains important safety information.

Please keep the headphones away from children.

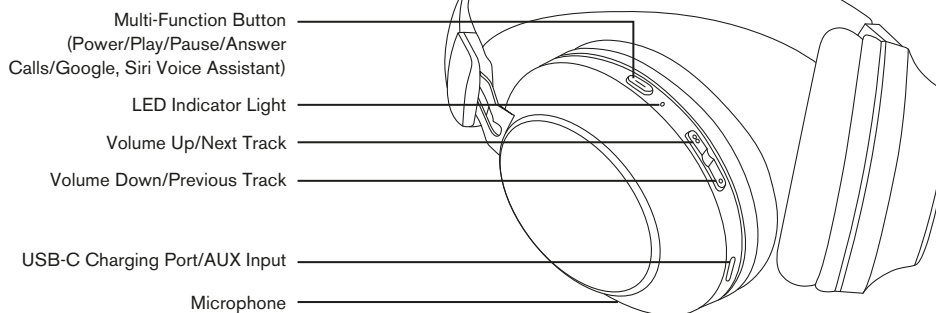

Contents

- Headphone x 1
- Charging Cable (USB-C to USB-A)
- Audio Cable (AUX to USB-C)

Operation: Switching ON/OFF

Switch ON:

Press and hold the Power button for approximately 3 seconds. The headset will then go into Bluetooth search mode (red / blue light flashes quickly and alternately followed by a tone).

Switch OFF:

Press and hold the Power button for approximately 3 seconds. The red light will and turn off, followed by a tone.

Headphone Pairing

1. Ensure that your phone or Bluetooth device is switched on.
2. To pair the headphone if it has not been previously paired with a device, switch on the headset. The headphone will enter search mode and the light will flash red/blue.
3. Ensure Bluetooth is switched on your phone or device and search for wireless devices.
4. Select "InMotion" from the device list. When successfully paired, there will be a prompt tone followed by a blue light.

To pair the headphone if it has been previously paired with another device, ensure that the previously paired device is switched on.

3. Ensure Bluetooth is switched on your phone or device and search for wireless devices.
4. Select "InMotion" from the device list. When successfully paired, there will be a prompt tone followed by a blue light.

The headphone that was previously paired will automatically connect with the device if the device is on and within connecting range. If not,

the headphone will enter search mode and the red/blue light will keep flashing. It will do this for 10 minutes and then automatically switch off.

Adjust the Volume

The volume will go up or down with a long press of the +/- button during a call or listening to music. When the volume reaches maximum, there will be a warning tone.

Answer / End a Call

To answer a call, quickly press the Multi-Function button to answer it, or a long press (approx. 1.5 seconds) to reject the call. To end a call, press the Multi-Function button.

Listen to Music

To listen to music, connect the headphone to your device. The available music functions will depend on your Bluetooth device. If you make or receive a call while listening to music, the music will pause until the call ends. To play a song, select it in the music player. To pause or resume playing a song, press the Play/Pause button. To select the next song during playback, press the volume down button quickly. To select the previous song, press the volume up button quickly. To select the previous song, press the volume down button quickly. To increase the volume, press and hold the volume up button. There will be a beep tone when reaching the maximum volume. To decrease the volume, press and hold the volume down button until mute.

Disconnect the Headphone

To disconnect the headphone from your device,

switch off the headphone or disconnect it from the Bluetooth menu of your device.

Reconnect the Headphone

To reconnect to the phone or Bluetooth device that you last used with it, switch on the headphones, or remake the connection in the Bluetooth menu of your device.

Wired Connection

You can also use the headphones with a wired connection. Simply connect the headphones to your device with the 3.5mm AUX cable provided. Inserting the audio cable plug will disable the wireless functionality.

Charging

Plug the charging cable into the USB-C port under the left ear-cap of the headphone. Plug the other end into a USB port on your computer or other device made for USB charging. The indicator light will turn red while charging. Once fully charged, the indicator light will turn blue. The charge time is approximately 2.5 hours on an empty battery.

Technical Specification:

- Bluetooth version: 5.0
- Working range: up to 10m (33ft.)
- Driver unit: 40mm
- Impedance: 32Ω±15%
- Headset Sensitivity : 100±3dB(@ 1kHz)
- Frequency response: 20Hz to 20kHz
- Built -in Mic for hands-free function
- Input: DC 5V/500mA
- Battery: Rechargeable Lithium ion battery; 3.7V, 180mAh
- Charging time: 2.5 hours
- Playing time: 30 hours with 50% Volume
- Standby time: ≥50 hours
- Dimensions: 170X200X75 mm [LXWXH]
- Weight: 165g
- Use USBC cable to charge

Caution

1. Please turn off the headset and put it into box to avoid damage, scratches or bracket deformation when long time no use. In order to prolong the battery service life, please charge every 3 months.
2. Please charge at first if the headset is left unused for long time.
3. The battery of headset is original and please don't change it by yourself.

Supplier/manufacturer info:
 UK sales: WH Smith, SN3 3RX UK
 USA Sales: IMEG LLC, 3755 W Sunset Rd Suite A, Las Vegas, NV 89118
 EU sales: WH Smith Ireland Limited, 6th Floor, 2 Grand Canal Square, Dublin 2, ROI
 Produced in China

4. Please keep the headset under dry place.
5. Please don't put this product into the environment with temperature over than 60 or into fire to avoid battery blast accident.
6. Please don't bent or twist the bracket to avoid deformation.
7. Please don't tear down ear-cushions by un-professional person.
8. Don't adjust the volume to a very high level and continued play. If tinnitus occurs, please turn the volume down or stop playing, do not turn the volume up suddenly. Please slowly turn up the volume to avoid hearing damage caused by high volume.
9. Do not use the headset in dangerous place or place where cannot hear the outside sound.

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio / TV technician for help

