

I IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors, household use only.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet(For the detached power cord).To disconnect, turn any control to off, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Do not immerse in water.
15. A short power-supply cord(or detached power supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
16. Longer detached power supply cord or extension cords are available and may be used if care is exercised in their use.
17. If a longer detached power supply cord or extension cords power-supply cord is used,
 - a) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
 - b) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
18. Do Not Cook on Broken Cook-Top – If cook-top should break, cleaning solutions and spillovers may penetrate the broken cook-top and create a risk of electric shock.
19. Clean Cook-Top with Caution – If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn, some cleaners can produce noxious fumes if applied to a hot surface.
20. Do not heat the pot empty or overheat it.
21. Do not place metallic objects such as knives, forks, spoons, lids, cans and aluminum foils on the top plate.
22. Allow sufficient space around the cooking area.
23. Never use the unit on low-heat-resistant materials (carpet, vinyl).
24. Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
25. Be aware that the unit surface will remain hot for a short period of time.
26. Items with a magnetic field, such as: radios, televisions, automatic-banking cards and cassette tapes, can affect the unit.
27. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt modify the plug in any way.

SAVE THESE INSTRUCTIONS.

II SPECIFICATION:

- Item: C16R
- Power Rate: 1600W
- Voltage: 120V
- Operating Frequency: 20kHz~40kHz

III HOW TO USE

1. Before turning on the power, make sure the cookware is on the ceramic plate with ingredients inside.

2. To turn the power on, press the ON/OFF button once. The power light will turn a steady red and heating will begin
3. To select the proper heat setting, press the REDUCE or INCREASE until the correct heat setting is achieved.(defaults=5, from 1 to 10 level)
4. To select temperature setting, press the" function" button once(defaults=270°F) ,the temperature light will turn a steady red ,and press the REDUCE or INCREASE until the correct temperature setting is achieved. (The temperature is between 150°F to 450°F , 150, 180, 210, 240, 270, 300, 330, 360, 390, 420, 450°F)
5. To select automatic timer setting, press the" function" button twice (defaults =0min),the timer light will turn a steady red ,and press the REDUCE or INCREASE until the correct timer setting is achieved. You will be able to select the operating time in increasing 5 minutes, and reducing 1 minute. (The timer is between 0 to 150 mins).
After 5 seconds to finish setting the Timer Function, the unit will return to Power or Temp Function. If you want to check or change the setting timer, please press the Function key, and change to Timer function to adjust.
6. After cooking is completed, press the ON/OFF button again to turn off the unit.
7. After the cooking time reach 150 mins, the LED will show "EE" and sound, and then the unit will enter the standby mode. Press the ON/OFF button to restart the unit.

Notice:

If using the unit in TEMP or HEAT Function, not setting the TIMER Function, but when the unit is used 150 mins, the LED display shows EE code and sound. The unit will stop automatically.

If using the unit in TEMP or HEAT Function 10 mins, and then set the TIMER, the max Timer is 140 mins. During timer operation, you can change the duration at any time with the arrow keys.

NOTE: The power will completely shut off with 9 second if either (a) the wrong type of cookware is applied or (b) no cookware is placed on the unit.

IV USABLE AND NON-USABLE UTENSILS:

- Compatible Pans:
Steel or cast iron, enameled iron, stainless steel, flat-bottom pan/pots with diameter of 12 to26 cm.
- Non- compatible Pans:
Heat-resistant glass, ceramic container, copper, aluminum pan/pots. Rounded-bottom pan/pots with the base measuring less than 12cm.

V HOW TO CLEAN:

- Clean after each use. Disconnect plug and wait until the unit has cooled down.
- If the pots/pans are used without being cleaned, as this may result in discoloration or stains.
- Do not use benzene, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- Wipe down the unit using a dish washing agent and a damp cloth
- Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- Never run water over the unit (If water gets inside it may cause malfunction).

WARNING: any other servicing should be performed by an authorized service representative.

Error Code List:

– If LED-display shows the error code, please reference to the solution as following.

Error Code	Cause and Solution
"---" and the unit sounds "Dee, Dee, ..."	There is no cookware or no suitable cookware on the stove. The power will completely shut off with 9 second if it is no cookware or wrong type of cookware placed on the unit.
E0	The currency is over 20A
E1	Voltage is under 85V
E2	Voltage is over 145V
E3	The accessory and spare parts are damaged, please contact the nearest authorized service facility for trouble shooting, repair and adjustment.
E4	The accessory and spare parts are damaged, please contact the

	nearest authorized service facility for trouble shooting, repair and adjustment.
E5	The accessory and spare parts are damaged, please contact the nearest authorized service facility for trouble shooting, repair and adjustment.
E6	The cooking temperature is over 450°F in the function mode “TEMP“. After the unit has been cooled down, the unit would be automatic switches to standby mode.
E7	Ventilation blocked, heat can not be blew out of the machine smoothly, it causes device inside over-heat. Please keep a minimum distance of 5 to 10 cm from the device to walls or other items. Please power off to eliminate the wrong record and let the unit cool down, and then re-plug the power cord and restart the unit.
E9	Temperature sensor issue. Issue is cased by a concave pot. Change pot and restart the induction. If there is no issue with the pot, restart the unit. If the error code still shows, please contact the nearest authorized service facility for trouble shooting, repair and adjustment.
EE	The total cooking Timer reaches 150 mins. After reaching 150 mins, the LED shows “EE” and sound, the device automatically goes into standby mode. Please press ON/OFF button to restart the unit.