

I IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


1. Read all instructions
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors (this item may be omitted if the product is specifically intended for outdoor use).
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet(For the detached power cord).To disconnect, turn any control to off, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Do not immerse in water.
15. A short power-supply cord(or detached power supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
16. Longer detached power supply cord or extension cords are available and may be used if care is exercised in their use.
17. If a longer detached power supply cord or extension cords power-supply cord is used,
 - a) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
 - b) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
18. Do Not Cook on Broken Cook-Top – If cook-top should break, cleaning solutions and spillovers may penetrate the broken cook-top and create a risk of electric shock.

19. Clean Cook-Top with Caution – If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn, some cleaners can produce noxious fumes if applied to a hot surface.
20. Do not heat the pot empty or overheat it.
21. Do not place metallic objects such as knives, forks, spoons, lids, cans and aluminum foils on the top plate.
22. Allow sufficient space around the cooking area.
23. Never use the unit on low-heat-resistant materials (carpet, vinyl).
24. Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
25. Be aware that the unit surface will remain hot for a short period of time.
26. Items with a magnetic field, such as: radios, televisions, automatic-banking cards and cassette tapes, can affect the unit.
27. An appliance provided with a 2-wire polarized attachment plug shall include the following or equivalent wording:” This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt modify the plug in any way.”
28. Products do not need to preheat before use.
- 29. Save these Instructions.**

SAVE THESE INSTRUCTIONS.

II SPECIFICATION:

- Item number: C18-16
- Power Rate: 1800W
- Voltage:120V~60Hz

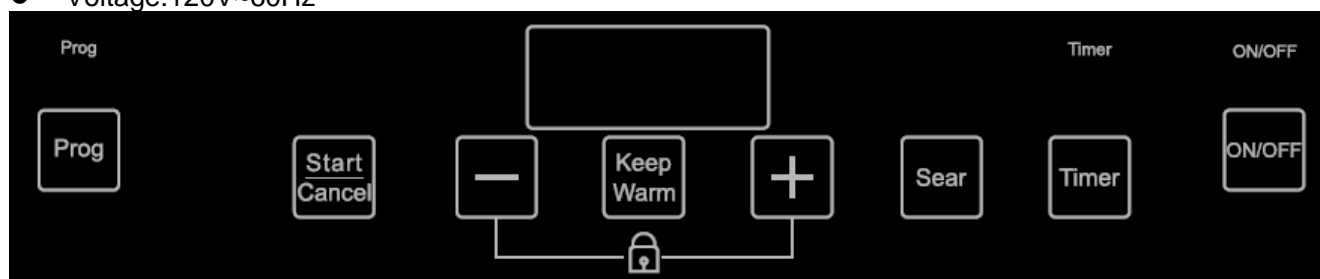

III HOW TO USE

1. Before turning on the power, make sure the cookware is on the ceramic plate with ingredients inside.
2. Plug the power plug into a suitable outlet. An acoustic signal sounds.
3. Now press the ON/OFF switch. An acoustic signal sounds and "ON/OFF" lamp blinks.
4. Press the "Prog" or "Keep Warm" or "Sear" button to turn on the unit. If do not press "Prog", "Keep Warm" or "Sear" key, the unit will enter the standby mode after 30 seconds.
5. Press "Prog", the unit enter into heat setting (defaults=5), press the "+" or "-" until the correct heat setting is achieved.(the heating level is 1, 2, 3, 4, 5, 6, 7, 8, 9, 10).
6. Press "Keep Warm", the unit enter into keep warm state and display shows "A1".
7. Press "Sear", the unit enter into max heat level 10.
8. To select automatic timer setting, press the" Timer" button (defaults =0mins),the timer light will turn a steady red ,and press the "+" or "-" until the correct timer setting is achieved (+5mins, -1min). You can press "+" or "-" in seconds to increase or reduce the timer setting fast. The max is 180 mins.
9. If the timer is not settled, after the cooking time reach 180 mins, the LED will show "EE" and sound, and then the unit will enter the standby mode. Press the ON/OFF button to restart the unit.

10. LOCK FUNCTION: Long press the “+” “-” button at the same time for 2 seconds, the unit enter “lock” mode. While locked, the unit will not respond to power changes. The only button will function is the ON/OFF button, to allow you to turn the unit off in case of any emergency.
To turn the child lock off, long press the “+” “-” button at the same time for 2 seconds.
11. After cooking is completed, press the ON/OFF button again to turn off the unit.

SETTING MULTI-FUNCTION COOKING MODE

Under off mode, press “Prog” and “+” “-” to select heating level. Then press “Timer” and “+” “-” to set the cooking time. To confirm the setting, press “Prog”, it will show: Pro 1. After that, press “Prog”, to start next program setting, it will show: Pro 2, please press “+” “-”, “Keep Warm” or “SEAR” and then “Timer” to set the second function, then press “Start / Cancel” to begin cooking. To cancel, just press “Start / Cancel” 2 times. The display will always show current cooking mode. To display time, press “Timer” and a countdown will appear. Press “Timer” again can reset the cooking time.

Notice:

If using the unit in “Prog” or “Keep Warm” or “Sear” function, not setting the TIMER function, but when the unit is used 180 mins, the LED display shows EE code and sound. The unit will stop automatically.
If using the unit in “Prog” or “Keep Warm” or “Sear” 10 mins, and then set the TIMER, the max Timer is 170 mins. During timer operation, you can change the duration at any time with the “+” and “-” keys.

NOTE:

The power will completely shut off with 10 second if either (a) the wrong type of cookware is applied or (b) no cookware is placed on the unit, when the machine is on standby model.

Remark: After pressing the ON/OFF button or cooking has stopped, the fan will run up to a maximum of 60 seconds until the unit cools. At that point, the unit will turn off.

IV USABLE AND NON-USABLE UTENSILS:

- Compatible Pans:
Steel or cast iron, enameled iron, stainless steel, flat-bottom pan/pots with diameter of 12 to 26 cm.
- Non-compatible Pans:
Heat-resistant glass, ceramic container, copper, aluminum pan/pots. Rounded-bottom pan/pots with the base measuring less than 12cm.

V HOW TO CLEAN:

- Clean after each use. Disconnect plug and wait until the unit has cooled down.
- If the pots/pans are used without being cleaned, as this may result in discoloration or stains.
- Do not use benzene, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- Wipe down the unit using a dish washing agent and a damp cloth
- Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- Never run water over the unit (If water gets inside it may cause malfunction).

WARNING: any other servicing should be performed by an authorized service representative.

This device complies with part 18 of FCC rules.

Error Code List:

- If LED-display shows the error code, please reference to the solution as following.

Error Code	Cause and Solution
The unit is in standby mode, but the LED-display shows “---”, and the unit sounds “Dee, Dee, ...”	1) You are using the cookware without the magnetism bottom or the diameter of the bottom is less than 12cm. Please use the cookware with magnetic and flat base, such as the iron or cast iron cookware, the cookware with a 18/0 stainless steel base. And all cookware with a base whose diameter is 12 to 22cm. The device will enter into standby mode after 10 second without the suitable cookware. Pressing ON button to restart the unit. 2) After pressing ON button, please press FUNCTION key to turn on the

	unit.
EE	It reaches the max cooking time, please press ON button to restart the unit if it is necessary.
E1	Voltage is under 75V
E2	Voltage is over 145V
E3	The accessory and spare parts are damaged, please contact the nearest authorized service facility for trouble shooting, repair and adjustment.
E4	The accessory and spare parts are damaged, please contact the nearest authorized service facility for trouble shooting, repair and adjustment.
E5	It may cause by a concave pot. Change pot and restart the unit. If the error code still shows, please contact the nearest authorized service facility for trouble shooting, repair and adjustment.
E6	After the unit has been cooled down (at least 30 mins), the unit would be automatic switches to standby mode. Pressing ON/OFF button to restart the unit.