

Dear Customer,

Thank you for choosing "LX5" color screen GSM/GPRS digital phone.

This is a GSM/GPRS phone. In addition to common call functions, it also provides you with a variety of practical functions including Bluetooth, English input, Phonebook, 64-chord ring, ringing or image alert for incoming calls, Camera, MP3 player, Video player, U Disk, recorder, calculator, timed power on/off, GPRS, MMS (Multimedia Message Service), handsfree call. With this manual, you can acquire a full understanding of the usage of this phone. Our company reserves the right to revise contents in this manual without any prior notice.

Table of Contents

Attention and Precautions.....	4
1 Safety Precautions	4
1.1 Road safety comes first	4
1.2 Swtich off your phone in hospitals.....	4
1.3 Switch off your phone in aircrafts	4
1.4 Swtich off your phone when refuelling.....	4
1.5 Swtich off your phone when close to blasting area	4
2 Precautions When Using Phone	4
2.1 Interference.....	4
2.2 Use sensibly	4
2.3 Use qualified servicing	4
2.4 Waterproof	4
2.5 Emergency calls.....	4
3 Precautions When Using Batteries.....	5
4 Precautions for children.....	5
Description of keypad keys.....	5
Getting Started.....	6
1. Installing the SIM Card and the Battery	6
2. Removing the Battery and the SIM Card	6
3. Charging Battery	7
4. Inserting and removing memory card.....	7
5. Switch on/off phone	7
6. Unlocking SIM card	7
7. Unlocking phone	8
8. Connecting to network	8
Basic Functions	8
1 Making a call.....	8

1.1	Making domestic calls	8
1.2	Dialing extension number of fixed-line telephone	8
1.3	Dialing international calls	9
1.4	Dialing phone numbers in the call records.....	9
2	Emergency calls	9
3	Answering a call	9
4	Call records	9
5	Call options	9
	Usage of function menu	10
1	Scrolling search and select function	10
2	Exit menu	10
	Instructions of Function menu	11
1	Call history.....	11
2	Contacts.....	11
2.1	Add new contact	11
2.2	Call groups.....	11
2.3	Phonebook settings.....	11
3	Messaging	11
3.1	Write message	11
3.1.1	SMS	11
3.1.2	MMS	12
3.2	Inbox	12
3.3	Drafts	12
3.4	Outbox.....	12
3.5	Voicemail server.....	12
3.6	Sent message	12
3.7	Delete message	12
3.8	Broadcast messages.....	12
3.9	Message setting.....	12
4	Tecel.....	12
4.1	STK	12
5	Games.....	13
6	Services	13
7	Settings	13
7.1	User profiles	13
7.2	Phone settings.....	13
7.2.1	Time and date	13
7.2.2	Schedule power on/off	13
7.2.3	Language	13
7.2.4	Pref. input methods	13

7.2.5	Auto update of date and time.....	13
7.2.6	Restore factory settings.....	13
7.3	Call settings	13
7.4	Display setting	14
7.5	Network settings	14
7.5.1	Network Selection.....	14
7.5.2	Preferences	14
7.5.3	GPRS connection	14
7.5.4	WAP.....	14
7.5.5	Data account	14
7.6	Security settings.....	14
7.6.1	SIM security.....	14
7.6.2	Phone security	15
7.6.3	Auto keypad lock	15
8	Multimedia	15
8.1	Camera.....	15
8.2	Image Album.....	15
8.3	TV	15
8.4	Video recorder	15
8.5	Video player.....	16
8.6	FM radio	16
8.7	Sound recorder	16
9	Ideas.....	16
10	Toolbox	16
10.1	Buscar	16
10.2	Calendar	16
10.3	Bluetooth.....	17
10.4	Alarm	17
10.5	Calculator.....	17
11	Audio Player.....	17
12	File Manager	17
	Input method	17
	Guide to Fast Usage.....	17

Contents

Attention and Precautions

Please read these brief rules. Violation of these rules might cause danger or break laws.

1 Safety Precautions

1.1 Road safety comes first

When driving, care must be taken for using phone; if driving conditions are poor, please pull up at road side to use the phone.

1.2 Switch off your phone in hospitals

Please abide by relevant regulations or rules. Please switch off when close to medical equipment.

1.3 Switch off your phone in aircrafts

Wireless phones can cause interference. Using phones in aircraft is both dangerous and illegal.

1.4 Switch off your phone when refuelling

Do not use the phone at a refuelling station or near fuels or chemicals.

1.5 Switch off your phone when close to blasting area

To avoid interfering with blasting operations, turn your phone **OFF** when in a “blasting area” or in areas posted: “turn off twoway radio”. Obey all signs and instructions.

2 Precautions When Using Phone

2.1 Interference

All phones are subject to interference, which will affect their performance.

2.2 Use sensibly

Use phone only in its normal position. Please do not touch antenna area unless necessary.

2.3 Use qualified servicing

Only qualified maintenance staff can assemble or repair the equipment.

2.4 Waterproof

Your phone is not waterproof, please keep it dry.

2.5 Emergency calls

Make sure the phone is switched on and in service. Input emergency service number and press Dial key, give your location and do not end the call until told to do so.

3 Precautions When Using Batteries

3.1 Keep the batteries away from fire; do not dispose of batteries in a fire lest there should be danger.

3.2 Do not dispose of used batteries in rubbish, and they should be sent to designated recycling center.

4 Precautions for children

Keep the phone out of the reach of children, lest children treat it as toy and cause personal injury.

Description of keypad keys



 
Keys	Description
[Dial key]	Dial a phone number or answer an incoming call. When the phone is in standby state, press this key to show the SIM call history list of dialed calls.
[End key]	End a call. Hold down this key to turn on/off your mobile phone. In other cases, pressing this key will make the phone return to standby state.

[OK Key]	Press this key in standby state to enter the menu with cursor. The OK Key to enter the menu that has been selected.
[Number Keys]	Number keys are used to input numbers, letters. They can also be used as shortcut keys to quickly access the options within a menu.
[TV key]	In idle screen, press this key can access TV. In other idle, the function of this key as the right soft key.
[Camera key]	In idle screen, press this key can access Camera. In other idle, the function of this key as the left soft key.

Getting Started

1. Installing the SIM Card and the Battery


Ensure that the golden contact area on the SIM card is facing downward, and the beveled edge is properly aligned with the SIM card slot.

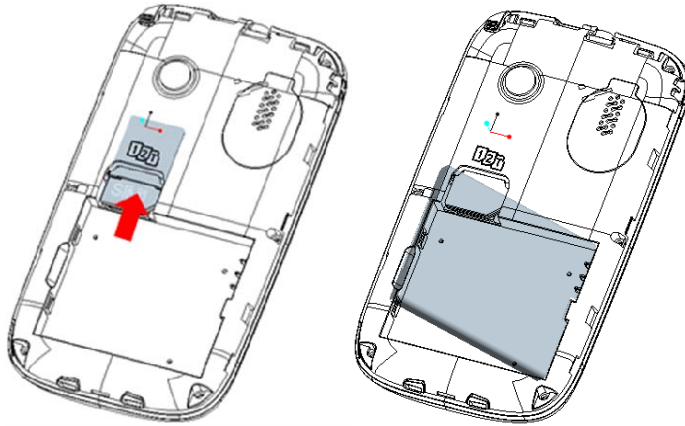

Warning: Make sure to switch off the phone before taking out SIM card, otherwise your SIM card might be damaged.

2. Removing the Battery and the SIM Card

 Before removing the battery and the SIM card, ensure that your phone is powered off.

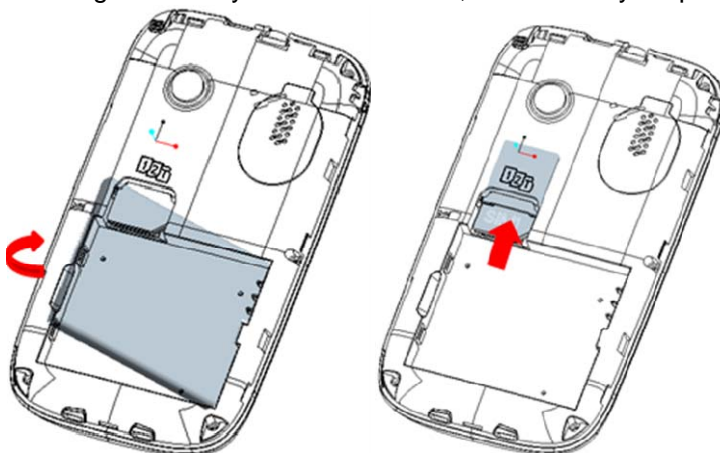

3. Charging Battery

While charging, the power supply indicator at phone's screen icon zone will flash in a rotation manner, if the phone is off while charging, a charging screen will still appear, indicating that the phone is recharging. If the phone is still being overused while the power supply is insufficient, the recharging indicator will appear on the screen after the recharging has started for a while.

 
When the power supply indicator at the screen's icon zone shows full and stops flashing, it means charging has completed. If it takes place when the phone is off, the screen will display charging-finished icon. The process generally takes about 2.5 hours. It is normal that the battery, the phone and the charger will become hot during the charging process.

Charging completing, disconnect the phone and the charger from the AC power supply.

Note: Battery must be charged in a well ventilated place with surrounding temperature at $-10^{\circ}\text{C}\sim+55^{\circ}\text{C}$, and it is imperative that a charger provided by manufacturer is used. Using unauthorized charger might cause danger, which also violates warranty terms prescribed by the manufacturer. If the charging temperature is too high or too low, the phone will automatically give warning and stop charging, so as to prevent damages to battery or dangers.

4. Inserting and removing memory card

- Switch off the phone; remove battery and other external power connection.
- Insert memory card into card slot as shown in the image.

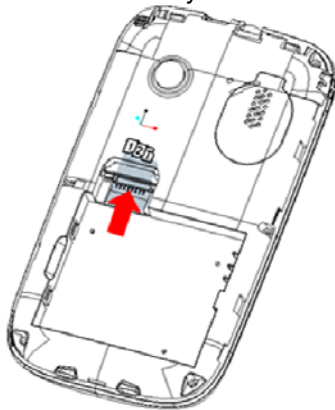

5. Switch on/off phone

To switch on or switch off phone, please press and hold the *End* key. If you have switched on phone without inserting SIM card in the first place, the phone will prompt "Insert SIM card".

Then the screen will display the following prompts in sequential order:

Enter phone password – if you have set up phone lock password.

Enter PIN – if you have set up SIM card password.

Search – the phone will search till finding appropriate network connection.

6. Unlocking SIM card

To prevent illegal usage, PIN (Personal Identification Number) code is adopted to encrypt for protection of your SIM card. Selecting this option and if having set up PIN code protection, you have to enter PIN code each time you start it, unlocking SIM card to use the mobile phone.

Users can erase SIM card password; however, in this case SIM card cannot prevent illegal usage.

- Press and hold the *End key* to switch on the phone;
 - Enter PIN1 code, use Right soft key to delete input errors, Left soft key for "OK". For instance, if PIN1 setting is 1234, then enter the following input: ,1 2 3 4"OK"
- If there are three consecutive input errors, your SIM card will be locked up by the network, the phone will inquire PUK1 code.

Note: Your service provider will set up a standard PIN (4 to 8 digits) number for your SIM card, you should change it into your private password as soon as possible.

7. Unlocking phone

To prevent phone from being illegally used, you can set up mobile phone lock Password for protection. Selecting this option, you must input mobile phone lock password to unlocking it and make it normal. Users can switch off mobile phone lock, but illegal usage cannot be prevented for mobile phone in this case.

- Pressing the hang-up key continuously to start up mobile phone.
- Input mobile phone lock Password, Right soft key to delete input errors, Left soft key for "OK".

For instance, if mobile phone Password is set up as 0000, then input the following: 0 0 0 0 "OK".

If you forget mobile phone Password, you have to contact local authorized repair center, so as to unlock your mobile phone's Password.

8. Connecting to network

After SIM card is successfully unlocked, the phone will automatically search available network (with searching showing on the screen). Once the connection is made, the name of the service provider will be displayed on the top central part of the text and graphic area. At this time your phone has been connected to the service network.

Note: If the screen prompts "Emergency ", this means you have moved out of the normal network coverage (service range) or your card has not passed authentication, but you can still transmit emergency calls based on signal strength.

Basic Functions

1 Making a call

When the logo of service provider appears on the display screen, you can dial or receive calls. The info bar at the upper left corner of the display screen shows network signal strength (when there are 5 info bars the signal is at its strongest).

The call quality is very likely to be affected by obstructions; therefore movement in a small area can effectively improve call performance.

1.1 Making domestic calls

Enter phone number, then press Dial Key to make the call. If the user needs to change phone number, press "delete" back and delete numbers. Dialing animation will be displayed on the screen during dialing. Call state info will be shown on the screen after the called party ends the call

You can enter and dial domestic call following the order:

Area code Phone number Dial

1.2 Dialing extension number of fixed-line telephone

Some extension numbers of fixed-line telephone cannot be connected directly, you must dial

the switchboard phone number, then press P key to enter "P", then dial extension number. You can dial extension numbers of fixed-line telephone in the following order:
Area code Switchboard number P Extension number Dial Key

1.3 Dialing international calls

To make an international call, you may press + key to enter "+" for international long distance call, which will enable you to make a call from any country without knowing the local international access code (for instance, in China it is 86).

You can enter numbers in the following sequence to make an international call: + country code complete phone number Dial Key

After inputting prefix number, input the code and the complete phone number of the wanted country. The country code follows usual practice, such as Germany 49, UK 44, Sweden 46, etc.

Like making an international call, the "0" before city code number should be dropped.

For instance, if making a call to a service hotline from other countries to Shanghai, you should dial: +86 21 114 or 008621 114

1.4 Dialing phone numbers in the call records

Every phone number you have dialed or received will be stored in the list of phone call records. The latest dialed, received and missed numbers will be listed, according to their types, in the respective menu of dialed calls, received calls and missed calls. When call record list is full, the old numbers will automatically be deleted. To view the list, do the followings:

- In standby state press Dial key to view the record for all dial calls.
- All phone numbers in the list can be dialed directly by pressing the Dial key.
- When the list is displayed, press "OK" to read the details, then "options" to Save or Delete the number.

2 Emergency calls

As long as in the network service range (which can be confirmed by checking the signal strength bars on the top left corner of the screen), you can always call emergency service. If your network supplier does not provide roaming service in your area, the screen will display "Emergency", to inform you that only emergency call is permitted. If you are within the network service range, you can also make emergency calls even without the SIM card.

3 Answering a call

Simply press dialing key can answer an incoming call. If an earphone has been connected, use the button on the earphone to answer a call, and if it is not convenient for you to press it, set automatic answer as on, assuring that the earphone is plugged on, so as to make calls automatically answered while the phone rings or vibrates. If Any Key answer function is chosen, pressing any key(except End key,left soft key, TV key, can answer an incoming call.

4 Call records

Your phone can also store call records of the latest missed calls, received calls, dialed calls, the time of last call as well as total amount of received calls and total dialed calls for you.

5 Call options

In connected state, pressing "Mute" to mute the speaker,Under activated H-Free key condition, press right soft key to switch off speaker. Operation methods of call options are the same with that of Function menu.

This call options can only be viewed during call process, moreover, the functions of call

waiting, call holding, and conference calls need service support, please contact your service provider for details.

In the call options, you can make the following operations:

- Hold Single call

Make the current call hold.

- End Single call

End the current call.

- New call

Enter new dialing interface.

- Phonebook

Enter Phonebook menu.

- Call history

Enter Call history menu.

- Messages

Enter message menu. Owing to restriction of network engagement, MMS function is barred during call process.

- Sound Recorder

Record the current call.

- Mute

Setting of switches, which disables transmission of local call when Mute function is on.

- DTMF

Operations of DTMF switching on and off.

- Connect default Bluetooth headset

You can connect default Bluetooth headset.

- Conference*

Enter multiple party conference call state. By following the prompts, you can have the following functions: receive waiting calls, add them into multiple party call, maintain the multiple party call, talk privately with one party of the conference while maintaining all other callers, connect one party in the call conference with another party while exiting the multiple party call oneself, maintain one party of the multiple party call and end current call and all other maintained calls.

Note: The menu marked * items will only appear in special circumstances. For conference function, it is necessary to apply for service supply to corresponding service operator.

Usage of function menu

1 Scrolling search and select function

In standby state, press OK key to enter function menu, or during the call, press "Options" to enter call option menu.

At all main menu or sub-menu interface, it is possible to press up, down, right and left keys of keypad (under menu of page scrolling, press up or down keys to realize scrolling up or down) to scroll to the function you need, then press left soft key, or OK key, to enter that function option.

2 Exit menu

In function menu, generally you can exit a menu by press right soft key, or press End key to return to standby state.

Instructions of Function menu

1 Call history

You can view info related to call records, including: Missed calls, Dialed calls, Received calls, Delete call logs, you can only see one of the SIM card phone records.

2 Contacts

You can store info such as names, phone number.

Phone numbers can be stored in your mobile phone or SIM card. The amount of phone numbers that SIM card can store vary with its capacity.

2.1 Add new contact

Add a new number record to SIM card or mobile phone in Phone book.

2.2 Call groups

This mobile phone supports incoming call group function, you can select groups, view and edit group details under incoming call group list interface.

Group details include group name, incoming caller ring tone, incoming caller picture connection, incoming group members list, etc. It can edit setup (where in incoming call image connection can be realized by selecting images suitable for the image displayed by the screen from directory as incoming call image), and can add or reduce group members.

Note: Member addition or reduction of incoming groups is only limited to phone record on the mobile phone.

2.3 Phonebook settings

The options such as memory status, or preferred storage are available.

Display phonebook: can choose SIM , Cell-phone or All.

Speed dial: Setup on/off and speed dial number.

My card: you can select edit card, send card or delete.

Other numbers: set SIM owner number and fixed dial.

Memory status: can inquiry a local or the SIM card for the phone book of records as well as storage space has been occupied

Copy phonebook: can choose from phone or SIM.

Move phonebook: can choose from phone or SIM.

Delete phonebook: can choose from phone or SIM.

Note: When phone number records are stored in SIM card, only record the info of name and phone number.

3 Messaging

3.1 Write message

3.1.1 SMS

Create a new short message.

1. Enter text
2. Press the left soft key (Options) and select the required items, including Send to, Input method, Advanced options, Save to Drafts.
3. Press the left soft key (Options) and select send to, then add number or select for

phonebook.

Note: Short message center in some cities and areas do not support long short messages with over 140 English letters.

3.1.2 MMS

Create a new Multimedia Message.

1. Enter recipients in to by pressing the left soft key (Edit) .Confirm with Done.
2. Enter text in Edit content by selecting Edit.
3. Press the left soft key (Options) and select the items you want to send ,including Send to, Input method, Add picture,Add audio,Add video,Add subject,Preview, Page options, Advanced options,Save to drafts.Confirm the contents by selecting Options and Done.
4. Press the left soft key (Options) and select send to, then add number or select for phonebook.

3.2 Inbox

View received messages in Inbox sub-menu.

3.3 Drafts

Drafts stores SMS/MMS unprepared for sending for future revision and sending.

3.4 Outbox

Outbox stores SMS/MMS selected for storage during message sending.

3.5 Voicemail server

You can set voicemail,including name and number,then you can press option and select call voicemail.

3.6 Sent message

To save the sent messages.

3.7 Delete message

Can choose delete meseeages from Inbox,Drafts,Outbox,Sent messages and All messages.

3.8 Broadcast messages

Broadcast message refers to the public message sent by service provider. Using broadcasting of short message service, you can receive info on various topics from the service provider, such as weather, taxis, hospital, etc. For detailed info of relevant topics available, please contact your local service provider.

3.9 Message setting

You can set SMS, MMS and Service message.

4 Tecel

4.1 STK

In addition to the functions available in the phone, your SIM card may provide additional services that you can access in this menu.

This menu is shown only if it is supported by your SIM card. The name and contents of this

menu depend on the services available.

5 Games

Your phone is provided with an interesting game Snake for your entertainment purpose. You can set background music, sound effect, volume by Games settings.

6 Services

To access the Services menu, enter the Main Menu in the standby mode and then select Services. You can use the network-related services with this function.

7 Settings

7.1 User profiles

Your mobile phone provides a variety of Profiles, so as to facilitate you to configure individualized settings of the ring tone such as volume, ring tone mode, ring tone type, prompt sound and receiving method for different events and surroundings. Selectable Profiles include General, Meeting, Outdoor, Silent mode, Power saving, My style.

Pressing "Activate" can start using the selected Profiles.

Note: six modes have been set up at factory configuration, with the General mode activated as default mode.

7.2 Phone settings

7.2.1 Time and date

Including set home city, set time/date, set format and Time zone bound with time.

7.2.2 Schedule power on/off

There are four different times to set for the phone to auto power on/off according to the setting type.

Note: If the setting times are the same, it will cause failure, please set different times.

7.2.3 Language

You can set a desired language to be displayed on your phone.

7.2.4 Pref. input methods

There are a number of input methods for you to select.

7.2.5 Auto update of date and time

You can setup on/off and also you can select update after confirmation.

7.2.6 Restore factory settings

In this menu, enter mobile phone lock Password, then confirm to restore relevant parameters of the mobile phone to its factory settings values.

7.3 Call settings

For a general setting, such as: Call waiting, Call divert, Call barring, Advance settings.

7.4 Display setting

In this menu, you can set such as: Wallpaper, Screen saver, Power on display, Power off display, Show date and time, etc.

7.5 Network settings

7.5.1 Network Selection

The Network Selection feature enables you to: select a network automatic or manually.

7.5.2 Preferences

Support selection preferred networks.

7.5.3 GPRS connection

Select when needed or always.

7.5.4 WAP

Your mobile phone supports service based on Wireless Application Protocol (WAP). You can access a variety of WAP services, such as news, weather forecast and flight schedule, etc. These services are specially designed for mobile phones, and are maintained by WAP service providers.

WAP service needs network supported, regarding the availability, price and taxation of WAP service, please consult your network operator and / or the service provider that provide you with the service you need. Service provider will also provide explanations on how to use its services.

Under internet network service menu, you can use value-added service that the network operator provides you. This menu mainly includes the following menu option: Homepage, Bookmarks, input Address, recent pages, Setting.

- Homepage: select "Homepage", you can log on to Homepage.
- Bookmarks: Select "bookmarks", display each existing bookmark of bookmark list. Select one needed bookmark, you can perform operations on the bookmark such as Add bookmark and so on.

Note: Before use, please confirm your mobile phone's bookmark list is not empty..

- Enter address: Under this sub-menu, enter the URL address to be visited for WAP service, then press "OK" to complete, which will enable you to be connected to the WAP site you wish to access. So as to provide you with a flexible channel to visit the network in addition to bookmark information and webpage history record.

- Recent Pages: Under this sub-menu, the web records you recently visited are listed, so as to facilitate you to directly select " Entry " to visit that webpage when history record has been selected.

- Settings: Under browser setup sub-menu, it includes Homepage、 Profile、 View options、 Preference setup. for you to set up relevant contents of WAP service.

7.5.5 Data account

This sub-menu will give a list of GPRS access account data of the current WAP setting file, by selecting one certain setup file. you can reselect account data of WAP setting file.

7.6 Security settings

7.6.1 SIM security

Including PIN lock, Change PIN and Change PIN2 code.

Note: If PIN code is wrongly inputted for three times, SIM card will be locked, then you'll be

asked to enter PUK code to unlock SIM card.

PIN code and PUK code may be supplied to you together with SIM card, else, please contact your network operator. Default PIN code is generally 1234, please replace it with your own password as soon as possible.

7.6.2 Phone security

Phone lock

Mobile phone lock can prevent your mobile phone being illegally used.

to change your current phone password to a new one. You must enter the current password before you can specify a new one.

Note: The password is factory set to 1122, please replace it with your own password as soon as possible.

Change password

You can change phone lock password. The default password is 0000.

7.6.3 Auto keypad lock

In standby mode, Press OK key, then press space key can unlock your phone

By the way, if keypad lock time has been set up in the "Keypad lock" option, then, when a corresponding period of time passes and the phone receives none operation instructions, keypad will be automatically lock up.

Although, you can answer an incoming call without unlock the keypad, after the call ends the keypad will automatically open.

8 Multimedia

8.1 Camera

In camera preview state, press OK key to take photos. After taking, press Right soft key (Back) to save the photo and to take another photos.

In camera preview state, press Left soft key (Options) to do some settings, such as Image Album, Camera settings, Image settings, White balance, etc.

8.2 Image Album

Entry the sub-menu of Image Viewer, you can conveniently view images that saved in photos shot by camera, and can View, Image information, Browse Style, Send, Use as, Rename, Delete, Sort by, Delete All, Storage.

8.3 TV

Press right soft key enter to the sub menu:

Location select: You should select the right choice according to your location so as to change to the local channel's system.

Search: search the channels automatically.

Mute: set on/off.

Backlight set: Set the brightness for the current backlight. 5 grades can be chosen. The number keys 1-5 can switch the backlight brightness.

8.4 Video recorder

In Preview, press left or right keys to adjust camera exposure compensation parameter; press up or down keys to adjust Camera focus. Press OK key to film a video. In the course of

filming,press right soft key to stop filming.After filming,it will inquire whether need to save .If choose YES,then will save to the appropriate folder, choose "No", then give up the filming of video.

Press left soft key to make the following operations:

- Camcorder settings: Including adjusting EV,night mode ,anti-flicker.
- Video settings: Include adjusting Video Quality and so on.
- White balance: Set white balance.
- Effect settings: Set up special effects for video.
- Storage: Set up saving path for the movie, phone or memory card.
- Restore default: Press "OK", the parameters of video recorder will be restored to default setting.

8.5 Video player

Select Video player sub-menu, and enter movie list, press OK key to select files to be played, press OK key to preview; press "Options" to perform operations such as Play, Send, Rename, Delete, Delete all,Sort by ,Storage.

At the playing interface, press OK key to play current media files.

8.6 FM radio

According to the " options " and can enter the following features:

- On/Off: you can turn on/off the FM radio.
- Channel list: Storage channel, the channel can be carried out manually edit. Or from 'Auto Search' automatic generation function.
- Manual input: can automatically jump to manually input channel.
- Auto search: Automatically search available channels to store to the channel list.
- Settings: Set up background play, loudspeaker, and so on
- Sound recorder:Can record the checked channel.
- Append: Add to the former recorder files .
- File list: Enter to MY Documents to look over the files.

8.7 Sound recorder

Your phone supports sound recorder.Select a format from settings in Options.A call may also be recorded and saved to the phone or the memory card.

9 Ideas

There are many entertainment menu, as detailed in the phone menu.

10 Toolbox

10.1 Buscar

To access the Buscar menu, enter the Main menu in the standby mode and then select Toolbox > Busca. You can use the network-related services with this function.

10.2 Calendar

After entering calendar sub-menu, the screen will display the current month's calendar, with the current date marked with special color background box. The user may press navigation key to select digits in the calendar, calendar information on the screen will also be updated.

10.3 Bluetooth

Activate Bluetooth: on/off Bluetooth function. when the Bluetooth is on, main LCD interface status bar will display the Bluetooth icon.

This devices is visible: whether the device can be searched.

Search for Bluetooth device: show the devices which had matched with my device.

Search hands-free device: show the devices which is hands-free.

Host device name: Show device name.

Advanced options: Include the following

- Set audio path: set up voice to transfer path for Bluetooth headset or remain in the machine.
- Storage: set up the storage, such as phone, memory card, or always ask.
- Bluetooth device address: show my address.

10.4 Alarm

The mobile phone can set up at most five alarms, and supports shutdown alarm. In the alarm list of the alarm menu display, select an alarm to edit and set up switching on or off, set time and select ringing alert type. Wherein repeat can be selected as: once, everyday, User defined (for default alarm is once, the user may also set up certain days in a week based on one's own needs).

10.5 Calculator

The mobile phone provides you with a calculator with simple functions, you can use direction key to make addition, subtraction, multiplication and division, and carry out corresponding memory operations when selecting M+, M-, MR, MC.

Note: This calculator is limited in accuracy, rounding off errors might occur.

11 Audio Player

Audio Player allows you to play audio files. You can stop, pause, play and switch to the next/previous song using the navigation keys.

12 File Manager

You can use File Manager to organize your files in folders in the Cell-phone and memory card. If a memory card is inserted, the files stored on it are organized separately.

Select Memory card and select Options to open, Format, Rename, Details.

Input method

This mobile phone provides the following input methods, press



key to change the input method.

Guide to Fast Usage

Special functions

As a mobile phone with multimedia function, except basic functions of a mobile phone, your mobile phone also supports plenty of, practical, and convenient special multimedia

functions, which are briefly introduced as follows:

- **SIM Card:** This mobile phone supports one SIM card, and one SIM card can be changed.
- **SMS:** You can view the message storage capacity of the SIM card and mobile phone, as well as the occupied space; you can extract the phone number from a short message.
- **MMS:** It has the receiving multimedia Message Service, with which you can receive and send messages in various formats including text, image, and voice; you can send photos taken with a camera to your friends and colleagues through MMS.
- **MP3 playing:** Your mobile phone can play MP3 music files as well as the music format of *.wav, *.amr, *.mp3, etc.
- **U flash disk:** This mobile phone has a mobile memory (i.e. U card) function. It supports a memory card. When the mobile phone is powered off, connect the phone to a PC with a USB cable; at this time, the mobile phone becomes a U flash disk that supports the mobile saving of data; under power-on status, connect the USB data cable with the PC, you can select it as a storage device.
- **Toolbox:** Your mobile phone has various practical functions. It supports alarms, a calculator;
- **Settings:** You can set up the mobile phone to make individualized settings as required, including items of mobile phone setup, call setup, network setup, as well as security setup; under each item, there are various flexible functions for you to custom-tailor based on different preferences, such as time and date, scheduled startup and shutdown, rapid dialing, call restriction, mobile phone lock, etc.

FCC Notice to User

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

SAR Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types LX5 (FCC ID:ZC4LX5) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.647 W/kg and when properly worn on the body is 0.805 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.