



INSTRUCTION MANUAL

Please read this guide carefully before you use the microphone.

BEFORE YOU PLAY

Install Batteries

Always ask an adult to install batteries. This product uses 3 size AAA (1.5 V) batteries (included).

The battery compartment is located on the back of the product.

Use a Phillips head screwdriver to open the compartment door.

Install batteries according to image inside of compartment.

Negative (-) and positive (+) ends of each battery must be installed correctly, or an electrical hazard and/or damage to the product could result.

Close compartment door and tighten screw to secure.

Note: If the batteries wear out, the product's sound may deteriorate. If you are not going to play for a long time, remove the batteries from the product. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

ACTIVATE MICROPHONE


IMPORTANT: Before normal use, you must take microphone out of DEMO mode.

Move DEMO/PLAY switch on back of microphone to PLAY.

(Note: Microphone will now be on. To turn off, press ON/OFF button.)

Microphone

1. FX Button
2. MIC Button
3. On/Off Button
4. Speaker
5. MP3 Input
6. Target Zone
7. Demo/Play Switch
8. Battery Compartment

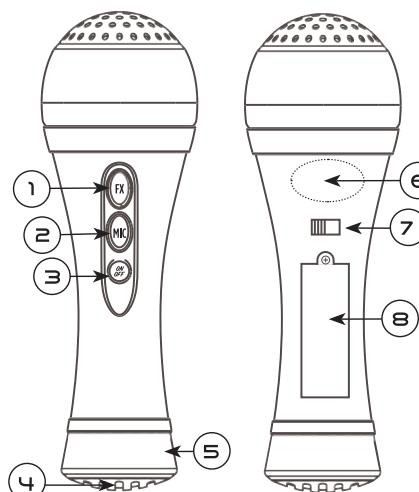

TO PLAY

NOTE: Sing or speak directly into the mic to sound your best!

ON/OFF


Press ON/OFF button to power mic on and off.

FX BUTTON

Press the FX button to hear a drum roll. Press again for cheers. Press button repeatedly to toggle between the two sound effects.


HI-NOTE

Tap top of ring to target zone and sing into the mic for HI-NOTE voice effect.

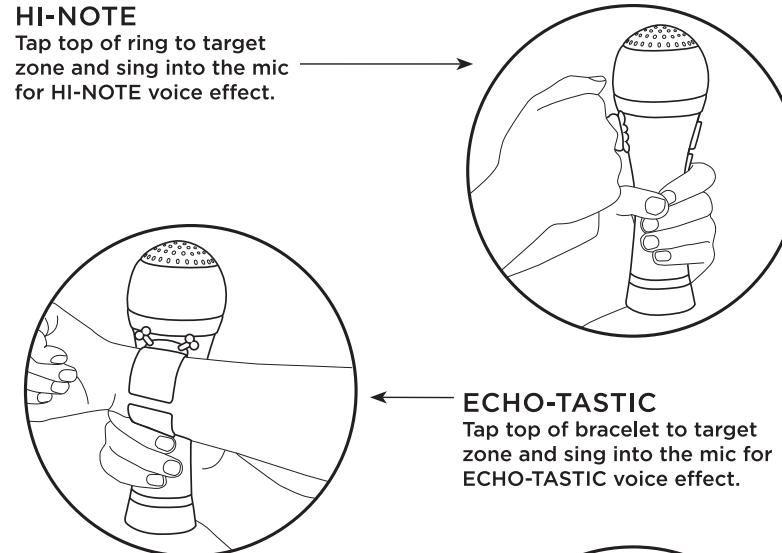

ECHO-TASTIC

Tap top of bracelet to target zone and sing into the mic for ECHO-TASTIC voice effect.

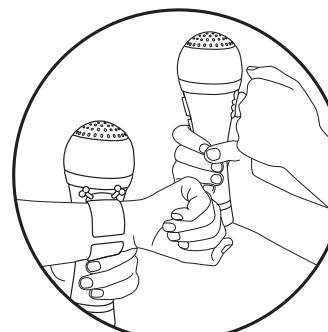

ROBOT-RIFFIC

Tap one accessory (ring or bracelet) to target zone, then tap the other accessory to the target zone and sing into the mic for ROBOT-RIFFIC effect.

You do not have to tap the second accessory immediately. As long as you don't press MIC, or turn the mic off, the ROBOT-RIFFIC effect will start whenever you tap the second accessory.

If you want to switch from HI-NOTE to ECHO-TASTIC or vice versa without starting ROBOT-RIFFIC, be sure to press MIC in between.

MIC BUTTON

Press the MIC button to change back to normal voice boost mode.

MP3 INPUT

Plug your MP3 player into the MP3 INPUT and sing along to your favorite songs. Adjust the volume on your MP3 player to your liking.

IMPORTANT SAFETY INSTRUCTIONS

Please read this section carefully.

Read and follow these instructions.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

Applies to:

FI901, FI902, FI906, FI916, FI926, FI907, FI917, FI927. FCC ID: ZDMVCKRZ

FCC label can be found inside microphone battery compartment.

CUSTOMER ASSISTANCE

Phone: 888.551.1115

Email: info@firstact.com

First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com



No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act Inc.

Colors and specifications depicted on this guide may vary slightly from your product.

First Act, First Act Discovery, the First Act Discovery Logo, and Voice Rockrz are trademarks of First Act Inc.

© 2011 First Act Inc. All Rights Reserved.
VR.M.02