

# Dimension: 65 x 145 mm

## OUTSIDE

- The remote will reconnect to the last device automatically when power off and re-power on.
- La télécommande se reconnectera automatiquement au dernier appareil lorsqu'elle s'éteindra et se rallumera.
- El control remoto se volverá a conectar al último dispositivo automáticamente cuando se apague y se vuelva a encender.
- Die Fernbedienung stellt beim Aus- und Wiedereinschalten automatisch die Verbindung zum letzten Gerät wieder her.
- Il telecomando si ricollegherà automaticamente all'ultimo dispositivo quando viene spento e riacceso.
- Uzaktan kumanda, kapatılıp yeniden açıldığında son cihazı otomatik olarak yeniden bağlanacaktır.
- O controle remoto se reconectará ao último dispositivo automaticamente quando for desligado e religado.
- При выключении и повторном включении пульт автоматически подключится к последнему подключенному устройству.
- 電源をオフしてから再度オンにすると、リモコンは最後に接続されたデバイスに自動的に再接続します。
- 전원을 끄다가 다시 켜면 리모컨이 마지막 장치에 자동으로 다시 연결됩니다.
- 關閉電源並重新打開電源後，遙控器將自動重新連接到最後一個設備。
- 关闭电源并重新打开电源后，遥控器将自动重新连接到最后一个设备。

- Long Press (5s) the pairing button, the remote will disconnect with the last device and wait for new pairing.
- Appuyez longuement (5s) sur le bouton de couplage, la télécommande se déconnectera du dernier appareil et attendra un nouveau couplage.
- Mantenga presionado (5 s) el botón de emparejamiento, el control remoto se desconectará con el último dispositivo y esperará un nuevo emparejamiento.
- Drücken Sie die Pairing-Taste 5s lang, Die Fernbedienung trennt die Verbindung zum letzten Gerät und wartet auf eine neue Pairing-Taste.
- Premere a lungo (5 secondi) il pulsante di accoppiamento, il telecomando si disconnetterà con l'ultimo dispositivo e attenderà un nuovo accoppiamento.
- Eşleştirme düğmesine uzun basın (5s), uzaktan kumanda son cihazla bağlantısını kesecek ve yeni eşleştirmeyi bekleyecektir.
- Pressione longamente (5s) o botão de emparelhamento, o controle remoto se desconectará do último dispositivo e aguardará um novo emparelhamento.
- При длительном (5 сек) нажатии кнопки сопряжения пульт отключится от последнего устройства и будет ожидать нового сопряжения.
- При длительном (5 сек) нажатии кнопки сопряжения пульт отключится от последнего устройства и будет ожидать нового сопряжения.
- 長押し (5s) 配对按钮，遙控器將與最後一個設備斷開連接並等待新的配对。
- 长按 (5s) 配对按钮，遙控器將与最后一个设备断开连接并等待新的配对。

**FCC**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1.1. Reorient or relocate the receiving antenna.
- 1.2. Increase the separation between the equipment and receiver.
- 1.3. Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- 1.4. Consult the dealer or an experienced radio/TV technician for help.

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**CAUTION**

- Risk of explosion if the battery is replaced by an incorrect type
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

**CHARGING**

CHARGEMENT | CARGANDO | LADEN | RICARICA | ŞARJ ETME | CARRREGANDO | ЗАРЯДКА | 充電 | 충전 | 充電 | 充電

**RED LED: Battery Low**      **Green LED: Fully Charged**

USB-C CHARGING CABLE INCLUDED  
CÂBLE DE CHARGEMENT USB-C INCLUS

**SATECHI**

**R2 MULTIMEDIA REMOTE**  
User Manual

Manuel d'utilisateur | Manual de usuario | Bedienungsanleitung | Manuale dell'utente | Kullanım kılavuzu | Manual do usuário | Руководство пользователя | ユーザーマニュアル | 사용 설명서 | 用戶手冊 | 用戶手冊

## INSIDE

**FUNCTIONS**

FONCTIONS | FUNCIONES | FUNKTIONEN | FUNZIONI | FUNKSIYONLAR | FUNÇÕES | ФУНКЦИИ | 機能 | 기능 | 功能 | 功能

**KEY FUNCTION TABLE:**

MULTIMEDIA MODE	PRESENTATION MODE
Volume +   Volume +   Volumen +   Lautstärke +   Volume +   Ses +   Volume +   Громкость +  ボリューム+   音量+   音量+   音量+	Up Arrow   Flèche vers le haut   Flecha arriba   Aufwärtspfeil   Freccia su   Yukarı ok   Seta para cima   Стрелка вверх   上矢印   向上쪽 화살표   上箭頭   上箭头
Volume -   Volume -   Volumen -   Lautstärke -   Volume -   Ses -   Volume -   Громкость -  ボリューム-   音量-   音量-	Down Arrow   Flèche vers le bas   Flecha hacia abajo   Pfeil nach unten   Freccia in giù   Aşağı ok   Seta para baixo   Стрелка вниз   下矢印   向下쪽 화살표   下箭頭   下箭头
Backward   Précédent   Hacia atrás   Rückwärts   Indietro   Geriye   Para trás   Hassad   巻き戻し   뒤로   向后	Left Arrow   Flèche gauche   Flecha izquierda   Linker Pfeil   Freccia sinistra   Sol ok   Seta esquerda   Стрелка влево   左矢印   왼쪽 화살표   左箭頭   左箭头
Forward   Suivant   Avant   Adelante   Nach vorne   Inoltrare   Ileri   Frente   Вперед   早送り   앞으로   向前   向前	Right Arrow   Flèche droite   Flecha correcta   Rechter Pfeil   Freccia destra   Sağ ok   Seta direita   Стрелка вправо   右矢印   오른쪽 화살표   右箭頭   右箭头
Play/Pause   Jouer pause   Reproducir pausar   Spiel/pause   Play pausa   Oynat durdur   A pausa   Воспроизведение / Пауза   再生一時停止   재생 / 일시 중지   播放/暫停   播放/暫停	Enter   Entrer   Entrar   Eingeben   Accedere   Giriş   Entrar   Войти   選択   선택   回車键   回車键
Home   Accueil   Hogar   Zuhause   Casa   Ana Menü   Casa   Домой   ホーム   主頁   主页	Home   Accueil   Hogar   Zuhause   Casa   Ana Menü   Casa   Домой   ホーム   主頁   主页
Siri	Mouse On/Off   Souris activée / désactivée   Ratón encendido / apagado   Maus ein / aus   Mouse attivato / disattivato   Fare Açık / Kapatılı   Mouse On / Off   Включение / выключение мыши   マウスのオン/オフ   마우스 켜기 / 끄기   鼠標開/關   鼠标开/关
Mute   Muette   Muda   Stumm   Mute   Sessiz   Muda   Без звука   뮤트   음소거   静音   静音	Left Click   Touche Gauche   Llave izquierda   Linke Taste   Tasto sinistro   Sol Tik   Clique esquerdo   Левая клавиша   左キー   라이트 클릭   左键   左键
Virtual Keyboard   Clavier virtuel   Teclado virtual   Virtuelle Tastatur   Tastiera virtuale   Sanal Klavye   Teclado virtual   Виртуальная клавиатура   仮想キーボード   가상 키보드   虛擬鍵盤   虚拟键盘	Right Click   Touche Droite   Llave correcta   Richtiger Schlüssel   Tasto destro   Sağ Tik   Clique Droit   Правая клавиша   右キー   오른쪽 클릭   右键   右键

**2. Status indicator**

Indicateur de statut | Indicador de estado | Statusanzeige | Indicador de stato | Durum göstergesi | Indicador de estado | Индикатор состояния | ステータスインジケター | 상태 표시기 | 狀態指示燈 | 状态指示灯

**3. Multimedia/ Presentation Mode Switch**

Changement de Mode Présentation/ Multimedia

Interruptor de modo multimedia / presentación Multimedia / Präsentationsmodusswitcher

Interruptore modalità presentazione / multimediale Medya / Sunum Modu Anahtar

Interruptor de modo de apresentação / multimídia

Переключатель режима мультимедиа / презентации

マルチメディア/プレゼンテーションモードスイッチ

멀티미디어 / 多媒体/演示 모드 스위치

多媒體/演示模式切換鍵 | 多媒體/演示模式切換鍵

**4. USB-C Charging Port**

Port de chargement USB-C | Puerto de carga USB-C | USB-C Ladeanschluss | Porta de ricarica USB-C | USB-C Şarj Portu | Porta de carregamento USB-C | Порт зарядки USB-C | USB-C充電ポート | USB-C 충전 포트 | USB-C充電端口 | USB-C充电端口

**5. Bluetooth Paring Button**

Bouton d'appairage Bluetooth | Botón de emparejamiento de Bluetooth | Bluetooth-Paring-Taste | Pulsante di associazione Bluetooth | Bluetooth Eşleştirme Düğmesi | Botão de pareamento Bluetooth | Кнопка сопряжения Bluetooth | Bluetooth-Parings-Botón | 블루투스 페어링 버튼 | 藍牙配对按钮 | 藍牙配对按钮

**6. Power Switch**

Interrupteur de statut | Interruptor de alimentación | Stromschalter | Interruttore di alimentazione | Güç düğmesi | Chave de força | Выключатель | 電源スイッチ | 전원 스위치 | 電源開關 | 電源开关

**ON/OFF**

ALLUMER/ÉTEINDRE | ENCENDIDO/APAGADO | EIN/AUS | ACCESO/SPENTO | AÇIK/KAPALI | LIGADO/DESLIGADO | ВКЛЮЧЕНИЕ/ВЫКЛЮЧЕНИЕ | 오프/켜기/끄기 | 開關 | 开关

**TURN ON: Blink 3 times then turn off**

**PAIRING**

COUPLAGE | EMPAREJAMIENTO | KOPPELN | ACCOPPIAMENTO | EŞLEŞTİRME | EMPARELHAMENTO | СОПРЯЖЕНИЕ | 페어링

A. **PAIRING MODE: Blink Fast**

B. **Connect**

C. **PAIRED: Slowly blink for 10s then turn off**

# PKG TEAM

**Designer:** Jane Lin

**Product:** R2 Multimedia Remote

**Project:** Product Manual Design

**Date:** DEC / 08 / 20

**Scale:** 100%

## COMMENTS

**Please do not print this layer!!!**

- 100% actual size
- All print should be matte except where indicated

# SPECIFICATIONS

**Printing Information**

CMYK

**Paper Material + Specs**

128G 双铜纸 · 哑膜

**Folding**

5-PANEL  
ROLL FOLD

**Product Info**

**SKU:** ST-BTMR2M

**FCC ID:** N/A