



# Quick Start Guide

This Quick Start Guide will help you get started with your new Epik Learning tab™. For additional assistance, visit: [support@epiklearning.com](mailto:support@epiklearning.com) Tel. 888-999-1244

# 1

## Before Starting

Make sure a Wi-Fi connection is available. We recommend using a Google Account (or Gmail) with your tablet if you do not have one. This guide will help you sign up for a free Google Account.

## Charging

1. Before first use, we recommend charging the tablet for 6 hours.
2. Plug in the included AC adapter.
3. Connect the USB cable from the AC adapter to the tablet.




## 2 Turn Power On

1. Press and hold the **POWER** button for 3 seconds until the the lighted screen appears.




# 3 Language Selection

1. Scroll through the languages and highlight your preference.
2. Tap **Next**.

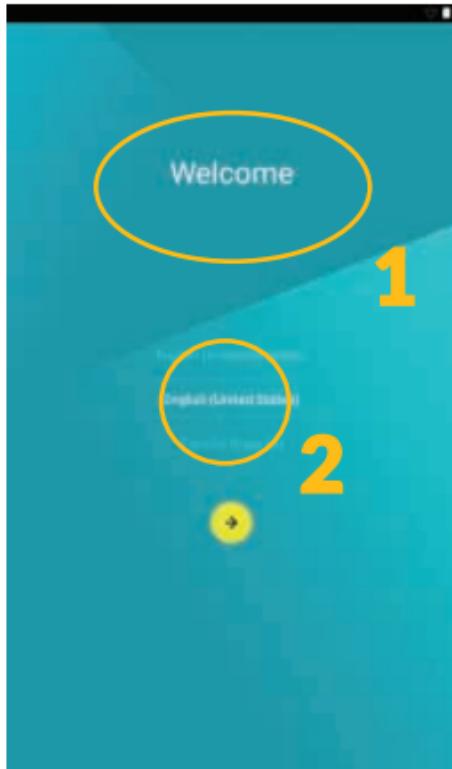

# 4 Connect to Wi-Fi


1. Tap your Wi-Fi Network name.
2. If your Network has a password you will be prompted to enter it.
3. Tap **Connect**.

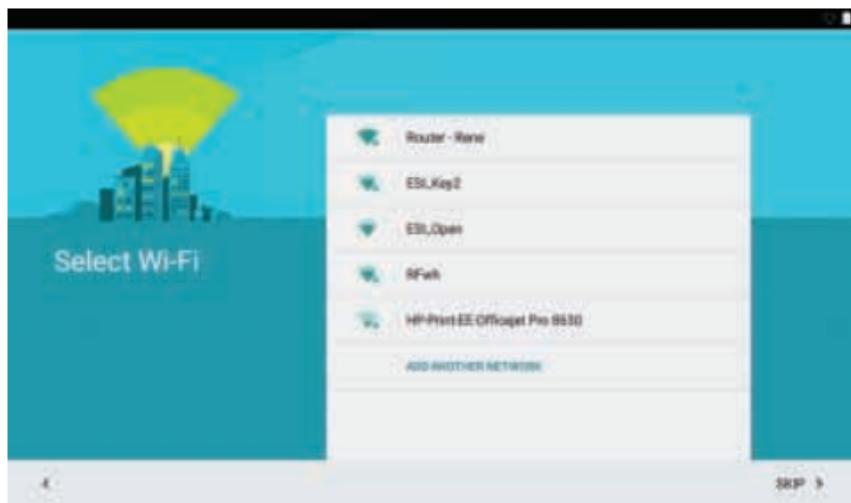

# 5


## Got Google?

1. If you already have a Google Account, enter your email and tap **NEXT**, and enter your password, then skip to step **#9**.
2. If not, tap **SKIP** and you can set one up.

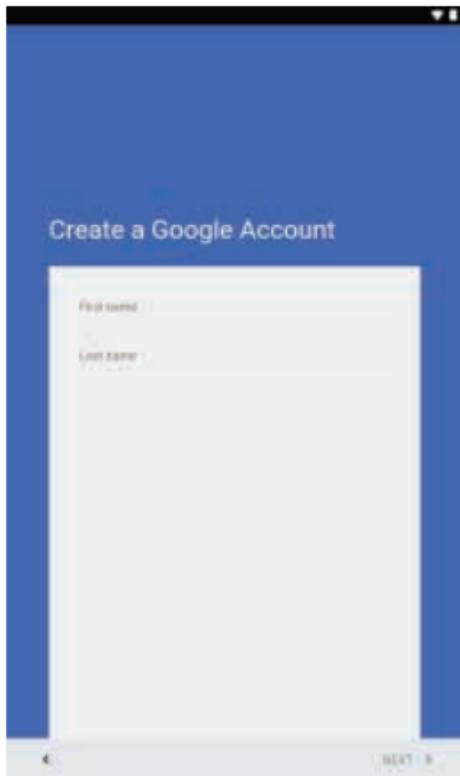

# 6 Create a Google Account



1. Enter your **first** and **last name** in the appropriate boxes. Tap the right arrow to continue.

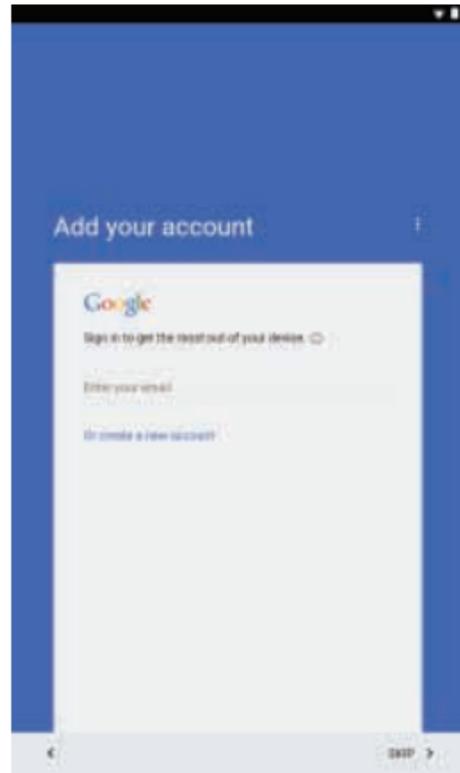

# 7

## Username and Password


1. Enter your desired username and tap the right arrow to continue.
2. Enter a password in the first box and repeat it in the second box. Tap the right arrow to continue.

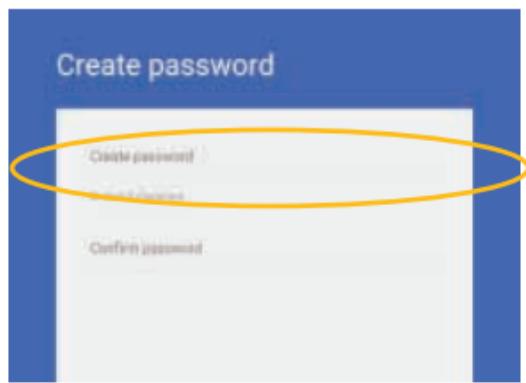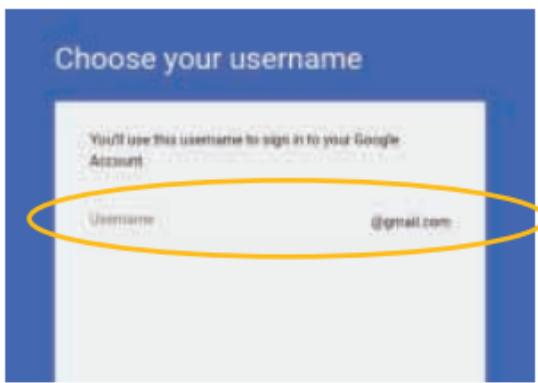

# 8

## Recovery phone



1. Follow the instructions on screen if you would like to set up recovery phone.
2. If not, you can do this later by logging in to google.com.

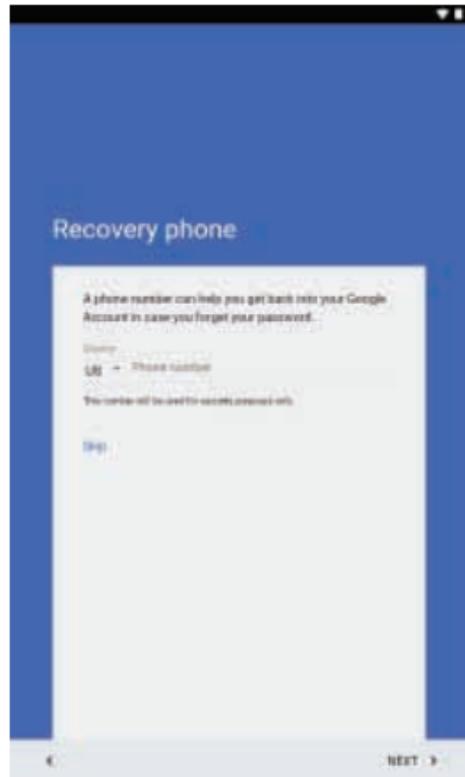


# 9

## Setup Payment Info


You may choose to add a credit card to your account for digital purchases. This can be done later at [wallet.google.com](http://wallet.google.com).

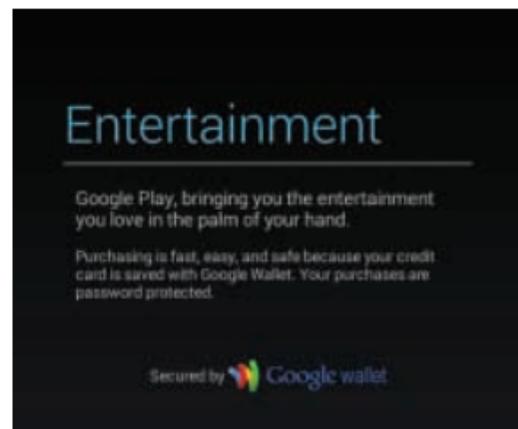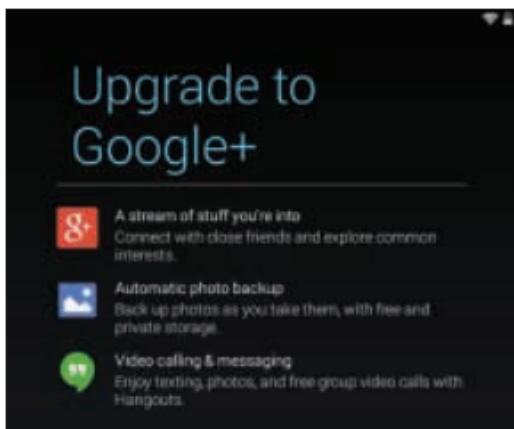

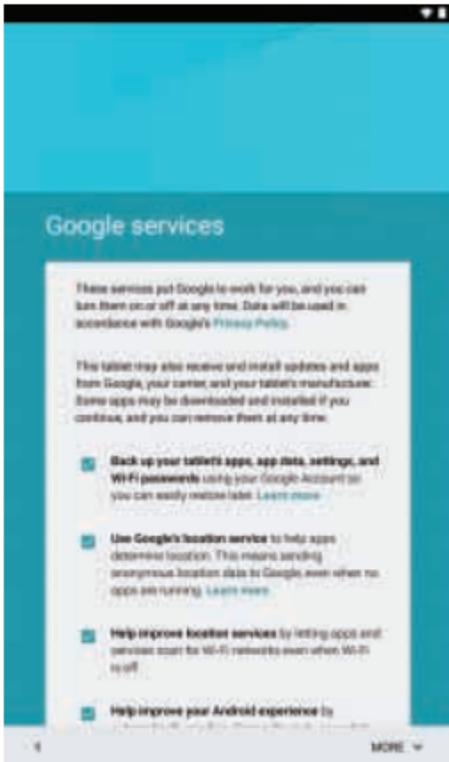


## Google Services

1. Uncheck any services that you do not wish to have active on your tablet then tap the right arrow to continue.

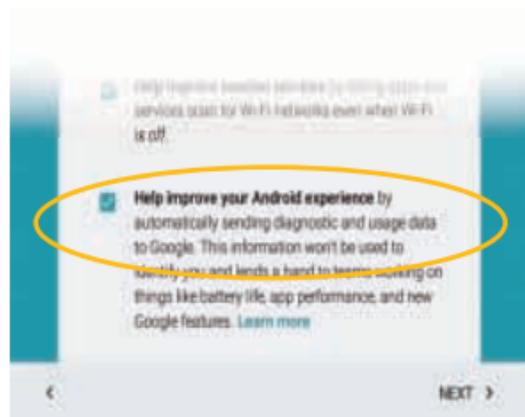

# 11 Epik Learning Tab™ Setup -

You will now set up your Epik Learning Tab™ parent account. Fill in all fields including name, email, postal code...

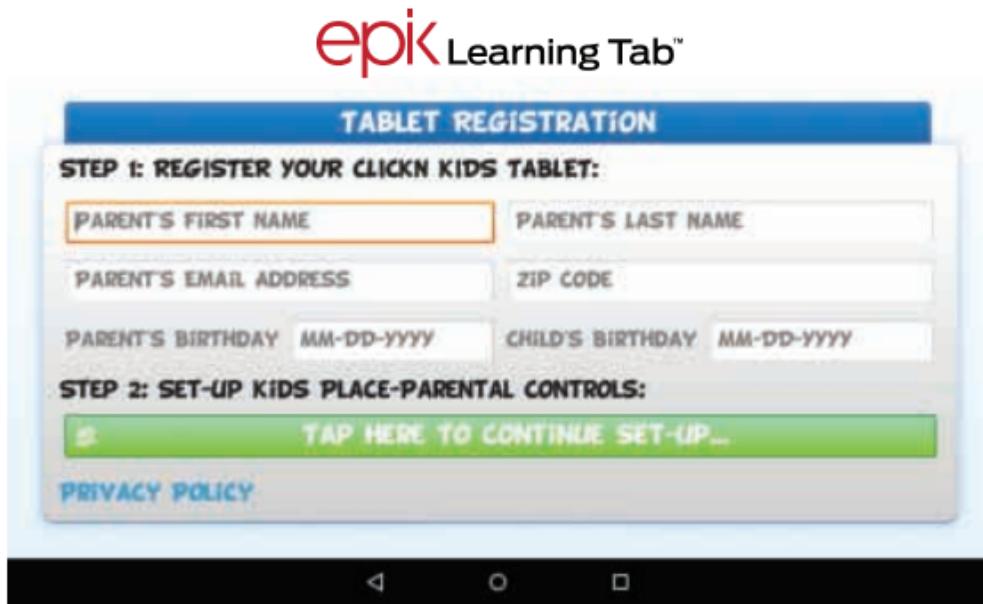

The image shows a digital tablet screen displaying the Epik Learning Tab™ registration interface. The top of the screen features the Epik Learning Tab™ logo. Below the logo is a blue header bar with the text "TABLET REGISTRATION". Underneath the header, there are two sections: "STEP 1: REGISTER YOUR CLICKN KIDS TABLET:" and "STEP 2: SET-UP KIDS PLACE-PARENTAL CONTROLS:". The "STEP 1" section contains four input fields: "PARENT'S FIRST NAME" (highlighted with an orange border), "PARENT'S LAST NAME", "PARENT'S EMAIL ADDRESS", and "ZIP CODE". Below these fields are two date input fields: "PARENT'S BIRTHDAY MM-DD-YYYY" and "CHILD'S BIRTHDAY MM-DD-YYYY". The "STEP 2" section contains a large green button with the text "TAP HERE TO CONTINUE SET-UP..." and a "PRIVACY POLICY" link below it. At the bottom of the screen is a black navigation bar with three icons: a left arrow, a circle, and a square.

epik Learning Tab™

TABLET REGISTRATION

STEP 1: REGISTER YOUR CLICKN KIDS TABLET:

PARENT'S FIRST NAME

PARENT'S LAST NAME

PARENT'S EMAIL ADDRESS

ZIP CODE

PARENT'S BIRTHDAY MM-DD-YYYY

CHILD'S BIRTHDAY MM-DD-YYYY

STEP 2: SET-UP KIDS PLACE-PARENTAL CONTROLS:


TAP HERE TO CONTINUE SET-UP...

PRIVACY POLICY

12

## Epik Learning Tab™ Setup - Step 2

Fill in all fields including parent PIN code. Tap **Continue** to reveal the **Next** button.

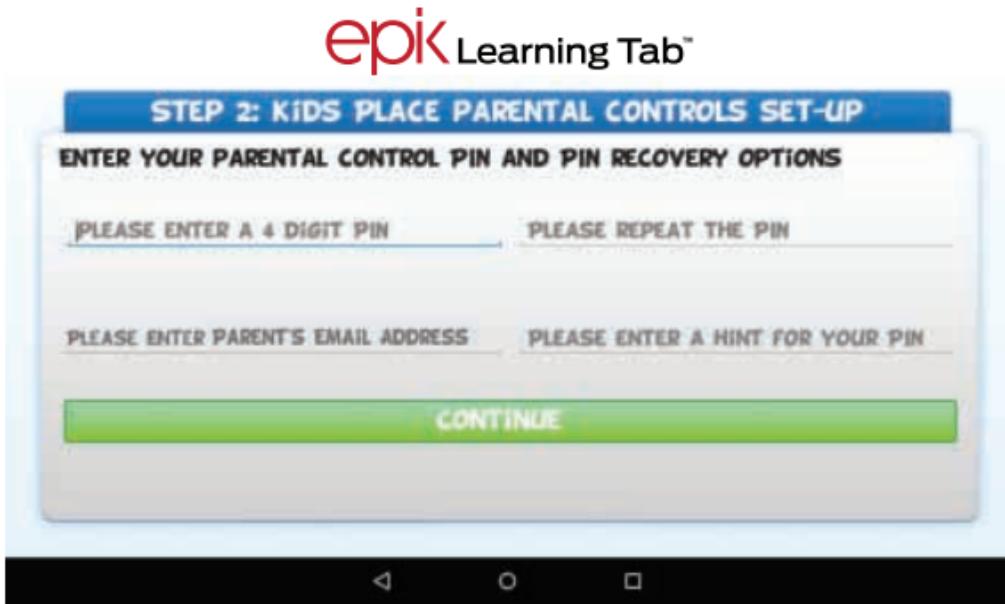

The image shows a mobile application interface for 'Epik Learning Tab™'. At the top, the 'epik Learning Tab™' logo is displayed. Below it, a blue header bar contains the text 'STEP 2: KIDS PLACE PARENTAL CONTROLS SET-UP'. The main content area is titled 'ENTER YOUR PARENTAL CONTROL PIN AND PIN RECOVERY OPTIONS'. It features two input fields: 'PLEASE ENTER A 4 DIGIT PIN' and 'PLEASE REPEAT THE PIN'. Below these are two more input fields: 'PLEASE ENTER PARENT'S EMAIL ADDRESS' and 'PLEASE ENTER A HINT FOR YOUR PIN'. A large green 'CONTINUE' button is centered at the bottom of the form. At the very bottom of the screen, there is a black navigation bar with three white icons: a left arrow, a circle, and a square.

epik Learning Tab™

STEP 2: KIDS PLACE PARENTAL CONTROLS SET-UP

ENTER YOUR PARENTAL CONTROL PIN AND PIN RECOVERY OPTIONS

PLEASE ENTER A 4 DIGIT PIN

PLEASE REPEAT THE PIN

PLEASE ENTER PARENT'S EMAIL ADDRESS

PLEASE ENTER A HINT FOR YOUR PIN

CONTINUE

◀ ○ □

# 13 Epik Learning Tab™ Setup - Step 3

Fill in security questions. Tap **Continue** on to reveal the **Next** button.

The image shows a mobile application interface for the Epik Learning Tab™ setup. At the top, the Epik logo is displayed in red and black. Below the logo, a blue header bar contains the text "STEP 3: KIDS PLACE PARENTAL CONTROLS SET-UP". The main content area is titled "SET-UP SECURITY QUESTIONS TO RESET FORGOTTEN PIN". It contains two questions with input fields and a "CONTINUE" button at the bottom.

**QUESTION 1:** What was your first car make?  
ANSWER HERE


**QUESTION 2:** What was the name of your elementary / primary school?  
ANSWER HERE

**CONTINUE**

At the bottom of the screen, there is a black navigation bar with three white icons: a left arrow, a circle, and a square.


# 14 Kid's Place Setup

Read and Accept the Kid's Place Terms and Conditions.  
Read the Kid's Place Quick Tips.

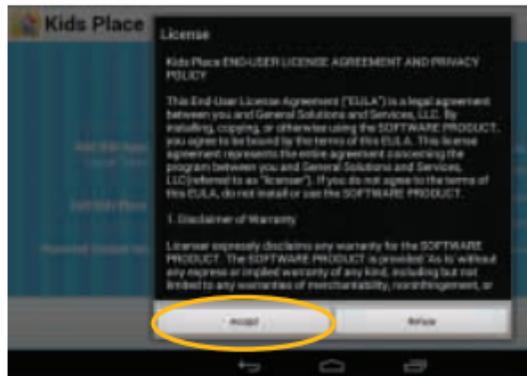

# 15 Have fun!

We hope you enjoy playing and learning on your new  
**Epik Learning Tab™** !

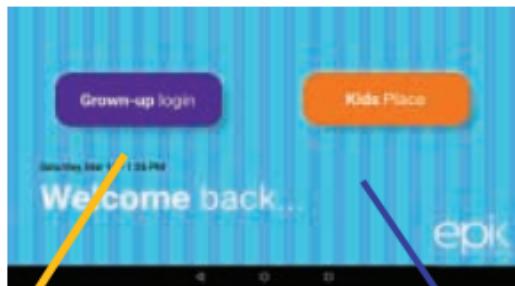



ESPAÑOL

# epik Learning Tab™

## Guía de Inicio Rápido



Esta Guía de inicio rápido te ayudará a usar tu nueva tableta Epik Learning Tab™. Para obtener asistencia adicional, visite: [support@epiklearning.com](mailto:support@epiklearning.com) Tel. 888-999-1244

# 1 Antes de Comenzar

Asegúrese de tener una conexión Wi-Fi disponible. Recomendamos el uso de una cuenta de Google (o Gmail) con la tableta. Si usted no tiene uno, esta guía le ayudará a registrarse para obtener una cuenta de Google gratuita.

## Cargando

1. Antes del primer uso, se recomienda cargar la tableta durante 6 horas.
2. Conecte el adaptador de CA incluido. A continuación, conecte el cable USB del adaptador de CA para la tableta.

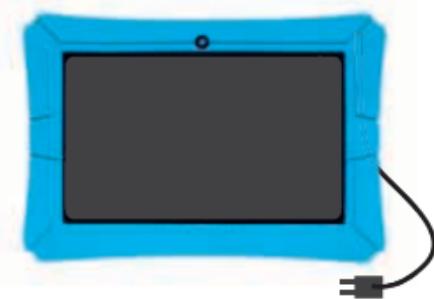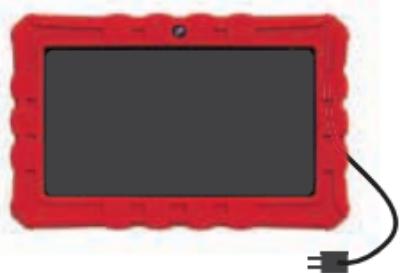


## 2 Encendido

1. Mantenga presionado el botón de encendido durante 3 segundos hasta que aparezca el logotipo de Epik Learning Tab™.




# 3 Idioma

1. Desplácese por los idiomas y seleccione el de su preferencia.
2. Presione Siguiente.

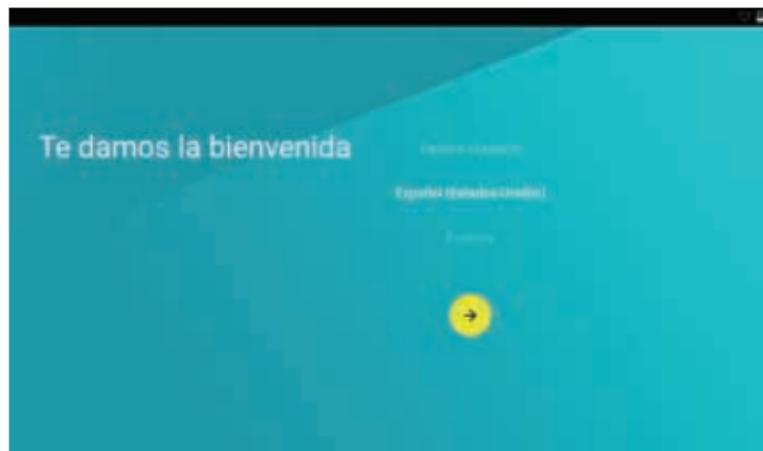


# 4 Conexión a Wi-Fi

1. Seleccione en el nombre de su red Wi-Fi.
2. Si la red tiene una contraseña, se le pedirá que la ingrese.
3. Seleccione Conectar.

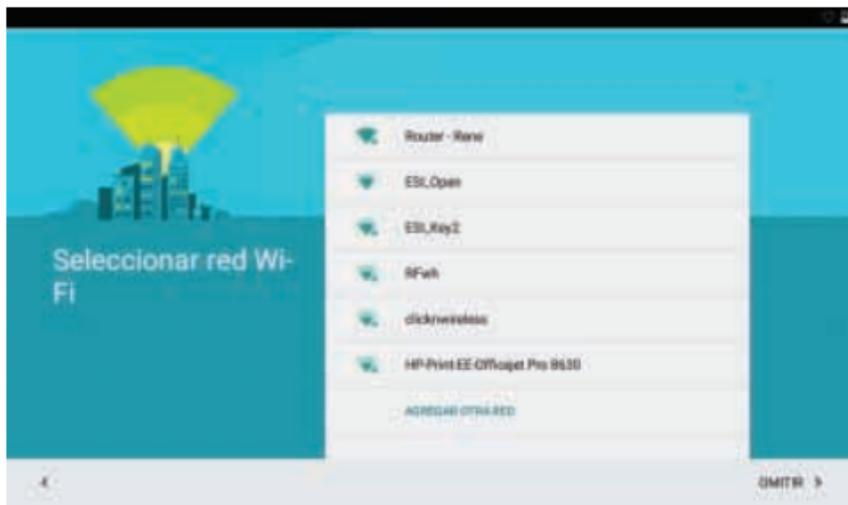


# 5 ¿Tiene Google?

1. Si ya tienes una cuenta de Google, introduzca su email y pulse NEXT, e ingrese su contraseña, vaya al paso # 9.
2. Si no es así, pulse SKIP y se puede configurar una.

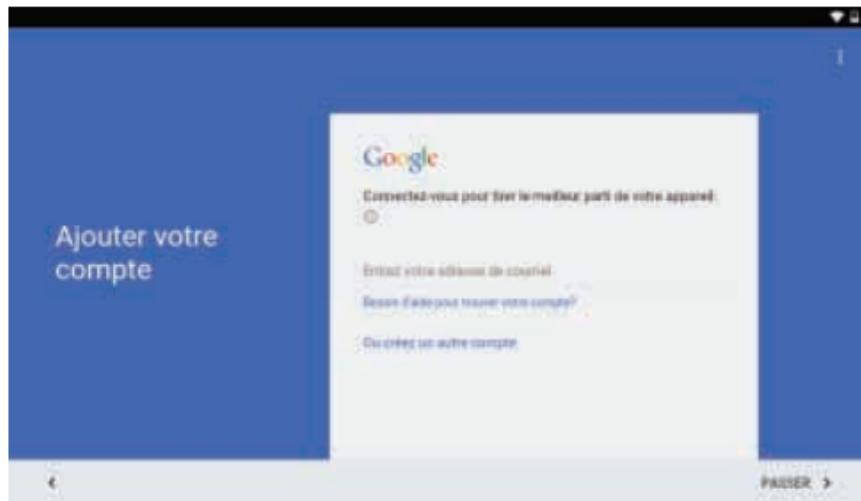

# 6 Obtenga una cuenta con Google

1. En la pantalla siguiente, introduzca su nombre y apellido en las casillas correspondientes. Luego seleccione la flecha derecha para continuar.

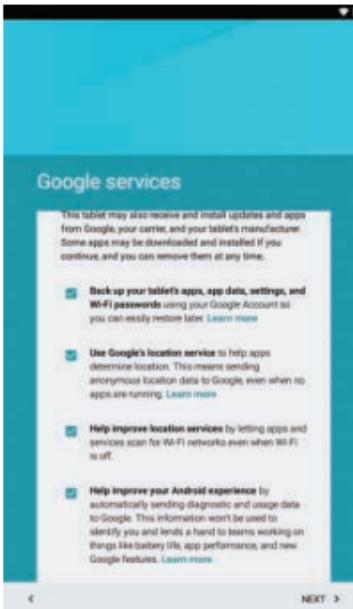

# 7 Nombre de usuario y Contraseña


1. Introduzca su nombre de usuario deseado y seleccione la flecha derecha para continuar.
2. Introduzca una contraseña en el primer cuadro y repetirlo en la segunda casilla. Luego seleccione en la flecha derecha para continuar.

The image displays two screenshots of a user creation process. The left screenshot is titled 'Choose your username' and shows a text input field for 'Username' with the suffix '@gmail.com' to its right. The right screenshot is titled 'Create password' and shows three text input fields: 'Create password', 'Repeat password', and 'Confirm password'. A yellow circle highlights the 'Create password' field in both screenshots.

# 8

## Recuperando su Contraseña (Usando su número de Telefono)

1. Siga las instrucciones en pantalla si desea configurar la recuperación de contraseñas.
- 2Si no, usted puede hacer esto luego ingresando a [google.com](http://google.com).

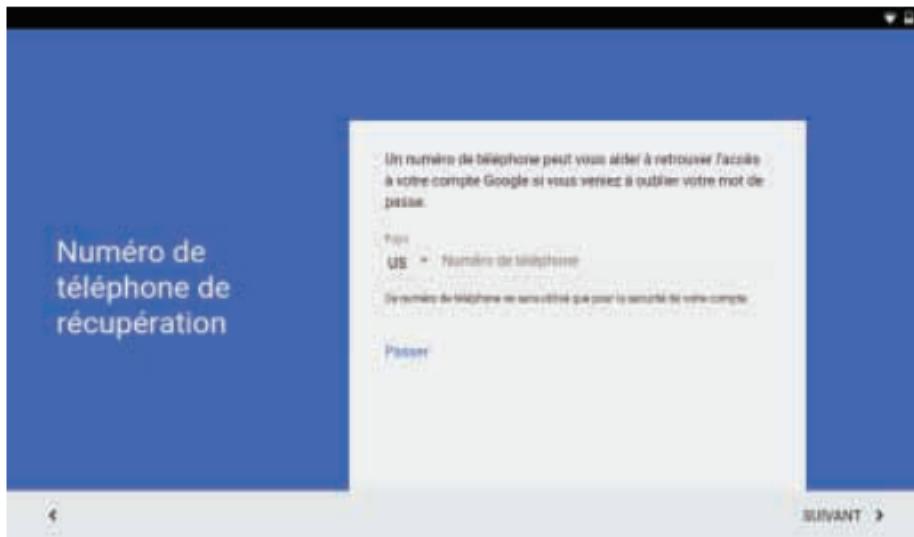

# 9 Google+ y Pagos

Usted puede optar por añadir una tarjeta de crédito a su cuenta para las compras digitales. Esto se puede hacer más tarde en [wallet.google.com](http://wallet.google.com).

Actualizando Google+

---

-  A stream of stuff you're into  
Connect with close friends and explore common interests.
-  Automatic photo backup  
Back up photos as you take them, with free and private storage.
-  Video calling & messaging  
Enjoy texting, photos, and free group video calls with Hangouts.

Entretenimiento


---

Google Play, bringing you the entertainment you love in the palm of your hand.


Purchasing is fast, easy, and safe because your credit card is saved with Google Wallet. Your purchases are password protected.

Secured by  Google wallet

# 10 Servicios Google

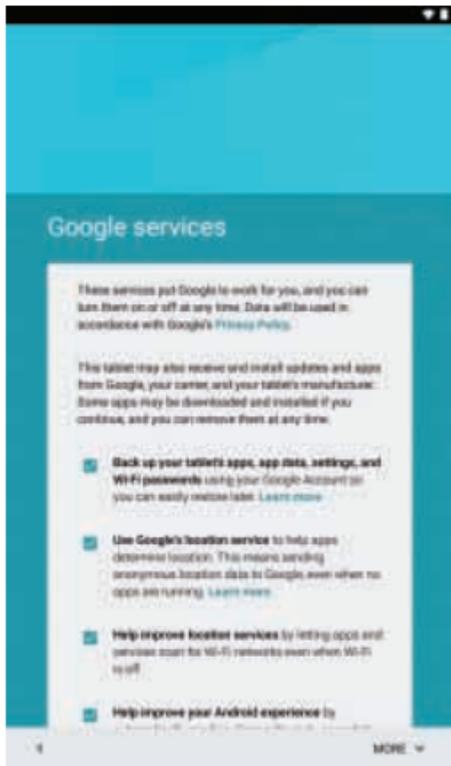

1. Uncheck any services that you do not wish to have active on your tablet then tap the right arrow to continue.

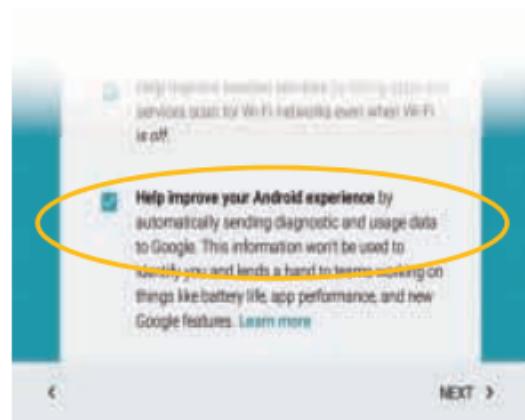

# 11 Configuración Epik Learning Tab™ - Paso 1

Ahora va a configurar su cuenta primaria Epik Learning Tab™. Rellene todos los campos, incluyendo nombre, dirección de correo electrónico, código postal ...



The image shows a registration interface for the Epik Learning Tab. At the top, the Epik logo is displayed with the text "epik Learning Tab™". Below the logo, a blue bar contains the text "REGISTRO DE TABLET". The main section is titled "PASO 1: REGISTRAR LA TABLETA CLICKN KIDS:". This section contains several input fields: "NOMBRE DE LOS PADRES" (highlighted with an orange border), "APELLIDO DEL PADRE", "DIRECCIÓN DE CORREO ELECTRÓNICO DE", "CÓDIGO POSTAL", "CUMPLEAÑOS DE LOS PADRES MM-DD-YYYY", and "CUMPLEAÑOS DEL NIÑO MM-DD-YYYY". Below this, a green button with the text "PULSE AQUÍ PARA CONTINUAR EL PROGRAMA DE INSTALACIÓN ..." is visible. At the bottom, a blue link reads "POLÍTICA DE PRIVACIDAD". The interface is set against a white background with black text and features a black navigation bar at the very bottom.

# 12

## Configuración Epik Learning Tab™ - Paso 2

Rellene todos los campos, incluyendo el código PIN de los padres. Toque Continuar para revelar el botón Siguiente.

The image shows a digital interface for the Epik Learning Tab configuration. At the top, the Epik logo is displayed in red and black. Below the logo, a blue header bar contains the text "PASO 2: CONFIGURACION DE CONTROL PARENTAL DEL LUGAR DE NIÑOS". The main content area is titled "INGRESE SU PIN DE CONTROL PARENTAL Y PIN OPCIONES DE RECUPERACIÓN". It features two input fields: "POR FAVOR, INTRODUZCA UN PIN DE 4" and "POR FAVOR, REPITA EL PIN". Below these fields are two additional input fields: "POR FAVOR ESCRIBA EL CORREO ELECTRÓNICO" and "POR FAVOR, INTRODUZCA UNA SUGERENCIA". A large green "CONTINUAR" button is centered at the bottom of the input area. At the very bottom of the screen, there is a black navigation bar with three white icons: a left arrow, a circle, and a square.

# 13 Configuración Epik Learning Tab™ - Paso 3

Rellene preguntas de seguridad. Toque Continuar para revelar en el botón Siguiente.

**epik Learning Tab™**

**PASO 3: CONFIGURACIÓN DE CONTROL PARENTAL DEL LUGAR DE NIÑOS**

**CONFIGURAR PREGUNTAS DE SEGURIDAD PARA RESTABLECER EL PIN OLVIDADO**

**PREGUNTA 1:** ¿Cuál fue tu primer coche hecho?

**RESPONDA AQUÍ**

**PREGUNTA 2:** ¿Cuál era el nombre de su escuela primaria / primaria?

**RESPONDA AQUÍ**


**CONTINUAR ...**

◀ ○ □

# 14

## Configuración de Kid's Place



Lea y acepte los Términos y Condiciones de Kid's Place.  
Lea Consejos rápidos para los Kid's Place.

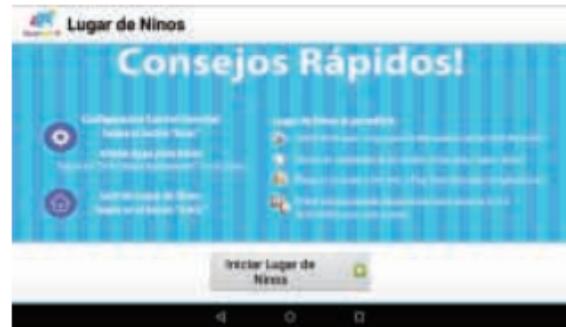

# 15

## Diviértase

Esperamos que disfrute jugando y aprendiendo en su nueva Epik Learning Tab™.

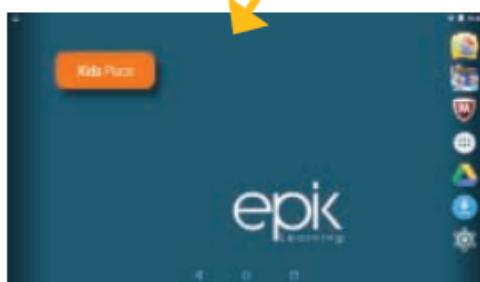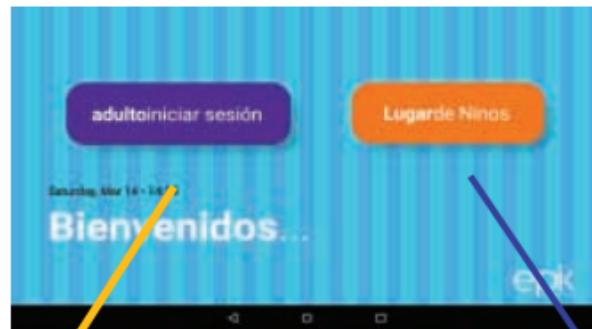



FRANÇAIS

# epik Learning Tab™

## Guide de Mise en Marche Rapide

Ce Guide de Mise en Marche Rapide vous aidera à vous familiariser avec notre nouvelle Epik LearningTab™. Pour demande d'assistance supplémentaire, visitez

[support@epiklearning.com](mailto:support@epiklearning.com) Tel. 888-999-1244

# 1

## Avant de Commencer

Assurez-vous qu'une connexion Wi-Fi est disponible.

Nous vous recommandons d'utiliser un compte Google (ou Gmail) avec votre tablette. Si vous n'en avez pas, ce guide vous aidera à vous inscrire à un compte Google gratuit.



## Chargement

1. Avant la première utilisation, nous vous recommandons de charger la tablette pendant 6 heures.
2. Branchez la prise qui est fournie avec la tablette dans une prise électrique.
3. Puis insérez l'autre extrémité du cordon USB à la tablette.

# 2


## Allumer votre tablette

1. Appuyez sur la touche marche et maintenez-la enfoncé pour 3 secondes jusqu'à ce que le logo Epik Learning Tab™ apparaisse sur l'écran d'accueil.




# 3 Langues

1. Sélectionnez votre préférence parmi les langues.
2. Touchez la flèche pour continuer

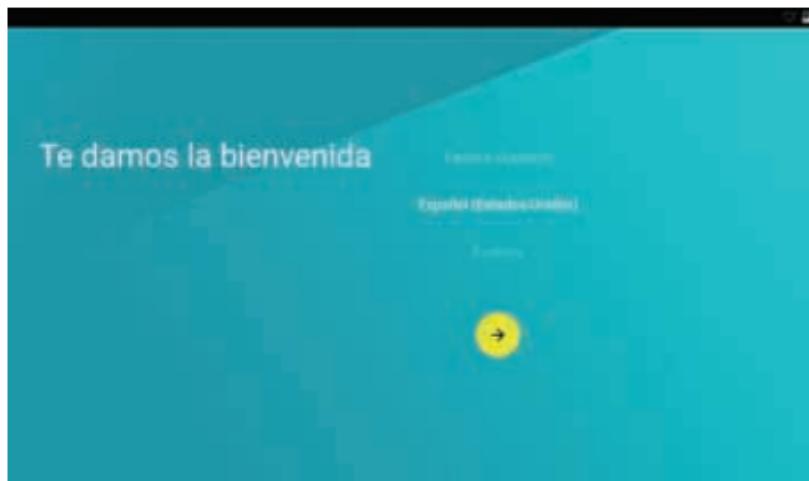


## 4 Se raccorder à un réseau Wi-Fi.

1. Saisissez le nom de votre réseau Wi-Fi
2. Si vous sélectionnez un réseau sécurisé saisissez le mot de passe.
3. Touchez « Connect ». (Connecter)

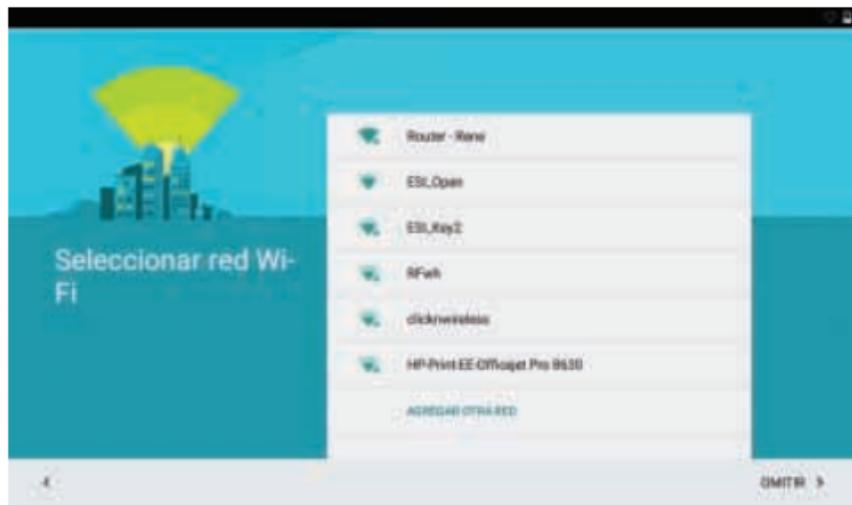


# 5 Avez-vous un compte Google ?

Si vous disposez déjà d'un compte Google (ou Gmail) tapez « Yes » (oui) et passez à l'étape 12. Sinon, tapez « No » (non) et vous pouvez en créer un.

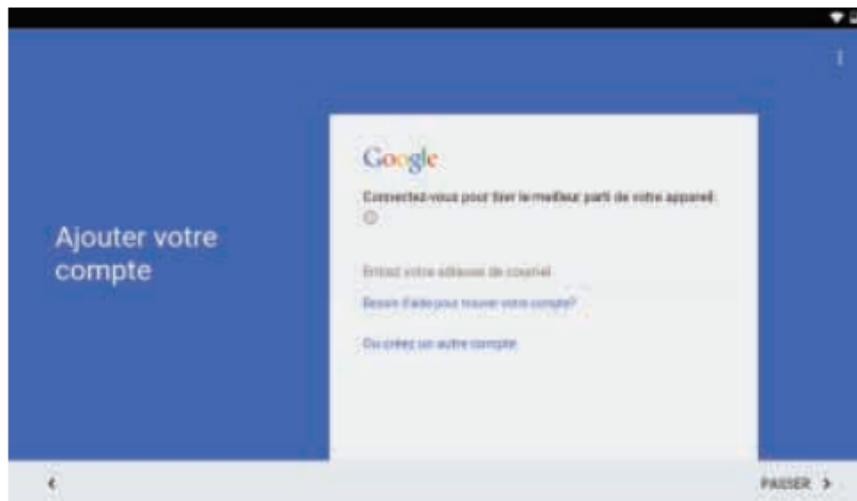



## 6 Crédit d'un compte Google.

1. Tapez « Yes » (oui) pour créer un compte Google.
2. Sur l'écran suivant, saisissez votre prénom et nom dans les champs appropriés. Puis toucher sur la flèche à droite pour continuer

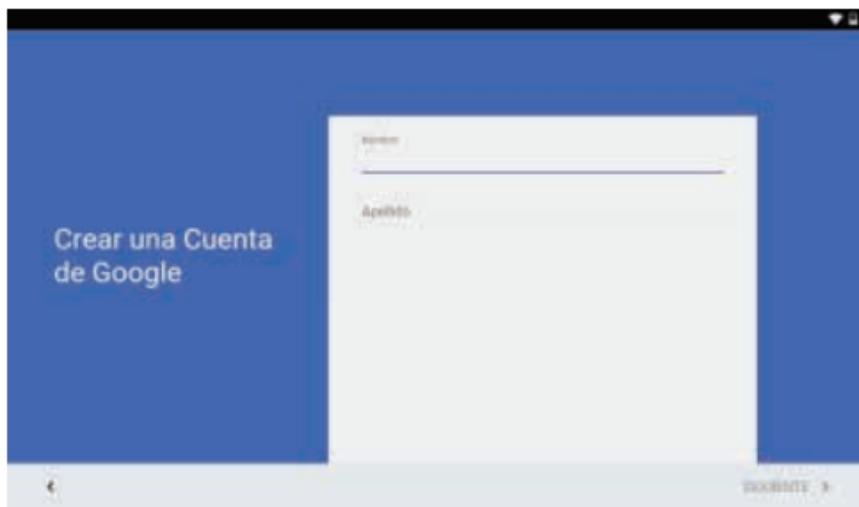

## 7 Nom d'utilisateur et mot de passe


1. Saisissez votre nom d'utilisateur puis toucher la flèche à droite pour continuer
2. Saisissez et confirmez votre mot de passe dans les champs. Puis tapez la flèche à droite pour continuer

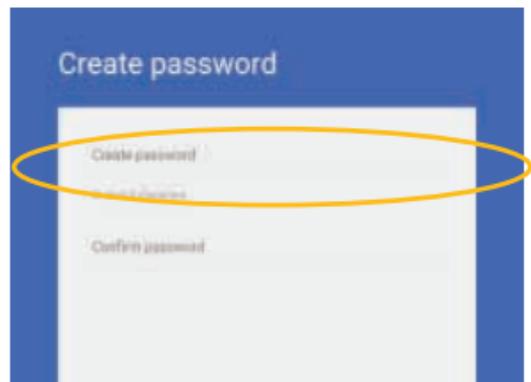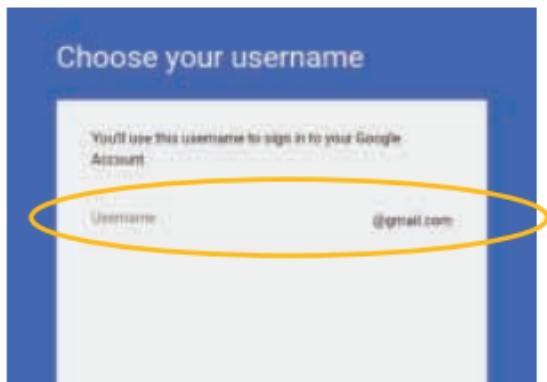

# 8


## Récupération du mot de passe.

Suivez les instructions sur votre écran si vous aimerez commencer la récupération de votre mot de passe. Vous pouvez passer cette étape et la rejoindre plus tard quand vous vous reconnectez avec Google.com.

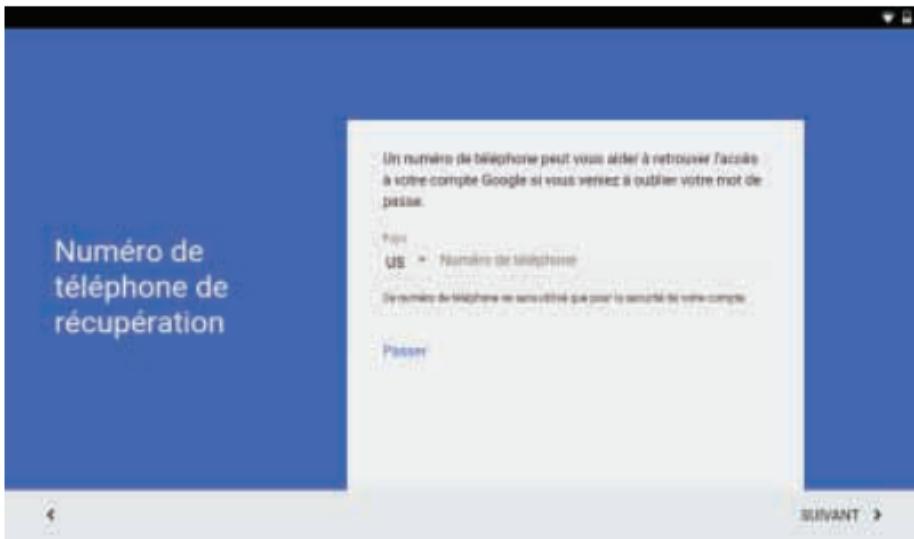

# 9 Produits Google

Vous pouvez choisir d'ajouter une carte de crédit à votre compte pour les achats numériques. Cela peut être fait plus tard dans [wallet.google.com](http://wallet.google.com).

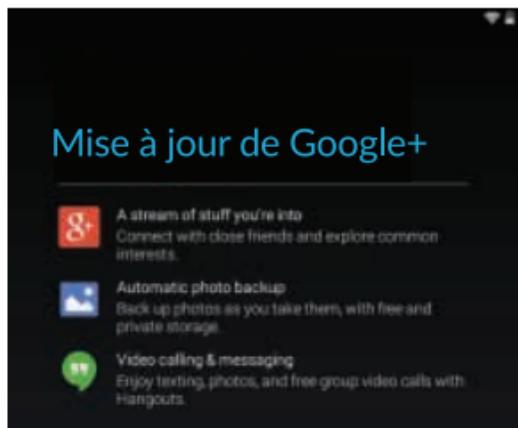


Mise à jour de Google+

**g** A stream of stuff you're into  
Connect with close friends and explore common interests.

**Photo** Automatic photo backup  
Back up photos as you take them, with free and private storage.

**Hangouts** Video calling & messaging  
Enjoy texting, photos, and free group video calls with Hangouts.

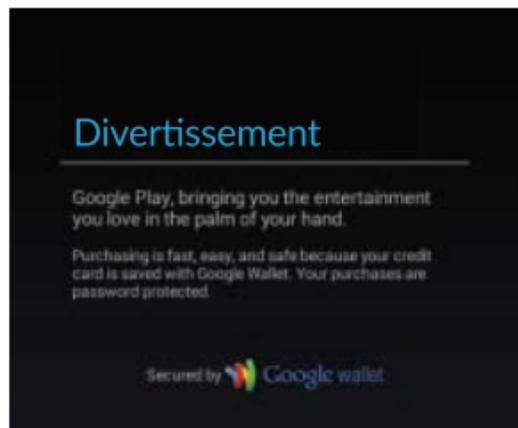


## Divertissement

Google Play, bringing you the entertainment you love in the palm of your hand.

Purchasing is fast, easy, and safe because your credit card is saved with Google Wallet. Your purchases are password protected.


Secured by  Google wallet

# 10 Services Google

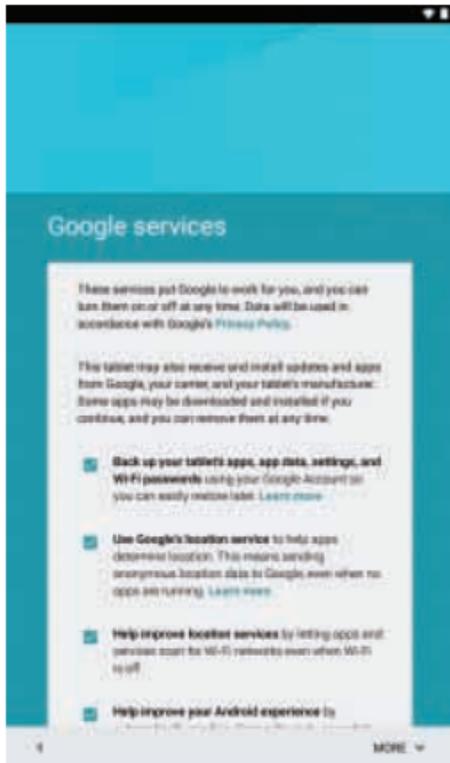

1. Désactivez tous les services que vous «ne veulent pas tourner sur votre tablette indisponible

Ensuite, appuyez sur la flèche droite pour continuer.

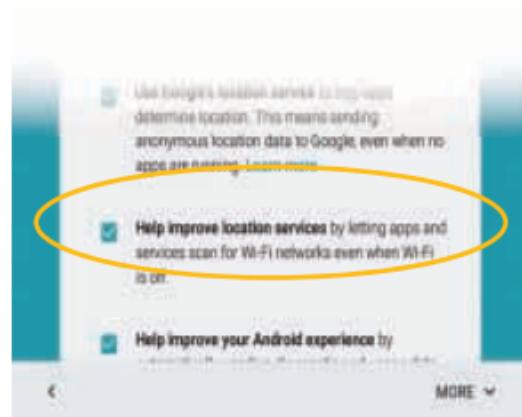

# 11 Epik Learning Tab™ Configuración - Étape 1

Vous allez maintenant configurer votre compte parent Epik Learning Tab™. Y compris remplir tous les champs nom, e-mail, code postal ...



# 12

## Epik Learning Tab™ Configuración - Étape 2

Remplissez tous les champs y compris le code PIN de parent. Tapez sur Continuer pour révéler le bouton Suivant.



The image shows a digital configuration screen for the Epik Learning Tab. At the top, the Epik logo is displayed with the text "epik Learning Tab™". Below the logo, a blue header bar contains the text "TAPE 2 : CONFIGURATION DU CONTR LE PARENTAL POUR". A large, bold instruction "SAISISSEZ VOTRE CODE PIN DE CONTR LE PARENTAL AINSI QUE LES OPTIONS DE R CUP RATION DE CE CODE." is centered. Below this, there are two input fields: "VEUILLEZ SAISIR UN CODE PIN" and "4 CHI". To the right of the first field is the text "VEUILLEZ R P TER LE CODE PIN". Further down, there are two more input fields: "VEUILLEZ SAISIR LE-MAIL DU PARENT" and "SAISISSEZ UN INDICE POUR VOTRE CO". A large green "CONTINUER" button is centered at the bottom of the screen. At the very bottom, there is a black navigation bar with three icons: a left arrow, a circle, and a square.

epik Learning Tab™

TAPE 2 : CONFIGURATION DU CONTR LE PARENTAL POUR

SAISISSEZ VOTRE CODE PIN DE CONTR LE PARENTAL AINSI QUE LES OPTIONS DE R CUP RATION DE CE CODE.

VEUILLEZ SAISIR UN CODE PIN 4 CHI VEUILLEZ R P TER LE CODE PIN

VEUILLEZ SAISIR LE-MAIL DU PARENT SAISISSEZ UN INDICE POUR VOTRE CO

CONTINUER

◀ ○ □

# 13 Epik Learning Tab™ Configuración - Étape 3

Remplissez les questions de sécurité. Appuyez sur Continuer pour révéler le bouton Suivant.



## TAPE 3 : CONFIGURATION DU CONTRÔLE PARENTAL POUR

CONFIGUREZ LES QUESTIONS DE SÉCURITÉ POUR LA RÉINITIALISATION D'UN CODE PIN OUBLIÉ

**QUESTION 1:**

Quelle était la marque de votre première voiture ?

RÉPONDEZ ICI

**QUESTION 2:**

Quel était le nom de votre école primaire ?

RÉPONDEZ ICI

**CONTINUER**



# 14



## Configuración de Kid's Place

Lisez et acceptez les Termes et Conditions de Kids Place.  
Lire Conseils rapides pour Kid's Place.



# 15 Amusez-Vous !

Nous espérons que vous aurez beaucoup de plaisir en jouant et en apprenant votre nouvelle EPIK Learning Tab.

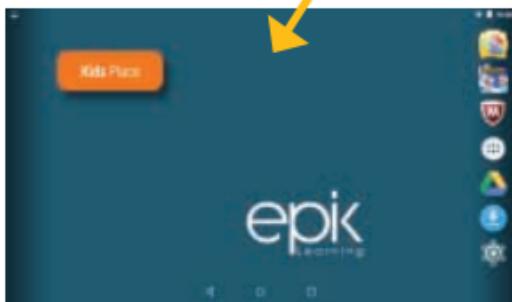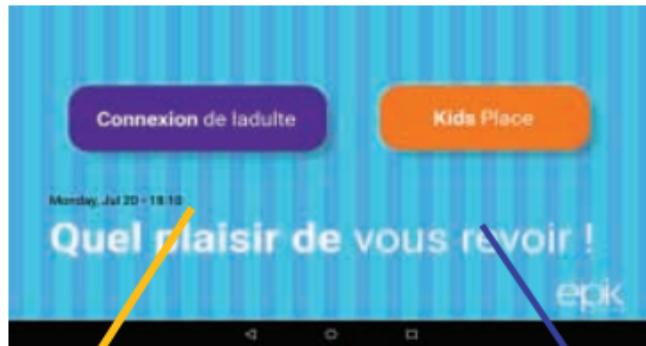

epik™

Learning Tab™

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **Specific Absorption Rate (SAR) information:**

This Tablet PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

**FCC RF Exposure Information and Statement** The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet PC (FCC ID: ZFN-ELT0801) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification when properly worn on the **body is 0.737W/kg**. This device was tested for typical body-worn operations with the back of the handset kept **00cm** from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a **00mm** separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.