


1 INTRODUCTION

1. Front Camera
2. Power on/off
3. Vol+
4. Vol-
5. MIC
6. Earphone Jack
7. Micro USB/Charger
8. Interface
9. Micro SD card interface
10. MINI HDMI interface
11. Back Camera
12. Loudspeaker -L
12. Loudspeaker -R



2 BEFORE STARTING

1. Please have Wi Fi connection available.
2. G-mail account is required to get the most out of your tablet. It is recommended to setup your Gmail account before starting operation. You can also setup your account by following this initial setup guide.

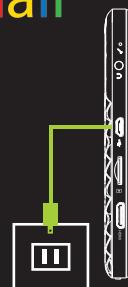

3 CHARGING BATTERY

1. Connect the supplied DC Charger to the "Micro USB/Charger Interface" port on the Tablet and the AC outlet on the wall.
2. By connecting the DC Charger, the battery will be charged. It will take about 5 hours for battery to be fully charged. The animation on the screen shows full charge. When the device prompts low battery, please charge it by provided charger. To improve the longevity of the battery, you may charge for another 15 minutes after it prompts the battery is full.

4 POWER ON

1. **Power On:** Press and hold the power switch for 5 seconds; the unit displays the start-up logo and enters the working mode.

Note; Power Off: Press and hold the power switch for 3 seconds to turn the unit off.

Sleep: While the device is at working status, press the power switch, it enters the sleeping mode, and the screen will be off then. Press the power switch again, it shift to the normal mode. You may use this function when you don't use the device temporary to save power.



5 SETTING - MAIN MENU

1. Tap on the icon in the main interface, the main menu is appeared.



2. The main menu including the system setting, music playback, video playback, web browser and other applications you installed.



6 SETTING - MENU

1. Tap on "Setting" in the main menu to enter the setting menu.



2. The setting menu is shown and you can start the system setting by tapping the corresponding setting items.



7 SETTING - DATE & TIME

1. Tap on "Date & Time" in the setting interface to set the date and time. You can choose Automatic date & Time that is provided by network, or can manually set them by following the menu in the screen



8 SETTING - WI-FI CONNECTION

1. Tap on "Wireless & network" in the setting menu to enter the wireless and network setting interface.
2. Tap on "Wi-Fi" to turn on the Wi-Fi.
3. Tap on "Wi-Fi setting" to set and manage wireless access.
4. Tap on "Network Notification". The screen shows the list of the open network it searched. Tap on the name of the network and the screen shows the setting window. You may connect it to Wi-Fi according to the prompts. You need to input the user name and password if networks are encrypted.



Limited Warranty

This product, when marketed as new and first purchased in its original packaging from an authorized reseller ("Product"), has a limited warranty by LTI Computer Inc. for parts and labor against manufacturing defects in materials and workmanship for a period of one (1) year. This Limited Warranty is conditioned upon proper use of Product by the purchaser.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased and used in the United States, and its territories, by the original purchaser. To receive warranty service, the purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, will replace it at no charge with the same or similar product. If the product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured hardware or products to repair or replace the Product with a similar product at its sole discretion. All replaced hardware and products become the property of us and must be returned to us. Replacement hardware and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged goods.

If the product is received damaged, it is the responsibility of the consumer to file a claim against the carrier. We will only store the damaged product for 30 days and reserves the right, in its sole discretion, to dispose of the damaged product or ship it back to the consumer at consumer's expense after 30 days.

We provide no warranty for the third-party software included with the Product or installed by the customer. We will NOT re-install or back-up any data, applications or software that have been added to the product. It is therefore recommended that a back-up be made of any such data or information prior to sending the unit to us to avoid the permanent loss of such information.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product,

and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized LTI which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON LTI. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

Telephone: 888-999-1683

E-mail: service@mymonstertablet.com

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.