

# PEUGEOT Connect Nav

## GPS satellite navigation - Applications - Multimedia audio - Bluetooth® telephone



	Contents
First steps	2
Steering mounted controls	5
Menus	6
Voice commands	8
Navigation	14
Applications	40
Radio Media	56
Telephone	68
Settings	80
Frequently asked questions	90

**!** As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

**i** The system is protected in such a way that it will only operate in your vehicle. Displaying of the **Energy Economy Mode** message signals that a change to standby is imminent.

**i** The different functions and settings described vary according to the version and configuration of your vehicle.

**i** The link below gives access to OSS (Open Source Software) codes for the system.  
<http://www.psa-peugeot-citroen.com/oss>

# First steps



With the engine running, a press mutes the sound.  
With the ignition off, a press turns the system on.




Volume.

Use the buttons either side of or below the touch screen for access to the menus, then press the virtual buttons in the touch screen. All of the touch areas of the screen are white. Press the cross to go back a level. Press "OK" to confirm.




The touch screen is of the "capacitive" type.  
To clean the screen, use a soft, non-abrasive cloth (spectacles cloth) with no additional product.  
Do not use sharp objects on the screen.  
Do not touch the screen with wet hands.

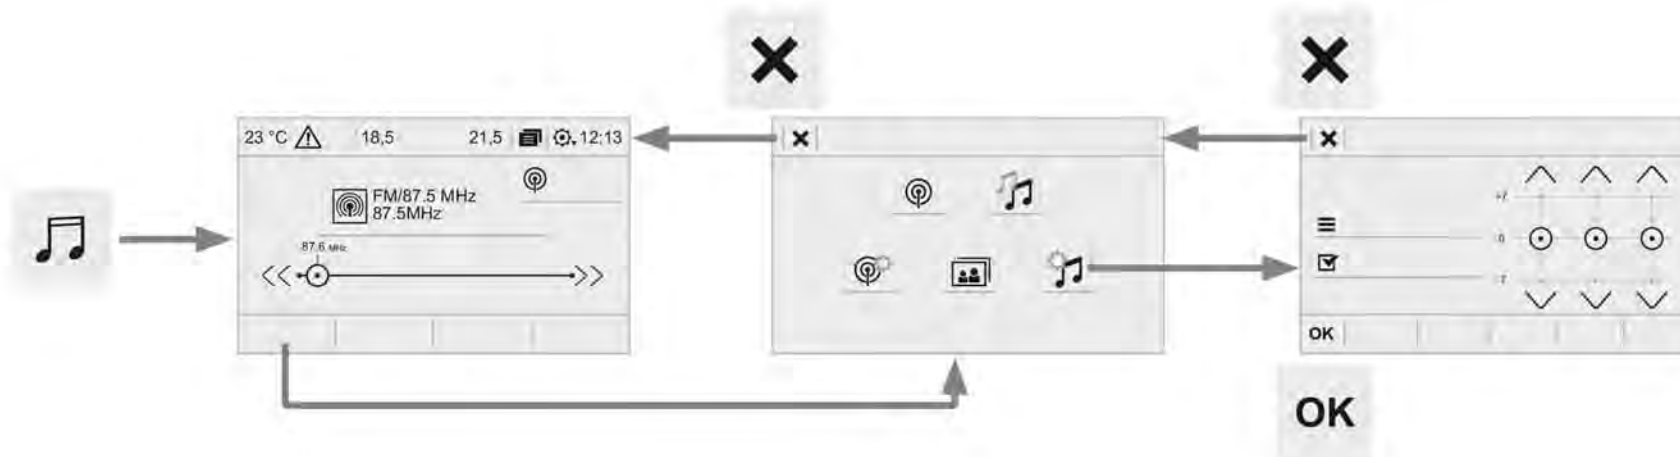

Certain information is displayed permanently in the upper band of the touch screen:

- Reminder of the air conditioning information and direct access to the corresponding menu.
- Go directly to the selection of the audio source, to the list of radio stations (or list of titles depending on the source).
- Go to the message notifications, emails, map updates and, depending on the services, the navigation notifications.
- Go to the settings for the touch screen and the digital instrument panel.

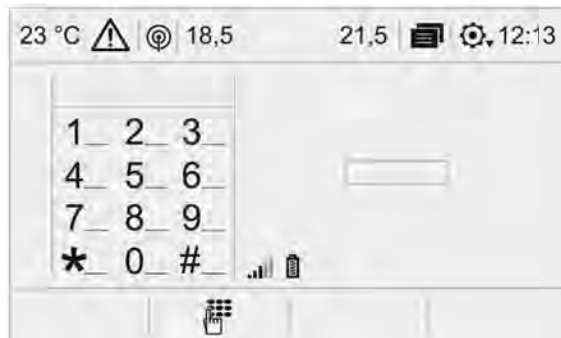

Select the audio source (depending on version):


- FM / AM\* radio stations.
- USB memory stick.
- Telephone connected by Bluetooth\* using Bluetooth\* audio streaming.



**i** In the "Settings" menu you can create a profile for just one person or a group of people with common points, with the possibility of entering a multitude of settings (radio presets, audio settings, navigation history, contact favourites, ...); these settings are taken into account automatically.

**i** In very hot conditions, the volume may be limited to protect the system. It may go into standby (screen and sound off) for at least 5 minutes. The return to normal takes place when the temperature in the passenger compartment has dropped.

\* Depending on equipment.

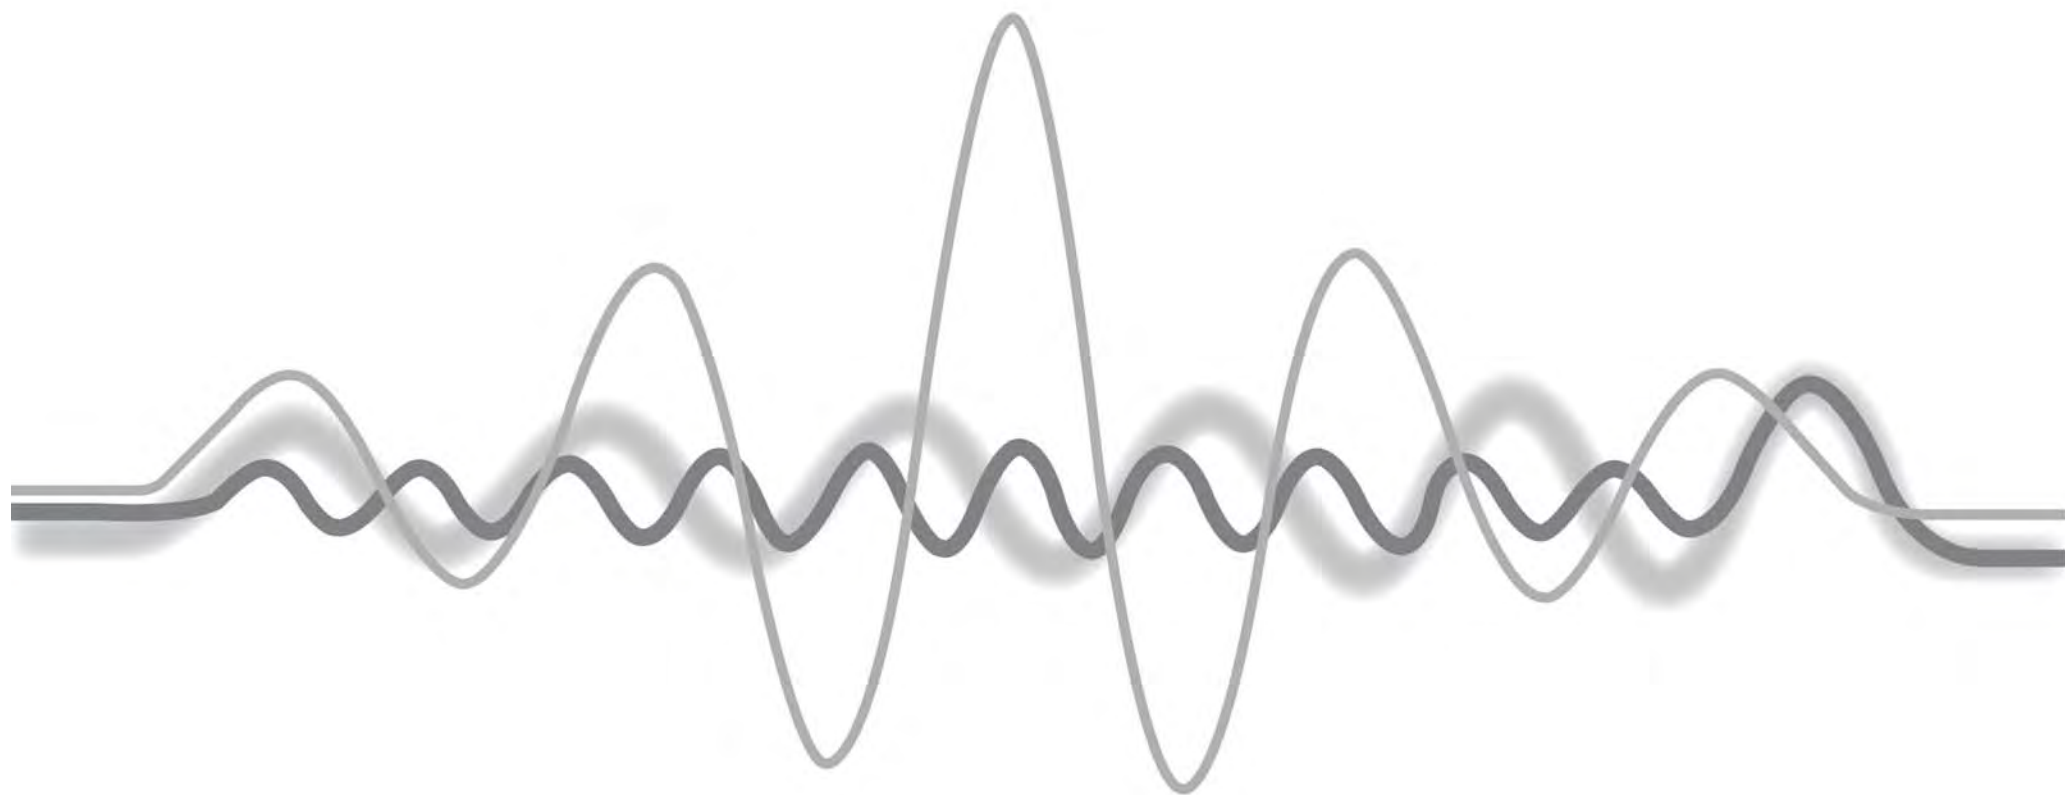

## Steering mounted controls



### Voice commands:

Short press, system voice commands.

Long press, smartphone voice commands via the system.



Increase volume.



Mute / Restore the sound.

Or

Mute by pressing the volume increase and decrease buttons simultaneously.

Restore the sound by pressing one of the two volume buttons.



Decrease volume.



**Media** (short press): change the multimedia source.

**Telephone** (short press): call.

**Call in progress** (short press): access to telephone menu.

**Telephone** (long press): reject an incoming call, end call, access to telephone menu.



**Radio** (rotate): automatic search for the previous / next station.

**Media** (rotate): previous / next track, move in a list.

**Short press:** confirm a selection; other than selection, access to presets.

### LIST

**Radio:** display the list of stations.

**Media:** display the list of tracks.

**Radio** (press and hold): update the list of stations received.

# Menus

According to version

## Air conditioning



Manage the various temperature and air flow settings.

## navigation



Enter navigation settings and choose a destination.

## Applications



Operate certain applications on a smartphone connected via CarPlay® or Andoid Auto. Check the state of the Bluetooth® and Wi-Fi connections.

## Driving



Activate, deactivate and configure certain vehicle functions.






## Radio Media



Select an audio source, a radio station, display photographs.



## Telephone

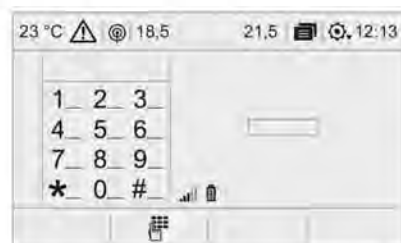

Connect a telephone by Bluetooth®, read messages and emails and send quick messages.



## Settings



Configure a personal profile and/or configure the sound (balance, ambience, ...) and the display (language, units, date, time, ...).

## Voice commands

### Steering mounted controls



Pressing this button activates the voice commands function.



To ensure that voice commands are always recognised by the system, please observe the following recommendations:

- speak in a normal tone without breaking up words or raising your voice.
- always wait for the "beep" (audible signal) before speaking.
- for best operation, it is recommended that the windows and opening roof be closed to avoid extraneous interference (according to version).
- before making a voice command, ask other passengers to not speak.

### First steps



Example of a "voice command" for navigation:

**"Navigate to address 11 Regent Street, London".**

Example of a "voice command" for the radio and media:

**"Play artist Madonna" .**

Example of a "voice command" for the telephone:

**"Call David Miller".**



The voice commands, with a choice of 4 languages (English, French, Spanish, Brazilian), are made using the language previously chosen and set in the system.

Alternative synonyms can be used for some voice commands.


E.g. Guide to / Navigate to / Go to / ...











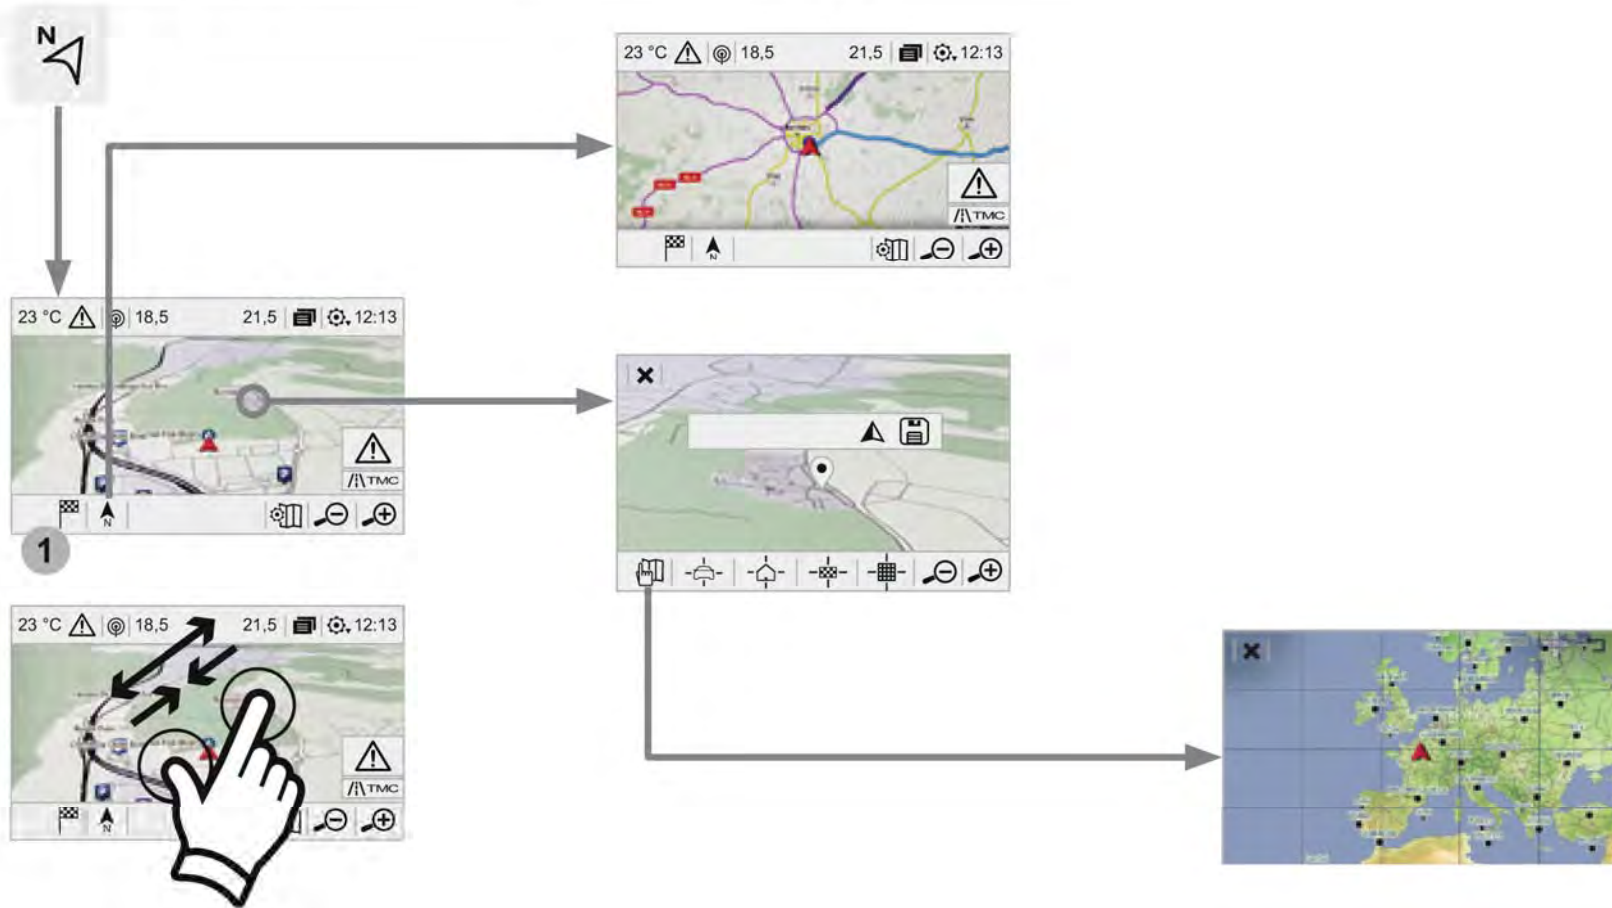









# Navigation

   








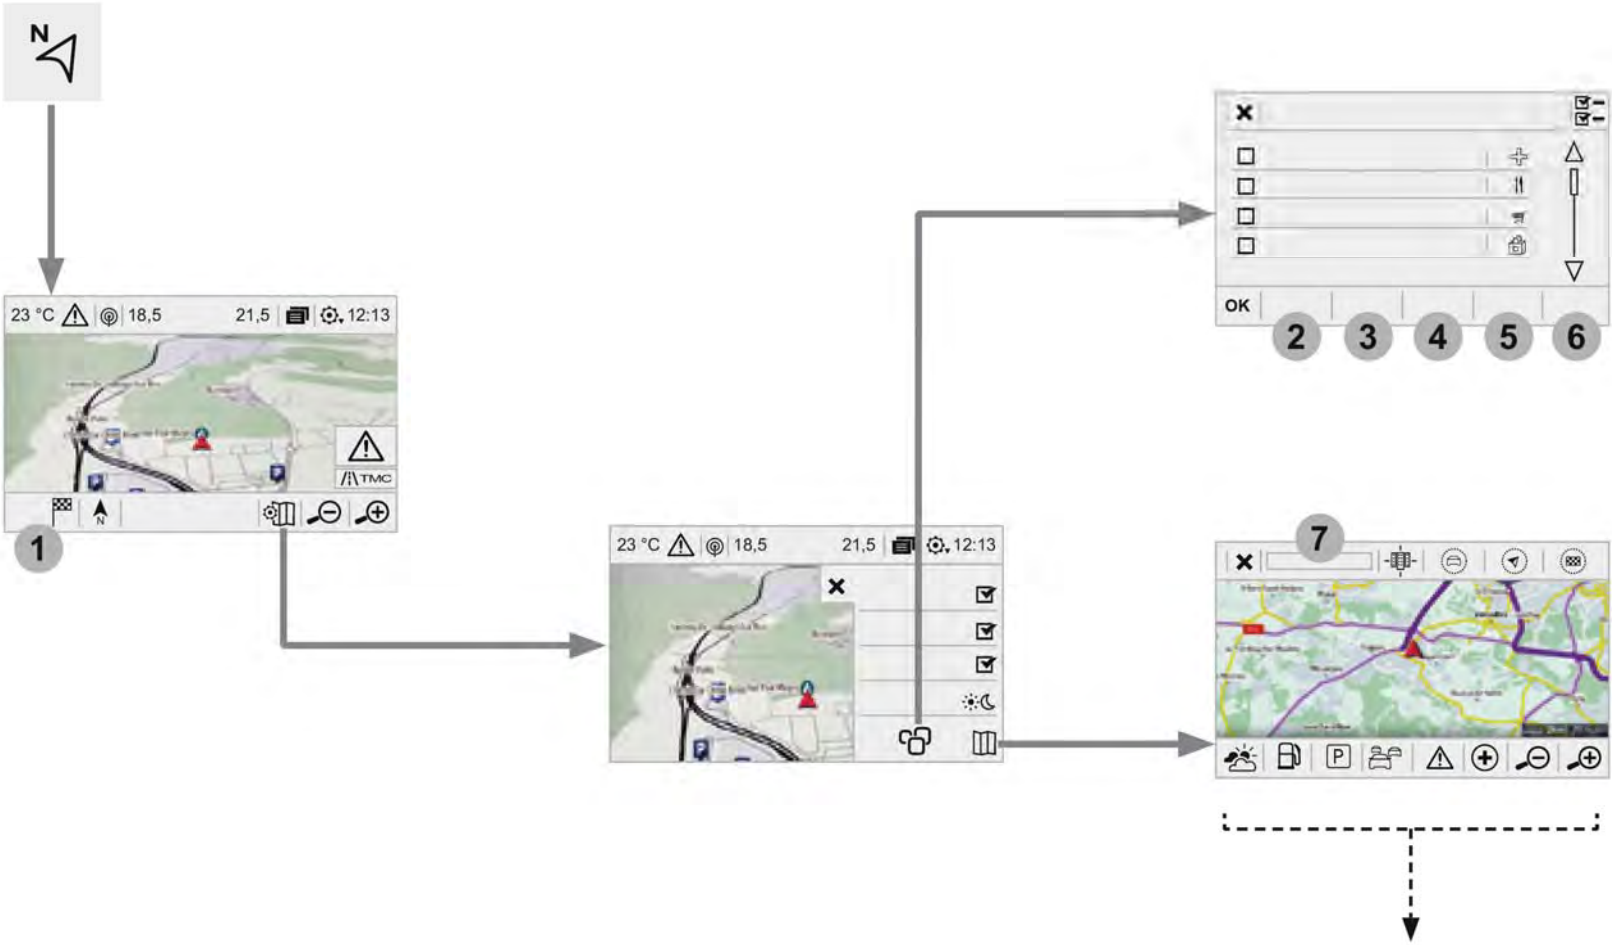 







According to version



Level 1	Level 2	Level 3
---------	---------	---------









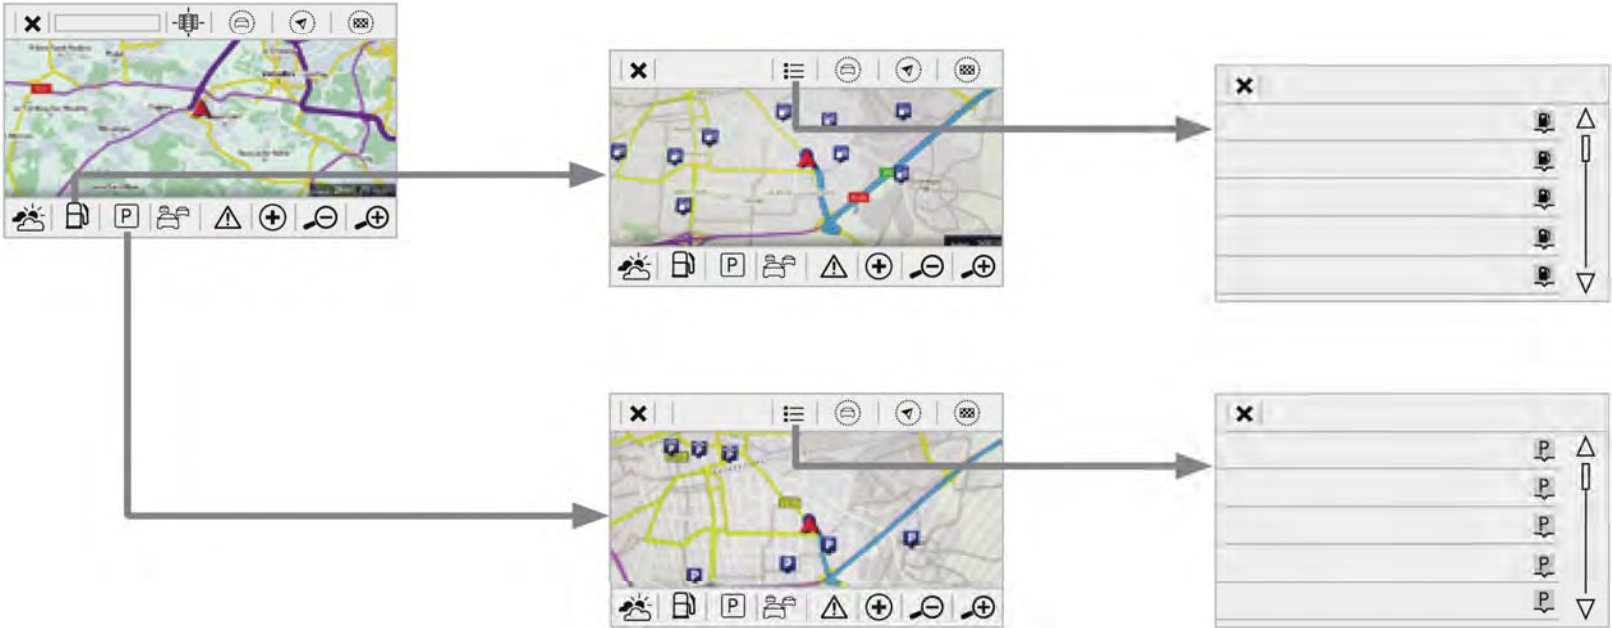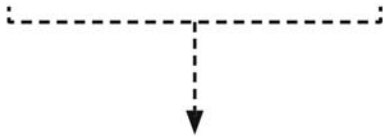













Level 1		Level 2		Level 3		Comments
	<b>Navigation</b>					Select the orientation of the map; north up, vehicle direction up or perspective.
						
	<b>Navigation</b>		World map			Manually locate an area on the world map or enter the latitude and longitude coordinates.
						
			Around the vehicle			Display the location criteria selected.
			Around home			
			Around the destination			
			2D mode			Switch to a 2D map.
						Zoom out / zoom in using the touch buttons or with two fingers on the screen.
						
				Start navigation to the current address.		
				Save the current address.		
					Zoom out / zoom in using the touch buttons or with two fingers on the screen.	
						




Level 1		Level 2		Level 3		Comments	
  <p style="text-align: center;"><b>Navigation</b></p> 	<input checked="" type="checkbox"/>	Stations				Activate or deactivate the content available (stations, car parks, risk areas and danger areas).	
		Car park					
			Map color				Select day or night mode for display of the map.
			POI on map		Travel	Select the POIs available.	
					Active life		
					Commercial		
					Public		
					Geographic		
				<input checked="" type="checkbox"/>	Select all		Select or deselect all.
				OK			Save your choice or selection.
			View map		Modify city	Select or modify a city.	
					Petrol Station	Display on the map the content available in non-connected mode.	
					Car park		
				Select POI	Select from the POIs available.		
					Zoom out / zoom in using the touch buttons or with two fingers on the screen.		
							









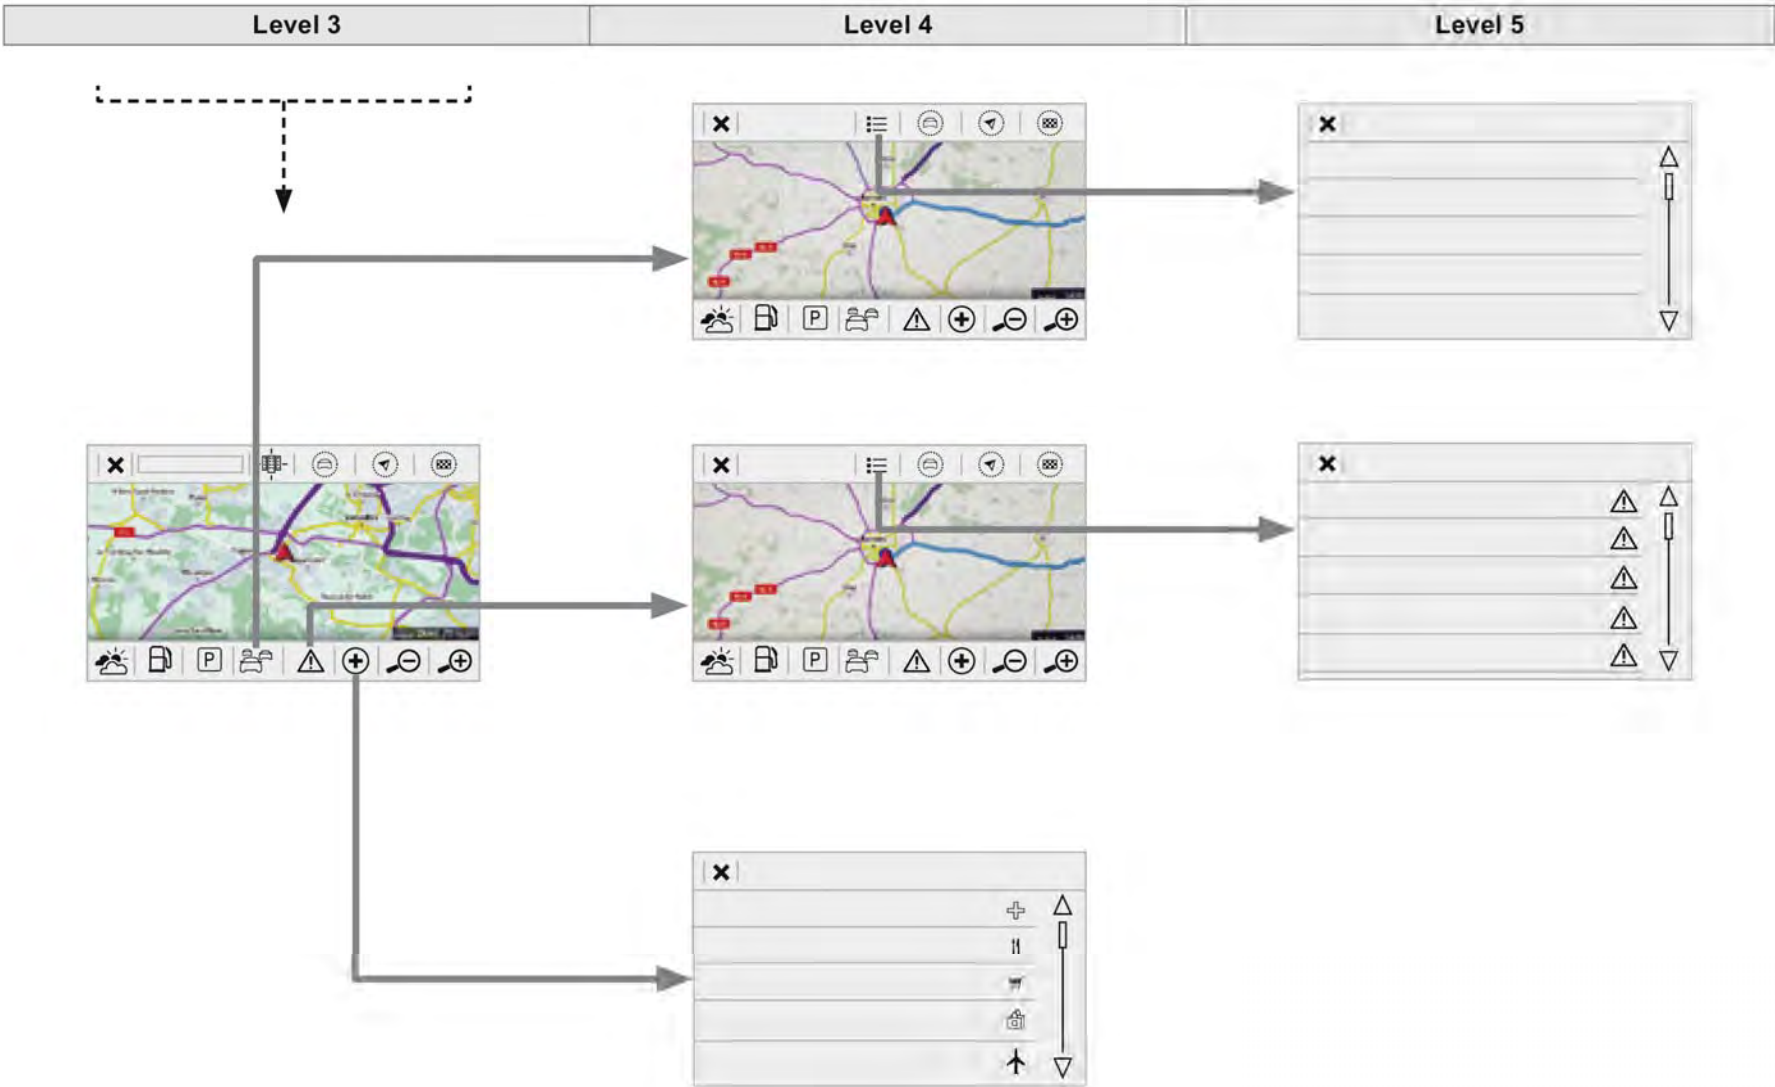

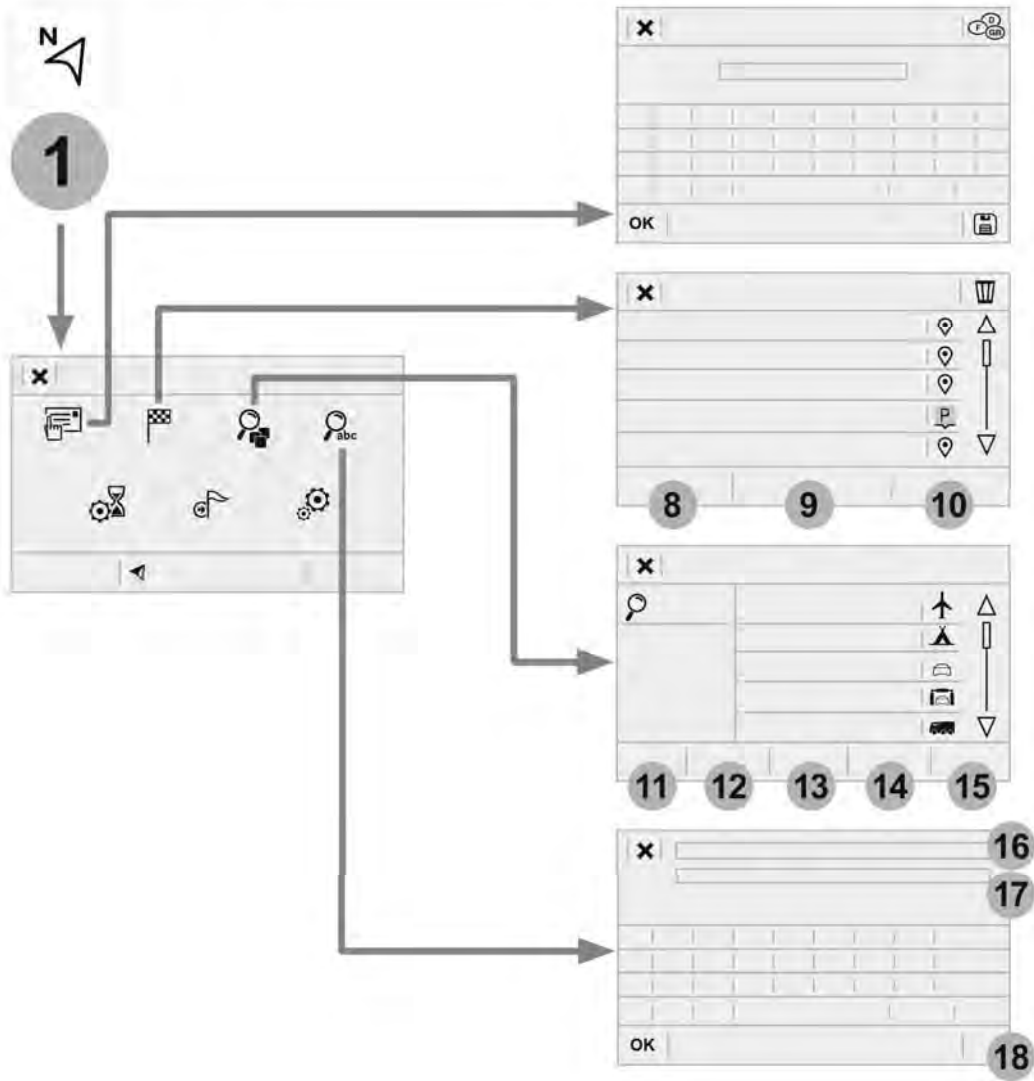


Level 3		Level 4		Level 5		Comments
	Zoom in	OK				Zoom in around the city selected.
	Around the vehicle					Select a location option.
	On the route					
	At the destination					
	Filling stations				Filling stations around the vehicle	Display the list of POIs.
					Filling stations on the route	
					Filling stations at the destination	
	Car park				Car parks around the vehicle	
					Car parks on the route	
					Car parks at the destination	
						Zoom out / zoom in using the touch buttons or with two fingers on the screen.
						

 






 

Level 3		Level 4		Level 5		Comments
+	Select POI					Configure a category of POI to display.

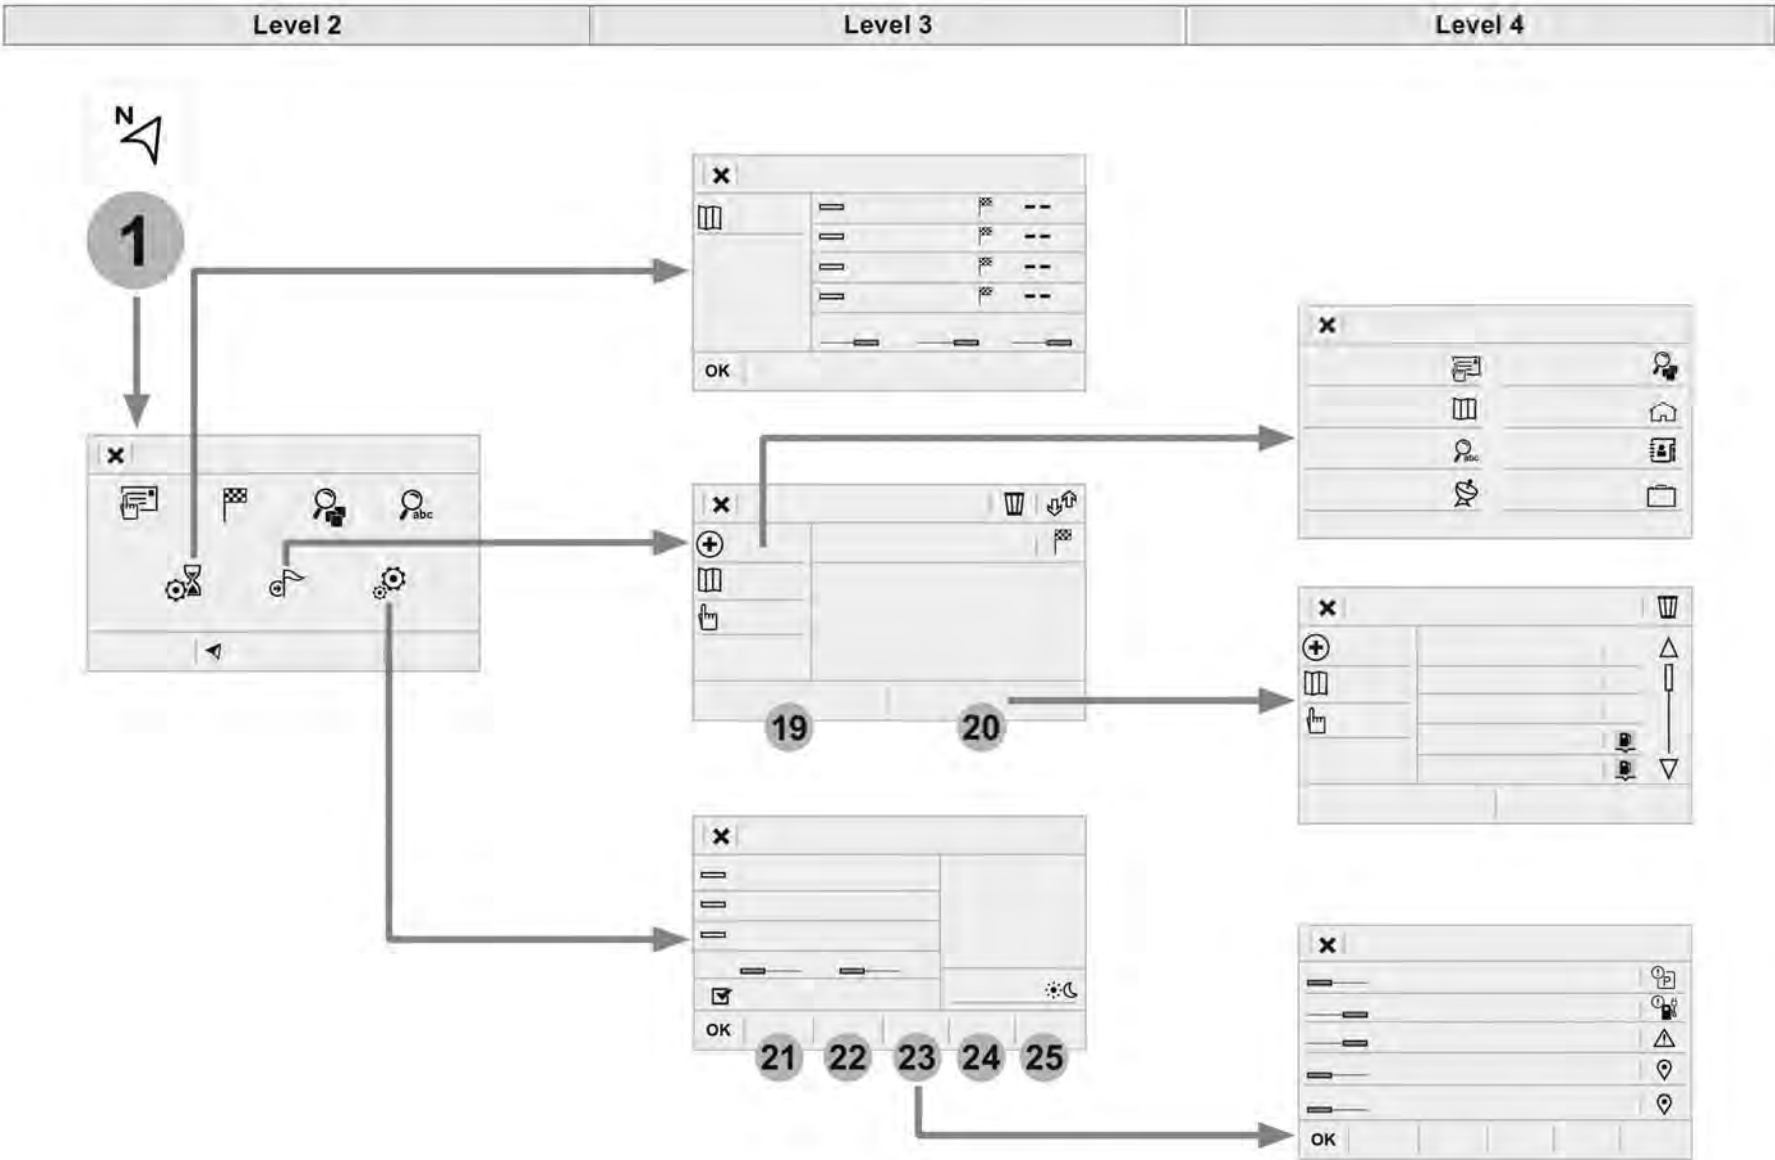

Level 2		Level 3		Level 4		Comments
 <b>1</b>	Navigation ↓ MENU ↓ Enter address					Select the country.
						Save the current address.
		OK				Confirm the current address.
 <b>1</b>	Navigation ↓ MENU ↓ My destinations	<b>8</b>	Recent			Display the lists of destinations and start navigation.
		<b>9</b>	Preferred		My home	
		<b>10</b>	Contact		My work	
						Delete one or more destinations.
 <b>1</b>	Navigation ↓ MENU ↓ Points of interest	<b>11</b>	Travel			List of categories available. After selection of category, select the point of interest.
		<b>12</b>	Active life			
		<b>13</b>	Commercial			
		<b>14</b>	Public			
		<b>15</b>	Geographic			
			Search			Search for a point of interest.
 <b>1</b>	Navigation ↓ MENU ↓ Search	<b>16</b>	Point of interest			Enter a point of interest.
		<b>17</b>	Address			Enter the address of a point of interest.
		<b>18</b>	Local / Connected			Enter settings for the POI search mode in a local or connected database depending on the services subscribed to.
		OK				Confirm the entry.






 
 



Level 2		Level 3		Level 4	Comments	
 <b>1</b> 	Navigation ↓ MENU ↓ Guidance criteria	 Fast			Select the guidance criteria (motorways, tolls and how traffic is taken into account).	
		 Short				
		 Compromise				
			 Ecological			Display the route selected using the criteria.
			 See on map			
			OK			Save your selections.
 <b>1</b> 	Navigation ↓ MENU ↓ Routes / waypoints	<b>19</b> Waypoints			Display the waypoints saved.	
		<b>20</b> Route			Display details of the route.	
		 Add waypoint		Add a waypoint	Add a waypoint from a list offered.	
		 Preview			Display the map.	
		 Finish			Press to calculate the route.	
					Delete one or more waypoints.	
					Move a waypoint in the list.	
 <b>1</b> 	Navigation ↓ MENU ↓ Settings	<b>21</b> Aspects			Enter choices and select the volume for the voice and stating the names of streets.	
		<b>22</b> Options				
		<b>23</b> Alerts				
		<b>24</b> Vocal				
		<b>25</b> Mapping				
		OK			Save the selections adopted.	




## Choosing a new destination






 


### Towards a new destination

-  Press **Navigation** to display the primary page.
-  Press the "**MENU**" button to go to the secondary page.
-  Select "**Enter address**".
-  Select the "**Country**".
-  Enter the "**City**", the "**Street**" and the "**Number**" and confirm by pressing on the suggestions displayed.
-  Press "**OK**" to select the "**Guidance criteria**".
- And / Or
-  Select "**See on map**" to select the "**Guidance criteria**".
-  Press "**OK**" to start navigation.
- 

 To use the navigation system, it is necessary to enter the "**City**", the "**Street**" and the "**Number**" using the virtual keypad, or to take them from the list of "**Contacts**" or from the "**History**" of addresses.

 Without confirmation of the street number, you will be guided to one end of the street.

### Towards a recent destination

-  Press **Navigation** to display the primary page.
-  Press the "**MENU**" button to go to the secondary page.
-  Select "**My destinations**".
-  Select the "**Recent**" tab.
-  Select the address chosen in the list to display the "**Guidance criteria**".
-  Press "**OK**" to start navigation.
- 
-  Select "**Position**" to see the point of arrival geographically.

## Towards "My home" or "My work"



Press **Navigation** to display the primary page.

**1**

Press the **"MENU"** button to go to the secondary page.



Select **"My destinations"**.

**9**

Select the **"Preferred"** tab.



Select **"My home"**.

Or



Select **"My work"**.

Or

Select a previously saved favourite destination.

## Towards a contact



Press **Navigation** to display the primary page.

**1**

Press the **"MENU"** button to go to the secondary page.



Select **"My destinations"**.

**10**

Select the **"Contact"** tab.

Select a contact in the list offered to start navigation.

## Towards points of interest (POI)

Points of Interest (POI) are listed in different categories.



Press **Navigation** to display the primary page.

**1**

Press the **"MENU"** button to go to the secondary page.



Select **"Points of interest"**.



Select the **"Travel"**, or **"Leisure"** or **"Commercial"** or **"Public"** or **"Geographic"** tab.

Or



Select **"Search"** to enter the name and address of a POI.

**OK**

Press **"OK"** to start calculation of the route.

## Towards a point on the map



Press **Navigation** to display the primary page.

Explore the map by sliding a finger on the screen.

Select the destination by pressing on the map.



Tap the screen to place a marker and display the sub-menu.



Press this button to start navigation.

Or



Press this button to save the address displayed



A long press on a point opens a list of POIs nearby.

## Towards GPS coordinates



Press **Navigation** to display the primary page.

Explore the map by sliding a finger on the screen.



Press this button to display the world map.  
Using the grid, select by zoom the desired country or region.



Press this button to enter the GPS coordinates.



A marker is displayed in the middle of the screen, with the "**Latitude**" and "**Longitude**" coordinates.



Press this button to start navigation.

Or



Press this button to save the address displayed.

Or




Press this button to enter the value for "**Latitude**" using the virtual keypad.







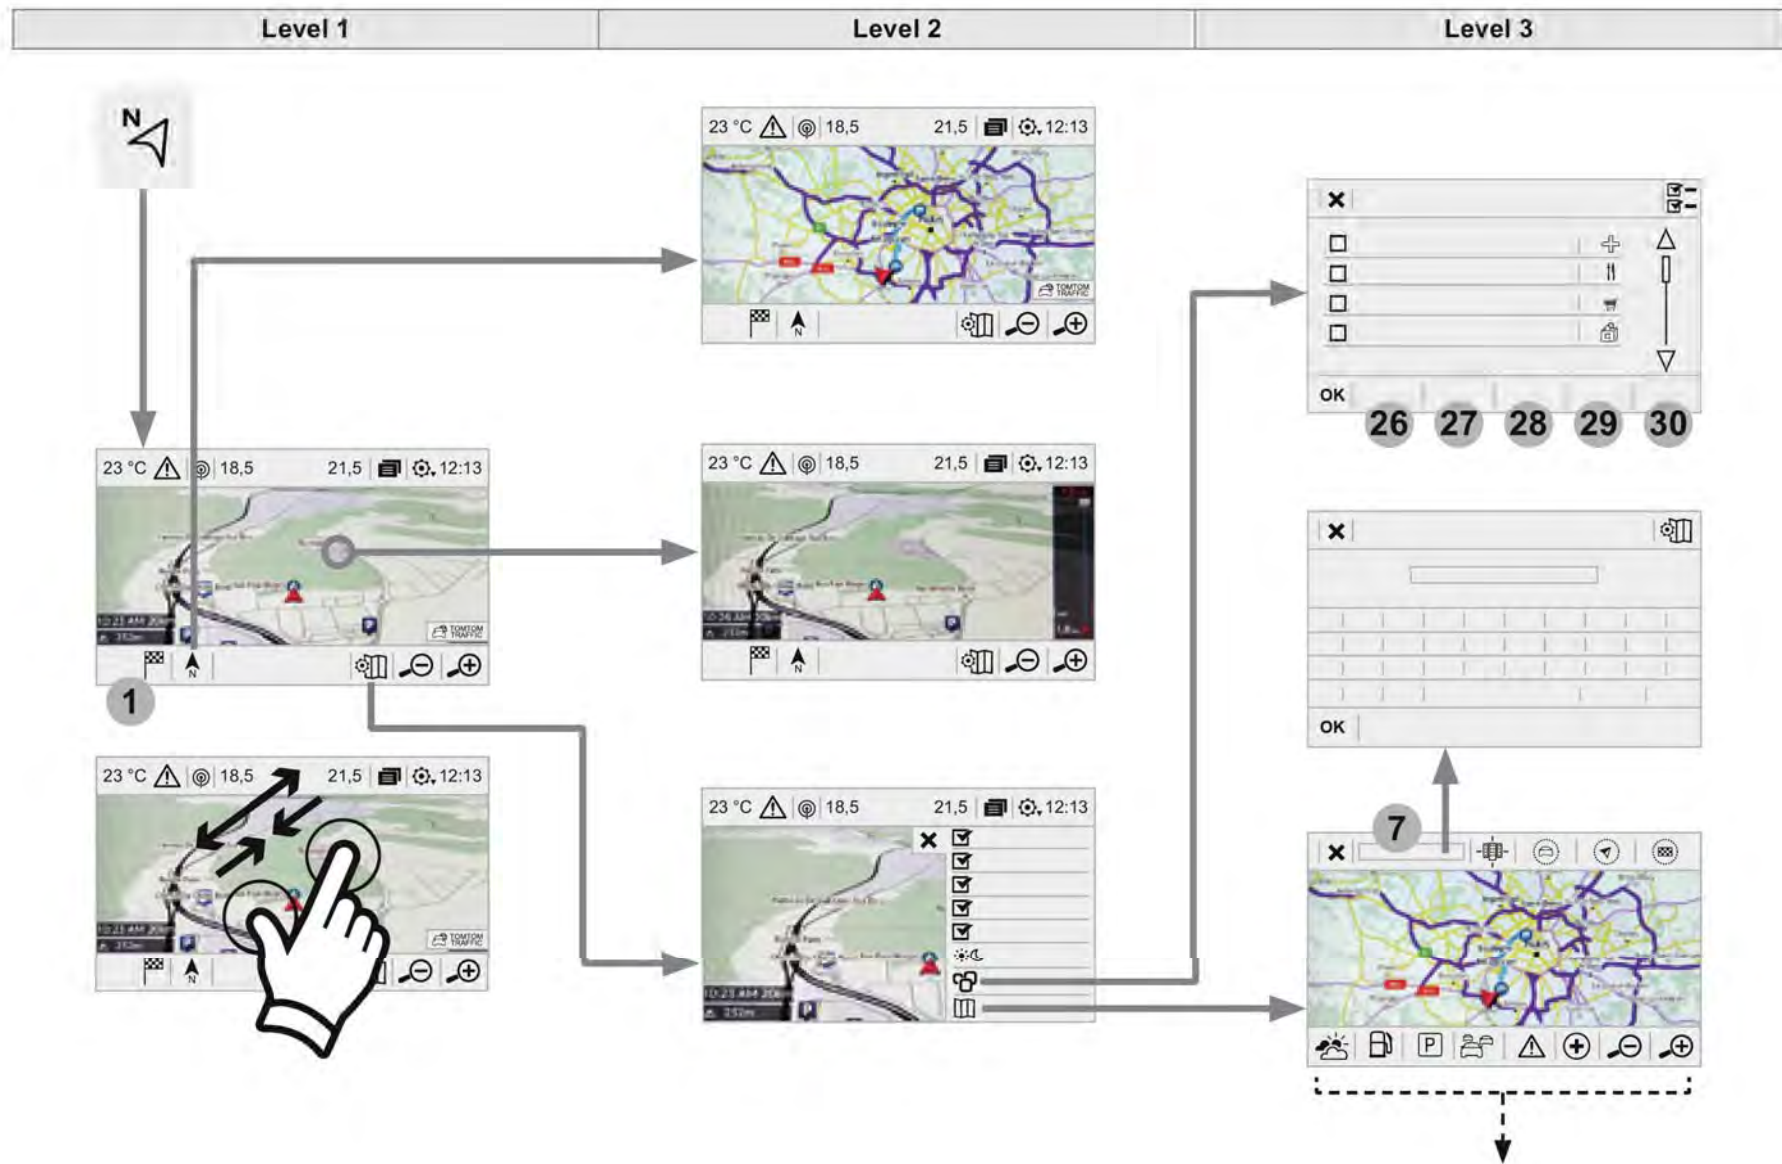


And




Press this button to enter the value for "**Longitude**" using the virtual keypad.







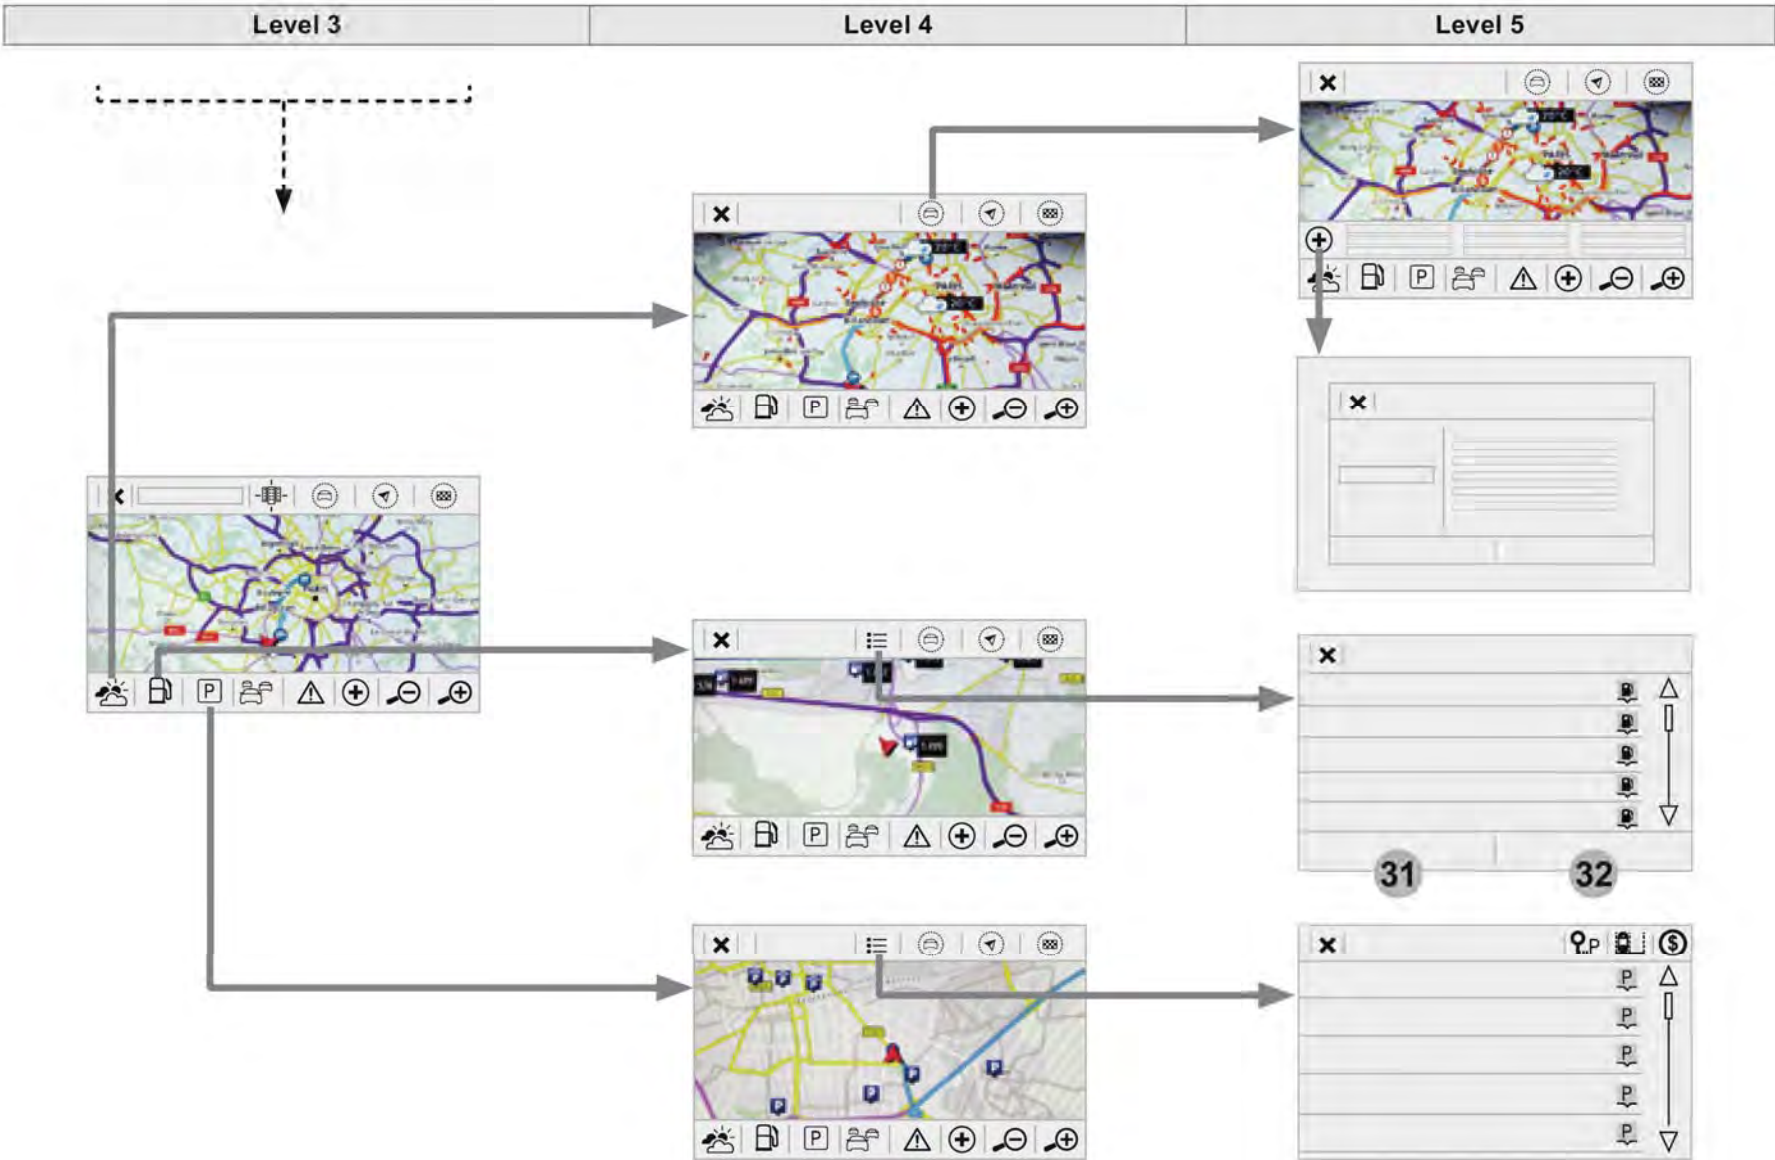




















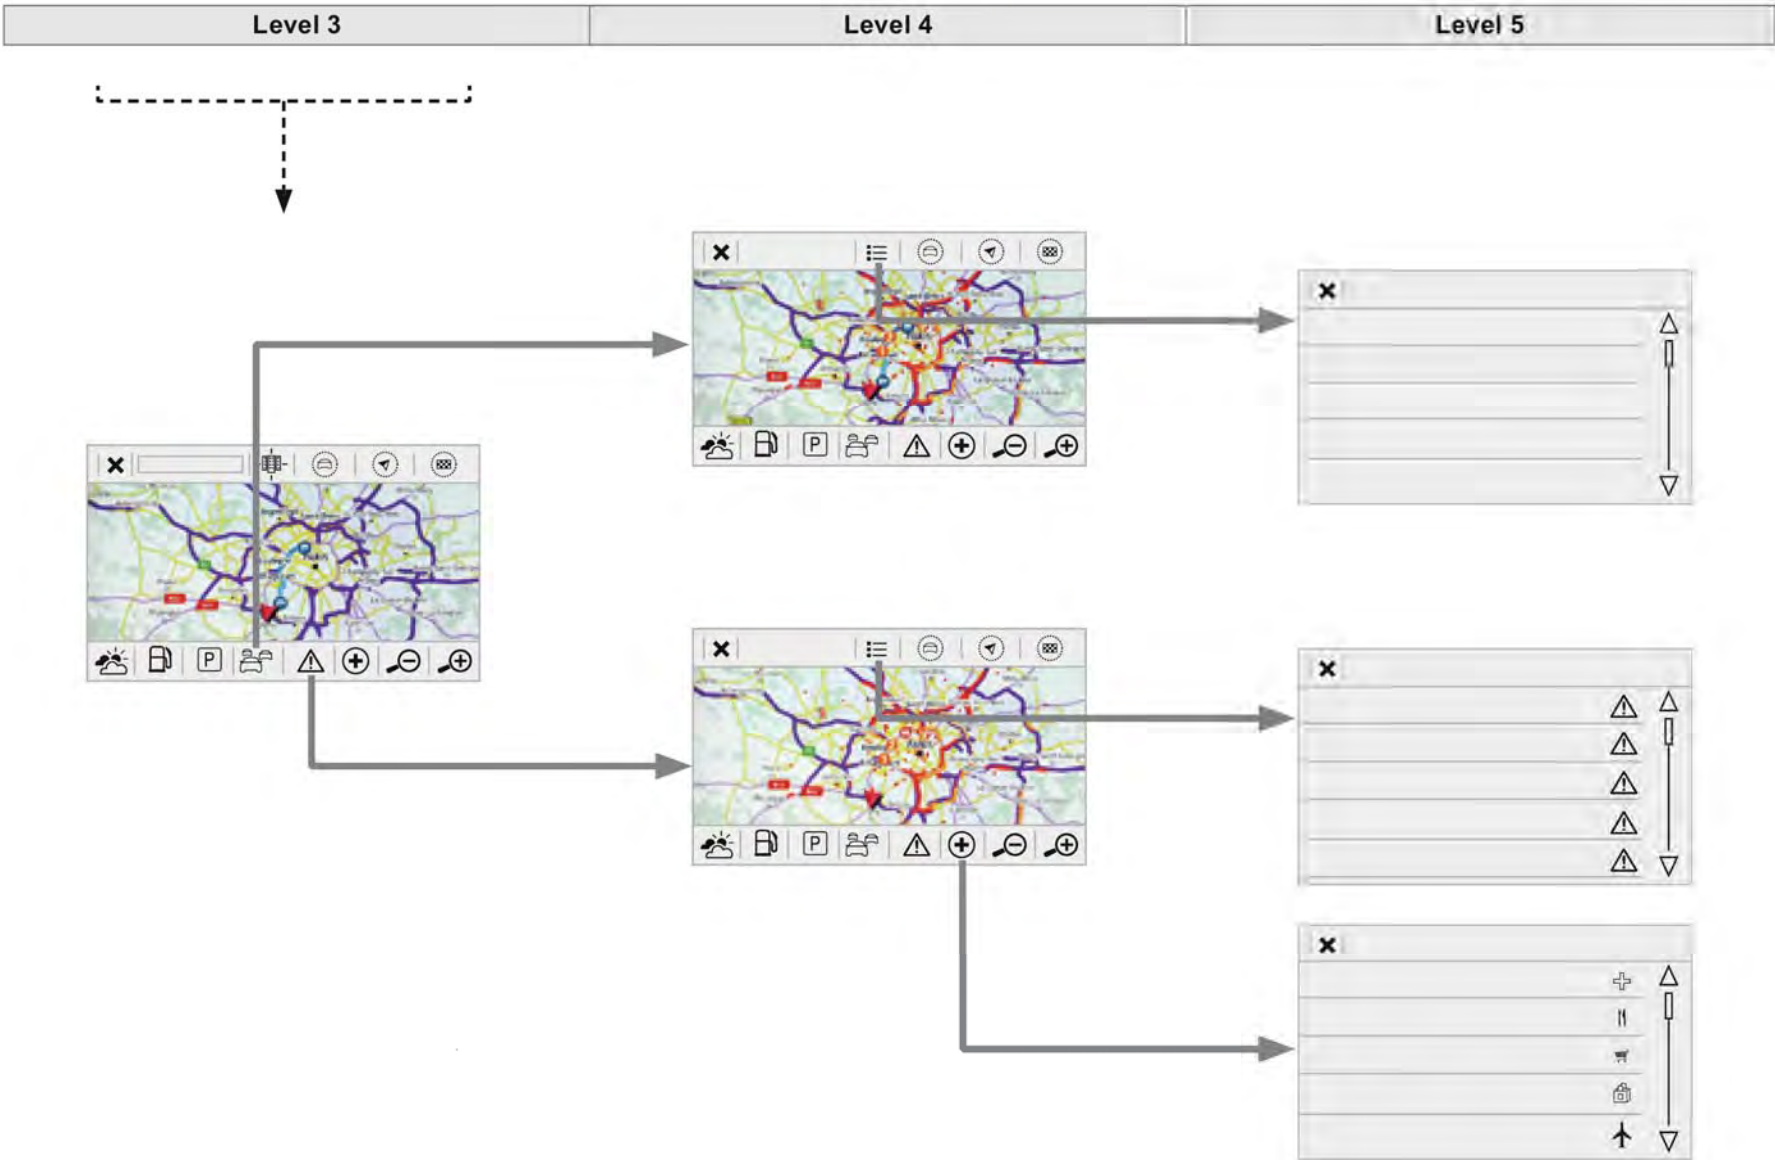


Level 1		Level 2		Level 3		Comments		
	Navigation 					Select the orientation of the map; north up, vehicle direction up or perspective.		
	Navigation 	<input checked="" type="checkbox"/>	Stations			Select the options. The map display the route chosen, depending on options.		
		<input checked="" type="checkbox"/>	Car park					
			Map color				Select the display mode for the map.	
			POI on map			<b>26</b>	Commercial	Select the POIs available.
						<b>27</b>	Geographic	
						<b>28</b>	Leisure	
						<b>29</b>	Public	
				<b>30</b>	Travel			
		OK				Save the options.		
		View map		<b>7</b>	Modify city	Select or change a city.		
						Zoom out / zoom in using the touch buttons or with two fingers on the screen.		
								






Level 3		Level 4		Level 5		Comments
	Select city	OK				Select or change a city.
	Around the vehicle					Select or change a city.
	On the route					
	At the destination					
	Filling stations				Filling stations around the vehicle	
					Filling stations on the route	
					Filling stations at the destination	
				<b>31</b>	<b>By distance</b>	
				<b>32</b>	<b>By price</b>	
	Car park				Car parks around the vehicle	Display the list of car parks and the associated information (address, distance, spaces available, price, ...).
					Car parks on the route	
					Car parks at the destination	
					<b>Sort by distance</b>	
					<b>Sort by spaces</b>	
					<b>Sort by price</b>	
						Zoom out / zoom in using the touch buttons or with two fingers on the screen.
						



# Applications

According to version / according to equipment

Level 1	Level 2	Level 3
---------	---------	---------

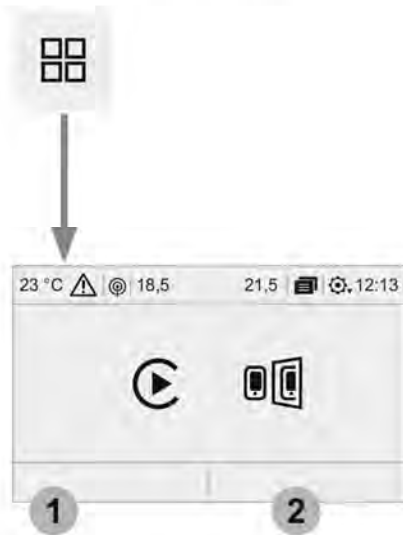

## Connectivity



Press **Applications** to display the primary page.

2

Press "**Connectivity**" to go to the **CarPlay**<sup>®</sup> or Android Auto function.

## Applications




Press **Applications** to display the primary page.

3

Press "**Applications**" to display the applications home page.

# CarPlay® smartphone connection

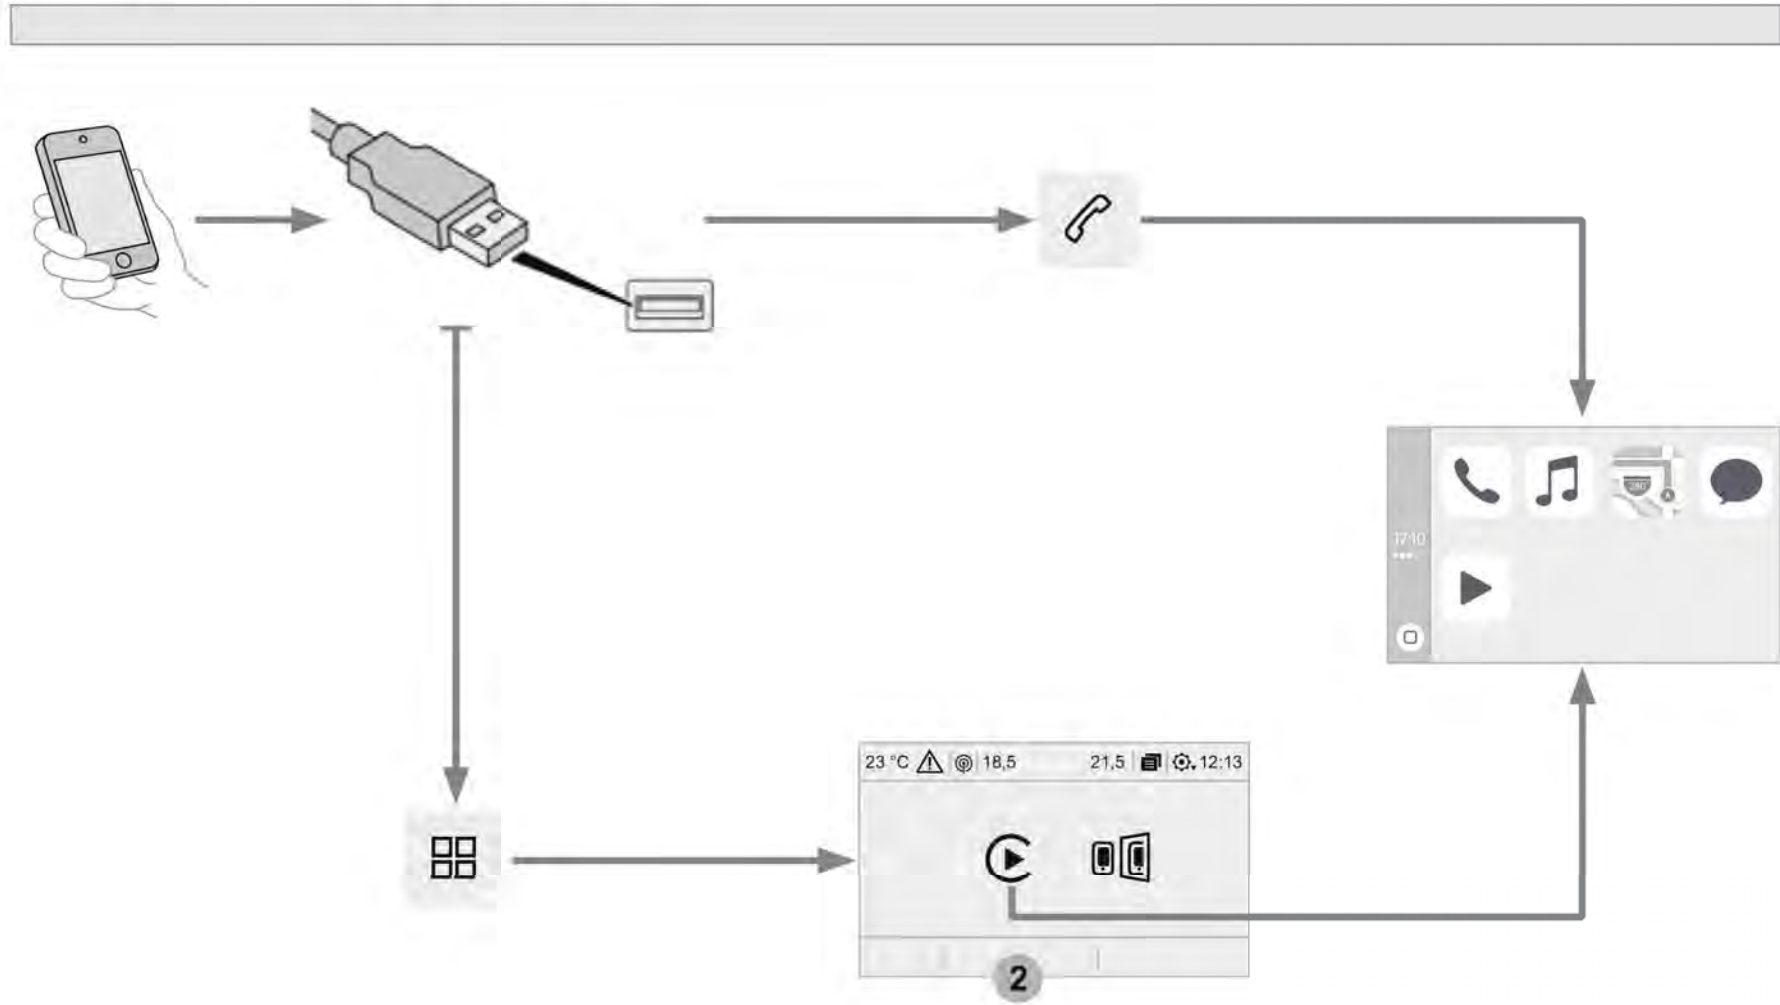

**!** As a safety measure and because it requires the sustained attention of the driver, using a smartphone when driving is prohibited. Operation must be with the **vehicle stationary**.

**i** The synchronisation of a smartphone allows applications on a smartphone that are adapted to the CarPlay® technology to be displayed in the vehicle's screen, having first activated the CarPlay® function in the smartphone. As the principles and standards are constantly changing, **it is recommended that you keep your smartphone's operating system updated**. For the list of eligible smartphones, go to the Brand's internet website in your country.



Connect a USB cable. The smartphone charges when connected by a USB cable.



Press **"Telephone"** to display the CarPlay® interface.

Or



Connect a USB cable. The smartphone charges when connected by a USB cable.



In the system, press **"Applications"** to display the primary page.



Press **"Connectivity"** to go to the CarPlay® function.



Press **"CarPlay"** to display the CarPlay® interface

**i** On connecting the USB cable, the CarPlay® function deactivates the system's Bluetooth® mode.




## Bluetooth® connection

**!** As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

**i** Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

### Procedure from the telephone

 Select the name of the system in the list of devices detected.

In the system, accept the connection request from the telephone.

**!** To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

### Procedure from the system



Press on "**Connect-App**" to display the primary page.

**1**

Press the "**OPTIONS**" button to go to the secondary page.



Press on "**Bluetooth connection**".



Select "**Search**".  
The list of detected telephones is displayed.



If the pairing procedure fails, it is recommended that you deactivate and then reactivate the "Bluetooth" function in your telephone.



Select the name of the chosen telephone in the list.



Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

### Connection sharing

The system offers to connect the telephone with 3 profiles:

- "**Telephone**" (hands-free kit, telephone only),
- "**Streaming**" (wireless play of audio files on the telephone),
- "**Mobile internet data**".



The "**Mobile internet data**" profile must be activated for connected navigation (where the vehicle does not have "Emergency and assistance call" services), having first activated sharing of this connection on your smartphone.

Select one or more profiles.



Press "**OK**" to confirm.

**OK**

## Managing connections



Press **Connect-App** to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.












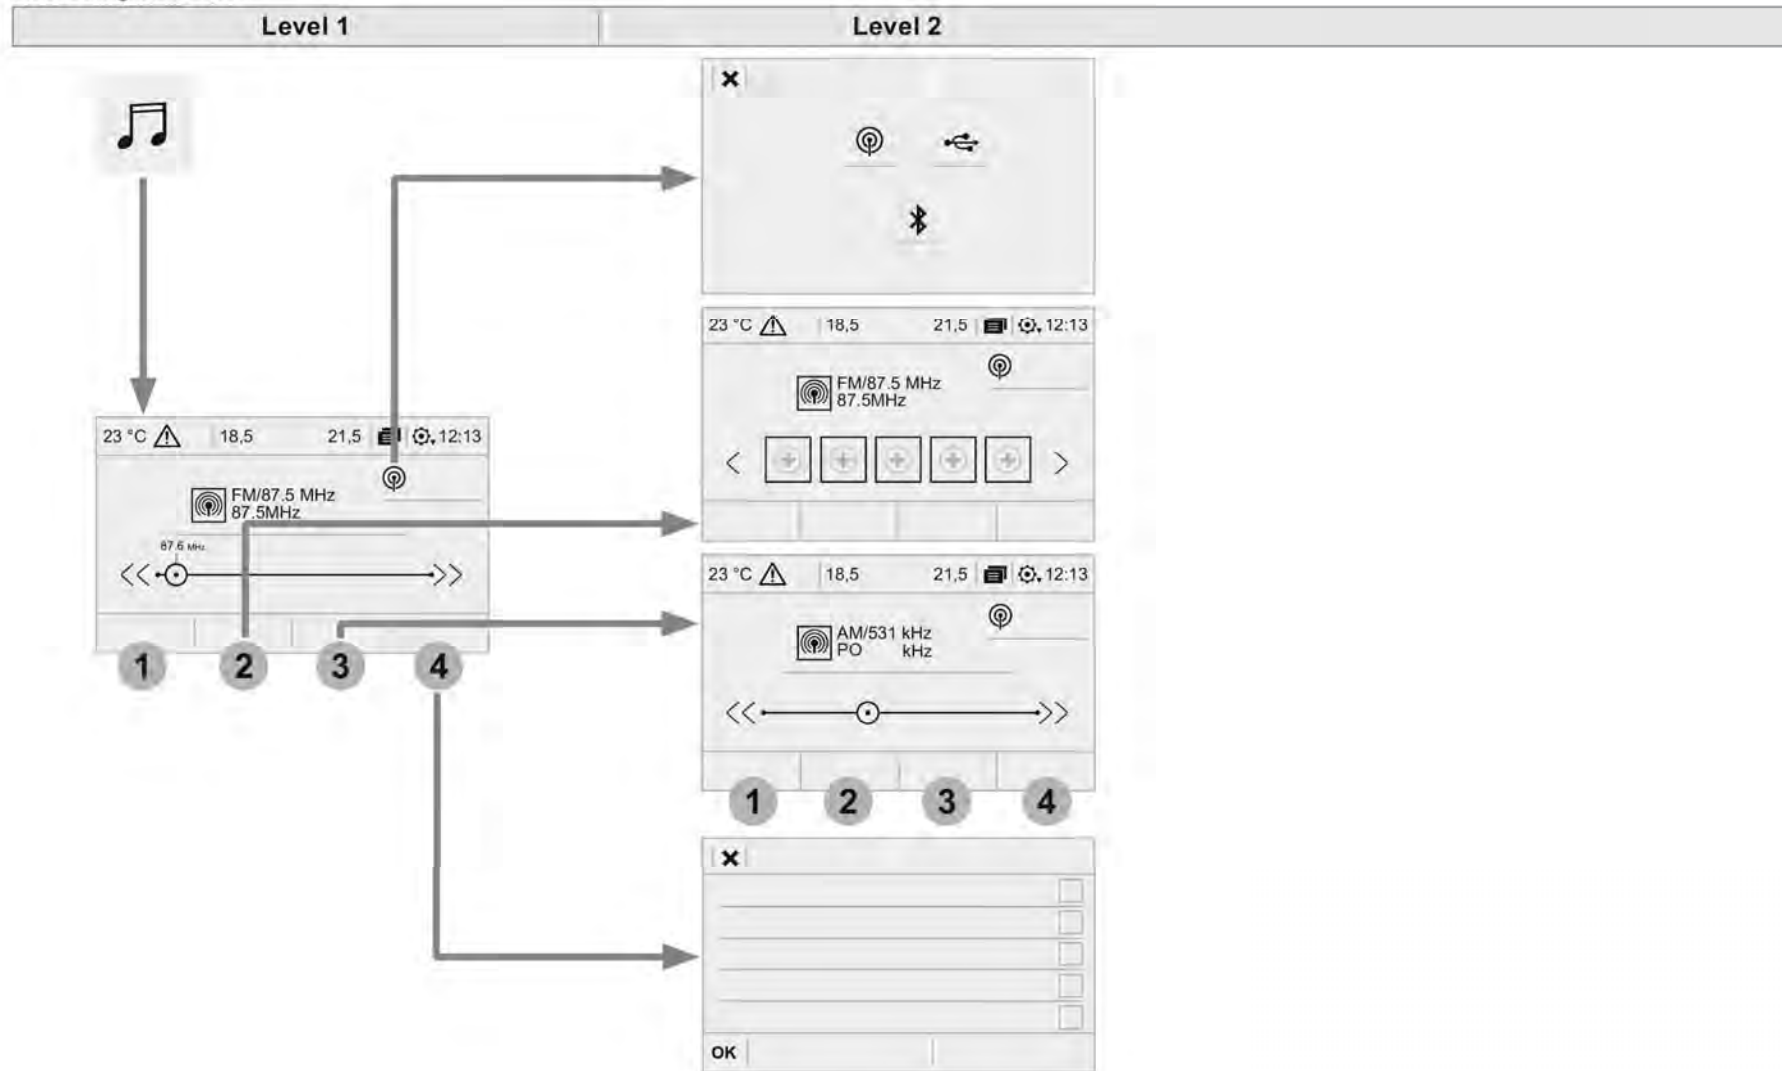

Select "**Manage connection**".


With this function you can view the access to connected services, the availability of connected services and modify the connection mode.







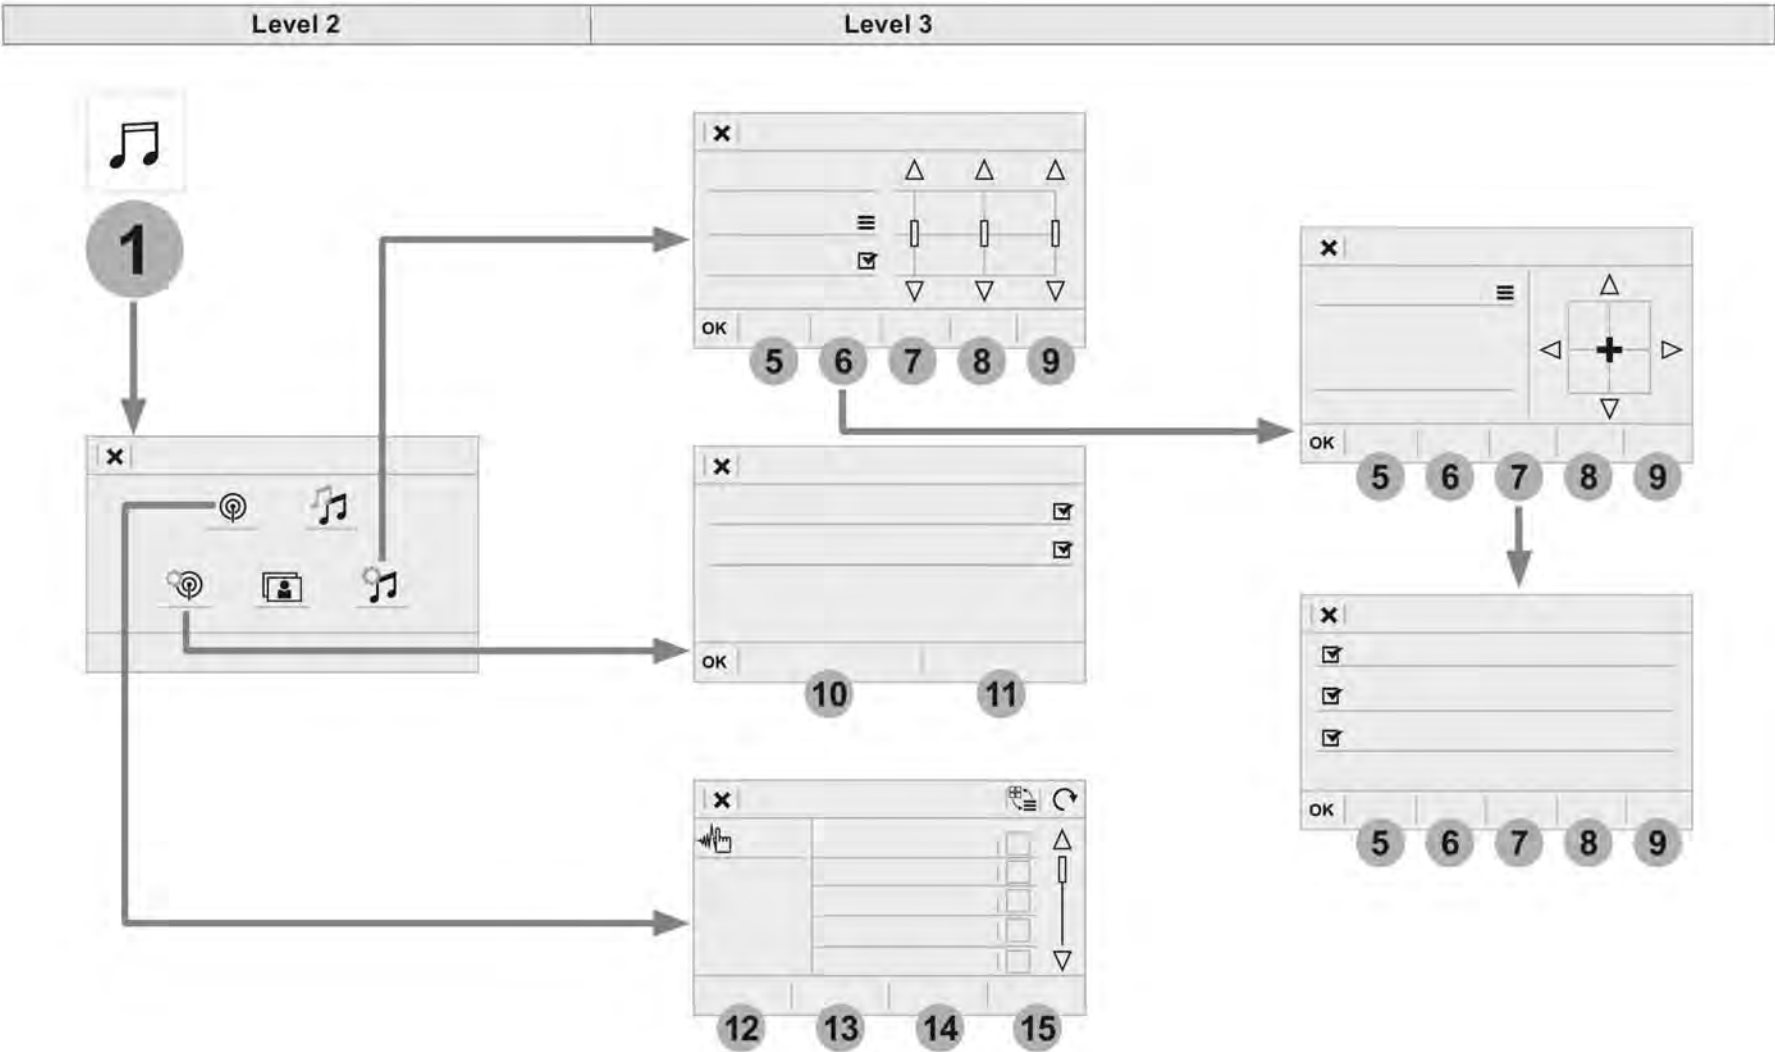


# Radio Media

According to version








Level 1		Level 2		Comments
 	Radio Media ↓ Source	 Radio	Select change of source.	
		 USB		
		 iPod		
		 Bluetooth		
 2	Radio Media ↓ Frequency / Presets	Frequency	Carry out an automatic or manual search for radio stations.	
		Presets	Make a long press on an empty location to preset a station.	
 3	Radio Media ↓ Band	 FM	Press the Band button to change waveband.	
		AM		
 4	Radio Media ↓ List	Radio stations	Open the list and press a radio station to select it.	

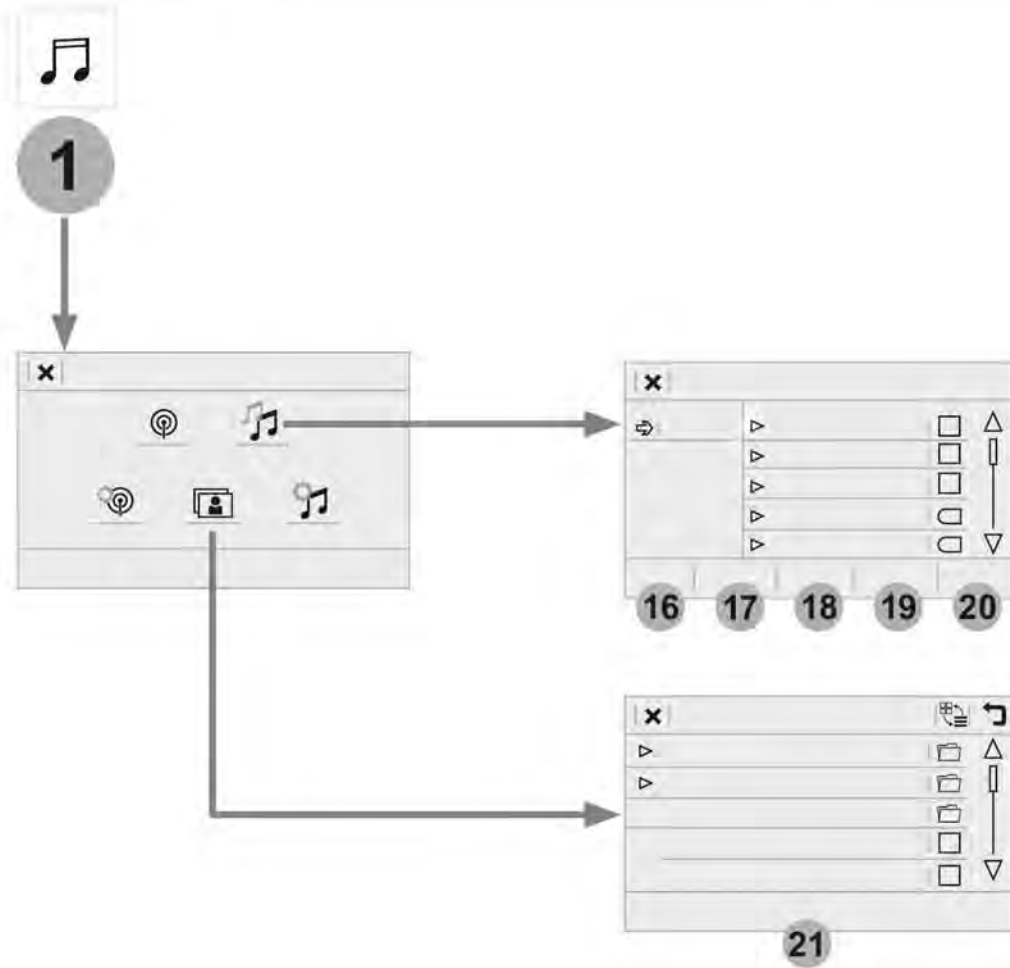


Level 2		Level 3		Comments
 <b>1</b> 	Radio Media ↓ OPTIONS ↓ Audio settings	<b>5</b>	Ambience	Select the sound ambience.
		<b>6</b>	Distribution	Sound distribution by the Arkamys® system.
		<b>7</b>	Sound	Adjust the volume or activate volume linked to speed.
		<b>8</b>	Voice	Adjust the voice volume.
		<b>9</b>	Ringtone	Adjust the ringtone volume.
		OK		Save settings.
 <b>1</b> 	Radio Media ↓ OPTIONS ↓ Radio settings	<b>10</b>	General	Activate or deactivate settings.
		<b>11</b>	Announcements	
		OK		Save settings.
 <b>1</b> 	Radio Media ↓ OPTIONS ↓ Radio stations	<b>12</b>	FM	Display the list of radio stations for the band selected.
		<b>13</b>	DAB	
		<b>14</b>	AM	
		<b>15</b>	Presets	Select a preset radio station.
			Frequency	Enter a frequency manually.
				Change the screen display mode.
				Update the list according to reception.





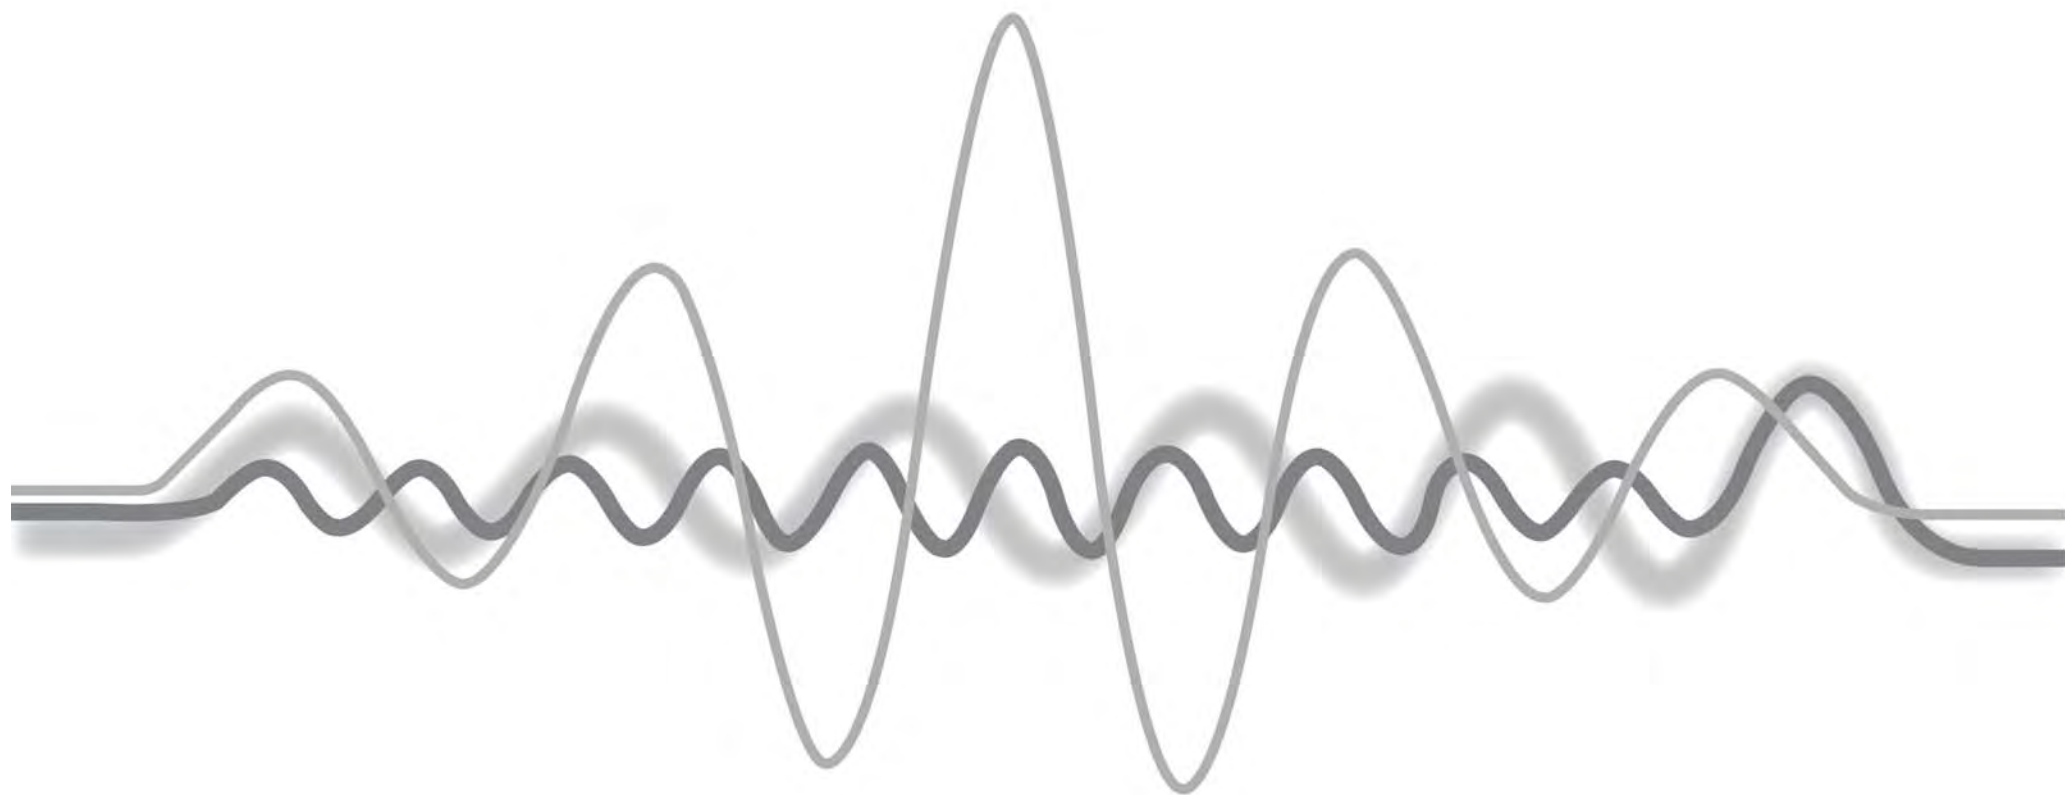

Level 2		Level 3		Comments
 <b>1</b> 	Radio Media	<b>16</b>	Albums	Choose a selection mode.
	↓ OPTIONS	<b>17</b>	Artists	
	↓ Music files	<b>18</b>	Genres	
		<b>19</b>	Playlists	
		<b>20</b>	Folders	
 <b>1</b> 	Radio Media ↓ OPTIONS ↓ Managing photos	<b>21</b>	USB	Display photos. The system supports the following image formats: .gif, .jpg, .jpeg, .bmp, .png, .raw and .tiff with a maximum file size of 10 Mb per image.




## Radio


### Selecting a station

 Press **Radio Media** to display the menu.


 Press "**Frequency**".


 Press one of the buttons for an automatic search for radio stations.


Or


 Move the cursor for a manual search for frequencies up or down.


Or

 
 Press **Radio Media** to display the primary page.


 Press the "**OPTIONS**" button to go to the secondary page.

 Select "**Radio stations**" in the secondary page.

 Press "**Frequency**".


 Enter the values using the virtual keypad.  
First enter the units then click on the decimals zone to enter the figures after the decimal point.


 Press "**OK**" to confirm.

 Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a USB charger connected to the 12 V socket. The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

### Preset a station

Select a radio station or frequency. (refer to the corresponding section)

 Press "**Presets**".

 Make a long press on one of the buttons to preset the station.

## Display text information

**i** The "Radio Text" function allows information transmitted by the radio station, relating to the station or the song playing, to be displayed.



Press **Radio Media** to display the primary page.

**1**

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Radio settings**".

**10**

Select "**General**".




Activate / Deactivate "**Display radio text**".

**OK**

Press "**OK**" to confirm.

## Media USB port

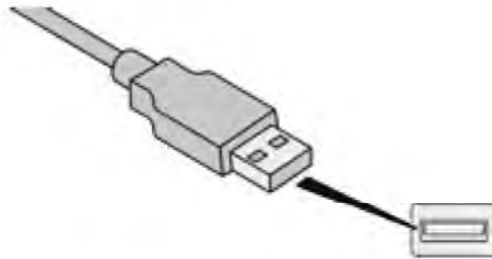

Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

**!** To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time. The playlists are updated every time the ignition is switched off or connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

## Selecting the source



Press **Radio Media** to display the primary page.



Select "**Source**".

Choose the source.

## Bluetooth® audio streaming

Streaming allows you to listen to music from your telephone.

The Bluetooth profile must be activated. First adjust the volume on your portable device (to a high level).

Then adjust the volume of your audio system.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the portable device or by using the system's touch buttons.



Once connected in streaming mode, the telephone is considered to be a media source.



## Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

**i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts). The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.

## Information and advice

**!** The system supports USB mass storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected or via Bluetooth streaming, depending on compatibility.

**!** To protect the system, do not use a USB hub.

The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4,...) can be played. ".wma" files must be of the standard wma 9 type. The sampling rates supported are 32, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.


Use only USB memory sticks formatted FAT 32 (file allocation table).

**i** It is recommended that the original USB cable for the portable device is used.








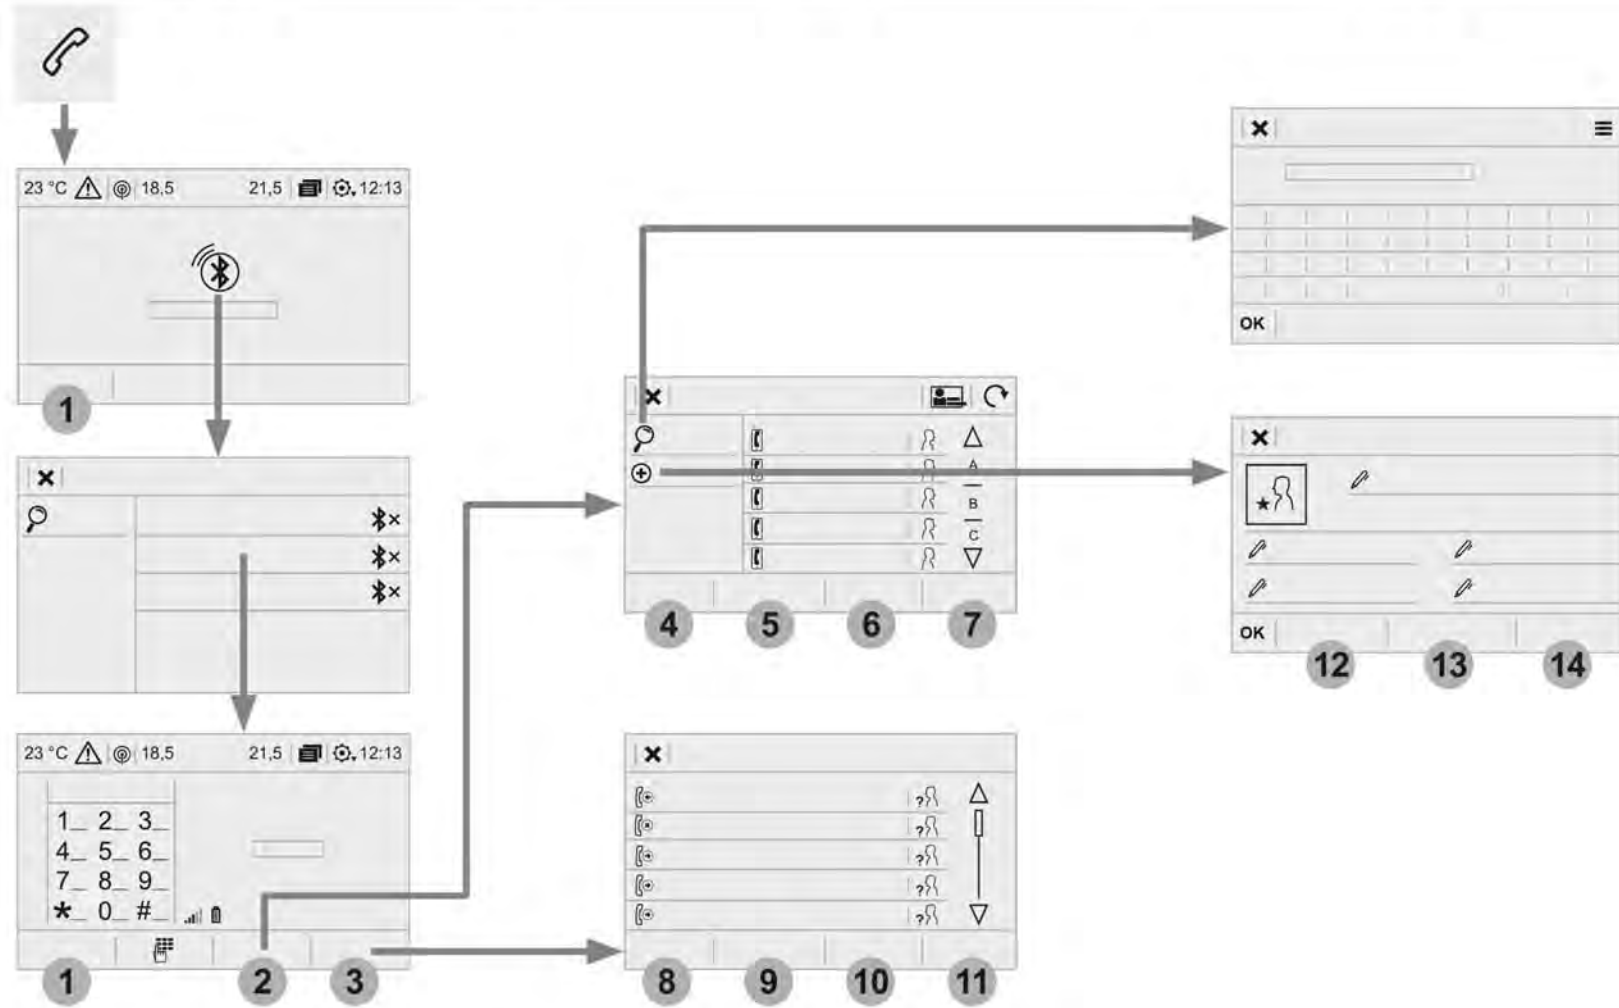


# Telephone

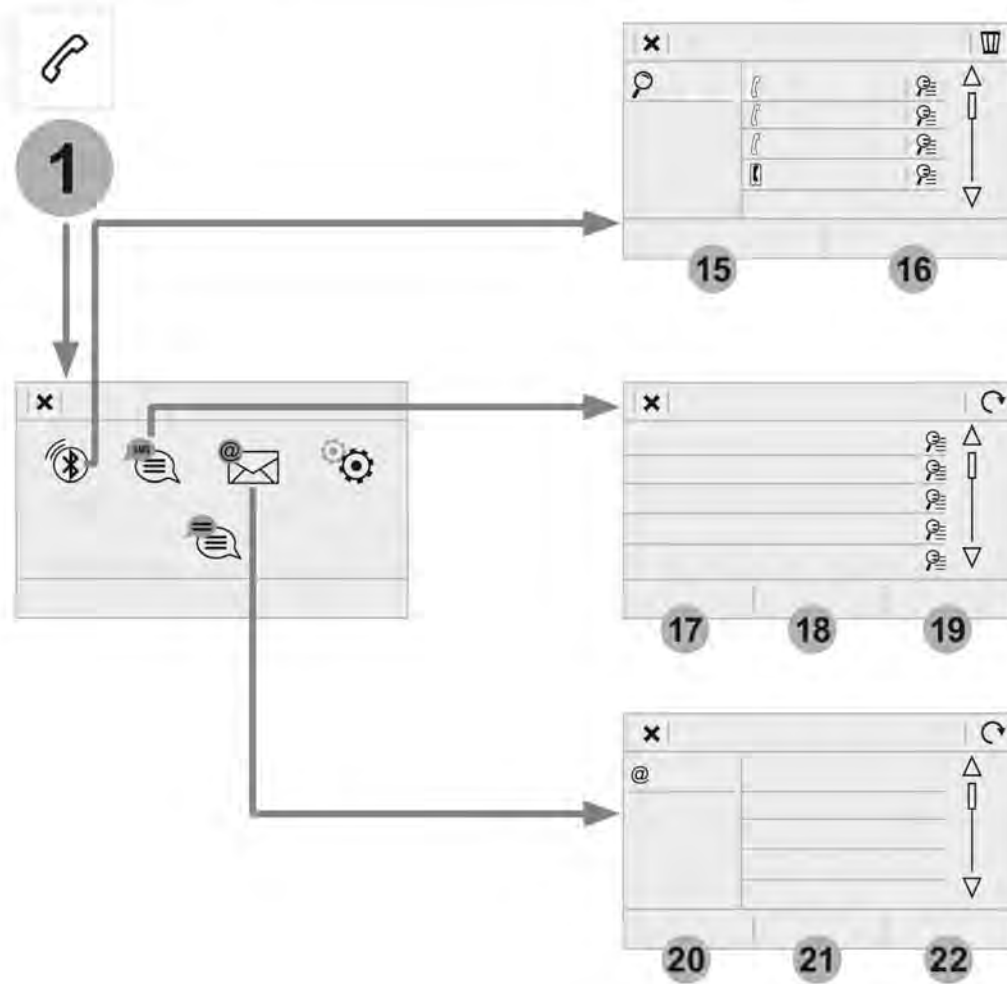
According to version



Level 1	Level 2	Level 3	Comments	
<p>2</p> <p>Telephone ↓ Bluetooth ↓ Contact</p>	4 All		View contacts according to presentation choices. Select a contact or a favourite saved in the system via the profile selected to start the call.	
	5 Telephone			
	6 Address			
	7 Favourites			
				Sort the contacts by Surname-First name or First name-Surname.
				Update the contacts from the telephone.
	Search	OK		Search for a contact in the directory.
	<p>+</p> <p>Create</p>		12 Telephone	Create a new contact in the system.
		13 Address		
		14 Email		
		OK		
<p>3</p> <p>Telephone ↓ Bluetooth ↓ Calls</p>	8 All		View calls according to choice of presentation. Select a contact to start the call.	
	9 Incoming			
	10 Outgoing			
	11 Missed			
				View details for the contact.



Level 2		Level 3		Comments
 <b>1</b> 	Telephone	<b>15</b>	All	Display all telephones detected and saved.
	↓ OPTIONS	<b>16</b>	Connected	
	↓ Bluetooth connection		Search	
 <b>1</b> 	Telephone	<b>17</b>	All	Display messages according to the choice made.
	↓ OPTIONS	<b>18</b>	Received	
	↓ Messages	<b>19</b>	Sent	
 <b>1</b> 	Telephone	<b>20</b>	Received	Display emails according to the choice made.
	↓ OPTIONS	<b>21</b>	Sent	
	↓ Email	<b>22</b>	Not read	
		@	Mailbox	

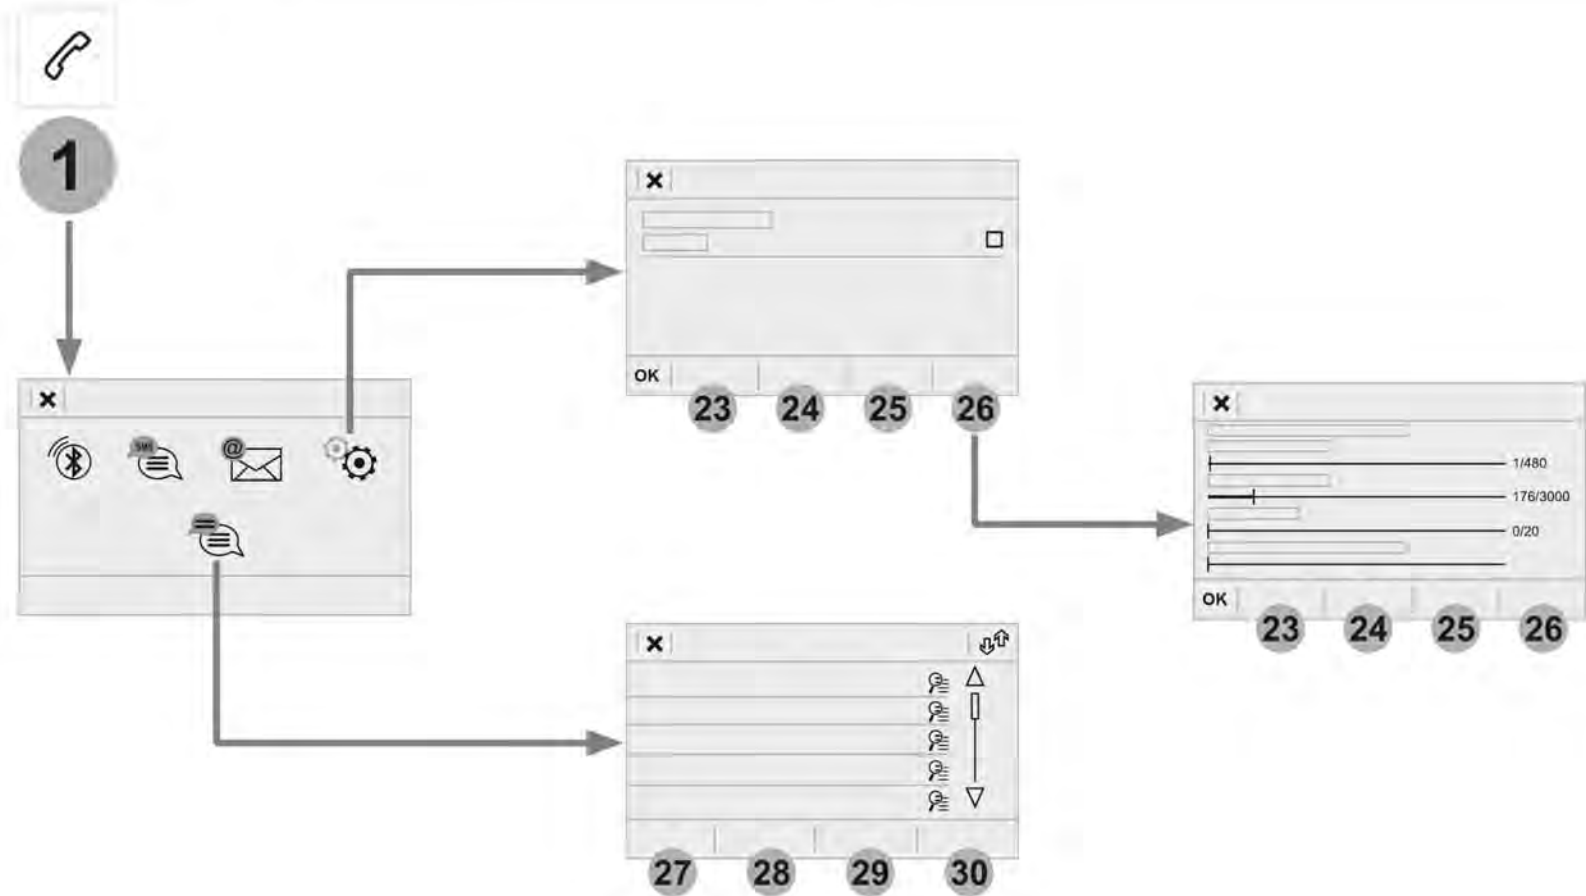


Level 2		Level 3		Comments
 <b>1</b> 	Telephone ↓ OPTIONS ↓ Settings	<b>23</b>	Security	Make driving safe.
		<b>24</b>	Voicemail	Enter and save the number for the telephone voicemail.
		<b>25</b>	Ringtone	Adjust the ringtone volume.
		<b>26</b>	Statistics	Display data for the telephone connected.
		OK		Save the options.
 <b>1</b> 	Telephone ↓ OPTIONS ↓ Quick messages	<b>27</b>	Delayed	Select a quick message from the categories, as required.
		<b>28</b>	My arrival	
		<b>29</b>	Not available	
		<b>30</b>	Other	

## Pairing a Bluetooth® telephone

**!** As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

**i** Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).


### Procedure from the telephone


 Select the system name in the list of devices detected.

In the system, accept the connection request from the telephone.


**!** To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

### Procedure from the system


 Press on **Telephone** to display the primary page.

 Press on "**Bluetooth search**".

Or

 Select "**Search**".  
The list of telephones detected is displayed.

**i** If the pairing procedure fails, it is recommended that you deactivate and then reactivate the "Bluetooth" function in your telephone.

 Select the name of the chosen telephone in the list.

### Connection sharing

The system offers to connect the telephone with 3 profiles:

- **Telephone** (hands-free kit, telephone only),
- **Streaming** (wireless play of audio files on the telephone),
- **Mobile internet data**.

**i** The "**Mobile internet data**" profile must be activated for connected navigation, having first activated sharing of the connection on your smartphone.

Select one or more profiles.



Press "**OK**" to confirm.

**OK**

**i** Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.



## Automatic reconnection

**i** On return to the vehicle, if the last telephone connected is present again, it is automatically recognised and within about 30 seconds of switching on the ignition, the connection is established without any action on your part (Bluetooth activated).

### To modify the connection profile:

-  Press **Telephone** to display the primary page.
-  Press the "**OPTIONS**" button to go to the secondary page.
-  Select "**Bluetooth connection**" to display the list of paired devices.
-  Press the "details" button.
-  Select one or more profiles.
-  Press "**OK**" to confirm.


**!** The ability of the system to connect with just one profile depends on the telephone.  
All three profiles may connect by default.


**!** The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Check in your telephone's manual and with your service provider for the services available to you.


**i** The profiles compatible with the system are HFP, OPP, PBAP, A2DP, AVRCP, MAP and PAN.


Go to the Brand's website for more information (compatibility, additional help, ...).


## Managing paired telephones

 This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.


 Press **Telephone** to display the primary page.


 Press the "**OPTIONS**" button to go to the secondary page.

 Select "**Bluetooth connection**" to display the list of paired peripheral devices.

 Press on the name of the telephone chosen in the list to disconnect it. Press again to connect it.


## Deleting a telephone

 Select the basket at top right of the screen to display a basket alongside the telephone chosen.

 
 Press the basket alongside the telephone chosen to delete it.


## Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.


 Make a short press on the steering mounted **TEL** button to accept an incoming call.

And

 Make a long press

 on the steering mounted **TEL** button to reject the call.

Or

 Select "**End call**".

## Making a call

**!** Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

## Calling a new number



Press **Telephone** to display the primary page.



Enter the phone number using the digital keypad.



Press **"Call"** to start the call.

## Calling a contact



Press **Telephone** to display the primary page.



Or make a long press



on the steering mounted **TEL** button.



Select **"Contact"**.

Select the desired contact from the list offered.



Select **"Call"**.

## Calling a recently used number



Press **Telephone** to display the primary page.

Or



Make a long press



on the steering mounted button.




Select **"Calls"**.

Select the desired contact from the list offered.








**i** It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.


## Managing contacts / entries


-  Press **Telephone** to display the primary page.
-  Select "**Contact**".
-  Select "**Create**" to add a new contact.
-  In the "**Telephone**" tab, enter the telephone numbers for the contact.
-  In the "**Address**" tab, enter the addresses for the contact.
-  In the "**Email**" tab, enter the email addresses for the contact.

 The "**Email**" function allows email addresses to be entered for a contact, but the system is not able to send emails.

## Managing messages

-  Press **Telephone** to display the primary page.
-  Press the "**OPTIONS**" button to go to the secondary page.
-  Select "**Messages**" to display the list of messages.
-  Select the "**All**" or "**Received**" or "**Sent**" tab.
-  Select the detail of the message chosen in one of the lists
-  Press "**Answer**" to send a quick message stored in the system.
-  Press "**Call**" to start the call.
-  Press "**Play**" to hear the message.

 The access to "**Messages**" depends on the compatibility of the smartphone and the integral system. Depending on the smartphone, access to your messages or email may be slow.

 The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Check in the manual for your smartphone and with your service provider for the services available to you.




## Managing quick messages

-  Press **Telephone** to display the primary page.
-  Press on the **"OPTIONS"** button to go to the secondary page.
-  Select **"Quick messages"** to display the list of messages.
-  Select the **"Delayed"** or **"My arrival"** or **"Not available"** or **"Other"** tab with the possibility of creating new messages.
-  Press **"Create"** to write a new message.
-  Select the message chosen in one of the lists.
-  Press **"Transfer"** to select the addressee(s).
-  Press **"Play"** to start playing the message.


## Managing email

-  Press **Telephone** to display the primary page.
  -  Press the **"OPTIONS"** button to go to the secondary page.
  -  Select **"Email"** to display the list of messages.
  -  Select the **"Received"** or **"Sent"** or **"Not read"** tab.
- Select the email chosen in the list.
-  Press **"Play"** to start playing the email.







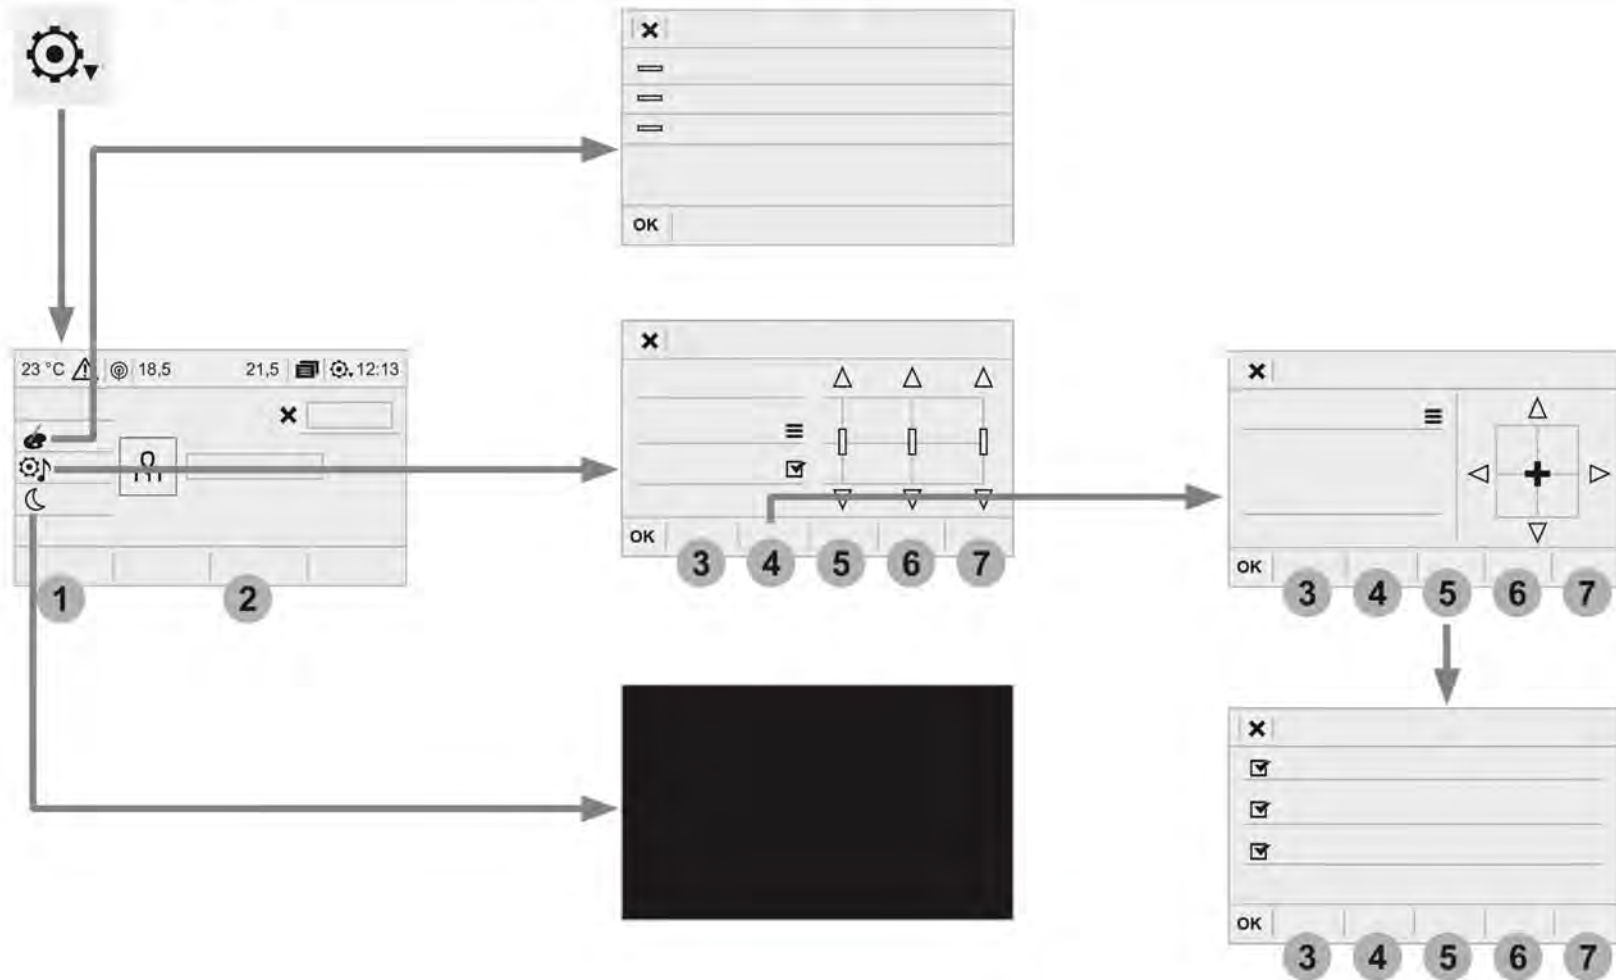








 Access to **"Email"** depends on the compatibility of the smartphone and the integral system.


# Settings










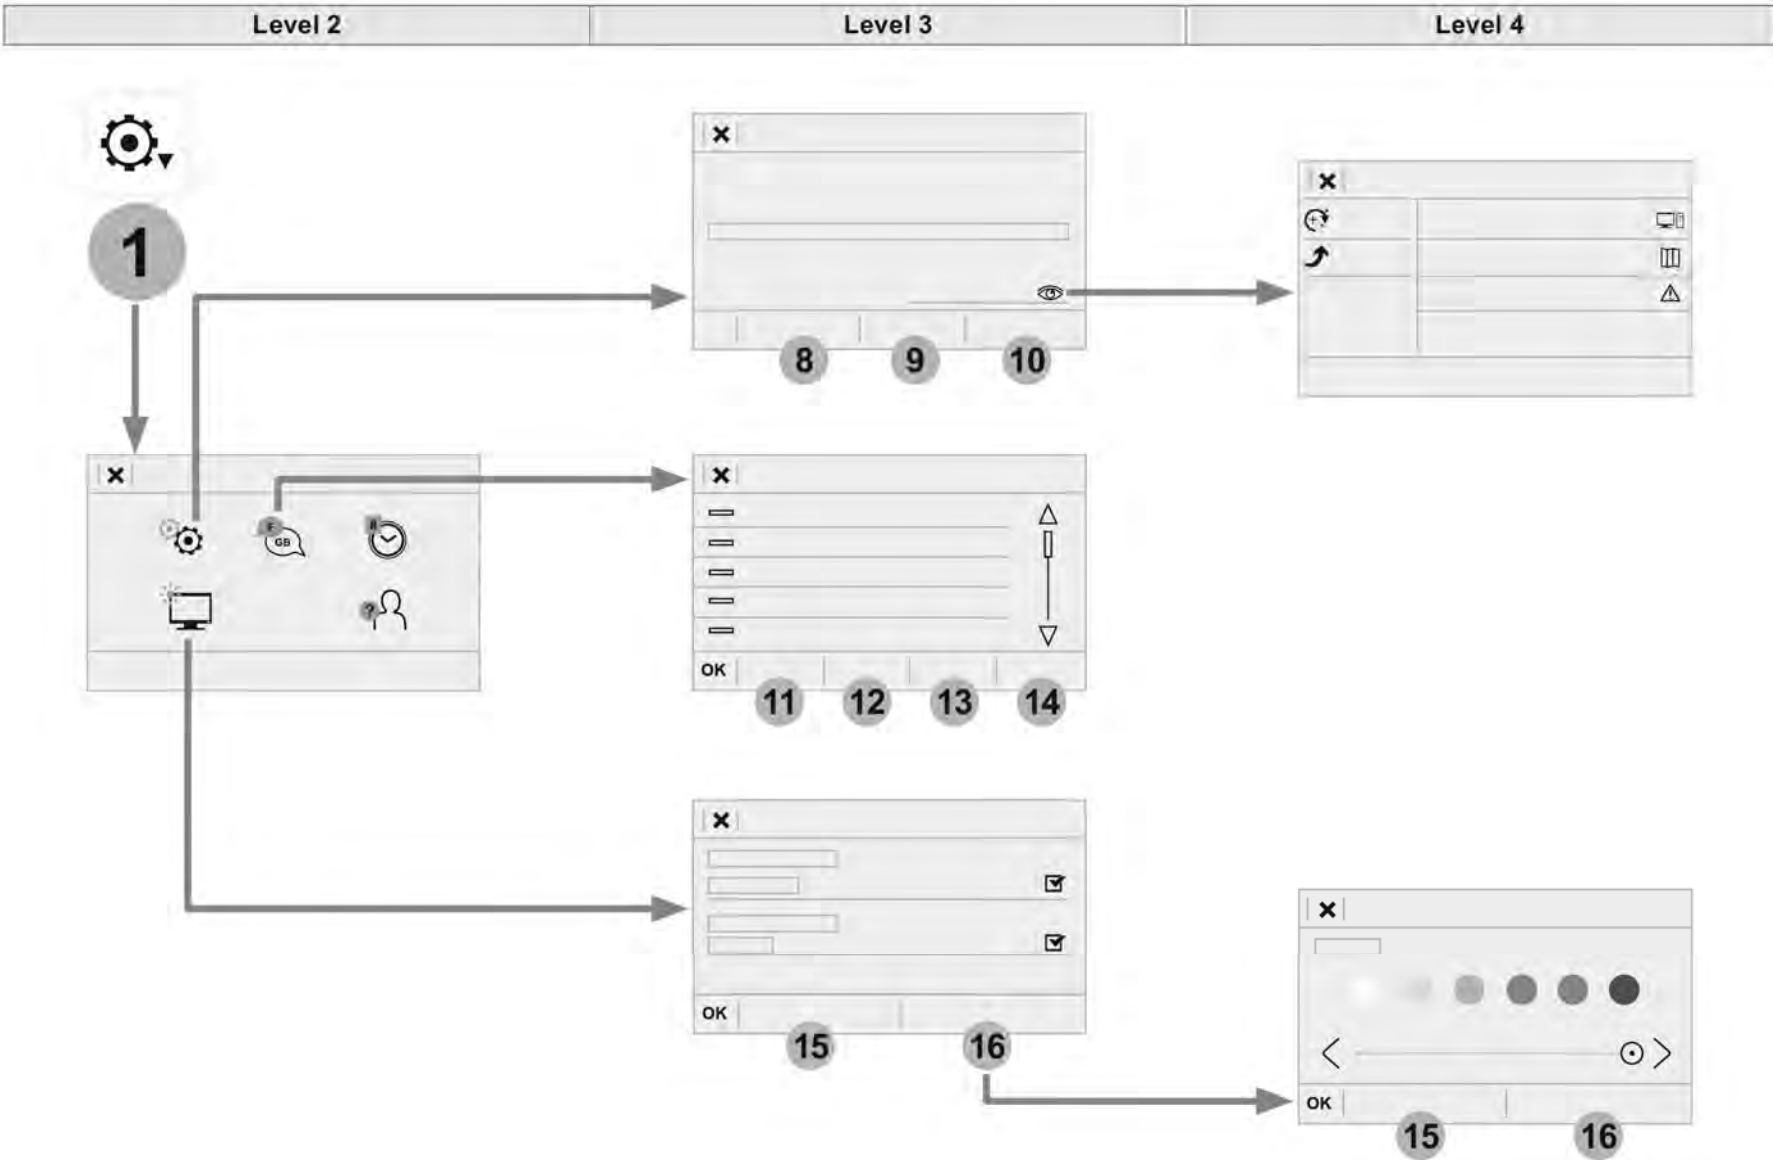 





According to version












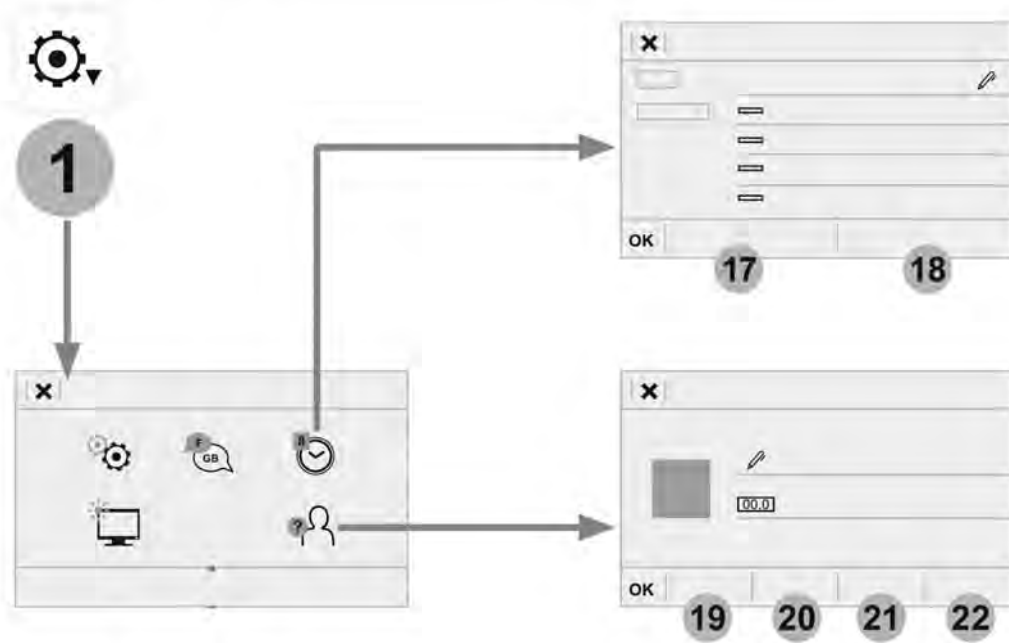



Level 1		Level 2		Comments
 	Settings ↓ Color schemes	 Color schemes: 1,2,3, ...		Having chosen the color scheme, save the setting.
		OK		
 	Settings ↓ Audio settings	 Ambience		Select the sound ambience.
		 Distribution		Sound distribution by the Arkamys® system.
		 Sound		Adjust the volume or activate linked to speed.
		 Voice		Adjust the voice volume.
		 Ringtone		Adjust the ringtone volume.
		OK		Save the settings.
 	Settings ↓ Turn off screen			Function allowing the display to be switched off. Pressing the screen reactivates it.
 	Settings ↓ Profile (1, 2, 3)			Activate the profile selected.



Level 2		Level 3		Level 4		Comments		
 <b>1</b> 	Settings ↓ <b>OPTIONS</b> ↓ System settings	<b>8</b>	Units		Distance and fuel consumption	Set the units used for distance, fuel consumption and temperature.		
					Temperature			
				<b>9</b>	Factory settings		Reinitialize	Restore the factory settings.
				<b>10</b>	System info		View	View the versions of the different modules (system, mapping, risk areas) installed in the system as well as the updates available.
		OK				Save the settings.		
 <b>1</b> 	Settings ↓ <b>OPTIONS</b> ↓ Languages	<b>11</b>	All			Select the language then confirm.		
		<b>12</b>	Europe					
		<b>13</b>	Asia					
		<b>14</b>	America					
				OK				Having selected the language, save the setting.
 <b>1</b> 	Settings ↓ <b>OPTIONS</b> ↓ Screen configuration	<b>15</b>	Animation			Activate or deactivate settings.		
		<b>16</b>	Brightness			Move the cursor to adjust the brightness of the screen and/or of the instrument panel.		
		OK				Save the settings.		



Level 2		Level 3		Level 4		Comments
 <b>1</b> 	Settings ↓ OPTIONS ↓ Setting the time-date	<b>17</b>	Date	 Date	Enter the date and select the date format.	
				 Date format:		
		<b>18</b>	Time	 Time	Set the time.	
				 Time Zone	Define the time zone.	
				 Time format:	Select the time format: 12h / 24h.	
				 Synchronisation with GPS (UTC):	Activate or deactivate synchronisation with the satellites.	
OK	Save the settings.					
 <b>1</b> 	Settings ↓ OPTIONS ↓ Setting of the profiles	<b>19</b>	Profile 1	Enter settings for the profiles.		
		<b>20</b>	Profile 2			
		<b>21</b>	Profile 3			
		<b>22</b>	Common profile			
		OK	Save the settings.			



## Audio settings



Press **Settings** to display the primary page.



Select "**Audio settings**".



Select "**Ambience**".

Or



"**Position**".

Or



"**Sound**".

Or



"**Voice**".

Or



"**Ringtone**".



Press "**OK**" to save the settings.



The sound distribution (or spatialisation with the Arkamys® system) is audio processing that allows the quality of the sound to be adapted according to the number of passengers in the vehicle. Available only with the front and rear speakers configuration.



The audio **Ambience** settings (6 ambiences available) as well as the **Bass**, **Medium** and **Treble** settings are different and independent for each sound source.

Activate or Deactivate "**Loudness**".

The settings for "**Position**" (All passengers, Driver and Front only) are common to all sources.

Activate or Deactivate "**Touch tones**", "**Volume linked to speed**" and "**Auxiliary input**".



On-board audio: Arkamys® Sound Staging optimises the distribution of sound in the passenger compartment.

## Profile settings



As a safety measure and because it requires the sustained attention of the driver, changes to settings must only be done with the **vehicle stationary**.



Press **Settings** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Setting of the profiles**".



Select "**Profile 1**", "**Profile 2**", "**Profile 3**" or "**Common profile**".



Press this button to enter a name for the profile using the virtual keypad.



Press "**OK**" to confirm.





Press this button to add a photograph to the profile.



Insert a USB memory stick containing the photograph in the USB port. Select the photograph.

**OK**

Press "OK" to accept the transfer of the photograph.

**OK**

Press "OK" again to save the settings.



The location for the photograph is square; the system deforms the original photograph if in another format.

00.0

Press this button to initialise the profile selected.



Initialisation of the profile selected activates the English language by default.

**2**

Select a "Profile" (1 or 2 or 3) to associate the "Audio settings" with it.



Select "Audio settings".

**3**

Select "Ambience".

Or

**4**

"Distribution".

Or

**5**

"Sound".

Or

**6**

"Voice".

Or

**7**








"Ringtone".

**OK**




Press "OK" to save the settings.

## Modifying system settings




-  Press **Settings** to display the primary page.
-  Press the "**OPTIONS**" button to go to the secondary page.
-  Select "**Screen configuration**".
-  Select "**Animation**".
-  Activate or deactivate "**Automatic scrolling**".
-  Select "**Brightness**".
-  Move the cursor to adjust the brightness of the screen and/or of the instrument panel.

-  Press **Settings** to display the primary page.
-  Press the "**OPTIONS**" button to go to the secondary page.
-  Select "**System settings**".
-  Select "**Units**" to change the units for distance, fuel consumption and temperature.
-  Select "**Factory settings**" to return to the initial settings.
-  Returning the system to factory settings activates the English language by default.
-  Select "**System info**" to display the versions of the different modules installed in the system.

## Select the language

-  Press **Settings** to display the primary page.
-  Press the "**OPTIONS**" button to go to the secondary page.
-  Select "**Languages**" to change the language.

## Setting the date

-  Press **Settings** to display the primary page.
-  Press the "**OPTIONS**" button to go to the secondary page.
-  Select "**Setting the time-date**".

17

Select "Date".



Press this button to define the date.

OK

Press "OK" to confirm.



Select the display format of the date.

**i** Adjustment of the time and date is only available if "GPS synchronisation" is deactivated.  
The change between winter and summer time is done by changing the time zone.

## Setting the time



Press **Settings** to display the primary page.

1

Press the "OPTIONS" button to go to the secondary page.



Select "**Setting the time-date**".

18

Select "Time".



Press this button to adjust the time using the virtual keypad.

OK

Press "OK" to confirm.



Press this button to define the time zone.



Select the display format for the time (12h / 24h).



Activate or deactivate synchronisation with the satellites (UTC).

OK

Press "OK" to confirm.



The system does not automatically manage the change between winter and summer time (depending on country).

## Color schemes



As a safety measure, the procedure for changing the color scheme is only possible with the vehicle stationary.



Press **Settings** to display the primary page.



Select "**Color schemes**".



Select a color scheme in the list then press "OK" to confirm.



Every time the color scheme is changed, the system restarts, temporarily displaying a black screen.

## Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

### Navigation

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The route settings may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the route settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select setting for the "Traffic info" function in the list of route settings (Without, Manual or Automatic).

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.



## Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The environment (hills, buildings, tunnels, basement car parks...) block reception	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a franchised dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	Press on the "Update list" button in the "Radio stations" secondary menu.
	Some radio stations send other information in place of their name (the title of the song for example).	
The name of the radio station changes.	The system interprets this information as the name of the station.	



## Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

## Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at the Brand's website (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	

## Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the settings for treble and bass and vice-versa.	Modify the treble and bass or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings and vice-versa.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources.</p>	<p>For optimum sound quality, the audio settings can be adapted to the different sound sources, which may result in audible differences when changing source.</p>	<p>Check that the audio settings are adapted to the sources listened to. Adjust Balance, Treble, Bass to the middle position, select the "None" musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>With the engine off, the system switches off after a few minutes of use.</p>	<p>When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.</p>	<p>Start the vehicle's engine to increase the battery charge.</p>
<p>The date and time cannot be set.</p>	<p>Setting of the date and time is only available if the synchronisation with the satellites is deactivated.</p>	<p>Settings menu / Options / Time-Date setting. Select the "Time" tab and deactivate the "GPS synchronisation" (UTC).</p>

# USA – Federal Communications Commission (FCC)

---

## 1. Modification Statement

“Continental Automotive Rambouillet France S.A.S.” has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user’s authority to operate the equipment.

## 2. Interference statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## 3. Wireless notice:

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## 4. FCC Class B digital device or peripheral notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.