# **CITROËN Connect Nav**

Ref. 1948\_038\_002\_2

# **CITROËN Connect Nav**

Ref. 1948\_038\_001\_3



# GPS satellite navigation - Applications - Multimedia audio system - Bluetooth $^{\circledR}$ telephone

Ref. 1724\_051\_002\_7

#### **Contents**

First steps 2

Steering mounted controls 3

Menus 4

Voice commands 5

Navigation 13

Connected navigation 15

Applications 18

Radio 23

DAB radio (Digital Audio Broadcasting) 24

Media 25

Telephone 27

Settings 31

Frequently asked questions 33



### Tip

The different functions and settings described vary according to the version and configuration of your vehicle.



# **WARNING**

As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.



The system is protected in such a way that it will only operate in your vehicle.

The display of the message **Energy Economy Mode** signals that a change to standby is imminent.



#### Tip

The link below gives access to OSS (Open Source Software) codes for the system.

https://www.groupe-psa.com/fr/oss/

https://www.groupe-psa.com/en/oss/

# First steps

Ref. 1837 001 001 2

Ref. 1727\_051\_001\_4



With the engine running, a press mutes the sound.

With the ignition off, a press turns the system on.

Increase or decrease the volume using the wheel or the "plus" or "minus" buttons (depending on the equipment).

Use the menu buttons on either side of or below the touch screen for access to the menus, then press the virtual buttons in the touch screen.

Depending on the model, use the "Source" or "Menu" buttons to access the menus, then press the virtual buttons in the touch screen.

You can display the menu at any time by pressing the screen briefly with three fingers.

All of the touch areas of the screen are white.

Press the back arrow to go back a level.

Press "OK" to confirm.



#### **WARNING**

The touch screen is of the "capacitive" type.

To clean the screen, use a soft, non-abrasive cloth (spectacles cloth) with no additional cleaning product.


Do not use sharp objects on the screen.

Do not touch the screen with wet hands.

Ref. 1725\_062\_001\_4

Certain information is displayed permanently in the side bars or in the upper bar of the touch screen (depending on equipment):

- Reminder of the air conditioning information (depending on version), and direct access to the corresponding menu.
- Go directly to the selection of the audio source, to the list of radio stations (or list of titles depending on the source).
- Go to the "Notifications" of messages, emails, map updates and, depending on the services, the navigation notifications.
- Go to the settings for the touch screen and the digital instrument panel.

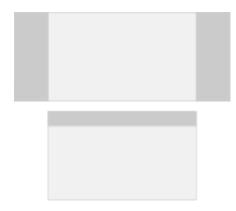

Selecting the sound source (depending on equipment):

- FM / DAB / AM radio stations (depending on equipment).
- Telephone connected via Bluetooth and multimedia broadcast Bluetooth (streaming).
- USB memory stick.
- Media player connected via the auxiliary socket (depending on equipment).
- CD Player (depending on equipment).
- Video (depending on equipment).





#### Tip

In the "Settings" menu you can create a profile for just one person or a group of people with shared interests, with the possibility of entering multiple settings (radio presets, audio settings, navigation history, contact favourites, etc.); these settings are taken into account automatically.



# Tip

In very hot conditions, the volume may be limited to protect the system. It may go into standby (screen and sound off) for at least 5 minutes

The return to normal takes place when the temperature in the passenger compartment has dropped.

# **Steering mounted controls**

Ref. 1845\_004\_001\_2

Ref. 1748\_030\_002\_5



#### Voice commands:

This control is located on the steering wheel or at the end of the lighting control stalk (depending on equipment).

Short press, system voice commands.

Long press, smartphone voice commands via the system.



Increase volume.



Mute / Restore the sound (depending on equipment).

Or

Mute by pressing the volume increase and decrease buttons simultaneously (depending on equipment).

Restore the sound by pressing one of the two volume buttons.



Decrease volume.

SRC

Media (short press): change the multimedia source.



**Telephone** (short press): start telephone call.

Call in progress (short press): access telephone menu.

**Telephone** (long press): reject an incoming call, end call; when no call is in progress, access telephone menu.



**Radio** (rotate): automatic search for the previous / next station.

Media (rotate): previous / next track, move through a list.

**Short press**: confirm a selection; if nothing selected, access to presets.

#### LIST

Radio: display the list of stations.

Media: display the list of tracks.

Radio (press and hold): update the list of stations received.

# **Menus**

Ref. 1838\_004\_001\_3

# **Connected navigation**

Ref. 1727\_052\_003\_3

Depending on equipment / Depending on version.



Enter navigation settings and choose a destination.

Use services available in real time, depending on equipment.



# **Applications**

Ref. 1727\_052\_004\_3

Depending on equipment / Depending on version.



Operate certain applications on a smartphone connected via CarPlay<sup>®</sup>, MirrorLink<sup>TM</sup> (available depending on the country) or Android Auto.

Check the state of the Bluetooth ® and Wi-Fi connections.



# **Radio Media**

Ref. 1727\_052\_005\_3

Depending on equipment / Depending on version.



Select an audio source, a radio station, display photographs.



# **Telephone**

Ref. 1727\_052\_006\_3

Depending on equipment / Depending on version.



Connect a telephone via Bluetooth<sup>®</sup>, read messages and emails and send quick messages.




# **Settings**

Ref. 1727\_052\_007\_3

Depending on equipment / Depending on version.



Configure a personal profile and/or configure the sound (balance, ambience, etc.) and the display (language, units, date, time, etc.).

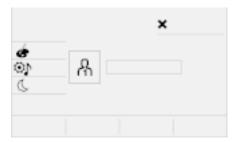

# **Vehicle**

Ref. 1727\_052\_008\_3

Depending on equipment / Depending on version.



Activate, deactivate or configure certain vehicle functions.



# Air conditioning

Ref. 1727\_052\_002\_2

Depending on equipment / Depending on version.



Manage the different temperature and air flow settings.



# Voice commands

Ref. 1845\_005\_001\_2

# Steering mounted controls

Ref. 1381\_039\_002\_3



Pressing this button activates the voice commands function.



#### **WARNING**

To ensure that voice commands are always recognised by the system, please observe the following recommendations:

- speak natural language in a normal tone without breaking up words or raising your voice.
- always wait for the "beep" (audible signal) before speaking.
- for optimum operation, it is recommended that the windows and sunroof are closed to avoid exterior interference (depending on version),
- before making a voice command, ask other passengers not to speak.

# First steps

Ref. 1381\_033\_002\_3



Example of a "voice command" for navigation:

"Navigate to address 11 Regent Street, London"

Example of a "voice command" for the radio and media:

"Play artist Madonna"

Example of a "voice command" for the telephone:

"Call David"



#### **WARNING**

The voice commands, with a choice of 17 languages (Arabic, Brazilian, Czech, Danish, Dutch, English, Farsi, French, German, Italian, Norwegian, Polish, Portuguese, Russian, Spanish, Swedish, Turkish), are made using the language previously chosen and set in the system.

For some voice commands, there are alternative synonyms.

Example: Guide to / Navigate to / Go to / ...

The voice commands in Arabic for: "Navigate to address" and "Display POI in the city", are not available.

# **Information - Using the system**

Ref. 1381\_034\_001\_2






Press the Push To Talk voice control button and tell me what you'd like after the tone. Remember you can interrupt me at any time by pressing this button. If you press it again while I'm waiting for you to speak, it'll end the conversation. If you need to interrupt the action in progress, say "cancel". If you want to undo something and start over, say "undo". To get information and tips at any time, just say "help". If you ask to me do something and there's some information missing that I need, I'll give you some examples or take you through it step by step. There's more information available in "novice" mode. You can set the dialogue mode to "expert" when you feel comfortable.



When the voice commands are activated, by briefly pressing the button help is displayed on the touchscreen, offering various menus and allowing you to interact with system by voice.



Upon selecting a menu item you have a choice of commands.

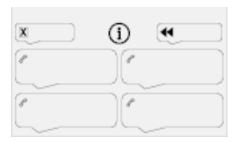

# **Global voice commands**

Ref. 1381\_031\_002\_2



#### Tip

These commands can be made from any screen page after pressing the "Voice commands" button located on the steering wheel, as long as there is no telephone call in progress.

<i>©</i> €?	
Voice commands	Help messages
	There are lots of topics I can help you with. You can say: "help with phone", "help with navigation", "help with media" or "help with radio". For an overview on how to use voice controls, you can say "help with voice controls".
	Say "yes" if I got that right. Otherwise, say "no" and we'll start that again.
Set dialogue mode as expert - novice	
Select profile 1 / Select profile John	
Increase temperature	
Decrease temperature	

# "Navigation" voice commands

Ref. 1381\_035\_002\_2



# Tip

These commands can be made from any screen page after pressing the "Voice commands" button located on the steering wheel, as long as there is no telephone call in progress.

<b>€</b> Ω	
Voice commands	Help messages
Navigate home	To start guidance, say "navigate to" and then the
Navigate to work	address, the contact name, or the intersection. For example, "navigate to address 11 Regent Street, London", "navigate to contact, John", or "navigate to intersection with Regent Street, London". You can specify if it's a preferred address or a point of interest. For example, "navigate to preferred destination, Tennis club", "navigate to point of interest, Heathrow Airport", or just say, "navigate home". To see points of interest on a map, you can say things like "show point of interest hotels in Banbury" or "show point of interest nearby petrol stations". For more information, say "point of interest" or "help with route guidance".
Navigate to preferred destination, Tennis Club	
Navigate to contact John	
Navigate to address 11 Regent Street, London	
	To choose a destination, say "guide to line three" or "select the second line". If you cannot find the destination but the street is correct, say, for example, "select street line three". To move

Voice commands	Help messages
	around the list, say "next page" or "previous page". You can go back and start over by saying "undo", or say "cancel" to interrupt the current action.
What is the remaining distance?	You can say "deactivate" or "resume naviga-
What is the remaining time?	tion". You can get information about your route by saying, for example, "remaining time", "remaining
What is the time of arrival?	distance" or "arrival time". Say "help navigation"
Stop navigation	to learn more.
Display point of interest	To display the POIs on the map, you can say "view point of interest hotel in Liverpool", "display
Display point of interest service station near- by	point of interest parking nearby ", "display point of interest hotel at destination" or "display point of
Navigate to point of interest Heathrow Airport in London	interest service stations on the route". If you pre- fer to navigate directly to a point of interest, say
Navigate to point of interest service station on the route	"guide to point of interest service station nearby" If you feel that you have not been correctly understood, try to say the keyword "point of interest" before the point of interest. For example, say "navigate point of interest restaurant at the destination".
	To choose a point of interest, say "select the second line". If you are looking for a point of interest and you do not find it in the list, you can filter it by saying "select the POI type line 2" or "select city line three". To move around the list, say "next page" or "previous page".



Depending on the country, give the destination instructions (address) in the language used by the system.

# "Radio Media" voice commands

Ref. 1381\_036\_002\_2



# Tip

These commands can be made from any screen page after pressing the "Voice commands" button located on the steering wheel, as long as there is no telephone call in progress.

<b>€</b> Ω	
Voice commands  Turn on radio source - Bluetooth Streaming	Help messages  To select an audio source, say "turn on source" followed by the device name. For example, "turn on source, Bluetooth" or "turn on source, radio". Use the command "play" or "listen to" to select the type of music you'd like to hear. You can choose by "song", "artist", or "album". Just say "play artist, Madonna", "play song, Hey Jude", or "play album, Thriller".
Tune to channel Talksport  Listen to 98.5 FM / Set to 98.5 FM  Listen to memory five	You can pick a radio station by saying "tune to" and the station name or frequency. For example "tune to channel Talksport" or "tune to 98.5 FM". To listen to a preset radio station, say, for example "tune to preset number five".
What are we listening to?	To choose what you want to listen to, say "listen to" followed by your choice. For example, say "listen to the title Hey Jude", "listen to line 3" or "select line 2". You can go back and start over by saying "undo", or say "cancel" to interrupt the current action.
Listen to title Let it be Play artist Madonna Play album Thriller	I did not understand what you want to listen to. Say "listen" followed by the name of a title, artist, or album. Say, for example, "listen to title Yellow Submarine", "listen to artist Madonna" or "listen to album Abbey Road". You can also say "select line two". To move around the list, say "next page" or "previous page". You can go back and start over by saying "undo", or say "cancel" to interrupt the current action.



Media voice commands are available only for a USB connection.

# "Telephone" voice commands

Ref. 1381\_037\_002\_3



#### Tip

These commands can be made from any screen page after pressing the "Voice commands" button located on the steering wheel, as long as there is no telephone call in progress.

If there is no telephone connected by Bluetooth, a voice message announces: "Please first connect a telephone", and the voice session will be closed.

Voice commands	Help messages
Call contact John	To make a phone call, say "call" followed by
Call voicemail*	the contact name, for example: "Call David Miller". You can also include the phone type, for
Display calls*	example: "Call David Miller at home". To make a call by number, say "dial" followed by the phone number, for example, "Dial 107776 835 417". You can check your voicemail by saying "call voicemail". To send a text, say "send quick message to", followed by the contact, and then the name of the quick message you'd like to send. For example, "send quick message to David Miller, I'll be late". To display the list of calls, say "display calls". For more information on SMS, you can say "help with texting".
	To select a contact, say, for example, "select line three". You can browse the list by saying "next page" or "previous page". To undo your selection, say "undo". To cancel the current action and start again, say "cancel".

# "Text message" voice commands

Ref. 1381\_038\_002\_3



# Tip

These commands can be made from any screen page after pressing the "Voice commands" button located on the steering wheel, as long as there is no telephone call in progress.

If there is no telephone connected by Bluetooth, a voice message announces: "Please first connect a telephone", and the voice session will be closed.



# Tip

The voice commands function "Text messages" allows you to dictate and send an SMS.

Dictate your text taking care to make a short pause between each word.

At the end of the operation, the voice recognition system will automatically create an SMS.

Voice commands	Help messages
Send quick message to John, I'll be late	You can send a quick message by specifying the name of the recipient. To move around the list, say "go to the start", "go to the end", "next page" or "previous page". You can go back and start

<i>‰</i> Ω	
Voice commands	Help messages
	over by saying "undo", or say "cancel" to interrupt the current action.
Send an SMS to John, I've just arrived	Please say "call" or "send quick message to", and
Send an SMS to John at work, do not wait for me	then select a line from the list. To move around a list shown in the display, you can say "go to start" "go to end", "next page" or "previous page". To undo your selection, say "undo". To cancel the current action and start over, say "cancel".
Listen to most recent message	To hear the last message, say "listen to most recent message". When you want to send a text, there's a set of quick messages ready for you to use. Just use the quick message name and say "send quick message to Bill Carter, I'll be late", for example. Check the phone menu for the list of the supported messages.



The system only sends pre-recorded "Quick messages".

# **Navigation**

Ref. 1839\_002\_001\_2

# Choice of a destination

Ref. 1922\_020\_003\_1

# To a new destination

Ref. 1922\_020\_004\_3



Press **Navigation** to display the primary page.

Press the "MENU" button to go to the secondary page.



Select "Enter address".



Select the "Country".



Enter the "City", the "Street" and the "Number" and confirm by pressing on the suggestions displayed.

oĸ

Press "OK" to select the "Guidance criteria".

And / Or



Select "See on map" to select the "Guidance criteria".

oĸ

Press "OK" to start navigation.



Tip

Zoom out / zoom in using the touch buttons or with two fingers on the screen.



Tip

In order to be able to use the navigation, it is necessary to fill in the "City", the "Street" and the "Number" on the virtual keyboard or take it from the list in "Contact" or in the "History" of addresses.



Tip

Without confirmation of the street number, you will be guided to one end of the street.

# To a recent destination

Ref. 1922\_021\_002\_3



Press Navigation to display the primary page.

Press the "MENU" button to go to the secondary page.



Select "My destinations".

Select the "Recent" tab.

Select the address chosen in the list to display the "Guidance criteria.

# oĸ

Press "OK" to start navigation.



Tip

Select "Position" to visualise the arrival point geographically.

# To "My home" or "My work"

Ref. 1922\_023\_001\_4



Press **Navigation** to display the primary page.

Press the "MENU" button to go to the secondary page.



Select "My destinations".

Select the "Preferred" tab.



Select "My home".

Or



Select "My work".

Or

Select a preset favourite destination.

# To a contact in the directory

Ref. 1922\_024\_001\_4



Press Navigation to display the primary page.

Press the "MENU" button to go to the secondary page.



Select "My destinations".

Select the "Contact" tab.

Select a contact in the list to start navigation.

# To points of interest (POI)

Ref. 1922\_025\_002\_3

Points of Interest (POI) are listed in different categories.



Press Navigation to display the primary page.

Press the "MENU" button to go to the secondary page.



Select "Points of interest".



Select the "Travel", or "Leisure" or "Commercial" or "Public" or "Geographic" tab.

Or



Select "Search" to enter the name and address of a POI.

oĸ

Press "OK" to start calculation of the route.

# To a point on the map

Ref. 1922\_026\_001\_4



Press Navigation to display the primary page.

Explore the map by sliding a finger on the screen.

Select the destination by pressing on the map.



Tap the screen to place a marker and display the sub-menu.



Press this button to start navigation.

Or



Press this button to save the address displayed.



Tip

A long press on an item opens a list of POIs nearby.

# To GPS coordinates

Ref. 1922\_027\_002\_3



Press Navigation to display the primary page.

Explore the map by sliding a finger on the screen.

Touch the screen with a finger to go to the next image.



Press this button to display the world map.

Using the grid, select by zoom the desired country or region.



Press this button to display or enter the GPS coordinates.



A marker is displayed in the middle of the screen, with the "Latitude" and "Longitude" coordinates.

Choose the type of coordinates:

DMS for: Degrees, Minutes, Seconds.

DD for: Degrees, Decimals.



Press this button to start navigation.

Or



Press this button to save the address displayed.

OR



Press this button to enter the value for "Latitude" using the virtual keypad.

And



Press this button to enter the value for "Longitude" using the virtual keypad.

# **TMC (Traffic Message Channel)**

Ref. 1735 010 002 1



#### Tip

TMC (Traffic Message Channel) messages are linked to a European standard on the broadcasting of traffic information via the RDS system on FM radio, transmitting traffic information in real time.

The TMC information is then displayed on a GPS Navigation system map and taken into account straight away during navigation, so as to avoid accidents, traffic jams and closed roads.



#### Tip

The display of danger zones depends on the legislation in force and subscription to the service.

# **Connected navigation**

Ref. 1940\_012\_001\_2

Ref. 1941\_029\_004\_1

Depending on version

Depending on the equipment level of the vehicle

# Network connection provided by the vehicle

Ref. 1941\_029\_005\_1



**OR** 

# Network connection provided by the user

Ref. 1941 029 006 2



#### Tip

For the list of eligible smartphones, go to the brand's internet website in your country.



# **Connected navigation connection**

Ref. 1941\_030\_004\_1



#### **WARNING**

As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited.

All operations must be done with the **vehicle stationary**.



#### Tip

For access to connected navigation, you can use the connection provided by the vehicle via the "Emergency or assistance call" services or use your smartphone as a modem.

Activate and enter settings for sharing the smartphone connection.

# Network connection provided by the vehicle

Ref. 1941\_030\_005\_1



The system is automatically connected to the modem included for the "Emergency or assistance calls" services and does not require a connection provided by the user via their smartphone.

# **Network connection provided by the user**

Ref. 1941\_030\_006\_3

#### **USB** connection



Connect a USB cable.

The smartphone charges when connected by a USB cable.

#### **Bluetooth connection**



Activate the Bluetooth function on the telephone and ensure that it is visible to all (see the "Applications" section).

#### Wi-Fi connection



Select a Wi-Fi network found by the system and connect.



This function is only available if it has been activated either via the "Notifications" or via the "Applications" menu.



Press "Notifications".



Select Wi-Fi to activate it.

OR



Press **Applications** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Wi-Fi network connection".



Select the "Secured" or "Not secured" or "Stored" tab.



Select a network.



Using the virtual keypad, enter the "Key" for the Wi-Fi network and the "Password".

# OΚ

Press "OK" to start the connection.



# Tip

Restrictions of use:

- With CarPlay<sup>®</sup>, connection sharing is only with a Wi-Fi connection.
- With MirrorLink<sup>TM</sup>, connection sharing is only with a USB connection.

The quality of services depends on the quality of the network connection.

A RESPON

With the arrival of "TOMTOM TRAFFIC", the services are available.



# Tip

The services offered with connected navigation are as follows.

A Connected Services pack:

- Weather,
- Filling stations,
- Car park,
- Traffic,
- POI local search.

A Danger zone pack (option).



#### Tip

The principles and standards are constantly changing; for the communication process between the smartphone and the system to work correctly, we recommend that you update the operating system of the smartphone as well as the date and time of the smartphone and the system.

# Settings specific to connected navigation

Ref. 1880\_021\_001\_4



# Tip

In the "Settings" menu you can create a profile for just one person or a group of people with shared interests, with the possibility of entering multiple settings (radio presets, audio settings, navigation history, contact favourites, etc.); these settings are taken into account automatically.



Press **Navigation** to display the primary page.

Press the "MENU" button to go to the secondary page.



Select "Settings".

Select "Map".



Activate or deactivate:

- "Allow declaration of danger zones".

#### - "Guidance to final destination on foot"

These settings must be made according to each profile.

Select "Alerts".

 $\blacksquare$ 

Activate or deactivate "Advise of car parks nearby".

ϗ

Activate or deactivate "Filling station alert".

 $\blacksquare$ 

Activate or deactivate "Risk areas alert".



Next, select this button.

ϗ

Activate: "Safety zones alert"

☒

Activate: "Give an audible warning"

ϗ

Activate or deactivate "Advise of POI 1 nearby".

丞

Activate or deactivate "Advise of POI 2 nearby".



# **WARNING**

For access to connected navigation, you must select the option: "Authorise sending information" in "Settings".



# Tip

You can access the "Notifications" at any time in the top bar.



#### Tip

The display of danger zones depends on the legislation in force and subscription to the service.

# **Declaration of "Danger zones"**

Ref. 1880\_026\_002\_3



#### **WARNING**

To distribute information on the declaration of danger zones, you should check the option:

"Allow declaration of danger zones".



Press **Navigation** to display the primary page.



Press the "**Declare a new danger zone**" button located in the side bars or the upper bar of the touch screen (depending on equipment).



Select the option "Type" to choose the type of "danger zone".



Select the "Speed" option and enter it using the virtual keypad.

oĸ

Press "**OK**" to save and distribute the information.

# **Authorize sending information**

Ref. 1880\_022\_002\_1



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "System settings".



Select the "Privacy mode" tab.



Activate or deactivate:

- "Activating privacy mode".
- "Deactivating geolocation data"
- "Deactivating privacy mode"

# "Danger zones" pack updates

Ref. 1880\_022\_001\_3



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "System settings".



Select the "System info" tab.



Select "View" to display the versions of the different modules installed in the system.



Select "Update(s) due".



Tip

You can download the system and map updates from the Brand's website.

The update procedure can also be found on the website.



Tip

Once you have downloaded the updates, the installation on the vehicle must be done with the engine running and vehicle stationary.

# Display the weather

Ref. 1880\_020\_001\_4



Press Navigation to display the primary page.



Press this button to display the list of services.



Select "View map".



Select "Weather".



Press this button to display primary information.



Press this button to display the detailed weather information.



Tip

The temperature displayed at 6 a.m. will be the maximum temperature for the day.

The temperature displayed at 6 p.m. will be the minimum temperature for the night.

# **Applications**

Ref. 1839\_004\_001\_2

# Connectivity

Ref. 1921\_032\_001\_3



Press **Applications** to display the primary page.

Press "Connectivity" to go to the CarPlay<sup>®</sup>, MirrorLink<sup>TM</sup> or Android Auto functions.

# CarPlay<sup>®</sup> smartphone connection

Ref. 1941\_043\_001\_3



#### **WARNING**

As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited.

All operations must be done with the vehicle stationary.



#### Tip

The synchronisation of a personal smartphone allows users to display applications compatible with the smartphone's CarPlay<sup>®</sup> technology on the vehicle screen when the smartphone's CarPlay<sup>®</sup> function has been previously activated.

As the principles and standards are constantly changing, it is recommended that you keep your smartphone's operating system updated.

For the list of eligible smartphones, go to the brand's internet website in your country.



Connect a USB cable. The smartphone charges when connected by a USB cable.



Press on "**Telephone**" to display the CarPlay<sup>®</sup> interface.

Or



Connect a USB cable. The smartphone charges when connected by a USB cable.



From the system, press "Applications" to display the primary page.

Press "Connectivity" to go to the CarPlay® function.



Press "CarPlay" to display the CarPlay® interface.



#### Tip

On connecting the USB cable, the CarPlay<sup>®</sup> function deactivates the system's Bluetooth <sup>®</sup> mode.

# MirrorLink<sup>TM</sup> smartphone connection

Ref. 1941\_044\_001\_3

Available depending on the country of sale.



#### **WARNING**

As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited.

All operations must be done with the vehicle stationary.



#### Tip

The synchronisation of a personal smartphone allows users to display applications adapted for the smartphone's MirrorLink<sup>TM</sup> technology on the vehicle screen.

The principles and standards are constantly changing, for the communication process between the smartphone and the system to operate, it is essential that the smartphone is unlocked; update the operating system of the smartphone as well as the date and time of the smartphone and the system.

For the list of eligible smartphones, go to the brand's internet website in your country.



#### **WARNING**

As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.



### Tip

The **MirrorLink**<sup>TM</sup> function requires the use of a compatible smartphone and applications.



When connecting a smartphone to the system, it is recommended that  $\mathsf{Bluetooth}^{\texttt{®}}$  is started on the smartphone



Connect a USB cable. The smartphone charges when connected by a USB cable.



From the system, press "Applications" to display the primary page.

Press "Connectivity" to go to the MirrorLink<sup>TM</sup> function.



Press "MirrorLink<sup>TM</sup>" to start the application in the system.

Depending on the smartphone, it may be necessary to activate the "MirrorLink" TM function.



During the procedure, several screen pages relating to certain functions are displayed. Accept to start and complete the connection.

Once the connection is established, a page is displayed with the applications already downloaded to your smartphone and adapted to MirrorLink<sup>TM</sup> technology.

Access to the different audio sources remains accessible in the margin of the MirrorLink<sup>TM</sup> display, using touch buttons in the upper bar.

Access to the menus for the system is possible at any time using the dedicated buttons.



### Tip

There may be a wait for the availability of applications, depending on the quality of your network.

# **Android Auto smartphone connection**

Ref. 1941 045 001 2



#### **WARNING**

As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited.

All operations must be done with the **vehicle stationary**.



# Tip

The synchronisation of a personal smartphone allows users to display applications adapted for the smartphone's Android Auto technology on the vehicle screen.

The principles and standards are constantly changing, for the communication process between the smartphone and the system to operate, it is essential that the smartphone is unlocked; update the operating system of the smartphone as well as the date and time of the smartphone and the system.

For the list of eligible smartphones, go to the brand's internet website in your country.



#### **WARNING**

As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.



#### Tip

The "Android Auto" function requires the use of a compatible smartphone and applications.



Connect a USB cable. The smartphone charges when connected by a USB cable.



From the system, press "Applications" to display the primary page.

Press "Connectivity" to go to the Android Auto function.



Press "Android Auto" to start the application in the system.

# oĸ

During the procedure, several screen pages relating to certain functions are displayed.

Accept to start and complete the connection.

Different audio sources remain accessible in the margin of the Android Auto display, using touch buttons in the upper bar.

Access to the menus for the system is possible at any time using the dedicated buttons.



#### Tip

In Android Auto mode, the function to display the menu by pressing the screen briefly with three fingers is deactivated.



#### Tip

There may be a wait for the availability of applications, depending on the quality of your network.

# Vehicle apps

Ref. 1921\_033\_001\_3



Press **Applications** to display the primary page.

Press "Vehicle Apps" to display the applications home page.

#### **Internet Browser**

Ref. 1921 031 001 3



Press **Applications** to display the primary page.

Press "Connectivity" to go to the "Internet Browser" function.

Press "Internet Browser" to display the browser home page.



Select your country of residence.

oĸ

Press "OK" to save and start the browser.



Connection to the internet is via one of the network connections provided by the vehicle or the user.

# Bluetooth connection®

Ref. 1742\_025\_005\_1



#### **WARNING**

As a safety measure and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the **vehicle stationary** and the ignition on.



#### Tip

Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

# Procedure from the telephone

Ref. 1742\_025\_006\_1



Select the system name in the list of devices detected.

In the system, accept the connection request from the telephone.



#### **WARNING**

To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

# **Procedure from the system**

Ref. 1742\_025\_007\_3



Press **Applications** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Press "Bluetooth connection".



Select "Search".

The list of telephones detected is displayed.



If the pairing procedure fails, it is recommended that you deactivate and then reactivate the Bluetooth function in your telephone.



Select the name of the chosen telephone in the list.



#### Tip

Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

# **Connection sharing**

Ref. 1742\_025\_008\_1

The system offers to connect the telephone with 3 profiles:

- "Telephone" (hands-free kit, telephone only),
- "Streaming" (streaming: wireless playing of the audio files on the telephone),
- "Mobile internet data".



# Tip

The "Mobile internet data" profile must be activated for connected navigation (where the vehicle does not have "Emergency and assistance call" services), having first activated sharing of this connection on your smartphone.



Select one or more profiles.

# oĸ

Press "OK" to confirm.

#### Wi-Fi connection

Ref. 1742\_026\_002\_3

Network connection via the smartphone's Wi-Fi.



Press **Applications** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Wi-Fi network connection".



Select the "Secured" or "Not secured" or "Stored" tab.



Select a network.



Using the virtual keypad, enter the "Key" for the Wi-Fi network and the "Password".

OK

Press "OK" to start the connection.



Tip

The Wi-Fi connection and the sharing of the Wi-Fi connection are exclusive.

# Wi-Fi connection sharing

Ref. 1742\_029\_002\_3

Creation of a local Wi-Fi network by the system.



Press **Applications** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Share Wi-Fi connection".

Select the "Activation" tab to activate or deactivate sharing of the Wi-Fi connection.

And / Or

Select the "Settings" tab to change the name of the system network and the password.



Press "OK" to confirm.



Tip

To protect against unauthorised access and to make your systems as secure as possible, the use of a complex security code or password is recommended.

# **Manage connections**

Ref. 1742\_030\_002\_3



Press **Applications** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Manage connection".

With this function you can view the access to connected services, the availability of connected services and modify the connection mode.

# **Radio**

Ref. 1358\_041\_003\_2

# **Selecting a station**

Ref. 1358\_041\_004\_3



Press Radio Media to display the primary page.

Press "Frequency".



Press one of the buttons for an automatic search for radio stations.

Or



Move the cursor for a manual search for frequencies up or down.

Or



Press Radio Media to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Radio stations" in the secondary page.

### Press "Frequency".



Enter the values using the virtual keypad.

First enter the units then click on the decimals zone to enter the figures after the decimal point.

#### OK

Press "OK" to confirm.



#### **WARNING**

Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a USB charger connected to the 12 V socket.

The exterior environment (hills, buildings, tunnels, basement car parks, etc.) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio equipment.

# **Presetting a station**

Ref. 1876\_007\_002\_2

Select a radio station or frequency.

(refer to the corresponding section)

Press "Presets".



Make a long press on one of the buttons to preset the station.

# **Changing waveband**

Ref. 1875\_011\_003\_1



Press Radio Media to display the primary page.

To change the waveband, press "Band..." displayed at the top right of the screen.

# **Activate / Deactivate the RDS**

Ref. 1737\_011\_002\_3



Press Radio Media to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Radio settings".

Select "General".



Activate / Deactivate "Station tracking".

oĸ

Press "OK" to confirm.



#### Tip

RDS, if activated, enables you to continue listening to the same station by automatically retuning to alternative frequencies. However, in certain conditions, coverage of this RDS station may not be assured throughout the entire country as radio stations do not cover 100% of the territory. This explains the loss of reception of a station during a journey.

# **Display text information**

Ref. 1737\_012\_002\_3



#### Tip

The "Radio Text" function allows information transmitted by the radio station and related to the station or the song playing to be displayed.



Press Radio Media to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Radio settings".

Select "General".



Activate / Deactivate "Display radio text".

oĸ

Press "OK" to confirm.

#### **Play TA messages**

Ref. 1737\_013\_002\_1



#### **WARNING**

The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station that carries this type of message. While traffic information is being broadcast, the current media is automatically interrupted so that the TA message can be heard. Normal play of the media previously playing is resumed at the end of the message.

Select "Announcements".



Activate / Deactivate "Traffic announcement".

oĸ

Press "OK" to confirm.

### **DAB (Digital Audio Broadcasting) radio**

Ref. 1504\_042\_002\_2

#### **Terrestrial Digital Radio**

Ref. 1504\_042\_003\_3



#### **WARNING**

Digital radio provides higher quality reception.

The various "multiplex/set" offer a choice of radio stations arranged in alphabetical order.



Press Radio Media to display the primary page.

Press "Band..." at the top right of the screen to display the DAB waveband.

#### **DAB-FM tracking**

Ref. 1504\_043\_002\_3



#### Tip

DAB does not cover 100% of the territory.

When the digital radio signal is poor, "DAB-FM tracking" allows you to continue listening to the same station, by automatically switching to the corresponding FM analogue station (if there is one).



Press Radio Media to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Radio settings".

Select "General".



Activate / Deactivate "FM-DAB Tracking".

 $\blacksquare$ 

Activate / Deactivate "Station tracking".

#### oĸ

Press "OK".



#### Tip

If "DAB-FM tracking" is activated, there is a difference of a few seconds when the system switches to FM analogue radio with sometimes a variation in volume.

Once the digital signal quality is restored, the system automatically changes back to DAB.



#### **WARNING**


If the DAB station being listened to is not available on FM ("DAB-FM" option greyed out), or "DAB-FM tracking" is not activated, the sound will cut out while the digital signal is too weak.

#### Media

Ref. 1739\_025\_003\_2

#### **USB** port

Ref. 1739\_025\_004\_2

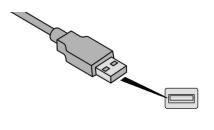

Insert the USB memory stick in the USB port or connect the USB device to the USB port using a suitable cable (not supplied).



#### **WARNING**

To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or a USB memory stick is connected. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

#### **Auxiliary socket (AUX)**

Ref. 1740\_018\_002\_3

Depending on equipment



This source is only available if "Auxiliary input" has been checked in the audio settings.

Connect the portable device (MP3 player, etc.) to the jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

Operation of controls is via the portable device.

#### **CD** player

Ref. 1739 027 001 3

Depending on equipment

Insert the CD in the player.

#### Selecting the source

Ref. 1739\_028\_001\_3



Press Radio Media to display the primary page.

Select "Source".

Choose the source.

#### Watch a video

Ref. 1739\_028\_004\_1



#### **WARNING**

For safety reasons and because of required sustained attention of the driver, viewing a video is only possible when the **vehicle is stopped** and the ignition is switched on; as soon as movement resumes, the video stops.

Insert a USB memory stick in the USB port.



#### Tip

Video control commands are accessible only through the touchscreen.



Press Radio Media to display the primary page.

Select "Source".



Select Video to start the video.



To remove the USB memory stick, press the pause button to stop the video, then remove the memory stick.

## Bluetooth® audio streaming

Ref. 1802\_023\_002\_1

Streaming allows you to listen to music from your smartphone.

The Bluetooth profile must be activated, first adjust the volume on your portable device (to a high level).

Then adjust the volume of your audio system.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the portable device or by using the system's touch buttons.



#### **WARNING**

Once connected in streaming mode, the telephone is considered to be a media source.

## Connecting Apple<sup>®</sup> players

Ref. 1892\_009\_001\_1

Connect the Apple<sup>®</sup> player to the USB port using a suitable cable (not supplied).

Play starts automatically.

Control is via the audio system.



#### Tip

The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).

The default classification used is by artists. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple <sup>®</sup> plaver.

#### Information and advice

Ref. 1738\_019\_002\_2



#### **WARNING**

The system supports USB mass storage devices, BlackBerry<sup>®</sup> devices or Apple<sup>®</sup> players via USB ports. The adapter cable is not supplied.

Device management is done by the audio system controls.

Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied) or via Bluetooth streaming, depending on compatibility.



#### WARNING

To protect the system, do not use a USB hub.

The audio equipment will only play audio files with ".wma", ".aac", ".flac", ".ogg" and ".mp3" file extensions and with a bitrate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bitrate) mode.

No other file types (.mp4, etc.) can be played.

Files of the ".wma" type should be to the wma 9 standard.

The sampling rates supported are 32, 44 and 48 kHz.

To avoid any playback or display issues, it is advisable to create file names that have less than 20 characters and without using any special characters (e.g.: «?.; ù).

Use only USB memory sticks in FAT32 format (File Allocation Table).



#### Tip

It is recommended that the original USB cable for the portable device is used.

CD player (depending on equipment).

In order to be able to play a burned CDR or CDRW, select ISO 9660 level 1, 2 or Joliet standards if possible when burning the CD.

If the disc is burned in another format, it may not be played correctly.

It is recommended that the same burning standard is always used on an individual disc, with the lowest speed possible (4x maximum) for the best acoustic quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

## **Telephone**

Ref. 1843\_009\_001\_2

## Pairing a Bluetooth® telephone

Ref. 1742\_027\_005\_1



#### **WARNING**

As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.



#### Tip

Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

#### Procedure from the telephone

Ref. 1742\_027\_006\_1



Select the system name in the list of devices detected.

In the system, accept the connection request from the telephone.



#### **WARNING**

To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

#### **Procedure from the system**

Ref. 1742\_027\_007\_4



Press **Telephone** to display the primary page.



Press "Bluetooth search".

Or



Select "Search".

The list of telephones detected is displayed.



#### Tip

If the pairing procedure fails, it is recommended that you deactivate and then reactivate the Bluetooth function in your telephone.



Select the name of the chosen telephone in the list.

#### **Connection sharing**

Ref. 1742\_027\_008\_1

The system offers to connect the telephone with 3 profiles:

- "Telephone" (hands-free kit, telephone only),
- "Streaming" (streaming: wireless playing of the audio files on the telephone),
- "Mobile internet data".



#### Tip

Activation of the profile; **"Mobile internet data"** is obligatory for connected navigation having first activated sharing of this connection on your smartphone.



Select one or more profiles.

#### oĸ

Press "OK" to confirm.



#### Tip

Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

#### **Automatic reconnection**

Ref. 1742\_028\_002\_3



#### Tip

On return to the vehicle, if the last telephone connected is present again, it is automatically recognised and within around 30 seconds after switching on the ignition the pairing is done without any action on your part, (Bluetooth activated).

#### To modify the connection profile:



Press **Telephone** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Bluetooth connection" to display the list of paired devices.



Press the "details" button.



Select one or more profiles.

ΟK

Press "OK" to confirm.



#### **WARNING**

The ability of the system to connect to just one profile depends on the telephone.

All three profiles may connect by default.



#### **WARNING**

The available services depend on the network, SIM card, and the devices' Bluetooth compatibility. Consult your telephone's manual and your operator to find out which services are available to you.



#### Tip

The profiles compatible with the system are: HFP, OPP, PBAP, A2DP, AVRCP, MAP and PAN.

Go to the Brand's website for more information (compatibility, additional help, etc.).

#### Managing paired telephones

Ref. 1361\_032\_001\_4



#### Tin

This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press **Telephone** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Bluetooth connection" to display the list of paired devices.



Press on the name of the telephone chosen in the list to disconnect it.

Press again to connect it.

#### **Deleting a telephone**

Ref. 1361\_032\_002\_1



Select the basket at top right of the screen to display a basket alongside the telephone chosen.



Press the basket alongside the telephone chosen to delete it.

#### Receiving a call

Ref. 1743\_022\_001\_3

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted telephone button to accept an incoming call.

And



Make a long press



on the steering mounted telephone button to reject the call.

Or



Select "End call" on the touch screen.

#### Making a call

Ref. 1744\_040\_001\_1



#### **WARNING**

Using the telephone is not recommended while driving.

Park the vehicle.

Make the call using the steering mounted controls.

#### Calling a new number

Ref. 1744\_040\_002\_4



Press **Telephone** to display the primary page.



Enter the phone number using the digital keypad.



Press "Call" to start the call.

#### **Calling a contact**

Ref. 1744\_041\_001\_4



Press **Telephone** to display the primary page.



Or make a long press



on the steering mounted button.

Select "Contact".

Select the desired contact from the list offered.



Select "Call".

#### Calling a recently used number

Ref. 1744\_043\_001\_4



Press **Telephone** to display the primary page.

Or



Make a long press



on the steering mounted button.

Select "Calls".

Select the desired contact from the list offered.



#### Tip

It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.

#### **Managing contacts / entries**

Ref. 1865\_014\_002\_3



Press **Telephone** to display the primary page.

Select "Contact".



Select "Create" to add a new contact.

In the "Telephone" tab, enter the telephone numbers for the contact.

In the "Address" tab, enter the addresses for the contact.

In the "Email" tab, enter the email addresses for the contact.



#### Tip

The **"Email"** function allows email addresses to be entered for a contact, but the system is not able to send emails.

#### **Managing messages**

Ref. 1865\_015\_002\_3



Press **Telephone** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Messages" to display the list of messages.



Select the "All" or "Incoming" or "Sent" tab.



Select the detail of the message chosen in one of the lists.



Press "Answer" to send a quick message stored in the system.



Press "Call" to start the call.



Press "Play" to hear the message.



#### **WARNING**

Access to "**Messages**" depends on the compatibility of the smartphone and the integral system.

Depending on the smartphone, access to your messages or email may be slow.



#### Tip

The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used.

Check in the manual for your smartphone and with your service provider for the services available to you.

#### Managing quick messages

Ref. 1865\_020\_002\_3



Press **Telephone** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Quick messages" to display the list of messages.



Select the "Delayed" or "My arrival" or "Not available" or "Other" tab with the possibility of creating new messages.



Press "Create" to write a new message.



Select the message chosen in one of the lists.



Press "Transfer" to select the addressee(s).



Press "Play" to start playing the message.

#### Managing email

Ref. 1865\_016\_002\_3



Press **Telephone** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Email" to display the list of messages.



Select the "Incoming" or "Sent" or "Not read" tab.

Select the message chosen in one of the lists.



Press "Play" to start playing the message.



#### **WARNING**

Access to **"Email"** depends on the compatibility of the smartphone and the integral system.

#### Configuration

Ref. 1879\_002\_001\_2

#### **Audio settings**

Ref. 1880\_023\_002\_3



Press **Settings** to display the primary page.



Select "Audio settings".

Select "Ambience".

Or

"Balance"

Or

"Sound".

Or

"Voice".

Or

"Ringtone".



Press "OK" to save the settings.



#### **WARNING**

The sound balance (or spatialisation with the Arkamys<sup>©</sup> system) is audio processing that allows the quality of the sound to be adapted according to the number of passengers in the vehicle.

Available only with the front and rear speakers configuration.



## Tip

The audio settings **Ambience** (6 optional ambiences) and **Bass**, **Medium** and **Treble** are different and independent for each audio source.

Activate or Deactivate "Loudness".

The settings for "Balance" (All passengers, Driver and Front only) are common to all sources.

Activate or Deactivate "Touch tones", "Volume linked to speed" and "Auxiliary input".



#### Tip

Onboard audio: the Sound Staging of Arkamys<sup>©</sup> optimises the distribution of sound in the passenger compartment.

#### **Profile settings**

Ref. 1880\_024\_002\_3



#### **WARNING**

As a safety measure and because it requires the sustained attention of the driver, changes to settings must only be done with the **vehicle stationary**.



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Setting of the profiles".

Select "Profile 1" or "Profile 2" or "Profile 3" or "Common profile".



Press this button to enter a name for the profile using the virtual keypad.



Press "OK" to confirm.



Press this button to add a photograph to the profile.



Insert a USB memory stick containing the photograph in the USB port.

Select the photograph.

#### ΟK

Press "OK" to accept the transfer of the photograph.

#### oĸ

Press "OK" again to save the settings.



#### Tip

The framing for the photograph is square; the system reshapes the original photograph if in another format.

#### 0.00

Press this button to initialise the profile selected.



#### **WARNING**

Initialisation of the profile selected activates the English language by default.

Select a "Profile" (1 or 2 or 3) to associate the "Audio settings" with it.



Select "Audio settings".

Select "Ambience".

Or

"Balance"

Or

"Sound".

Or

"Voice".

Or

"Ringtone".

oĸ

Press "OK" to save the settings.

#### **Modifying system settings**

Ref. 1745\_026\_002\_3



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Screen configuration".

Select "Animation".



Activate or deactivate: "Automatic scrolling".

Select "Brightness".

....

Move the cursor to adjust the brightness of the screen and/or of the instrument panel.



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "System settings".

Select "Units" to change the units of distance, fuel consumption and temperature.

Select "Factory settings" to return to the initial settings.



#### **WARNING**

Resetting the system to "Factory Settings" activates English by default, as well as Fahrenheit degrees, and turns off daylight saving (summer) time.

Select "System info" to display the versions of the different modules installed in the system.

#### Select the language

Ref. 1880\_025\_001\_4



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Languages" to change the language.

#### **Setting the date**

Ref. 1745\_027\_002\_3



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Set time-date".

Select "Date".



Press this button to define the date.



Press "OK" to confirm.



Select the display format of the date.



Tip

Adjustment of the time and date is only available if "GPS synchronisation" is deactivated.

#### **Setting the time**

Ref. 1745\_029\_002\_3



Press **Settings** to display the primary page.

Press the "OPTIONS" button to go to the secondary page.



Select "Set time-date".

Select "Time".



Press this button to adjust the time using the virtual keypad.

oĸ

Press "OK" to confirm.



Press this button to define the time zone.

Select the display format for the time (12h / 24h).

Activate or deactivate summer time (+1 hour).

Activate or deactivate synchronisation with GPS (UTC).

oĸ

Press "OK" to confirm.



#### Tip

The system does not automatically manage the change between winter and summer time (depending on the country of sale).

#### **Colour schemes**

Ref. 1745\_028\_001\_3

Depending on equipment / Depending on version.



#### **WARNING**

As a safety measure, the procedure for changing the colour scheme is only possible when the **vehicle is stationary**.



Press **Settings** to display the primary page.



Select "Colour schemes".



Select a colour scheme in the list then press "OK" to confirm.



#### Tip

Every time the colour scheme is changed, the system restarts, temporarily displaying a black screen

## Frequently asked questions

Ref. 1847\_001\_001\_2

Ref. 1507\_051\_001\_3

The following information groups together the answers to the most frequently asked questions concerning your system.

#### **Navigation**

Ref. 1507\_051\_002\_2

QUESTION	RESPONSE	SOLUTION
The route calculation is not successful.	The guidance criteria may be in conflict with the current location (exclusion of toll roads on a toll road).	Check the route settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The audible warning of "Danger zones" does not work.	The audible warning is not active or the volume is too low.	Activate the audible warning in the "Navigation" menu and check the voice volume in the audio settings.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select setting for the "Traffic info " function in the list of route settings (Without, Manual or Automatic).
I receive a "Danger zone" alert which is not on my route.	Other than guidance, the system announces all "Danger zones" positioned in a cone located in front of the vehicle. It may provide an alert for "Danger zones" located on nearby or parallel roads.	Zoom in on the map to see the exact position of the "Danger zone". Select "On the route" to no longer receive alerts other than navigation instructions or to reduce the time for the announcement.

QUESTION	RESPONSE	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	In certain countries, only major routes (motorways, etc.) are listed for the traffic information.	This is perfectly normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.
	Depending on the geographical environment (tunnel, etc.) or the weather, the conditions of reception of the GPS signal may vary.	This behaviour is normal. The system is dependent on the GPS signal reception conditions.
My navigation is no longer connected.	During start-up and in certain geographical areas, the connection may be unavailable.	Check that the connected services are activated (settings, contract).

## Radio

Ref. 1507\_051\_003\_1

QUESTION	RESPONSE	SOLUTION
The reception quality of the tuned radio station gradually deteriorates or the stored stations are not working (no sound, 87.5 MHz is displayed, etc.).	The vehicle is too far from the transmitter of the station or no transmitter is present in the geographical area.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks, etc.) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a dealer.
I cannot find some radio stations in the list of stations received.  The name of the radio station changes.	The station is not received or has changed its name in the list.  Some radio stations send other information in place of their name (the title of the song for example).  The system interprets these details as the station name.	Press on the "Update list" button in the "Radio stations" secondary menu.

## Media

Ref. 1507\_051\_004\_1

QUESTION	RESPONSE	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
The CD is ejected every time or is not played.	The CD is upside down, cannot be read, does not contain audio files or contains audio files of a format not recognised by the audio system.	Check that the CD is inserted in the player the right way up.  Check the condition of the CD: the CD cannot be played if it is too badly damaged.
	The CD has been recorded in a format that is not compatible with the player (udf, etc.).	Check the content in the case of a recorded CD: consult the advice in the "AUDIO" section.
	The CD is protected by an anti-pirating system not recognised by the audio system.	The audio system CD does not read DVDs.
	by the duale systems	Due to poor quality, certain burned CDs will not be read by the audio system.
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	Upon insertion of a new key, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This is perfectly normal.
The CD sound is of poor quality.	The CD used in scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambience) are unsuitable.	Return bass and treble settings to 0, without selecting an ambience.
Some information characters in the currently playing media are not displayed correctly.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playback of streaming files does not start.	The connected device does not automatically launch playback.	Start playback from the device.
Names of tracks and playing time are not displayed on the audio streaming screen.	The Bluetooth profile does not allow the transfer of this information.	

## **Telephone**

Ref. 1507\_051\_005\_1

QUESTION	RESPONSE	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the te-	Check that your telephone has Bluetooth switched on.
	lephone may not be visible.	Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at the Brand's website (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The sound depends on both the system and the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	Ambient noise affects the quality of the telephone call.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, etc.).
Some contacts are duplicated in the list.	The options for synchronising contacts are synchronising the contacts on the SIM card, the contacts on the telephone, or both. When both synchronisations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
The contacts are listed in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the telephone directory display settings.
The system does not receive SMS.	The Bluetooth mode does not permit sending SMS text messages to the system.	

## **Settings**

Ref. 1507\_051\_006\_1

QUESTION	RESPONSE	E SOLUTION	
When changing the setting of treble and bass, the equalizer setting is deselected.  When changing the equalizer	The selection of an equalizer setting imposes the settings for treble and bass and vice versa.	Modify the treble and bass or equalizer settings to obtain the desired musical ambience.	
setting, the treble and bass settings are reset.			
When changing the balance setting, distribution is deselected.	The selection of a distribution setting imposes the balance settings and vice versa.	Modify the balance setting or the distribution setting to obtain the desired sound quality.	

QUESTION	RESPONSE	SOLUTION
When changing the distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources.	To allow for optimal listening quality, the audio settings can be tailored to different sound sources, which can generate audible differences when changing source.	Check that the audio settings are adapted to the sources listened to. It is recommended that the audio settings (Bass:, Treble:, Balance) be adjusted to the middle position, select the "None" musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
When the engine is off, the system stops after several minutes of use.	When the engine is switched off, the system's operating time depends on the state of charge of the battery.	Start then vehicle's engine to increase the charge of the battery.
	In normal off state, the system automatically goes into energy economy mode to maintain an adequate charge in the battery.	
The date and time cannot be set.	Setting of the date and time is only available if the synchronisation with the satellites is deactivated.	Settings menu / Options / Time- Date setting. Select the "Time" tab and deactivate the "GPS synchronisation" (UTC).

# Annex Regulatory Notices

Type: Car Multimedia System

Model: NAC EUR wave 3

**Manufacturer:** Continental Automotive Czech Republic, s.r.o.

## Europe

## 2014/53/EU Directive regulatory notices

This device has been evaluated against the essential requirements of the 2014/53/EU Directive.

Country	Directive 2014/53/EU  SIMPLIFIED EU DECLARATION OF CONFORMITY The simplified EU declaration of conformity referred to in Article 10(9) shabe provided as follows:		
Austria	see German		
Belgium	see Dutch// French / Germ	an	
Bulgaria	2014/53/ЕС. Цялостният т	декларира, че този тип радиосъоръ екст на ЕС декларацията за съотве I-homologation.com/psa	жение NAC EUR wave 3 е в съответствие с Директива тствие може да се намери на следния интернет адрес:
	Честотна лента: AM band: FM band:	LF Band MF Band VHF Band II	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz 87.5MHz to 108MHz
	DAB band:	VHF Band III	174MHz to 240MHz
		отна лента: симална мощност на предаване:	[2400 – 2483.5] MHz +3.047 dBm
	Макс	отна лента: симална мощност на предаване:	[2400 – 2483.5] MHz +16.635 dBm
Croatian	izjave o sukladnosti dostupa	da je radijska oprema tipa NAC EUR an je na sljedećoj internetskoj adresi: I-homologation.com/psa	wave 3 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU
	Frekvencijski pojas: AM band:	LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz
	FM band:	VHF Band II	87.5MHz to 108MHz
	DAB band:	VHF Band III	174MHz to 240MHz
		vencijski pojas: simalna snaga odašiljanja:	[2400 – 2483.5] MHz +3.047 dBm
	Mak	vencijski pojas: simalna snaga odašiljanja:	[2400 – 2483.5] MHz +16.635 dBm
Cyprus	see Greek		

	Directive 2014/53/EU		
Country	SIMPLIFIED EU DEC	CLARATION OF CONFORMITY The	simplified EU declaration of conformity referred to in Article 10(9) shall
			rovided as follows:
Czech Republic	Tímto Continental prof	nlašuie. že tvp rádiového zařízení N	AC EUR wave 3 je v souladu se směrnicí 2014/53/EU. Úplné znění EU
		k dispozici na této internetové adres	
	http://contir	nental-homologation.com/psa	
	•	,	
	Kmitočtové pásmo: AM band:		
		LF Band	148.5kHz to 283.5kHz
	FM band:	MF Band	526.5kHz to 1606.5kHz
		VHF Band II	87.5MHz to 108MHz
	DAB band:		
		VHF Band III	174MHz to 240MHz
	Bluetooth v3.0+HS:		
		Kmitočtové pásmo:	[2400 – 2483.5] MHz
		Maximální vysílací výkon:	+3.047 dBm
	WiFi 802.11 bgn HT20		
		Kmitočtové pásmo: Maximální vysílací výkon:	[2400 – 2483.5] MHz +16.635 dBm
Denmark		inental, at radioudstyrstypen NAC E	UR wave 3 er i overensstemmelse med direktiv 2014/53/EU. EU-
	overensstemmelseser	klæringens fulde tekst kan findes på	følgende internetadresse:
	http://contin	nental-homologation.com/psa	
	Frekvensbånd:		
	AM band:		
		LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz
	FM band:		
		VHF Band II	87.5MHz to 108MHz
	DAB band:		474441 - 040441
		VHF Band III	174MHz to 240MHz
	Bluetooth v3.0+HS:		
		Frekvensbånd: Maksimal sendeeffekt:	[2400 – 2483.5] MHz +3.047 dBm
	W.E. 000 444 A.E.		
	WiFi 802.11 bgn HT20	Frekvensbånd:	[2400 – 2483.5] MHz
		Maksimal sendeeffekt:	+16.635 dBm
Estonia	Käesolevaga deklaree ELi vastavusdeklaratsi	rib Continental, et käesolev raadiose ooni täielik tekst on kättesaadav järg	eadme tüüp NAC EUR wave 3 vastab direktiivi 2014/53/EL nõuetele.
			, <del></del>
	http://contir	nental-homologation.com/psa	
	Sagedusriba:		
	AM band:	LF Band	148.5kHz to 283.5kHz
		MF Band	526.5kHz to 1606.5kHz
	FM band:	VHF Band II	87.5MHz to 108MHz
	DAB band:	VHF Band III	174MHz to 240MHz
		Jana III	.,
	Bluetooth v3.0+HS:	Sagedusriba:	[2400 – 2483.5] MHz
		Maksimaalne ülekandevõimsus:	+3.047 dBm
	WiFi 802.11 bgn HT20	1	
	7711 1 002.71 bgii 11120	Sagedusriba:	[2400 – 2483.5] MHz
		Maksimaalne ülekandevõimsus:	+16.635 dBm

		Directi	ve 2014/53/EU		
Country	SIMPLIFIED EU DEG		mplified EU declaration of conformity referred to in Article 10(9) shall		
		be prov	rided as follows:		
Finland			3 on direktiivin 2014/53/EU mukainen. EU-		
		·	aatavilla seuraavassa internetosoitteessa:		
	http://conti	nental-homologation.com/psa			
	Taajuusalue: AM band:				
		LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz		
	FM band:	VHF Band II	87.5MHz to 108MHz		
	DADhard		OF JUNE 12 TO TOOM 12		
	DAB band:	: VHF Band III	174MHz to 240MHz		
	Bluetooth v3.0+HS:				
		Taajuusalue: Maksimaalinen lähetysteho:	[2400 – 2483.5] MHz +3.047 dBm		
	WiFi 802.11 bgn HT20				
		Taajuusalue:	[2400 – 2483.5] MHz		
France		Maksimaalinen lähetysteho: +16.635 dBm  Le soussigné, Continental, déclare que l'équipement radioélectrique du type NAC EUR wave 3 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:			
	http://continental-homologation.com/psa				
	Bande de fréquences:				
	AM band:	LF Band	148.5kHz to 283.5kHz		
	FM band:	MF Band	526.5kHz to 1606.5kHz		
		VHF Band II	87.5MHz to 108MHz		
	DAB band:	VHF Band III	174MHz to 240MHz		
	Bluetooth v3.0+HS:	5 1 1 4 4	70.000 O.000 TO MIL		
		Bande de fréquences: Puissance d'émission maximale:	[2400 – 2483.5] MHz +3.047 dBm		
	WiFi 802.11 bgn HT20	) Bande de fréquences:	[2400 – 2483.5] MHz		
Cormony	Lliamait andiänt Cantina	Puissance d'émission maximale:	+16.635 dBm  UR wave 3 der Richtlinie 2014/53/EU entspricht. Der vollständige		
Germany		tätserklärung ist unter der folgenden Inf			
	http://conti	nental-homologation.com/psa			
	Frequenzband: AM band:				
	Aivi balid.	LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz		
	FM band:				
		VHF Band II	87.5MHz to 108MHz		
	DAB band:	: VHF Band III	174MHz to 240MHz		
	Bluetooth v3.0+HS:				
		Frequenzband: Maximale Sendeleistung:	[2400 – 2483.5] MHz +3.047 dBm		
	WiFi 802.11 bgn HT20		[0400 0400 F] MI		
		Frequenzband: Maximale Sendeleistung:	[2400 – 2483.5] MHz +16.635 dBm		

		Direct	tive 2014/53/EU	
Country				
	SIMPLIFIED EU DECL		implified EU declaration of conformity referred to in Article 10(9) shall vided as follows:	
Greece			σμός NAC EUR wave 3 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες	
	κείμενο της δήλωσης συ	μμόρφωσης ΕΕ διατίθεται στην ακόλ	λουθη ιστοσελίδα στο διαδίκτυο:	
	http://contine	ental-homologation.com/psa		
	Ζώνη συχνοτήτων: AM band:			
	Aivi baliu.	LF Band	148.5kHz to 283.5kHz	
	FM band:	MF Band	526.5kHz to 1606.5kHz	
		VHF Band II	87.5MHz to 108MHz	
	DAB band:	VHF Band III	174MHz to 240MHz	
	Divtth 2 0 . 1 10 .	VIII Balla III	17 - 1811 12 10 2-1011 12	
	Bluetooth v3.0+HS:	ώνη συχνοτήτων:	[2400 – 2483.5] MHz	
	N	θέγιστη ίσχύς εκπομπής:	+3.047 dBm	
	WiFi 802.11 bgn HT20 Z	ώνη συχνοτήτων:	[2400 – 2483.5] MHz	
Hungary	N	Λέγιστη ισχύς εκπομπής:	+16.635 dBm erendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi	
Hullgary		je elérhető a következő internetes cí		
	http://contine	http://continental-homologation.com/psa		
	Frekvencia-szalag:			
	AM band:	LF Band	148.5kHz to 283.5kHz	
	ENA harada	MF Band	526.5kHz to 1606.5kHz	
	FM band:	VHF Band II	87.5MHz to 108MHz	
	DAB band:			
		VHF Band III	174MHz to 240MHz	
	Bluetooth v3.0+HS:	rekvencia-szalag:	[2400 – 2483.5] MHz	
		laximális jeladási teljesítmény:	+3.047 dBm	
	WiFi 802.11 bgn HT20			
		rekvencia-szalag: /laximális jeladási teljesítmény:	[2400 – 2483.5] MHz +16.635 dBm	
Ireland	Hereby, Continental dec		NAC EUR wave 3 is in compliance with Directive 2014/53/EU. The full lowing internet address:	
		•	and the same same same same same same same sam	
	•	ntal-homologation.com/psa		
	Frequency bands: AM band:			
		LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz	
	FM band:	VHF Band II	87.5MHz to 108MHz	
	DAP bonds	2010 11	2	
	DAB band:	VHF Band III	174MHz to 240MHz	
	Bluetooth v3.0+HS:			
		requency band: faximum transmitter power:	[2400 – 2483.5] MHz +3.047 dBm	
	·			
		requency band:	[2400 – 2483.5] MHz	
	l N	Maximum transmitter power:	+16.635 dBm	

		Direc	ctive 2014/53/EU
Country	SIMPLIFIED EU DECLARATION OF CONFORMITY The simplified EU declaration of conformity referred to in Ar be provided as follows:		
Italy			atura radio NAC EUR wave 3 è conforme alla direttiva 2014/53/UE. Il pribile al seguente indirizzo Internet:
	·	l-homologation.com/psa	
	Banda di freguenza:		
	AM band:	LF Band	148.5kHz to 283.5kHz
	FM band:	MF Band	526.5kHz to 1606.5kHz
	i W Danu.	VHF Band II	87.5MHz to 108MHz
	DAB band:	VHF Band III	174MHz to 240MHz
		da di frequenza: nza di trasmissione massima:	[2400 – 2483.5] MHz +3.047 dBm
		da di frequenza: nza di trasmissione massima:	[2400 – 2483.5] MHz +16.635 dBm
Latvia		a radioiekārta NAC EUR wave	3 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts
	http://continental	l-homologation.com/psa	
	Frekvenču josla: AM band:	LF Band	148.5kHz to 283.5kHz
	FM band:	MF Band  VHF Band II	526.5kHz to 1606.5kHz 87.5MHz to 108MHz
	DAB band:	VHF Band III	174MHz to 240MHz
		venču josla: simālā raidīšanas jauda:	[2400 – 2483.5] MHz +3.047 dBm
		venču josla:	[2400 – 2483.5] MHz
Lithuania	Aš, Continental, patvirtinu, k deklaracijos tekstas prieinar		+16.635 dBm  UR wave 3 atitinka Direktyvą 2014/53/ES. Visas ES atitikties
	http://continental	l-homologation.com/psa	
	Dažnių juosta:		
	AM band:	LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz
	FM band:	WF Band II	87.5MHz to 108MHz
	DAB band:	VHF Band III	174MHz to 240MHz
	Bluetooth v3.0+HS:		
	Dažr	nių juosta: simali siųstuvo galia:	[2400 – 2483.5] MHz +3.047 dBm
		nių juosta: simali siųstuvo galia:	[2400 – 2483.5] MHz +16.635 dBm
Luxembourg	see German		

		Direction	2014/52/51			
Country	Directive 2014/53/EU  SIMPLIFIED EU DECLARATION OF CONFORMITY The simplified EU declaration of conformity referred to in Article 10 be provided as follows:					
Malta	B'dan, Continental, niddikjara li dan it-tip ta' tagħmir tar-radju NAC EUR wave 3 huwa konformi mad-Direttiva 2014/53/UE. kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ģej:					
	http://continental-homologation.com/psa  Medda ta' frekwenza: AM band:					
	Alvi bariu.	LF Band	148.5kHz to 283.5kHz			
	FM band:	MF Band	526.5kHz to 1606.5kHz			
		VHF Band II	87.5MHz to 108MHz			
	DAB band:	VHF Band III	174MHz to 240MHz			
	B	VIII Ballu III	17411112 (0 240111112			
		Medda ta' frekwenza:	[2400 – 2483.5] MHz			
		Enerģija Massima tat-Trasmissjoni:	+3.047 dBm			
	WiFi 802.11 bgn HT20	Medda ta' frekwenza:	[2400 – 2483.5] MHz			
Netherlands		Enerģija Massima tat-Trasmissjoni:	+16.635 dBm			
Netherlands		Hierbij verklaar ik, Continental, dat het type radioapparatuur NAC EUR wave 3 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:				
	http://contin	ental-homologation.com/psa				
	Frequentieband:					
	AM band:	LF Band	148.5kHz to 283.5kHz			
	FM band:	MF Band	526.5kHz to 1606.5kHz			
	FIVI Dariu.	VHF Band II	87.5MHz to 108MHz			
	DAB band:					
		VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:	Frequentieband:	[2400 – 2483.5] MHz			
		Maximaal zendvermogen:	+3.047 dBm			
	WiFi 802.11 bgn HT20		70.400 0.400 T. N. I.			
		Frequentieband: Maximaal zendvermogen:	[2400 – 2483.5] MHz +16.635 dBm			
Poland	Continental niniejszym oświadcza, że typ urządzenia radiowego NAC EUR wave 3 jest zgodny z dyrektywą 2014/53/UE. P tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:		go NAC EUR wave 3 jest zgodny z dyrektywą 2014/53/UE. Pełny n adresem internetowym:			
		ental-homologation.com/psa	•			
	Pasmo częstotliwości:	ona nonologationicom/pea				
	AM band:	155				
		LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz			
	FM band:	VHF Band II	87.5MHz to 108MHz			
	DAB band:					
	DAD Balla.	VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:		70.00 0.00 PM.			
		Pasmo częstotliwości: Maksymalna moc nadawania:	[2400 – 2483.5] MHz +3.047 dBm			
	WiFi 802.11 bgn HT20					
	_	Pasmo częstotliwości: Maksymalna moc nadawania:	[2400 – 2483.5] MHz +16.635 dBm			
		wansymama muu nauawania:	+ 10.000 UDIII			

	Directive 2014/53/EU					
Country	SIMPLIFIED EU DECLARATION OF CONFORMITY The simplified EU declaration of conformity referred to in Article 10(9 be provided as follows:					
Portugal	O(a) abaixo assinado(a) Continental declara que o presente tipo de equipamento de rádio NAC EUR wave 3 está					
	conformidade com a I de Internet:	conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:				
	http://conti	//continental-homologation.com/psa				
	Faixa de frequência: AM band:					
		LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz			
	FM band:	VHF Band II	87.5MHz to 108MHz			
	DAB band	: VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:					
		Faixa de frequência: Potência máxima de transmissão:	[2400 – 2483.5] MHz +3.047 dBm			
	WiFi 802.11 bgn HT2	Faixa de frequência:	[2400 – 2483.5] MHz			
Romania		Potência máxima de transmissão: +16.635 dBm  Prin prezenta, Continental declară că tipul de echipamente radio NAC EUR wave 3 este în conformitate cu Directiva 2014/53/UE.				
		Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:				
		http://continental-homologation.com/psa				
	Bandă de frecvențe: AM band:					
	544	LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz			
	FM band:	VHF Band II	87.5MHz to 108MHz			
	DAB band	: VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:					
		Bandă de frecvențe: Putere maximă de emisie:	[2400 – 2483.5] MHz +3.047 dBm			
	WiFi 802.11 bgn HT2	Bandă de frecvențe:	[2400 – 2483.5] MHz			
Slovak Republic		Putere maximă de emisie: +16.635 dBm  Continental týmto vyhlasuje, že rádiové zariadenie typu NAC EUR wave 3 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:				
	http://conti	nental-homologation.com/psa				
	Frekvenčné pásmo: AM band:					
		LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz			
	FM band:	VHF Band II	87.5MHz to 108MHz			
	DAB band	: VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:					
		Frekvenčné pásmo: Maximálny vysielací výkon:	[2400 – 2483.5] MHz +3.047 dBm			
	WiFi 802.11 bgn HT2		70.00			
		Frekvenčné pásmo: Maximálny vysielací výkon:	[2400 – 2483.5] MHz +16.635 dBm			

Country	Directive 2014/53/EU					
Country	SIMPLIFIED EU DECLARATION OF CONFORMITY The simplified EU declaration of conformity referred to in Article be provided as follows:					
		be prov	idea as follows.			
Slovenia	Continental potrjuje, da je tip radijske opreme NAC EUR wave 3 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave					
Ciovorna	skladnosti je na voljo na naslednjem spletnem naslovu:					
	http://conti	ttp://continental-homologation.com/psa				
	Frekvenčni pas:	ni pas:				
	AM band:	LF Band	148.5kHz to 283.5kHz			
	FM band:	MF Band	526.5kHz to 1606.5kHz			
	Fivi barid.	VHF Band II	87.5MHz to 108MHz			
	DAB band					
		VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:	Frekvenčni pas:	[2400 – 2483.5] MHz			
		Maksimalna moč oddajanja:	+3.047 dBm			
	WiFi 802.11 bgn HT20					
		Frekvenčni pas: Maksimalna moč oddajanja:	[2400 – 2483.5] MHz +16.635 dBm			
Spain		Por la presente, Continental declara que el tipo de equipo radioeléctrico NAC EUR wave 3 es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:				
	http://conti	nental-homologation.com/psa				
	Banda de frecuencias					
	AM band:	LF Band	148.5kHz to 283.5kHz			
		MF Band	526.5kHz to 1606.5kHz			
	FM band:	VHF Band II	87.5MHz to 108MHz			
	DAB band					
		VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:	Danda da fraguencias	[0400			
		Banda de frecuencias: Máxima potencia de transmisión:	[2400 – 2483.5] MHz +3.047 dBm			
	WiFi 802.11 bgn HT20	)				
		Banda de frecuencias: Máxima potencia de transmisión:	[2400 – 2483.5] MHz +16.635 dBm			
Sweden	Härmed försäkrar Continental att denna typ av radioutrustning NAC EUR wave 3 överensstämmer med direktiv 2014/53// Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:		g NAC EUR wave 3 överensstämmer med direktiv 2014/53/EU.			
			as initio pa toljando mobbadioso.			
	http://continental-homologation.com/psa					
	Frekvensband:					
	AM band:	LF Band	148.5kHz to 283.5kHz			
	FM band:	MF Band	526.5kHz to 1606.5kHz			
	i w ballu.	VHF Band II	87.5MHz to 108MHz			
	DAB band					
		VHF Band III	174MHz to 240MHz			
	Bluetooth v3.0+HS:  Frekvensband: [2400 – 2483.5] MHz					
		Maximal sändningseffekt:	+3.047 dBm			
	WiFi 802.11 bgn HT20		[0.400			
		Frekvensband: Maximal sändningseffekt:	[2400 – 2483.5] MHz +16.635 dBm			

Country	Directive 2014/53/EU  SIMPLIFIED EU DECLARATION OF CONFORMITY The simplified EU declaration of conformity referred to in Article 10(S be provided as follows:		
United Kingdom	text of the EU declaration of	es that the radio equipment type of conformity is available at the fool al-homologation.com/psa	NAC EUR wave 3 is in compliance with Directive 2014/53/EU. Illowing internet address:
	Frequency bands: AM band:		
	FM band:	LF Band MF Band	148.5kHz to 283.5kHz 526.5kHz to 1606.5kHz
		VHF Band II	87.5MHz to 108MHz
	DAB band:	VHF Band III	174MHz to 240MHz
		quency band: imum transmitter power:	[2400 – 2483.5] MHz +3.047 dBm
		quency band: imum transmitter power:	[2400 – 2483.5] MHz +16.635 dBm

The conformity assessment procedure referred to in Article 17 and detailed in Annex III of Directive 2014/53/EU has been followed with the involvement of the following Notified Body:

#### **DEKRA Testing and Certification, S.A.U.**

Parque Tecnologico de Andalucia Calle Severo Ochoa, 2 29590 CAMPANILLAS (MALAGA)

Country: Spain

Notified Body number: 1909

Thus, the following marking is included in the product (**Label on top**):



There is no restriction for the commercialization of this device in all the countries of the European Union.

#### > Specific instructions of installation and proper use of the equipment

This Multimedia System Equipment must be fixed in a car dashboard.

This Equipment is intended to be installed by service persons or qualified operators in a restricted access location that can only accessed by using a tool.

Demounting or disassembly of the NAC Wave 3 from the car is only allowed by qualified and trained personnel.

The external devices and accessories connected to the equipment shall comply its product standard in order to prevent fire risks.

The equipment is suitable for direct current only:



Voltage rated: 12V (Volts)

Maximum Current: 15A (Amperes)

Direct Current symbol:

#### Fuse characteristics:

MINI AUTO FUSE W Yellow 20:

Voltage rated: 32V (Volts) Current rated: 20A (Amperes)

600	0.30 seconds	0.100 seconds
350	0.080 seconds	0.250 seconds
200	0.15 seconds	5 seconds
135	0.75 seconds	600 seconds
110	100 hours	-
0/ of nating	Minimum	Maximum
% of rating	Blow Time	

List of countries within the EU or geographical zones where it can be used.

There is no restriction for the commercialization of this device in all the countries of the European Union:

Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, United Kingdom,

Information about the license that apply to it.

There is no specific license.

Restrictions or possible additional restrictions when trying to achieve the authorisation of use of the equipment.

There is no specific restriction to achieve the authorisation of use of the equipment.

## USA – Federal Communications Commission (FCC)

FCC ID: ZFW-NACEUR3

#### 1. Modification Statement

"Continental Automotive Rambouillet France S.A.S." has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

#### 2. Interference statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

#### 3. Wireless notice:

This device complies with FCCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all the persons must not be co-located or operating in conjunction with any other antenna or transmitter.

## 4. FCC Class B digital device or peripheral notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.