

# Content

<b>1</b>	<b>General Information.....</b>	<b>3</b>
1.1	Profile.....	3
1.2	Safety warning and Attentions .....	3
<b>2</b>	<b>Your phone.....</b>	<b>5</b>
2.1	Phone overview.....	5
2.2	Functions of Keys .....	6
<b>3</b>	<b>Getting started.....</b>	<b>8</b>
3.1	Installing the SIM Cards and the Battery .....	8
3.2	Installing SD Card.....	8
3.3	Charging the Battery .....	9
3.4	Linking to the Networks and devices.....	11
3.5	Using the touch screen .....	12
3.6	Using the onscreen keypad .....	13
3.7	Dialing Calls .....	14
<b>4</b>	<b>Using the Menus .....</b>	<b>15</b>

4.1	Browser.....	15
4.2	Calculator.....	18
4.3	Calendar.....	18
4.4	Camera.....	20
4.5	Clock.....	21
4.6	Contacts.....	21
4.7	Email.....	23
4.8	ES File Explorer.....	26
4.9	Messaging.....	26
4.10	Mobile TV.....	27
4.11	Music .....	28
4.12	Settings.....	29
<b>5</b>	<b>Appendix.....</b>	<b>33</b>

## General Information

### 1.1 Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

### 1.2 Safety warning and Attentions

#### **Safety warning**

##### **› ROAD SAFETY COMES FIRST**

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while driving. In some countries, dialing or receiving calls while driving is illegal!

##### **› SWITCH OFF IN AIRCRAFT**

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky. Please make sure that your mobile phone is powered off in flight.

##### **› SWITCH OFF BEFORE ENTERING RISKY AREAS**

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

## ➤ **OBSERVE ALL SPECIAL REGULATIONS**

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

## ➤ **INTERFERENCE**

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

## ➤ **QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violates the warranty rules.

## ➤ **ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries.

## ➤ **USE SENSIBLY**

Use only in a normal and proper manner.

## ➤ **EMERGENCY CALLS**

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

*Note: Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications*

such as first aid. Please consult the local network operator.

## Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

- Keep the mobile phone and all its fittings beyond children's reach.
- Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.
- Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

## Your phone

### 1.3 Phone overview

## 1.4 Functions of Keys

The mobile phone provides the following keys:

- ◆ Dial key

In standby interface, press it can access dial interface, there, you can input a phone number and press this key to originate a call; or press it to receive an incoming call.

- ◆ End key

Press it to end a call being dialed or end an ongoing call.

- ◆ OK key

Press it to confirm a selection.

- ◆ Power key

Power key situates at the top of the phone. While using the phone, you can press this key to lock screen; if you press and hold this key, a phone-options dialog would pop out. Here, you can select to adjust the phone to silent mode/airplane mode or to power off it.

- ◆ Home, Option, Back and search key

They are four keys which situate just below the screen.

➤ Home key: press it to open home screen. If you're viewing the left or right extended Home screen, press it can enter the central screen; press and hold this key can open the most recently used applications screen;

➤ Menu key: press this key to access options of a selected functions;

➤ Back key: press this key to return to the previous screen;

➤ Search key: On the Home screen, press it can open Google search for searching your phone and the web. In many applications, press it can open a search box for searching within the application.

◆ Direction key

Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate.

◆ Delete key

Press it to delete a character before cursor.

◆ Enter key

In the edit interface, you can press this key to switch to another line.

◆ Space key

Press it in the edit interface to get a blank.

◆ Alt. key

In edit interface, press it to input an alternative symbol or number.

◆ Caps key

In edit interface, press it can switch between upper case and lower case.

◆ Shift key

In edit interface, you can press it to switch between input methods;

◆ **Number keys and letters**

Press number keys 0 through 9 in input or edit state to input numbers and characters; Press letter keys A through Z in input or edit state to input letters and characters;

### 1.5 Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

*After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.*

*Exercise caution when operating an SIM card, as friction or bending will damage the SIM card.*

*Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.*

#### Installation

- ◆ Hold the power key for a while to power off the mobile phone
- ◆ Push the back cover above the battery and remove it.
- ◆ Pull the left battery buckle outward and then lift the battery away.
- ◆ Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing download, till the SIM card cannot be further pushed in.
- ◆ With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

### 1.6 Installing SD Card

The SD card is a pluggable mobile storage card inside the mobile phone.

To install the SD card, open its latch, place its indented side downward, insert the card into the card slot, and then close the latch.

To remove the SD card, open its latch and slightly take the card out. And then close the latch.

Note:

*1. The mobile phone cannot automatically identify the SD card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the SD card.*

*2. The SD card is a miniature object. Keep it out of the reach of children for fear that children swallow it!*

## **1.7 Charging the Battery**

- ◆ Your mobile phone can monitor and display the battery state.
- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low".

Using a travel adapter:

- ◆ Install the battery into the mobile phone before charging the battery.
- ◆ Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- ◆ Insert the plug of the travel charger to an appropriate power outlet.
- ◆ During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.

- ◆ The battery icon does no longer flicker when the charging process ends.

Note:

*Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems. Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.*

### **Optimizing battery life**

You can extend your battery's life between charges by turning off features that you don't need. You can also monitor how applications and system resources consume battery power.

To guarantee the optimal performance of your battery, please stick to the following rules:

- ◆ Turn off radios that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPRS, use the Setting application to turn them off.
- ◆ Turn down screen brightness and set a shorter screen timeout.
- ◆ If you don't need them, turn off automatic syncing for Gmail, Calendar, Contacts, and other applications.

*Note: On the Home screen, press Menu icon and touch Settings > About phone > Battery use. The Battery Use screen lists the applications that have been using the battery, from greatest to least battery use. The top of the screen displays the time since you were last connected to a charger or, if you're currently connected to one, how long you were running on battery power before you connected to a charger. Then each application or service that used battery power during that time is displayed, in order of the amount of power they used. Touch an application in the Battery Use screen to learn details about its power consumption. Different applications offer different kinds of information.*

## 1.8 Linking to the Networks and devices

Your phone can connect to a variety of networks and devices, including mobile networks for voice and data transmission, Wi-Fi data networks, and Bluetooth devices, such as headsets. You can also connect your phone to a computer, to transfer files from your phone's SD card and share your phone's mobile data connection via USB.

### Connecting to mobile networks

When you assemble your phone with a SIM card, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

### Connecting to Wi-Fi networks

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Touch Settings>Wireless & networks > Wi-Fi settings. Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

*Note: If the phone finds a network that you connected to previously, it connects to it.*

Touch a network to connect to it. If the network is open, you are prompted to confirm that you want to connect to that network by touching Connect. If the network is secured, you're prompted to enter a password or other credentials.

### Connecting to Bluetooth devices

Bluetooth is a short-range wireless communications technology that devices can use to exchange

information over a distance of about 8 meters. The most common Bluetooth devices are headphones for making calls or listening to music, hands-free kits for cars, and other portable devices, including laptops and cell phones.

Touch Settings>Wireless & networks > Bluetooth. Check Bluetooth to turn it on.

You must pair your phone with a device before you can connect to it. Once you pair your phone with a device, they stay paired unless you unpair them.

Your phone scans for and displays the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, make it discoverable.

### **Connecting to a computer via USB**

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone's SD card and the computer.

#### **1.9 Using the touch screen**

Slide your finger left or right across the Home screen. These extensions to the Home screen provide more space for widgets, shortcuts, and other items. Small dots at the lower left and right indicate which screen you're viewing.

The main way to control Android features is by using your finger to manipulate icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen. You can also change the screen's orientation.

##### **Touch**

To act on items on the screen, such as application and settings icons, to type letters and symbols using

the onscreen keyboard, or to press onscreen buttons, you simply touch them with your finger.

### **Touch & hold**

Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a menu for customizing the Home screen, you touch an empty area on the Home screen until the menu opens.

### **Drag**

Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position.

### **Swipe or slide**

To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you slide the screen up or down to scroll a list.

## **1.10 Using the onscreen keypad**

You enter text using the onscreen keyboard. Some applications open the keyboard automatically. In others, you touch a text field where you want to enter text to open the keyboard. You can also enter text by speaking instead of by typing.

### **To enter text**

Touch a text field, and the onscreen keyboard opens. Some applications open the keyboard automatically. In others, you touch a text field where you want to enter text to open the keyboard.

### **Touch the keys on the keyboard to type.**

The characters you've entered appear in a strip above the keyboard, with suggestions for the word you

are typing below. Press the left or right arrow in the strip to view more suggestions.

**Press space or a punctuation mark to enter the green suggested word.**

**Use the Delete key to erase characters to the left of the cursor.**

**After finishing typing, press Back to close the keyboard.**

## 1.11 Dialing Calls

In the standby interface, press number keys to input the area code and the telephone number, and then press the Dial key to dial a call. To end the call, press the End key.

### ◆ Dialing a call to a number in the contacts

Touch the Phone icon or the phone application icon on the Home screen, then select the Contacts tab. Swipe or slide upward/downward to pick out the target contact. Then you can touch the dial icon to originate a call.

### ◆ Dialing a call to a number in call log

Touch the Phone icon or the phone application icon on the Home screen, then select the call log tab. Swipe or slide upward/downward to pick out the target contact. Then you can touch the dial icon to originate a call.

### ◆ Answering incoming calls

Press the Dial key answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the End key.

### ◆ Managing multiple calls

If you accept a new call when you're already on a call, you can touch the swap key to switch between

the current calls.

#### ◆ **Using options during a conversation**

During a conversation, you can place a call on hold, mute the microphone during a call, turn on or off the speaker, access the dialpad screen, end a call or record a conversation.

## Using the Menus

### 1.12 Browser

You can use Browser to view web pages and search for information on the web.

When you open Browser, the last webpage you were viewing is displayed. If you have not used Browser recently, your home page opens. The web address (URL) of the current page is displayed at the top of the window.

#### **To go to a webpage or search the web**

Touch the URL box at the top of the Browser screen. Enter the address (URL) of a webpage. Or enter terms you want to search for. As you enter text, your web search engine makes suggestions of web pages and queries.

#### **To refresh the current page**

Press Menu key and an option interface appears, then you can touch **Refresh** to update the current web page.

#### **To zoom in or out on a webpage**

You may not be able to zoom in or out on webpage designed for mobile devices. Slide your finger slightly on the screen to reveal the Zoom control. Touch the plus or minus side of the Zoom control to zoom in or out.

### **To find text on a webpage**

Press Menu key and touch More > Find on page. Enter the text you're looking for. As you type, the first word with matching characters is highlighted on the screen, and subsequent matches are boxed. Touch the left or right arrow to scroll to and highlight the previous or next matching word.

### **Copy text from webpage**

Open a webpage and scroll to the beginning of the text you want to copy, press Menu key and touch More > Select text. Use your finger to drag across the text you want to copy. The text you selected is copied to the clipboard.

### **Navigate among webpage**

You can open links on a webpage, navigate back and forward, and review your browsing history, just as in any web browser.

To open a link: Touch a link to open it. Links that you touch are highlighted in orange until the webpage they refer to opens in the window.

To go back and forward among the pages you've opened: Press back key or menu key>forward to back or forward among pages.

To view your Browser history: As you browse the web, Browser keeps track of the pages you visit, to help you find your way back later. Touch the Bookmark icon which situates at the top-right screen, and then you can find three tabs: you can select history tab to view your browser history. Select most visited tab and

you can view a list of most visited webpage.

### **Working with multiple browser windows**

You can open up to several Browser windows at once and switch among them.

**To open a new Browser window**, press menu key and then touch new window; Or you can press menu key and then touch windows, in the open screen, choose new window. New windows open with your home page.

**To switch Browser windows**, press menu key and then touch windows. Here, all your open windows are listed. You can select one of them as per your need.

**To close a Browser window**, press menu key and then touch windows. Here, all your open windows are listed. You can touch the close icon at the right side of each open window to close it.

### **Downloading files**

You can download files and even applications from webpages. The files that you download are stored on your SD card.

To download a file, Different webpages offer different mechanisms for downloading pictures, documents, applications, and other files. Touch & hold an image or a link to a file or to another webpage. In the menu that opens, touch Save. If the file is in a format supported by an application on the phone, it is downloaded to your SD card. Press menu key and then touch More>downloads, here, you can find a list of downloaded files. If you want to delete a file, just touch & hold it, and an option box will pop out, here, you can select delete to delete an unnecessary file.

### **Working with bookmarks**

Open a web page to bookmark, touch the bookmark icon at the top of the screen or press menu

key>touch bookmark icons, here, you can view bookmarks displayed in thumbnail style.

1), Press menu key, you can bookmark last-viewed page or switch the current thumbnail style of bookmarks to list style.

2), Touch & hold a bookmark, an option box will pop out. There, you can perform the following operations on bookmarks: Open, open in new window, Edit bookmark, Add shortcut to Home, Share link, copy link URL and set the current bookmark as homepage.

### **1.13 Calculator**

You can use this Calculator to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

Enter numbers and arithmetic operators on the basic screen; Drag the basic screen to the left to open the advanced screen; Touch Clear to delete the last number or operator you entered. Touch & hold Clear to delete everything in the display.

*Note: Roll the direction key up or down to view your previous operations. Previous operations are entered in the display, where you can work with them.*

In the calculator screen, you can press menu key to clear history or access advanced panel.

### **1.14 Calendar**

You can open Calendar to view events you've created. When you first set up your phone, you configured it to use an existing Google Account or you created a new account.

Touch the Calendar icon on the Home screen or in the Launcher. Events from each account you've added to your phone and configured to synchronize calendars are displayed in Calendar.

#### **Creating an event**

You can use Calendar on your phone to create events. In any calendar view, press menu key and then touch more> new event to open a event details screen for a new event.

Or you can also touch & hold a spot in Day, Week, or Month view. In the menu that opens, touch New event to open the Event details screen with that day and time already entered.

Enter a name, time, and optional additional details about the event. You can press plus button to add more reminders. In the Guests field, you can enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas ( , ). If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email. You can press menu key and touch Show extra options to add details about the event. Scroll to the bottom of the Event details screen and touch Done. The event is added to your calendar.

### **Change calendar view**

In calendar screen, press menu key touch Agenda, Day, Week, or Month. Each view displays the events in your calendar for the period of time that you specify. To view more information about an event in Agenda view, touch the event. To view the events of a day in Month view, touch a day.

### **Synchronizing and displaying calendars**

When you add a Google Account or Microsoft Exchange ActiveSync account to your phone that includes a calendar service, and you configure that account to synchronize calendar events to the phone, the events from that calendar are added and kept up to date in Calendar on the phone.

In calendar screen, press Menu and touch More > Calendars, here, you can set whether calendars are stored on the phone or visible. The Calendars screen displays all the calendars you've added or subscribed to for each account that is configured to synchronize events to your phone, organized by account. Touch the

name of an account to show or hide its calendars on your phone. An icon to the right of each calendar indicates whether its events are synchronized in the phone and whether they are visible in Calendar.

### **Change Calendar settings**

You can change the following settings for how Calendar displays event and how it notifies you of upcoming events. Open a Calendar view, press Menu and touch more>settings.

**Hide declined events:** Check if you don't want to see events to which you've declined invitations.

**Set alerts & notifications:** Opens a dialog where you can configure event reminders to open an alert, send you a notification, or turn off event notifications on your phone.

**Select ringtone:** Opens a dialog where you can select the ringtone to sound when you receive an event reminder.

**Vibrate:** Opens a dialog where you can configure the phone to vibrate whenever you receive an event reminder.

**Default reminder time:** Opens a dialog where you can select the default time before an event for event reminders.

**Build version:** The version of Calendar you are using.

## **1.15 Camera**

Camera is a combination camera and camcorder that you use to shoot and share pictures and videos.

Touch the Camera icon in the Launcher or on the Home screen, camera opens in Landscape mode, ready to take a picture or shoot a video. In this mode, you can touch the right-top icon to preview your pictures or videos in Gallery; Drag the middle-right icon up to shoot videos; drag middle-right icon down to take photos. Touch the right-bottom icon to take a picture or shoot a video.

The phone provides you with six setting icons on the landscape mode for you to tune camera related parameters to achieve better capture effect. Through these settings, you can adjust EV, scene mode, picture size, picture quality, color effect, capture mode, burst shot, self timer, fade detection, anti-flicker, camera, store location, white balance, flash mode and zoom, etc.

*Note: you can also press menu key to pop out an option box. There, you can switch to video/camera mode and access gallery.*

## **1.16 Clock**

Touch the Clock icon on the Home screen or in the Launcher. Clock opens with the date and time displayed on your Home screen wallpaper, along with your local weather and other useful information.

### **Alarm**

You can set an alarm by modifying an existing alarm or by adding a new one. Note: Alarms that are set are underlined in green.

### **Gallery**

You can view pictures through this function. Select a picture and you can perform the following operations: share, print, delete, rotate, crop, etc.

### **Music**

You can access this music application to select music to play.

### **Home**

Touch this icon to return to home screen.

## **1.17 Contacts**

Contacts give you quick and easy access to the people you want to reach. You can open Contacts to add,

view, and communicate with your friends and acquaintances.

### **To open your contacts**

Touch the Contacts icon on the Home screen or in the Launcher. All of your contacts are displayed alphabetically in a scrolling list. Each contact is followed by the default phone number. You can drag the list up or down to scroll it, or slide your finger up or down to scroll quickly.

### **Phone**

Touch the Contacts icon on the Home screen or in the Launcher. Four tabs are listed at the top of the screen. Select the phone tab and you can find a dialpad screen where you can input phone number to originate a call.

*Note: During a conversation, you can't originate a new call by open the dialpad, enter number and press dial key. If you press dial key, the current conversation would hold.*

### **Call log**

You can view a list of missed calls, outgoing calls and received calls through this function. Select and touch & hold a record to perform further operations: call via SIM1, call via SIM2, Edit number before call, send text message, add to contacts and remove from call log.

To clear all call logs, you can press menu key to pop out a dialog box where you can select 'clear call log' to delete all call logs.

### **Contacts**

Select the Contacts tab, and you can find a list of contacts. Select and touch & hold a contact, a pop out dialog box allows you to view, call, text, edit and delete the selected contact.

In the contacts screen, press menu key and you can perform the following operations:

**Search:** Start entering the name of the contact you're searching for. As you type, contacts with matching

names appear below the search box. And then you can touch a matching contact in the list to perform further operations.

**Delete contacts:** Select this function, then you can mark the target contacts. To delete all contacts, you just need to touch the **mark all** icon at the contacts screen. Last, touch **delete icon** and **confirm** to delete contacts.

**New contact:** Select this function to add new contact to contacts list.

**Display options:** Access this function to select display options as per your need.

**Accounts:** You can enable or disable background data and auto-sync function as per your need.

**Import/Export contacts:** If you have contacts stored in vCard format on a SD card or SIM, you can import them into Contacts on your phone. You can export contacts in vCard format onto a SD card, to back them up to a computer or other device.

### **Favorites**

You can add contacts you communicated with most frequently to favorites. The first time you access this function, a wizard will guide you how to add a contact to Favorites.

*Note: Factory data reset enables you to erases all of your personal data from internal phone storage, including all messages and contacts information stored in phone memory.*

## **1.18 Email**

You use the Email application to read and send email.

### **Opening Email and the Accounts screen**

**To open Email:** Touch the Email icon on the Home screen or in the Launcher. The first time you open Email, a setup wizard opens to help you add an email account. After the initial setup, Email opens to the last screen you were viewing or, if you have not used Email recently, it displays the contents of your Inbox (if

you have only one account) or the Accounts screen (if you have multiple accounts).

**To open the Accounts screen:** The Accounts screen lists your Combined Inbox and each of your email accounts. If you have starred, draft, or unsent messages in any of your accounts, the folders for those items from all accounts are displayed as well. From a folder screen, press Menu and touch Accounts. Each folder and account on the Accounts screen displays the number of unread messages in green, or the total number of messages in gray. You can touch a combination folder, such as the Combined Inbox folder, to view the messages it contains.

### **To open combined inbox**

If you have configured Email to send and receive email from more than one account, you can view all messages sent to all accounts in your Combined Inbox. Open the Accounts screen, and then touch Combined Inbox.

### **Reading your messages**

You can read messages in your Combined Inbox or in the Inbox or other folders for individual accounts. When you receive a new message, you also receive a notification in the Status bar, unless you've turned off Email notifications using the Email Account settings, where you can also set whether Email notifications vibrate the phone and pick a ringtone.

Open the Combined Inbox, an account's Inbox, or another folder of messages. Touch the message to read. The message opens in a screen with information about who sent it, the date it was sent, and related information at the top, followed by the contents of the message.

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

### **Starring emails**

You can star an important message to make it easy to keep track of. Once you star an email, a Starred folder is added to the Accounts screen.

While reading an email, touch the star in its header. Or you can touch a message's star while viewing a list of messages in a folder. You can touch its star again to unstar an email.

### **Composing and sending email**

You can send email to your contacts or to other people or groups.

Press Menu and touch Compose. As you enter text, matching addresses are offered from your Contacts. You can touch a suggested address or enter a new one. Separate multiple addresses with commas. Press menu and touch Add Cc/Bcc to address a copy or blind copy of the message; Touch Attach to add an attachment to the Email. Enter a subject for the message. Enter the text of the message. After finishing editing, touch Send to send the email.

### **Appending a signature to your messages**

You can append one or a few lines of text to every message you send from an account, such as your name, contact information, etc.

Open the Accounts screen. Touch & hold the account whose settings you want to change. In the menu that opens, touch Account settings>signature. Or you can open the settings for an account while you're viewing its inbox, by press menu key and touching Account settings>signature. Last, enter a signature and confirm.

### **Adding email accounts**

The first time you open Email, you are prompted to set up an email account. After that, you can configure Email to send and receive email from additional accounts.

To add an email account: Open the Accounts screen. Press menu key and touch Add account. In the

Setup Email screen, enter your email address and password. Touch Next. Or, if you need to enter email account settings the wizard can't configure for you, touch Manual setup, you're prompted to enter your email account details. Enter any other information requested by the type of account you're adding and touch Done. Enter a name for the account and touch Done. Email starts downloading your email messages and you can start using it to send and receive messages using the new account.

### **To delete an email account**

Open the Accounts screen. Touch & hold the account to delete. Touch Remove account in the menu that opens. Touch OK in the dialog to confirm that you want to delete the account.

## **1.19 ES File Explorer**

ES File Explorer is a featured local/LAN/FTP/Bluetooth file & security & application & task & bookmark manager. In ES File Explorer window, you can press menu key>more>Help Center to find specific instructions of this function. The help icon at the right-top of instruction screen provides you with an ES File Explorer user manual to guide you to perform further operations.

## **1.20 Messaging**

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS) with your friends on their mobile phones.

### **Composing and send a message**

Touch the Messaging icon on the Home screen or in the Launcher. The Messaging window opens, where you can create a new message. Touch New message to start composing a new text or multimedia message. A Multimedia (MMS) messages can contain text and a picture, a recorded voice, an audio file, a video, or a picture slideshow.

On the Messaging screen, touch New message. Enter a mobile phone number in the To field. Touch the composition text box to start editing your message. During editing, you can press menu key to add smiley, attach or subject into the message. After finishing editing, you can press back key to exit the onscreen keypad. Then you can select SIM1 or SIM2 to send the message to the designated recipient.

#### **Reply to message thread**

If you're working in a message window, messages that you receive are displayed in it. Otherwise, you receive a new message notification and a new message icon appears in the Status bar. When you touch the new message notification, the Message window opens, where you can reply to the message.

### **1.21 Mobile TV**

You are able to access this menu to watch mobile TV programs.

#### **To set location and scan channels**

When you first use this function, you'd better select the right location. Then you can scan available channels and select any of them to play.

#### **To silent volume, switch channels or shoot a snapshot**

In the TV player interface, you can tap touch screen to pop-out a toolbox, here, you can tap function icons to silent volume, switch channels or shoot a snapshot.

#### **Shoot a video episode**

In TV player interface, press Menu key to pop-out a dialog box where you can select 'record' to shoot a video episode of the current TV program.

*Note: All snapshots and video episode can be scanned through gallery.*

## 1.22 Music

Music plays audio files that are stored on your phone's SD card, so before you open Music, you must copy audio files from your computer onto the SD card. Music supports a wide variety of audio file formats, so it can play music that you purchase from online stores, music that you copy from your CD collection, and so on.

### To open Music and view your music library

Touch the Music icon in the Launcher or on the Home screen.

When you copy music to your SD card, Music searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself. This can take from a few seconds to several minutes, depending on how many files you have copied onto the SD card. When the catalog is complete, the Music library screen opens, with tabs that you can touch to view your music library organized by Artists, Albums, Songs or Playlists.

*Note: If the phone power off owing to low battery while you were downloading music via USB cable, the phone would prompt 'SD card error' when you power on the phone. Repower on the phone for about 5 times, the same prompt would occur. Under this circumstance, you should repower on the phone until it prompts 'SD card error. Format?'. Please select format to format your SD card to ensure the phone runs properly.*

*Any sudden suspend during downloading music via USB cable may result in great damage to your SD card.*

### Play music

You can listen to music by using the phone's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset.

Touch a song in your library to listen to it. The Playback screen opens and the song you touched starts to play. The Playback screen contains several icons that you can touch to control the playback of songs. On the right-top of playback screen, you can find three function icons. You can touch them to open the current playlist, shuffle the current playlist or repeat the current playlist / repeat the current track (touch twice). Three function icons which situates just above the process bar can be used to control the playing process of the music application. Their functions can be defined as the following: switch to last song (touch) / rewind (touch & hold), play/pause and switch to next song (touch) / fast forward (touch & hold)

### **To delete a song from the SD card**

You can delete music from the storage card. Touch & hold a song in a library list. In the menu that opens, touch Delete.

## **1.23 Settings**

The Settings application contains most of the tools for customizing and configuring your phone.

### **Dual-SIM settings**

Through this function, you can activate or deactivate SIM1 and/or SIM2 as per your need.

Select SIM when boot up: after activating this function, you'll be asked to select SIM card(s) to be activated whenever you boot up the phone.

### **Wireless & networks**

You can use Wireless & Network settings to configure and manage connections to networks and devices by using Wi-Fi, Bluetooth and mobile networks. You also use Wireless & Network settings to configure connections between your phone and virtual private networks (VPNs), to connect your computer to the Internet using your phone, and to turn off all radios with Airplane mode.

## Call settings

Use Call settings to configure phone call settings, such as call forwarding, call waiting, and other special features offered by your carrier. You can also use Call settings to configure the phone so that it can place outgoing calls only to a fixed set of phone numbers.

**Fixed dialing numbers:** Use the settings on this screen to configure your phone so it can place outgoing calls only to the fixed dialing numbers (FDN) that you save on the phone's SIM card. Enable FDN Opens a dialog that prompts you to enter your PIN2 and then places the phone in FDN mode.

**Voicemail service:** Voicemail service Opens a dialog where you can select your carrier's voicemail service or another service.

**Voicemail settings:** If you are using your carrier's voicemail service, opens a dialog where you can enter the phone number to use for listening to and managing your voicemail.

**Call forwarding:** Call forwarding Opens a screen where you can configure how your calls are forwarded when you're on the phone, when you don't answer, etc.

**Call barring:** The call barring function enables you to bar calls. You can select to bar all outgoing calls, international outgoing calls, international outgoing call except to home PLMN, all incoming calls or incoming calls when roaming.

**Additional settings:** Through this function, you can set caller ID and call waiting status.

**Cell broadcast:** This network service enables you to receive a variety of text messages, such as broadcast messages about weather forecast or road conditions.

## Audio effect

Through this function, you can set audio effect status and audio effect mode.

## Audio profiles

The mobile phone provides multiple audio profiles, so that you can customize some settings to adapt to the specific events and environments.

### **Display**

You can use the Display settings to configure brightness, animation effect and screen time-out of the phone.

### **Location & Security**

Use the Location & Security settings to set your preferences for using and sharing your location when your search for information. You can also configure settings that help secure your phone and its data.

### **Applications**

You can use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and email.

### **Account & Sync**

**Background data** Check to permit applications to synchronize data in the background, whether or not you are actively working in them. Unchecking this setting can save battery power and lowers (but does not eliminate) data use.

**Auto-sync:** activate this function to permit applications to synchronize data on their own schedule.

### **Privacy**

You can use the Privacy settings to manage your personal information.

Factory data reset enables you to erases all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've

downloaded or any files on your SD card.

### **SD card & Phone storage**

Use the SD Card & Phone Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.

### **Language & keyboard**

Use the Language & Keyboard settings to select the language for the text on your phone and for configuring the onscreen keyboard.

### **Accessibility**

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

### **Date & time**

You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the mobile network.

### **Schedule power on/off**

Set time when the mobile phone will be automatically powered on or off.

### **Wifi**

The device offers WiFi .Ad Hoc function is supported but not able to operate on non-US

### **FM**

The device offers FM.

### **About phone**

This function enables you to view some phone related information.

## Appendix

### Appendix 1: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
The phone slowly responds to the touch screen pen	The touch screen is not appropriately calibrated	Calibrate the touch screen
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card

	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth
Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high-traffic hours

The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider

	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

**Product Designation** : GSM Mobile Phone  
**FCC ID** : ZGRCLIMA  
**BRAND NAME** : Ice Mobile  
**MODEL** : Clima II  
**Manufacturer** : Shenzhen Telacom Science & Technology Co., Ltd

Operation Frequency	2.402 GHz to 2.480GHz
Rated Output Power	3.21dBm
Bluetooth Version:	V2.1 without EDR
Modulation	GFSK
Number of channels	79
Antenna Designation	Integrated Antenna
Antenna Gain	0.8dBi
Power Supply	DC3.7V by Built-in Li-ion Battery

**FCC RF EXPOSURE INFORMATION:****WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC ID: ZGRCLIMA adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

**BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

# RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is **0.872W/kg**, next to the head is **0.167W/kg**. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving External antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or more than 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.