








QUICK START GUIDE

1. Press and hold Power button for 3 seconds to turn on Personal Touch Tablet.
 2. Click the "Lock" icon on Home screen and slide up to unlock PTT.
 3. Press Power button for a while to show "Device options", then you can choose Power off \ Suspend \ Cancel.
- Note:** When PTT has a screen timeout and automatically turns off, press  /  /  /  button on the body to wakeup PTT then tap  up to unlock PTT.


Find and run application

1. Tap  on Home screen to find application.
See as following:
2. Tap any icon to run application

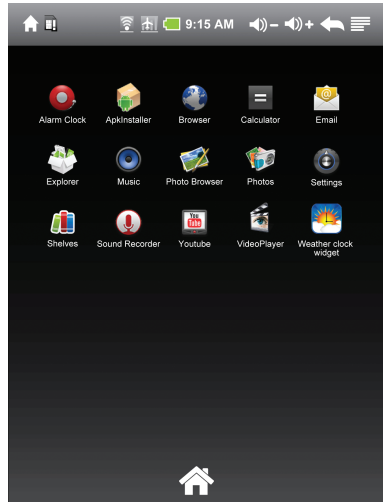



Create \delete short cut and widget on Home screen

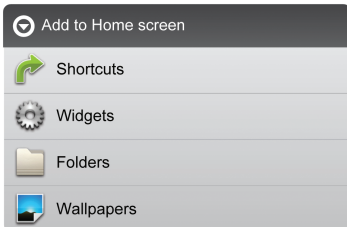1. Tap any blank on Home screen for a while to show "Add to Home screen", then you can add Shortcuts \ Widgets \ Folders \ Wallpapers by a slight Tap. See as following:




2. Tap and hold any icon on Home screen until it becomes bigger, then drag the icon into the recycle bin to delete short cut and widget.

How to setup WiFi

1. Tap  in upper right of Home screen to show "Settings" in button line > Tap Settings > Tap Wireless & networks > Tap "Wi-Fi" to turn it on, it will search Wi-Fi network automatically.
2. Go to "Wi-Fi settings" > Choose your network account and enter wireless password > Tap "Connect" to setup Wi-Fi.
3. When Wi-Fi is set up successfully, icon  will be shown on the top of screen.

Buttons overview

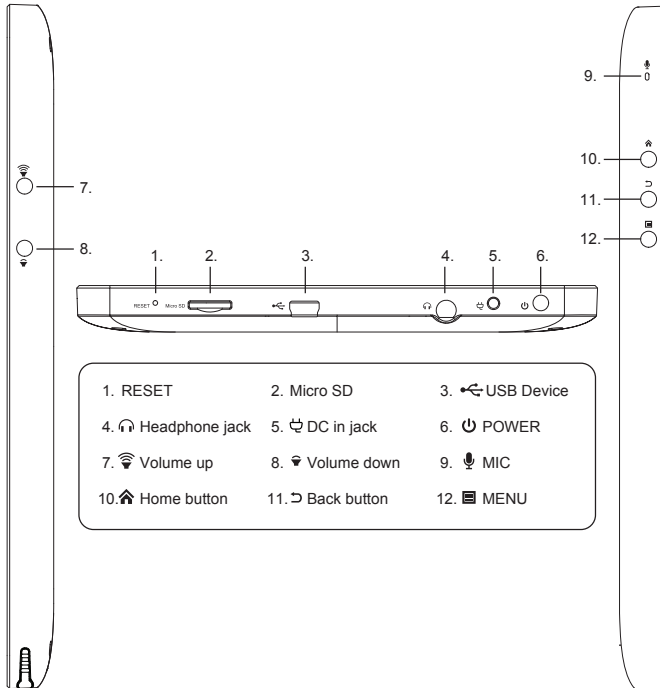


Status bar overview




In any function screen, tap  button once can back to Home screen


 Shows Mini SD card was removed

When WiFi is turned on,  will be shown

 Airplane mode

 Shows battery status

 Indicates alarm clock is turned on

 Volume down & up icon

 Back icon

 Shows Menu under different status

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.